



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY CH550B. You'll find the answers to all your questions on the TRICITY CH550B in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY CH550B
User guide TRICITY CH550B
Operating instructions TRICITY CH550B
Instructions for use TRICITY CH550B
Instruction manual TRICITY CH550B

TRICITY BENDIX
Better Products. Better Value.



Canopy Cooker Hood - CH 550

Operating and Installation Instructions



[You're reading an excerpt. Click here to read official TRICITY CH550B user guide](http://yourpdfguides.com/dref/946775)
<http://yourpdfguides.com/dref/946775>

Manual abstract:

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 1 Contents

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 2 Warnings

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *3 General Information*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

..... *4 Electrical Connection* ..

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *4 Unpacking* .

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
.....

.....
.....
.....

.....
.....
.....

..... 5 Installation - Positioning .

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.... 5 Installation - Fitting

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

.....
.....
.....

... 5 Recirculation ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 5 Ducting Fitting ..

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... @@@@7 Customer Care Department

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 7 Before Calling a Service Engineer

.....
.....
.....

.....
.....
.....
.....

.....

.....
.....
.....
.....
.....
.....
.....

... 8 TECHNICAL SPECIFICATIONS DIMENSIONS Width Height Depth cm 52 cm 15 cm 28.4 WEIGHT Gross Net kg 5.5 kg 4.5 ELECTRICAL CONNECTION Voltage (~50Hz) Fan Lamp Consumption 220-240 V 110 W 40 W 150 W PERFORMANCE Speed Capacity m³/h Capacity lt/sec Pressure mmH₂O Noise level dbA 1 120 33 11 47 2 170 47 19 54 3 230 64 26 62 2 WARNINGS It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance always ensure that the book is supplied with the appliance in order that the new owner can be acquainted with the functioning of the appliance and the relevant warnings. Please ensure that you have read the whole instruction book before using the appliance and that you follow the recommendations given. These warnings are provided in the interest of safety.

They must be read carefully before installing or using the appliance. This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the product. It is dangerous to alter the specification or attempt to modify the appliance in any way. Any electrical work required must be undertaken by a qualified electrician or a competent person. This product should be serviced by an authorised Tricity Bendix Service Centre, and only genuine Tricity Bendix spare parts should be used. Never leave frying pans unattended during use as overheated fats and oils may catch fire. Never do flambe cooking under this cooker hood. It is a possible fire hazard if the grease and charcoal filter are not replaced as recommended. When used in the extraction mode the cooker hood must not be connected to a flue which is used for exhausting fumes from appliances supplied with energy other than electric such as central heating flue or water heating flue.

If the room where the hood is to be used contains a fuel burning appliance such as a central heating boiler then its flue must be of the room sealed or balanced flue type. If other types of flue or appliances are fitted ensure that there is an adequate supply of air to the room. All installations must comply with the local authorities requirements for the discharge of exhaust air. 3 WARNINGS Cont'd If the cooker hood is installed for use above a gas appliance then the provision for ventilation must be in accordance with the Gas Safety (Installation & Use) Regulations 1994 No. 1886 and the relevant building regulations. Details are contained in the following British Standard Codes of Practice BS6172 BS 5440 and BS6891 Current Edition. The fan motor of this cooker hood incorporates a thermal cut-out device which will operate if the cooker hood is installed below the minimum height recommended in this booklet, or if the motor becomes overheated. If the cut-out device is activated, switch off the fan motor and allow the cooker hood to cool. The fan cut-out will reset itself when the fan motor has cooled sufficiently. This cooker hood has been designed for installation over an electric hotplate with a maximum input of 7Kw or a gas hotplate with a maximum input of 10Kw when fitted in accordance with the height recommended in this booklet.

Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by an inexperienced person may cause injury or more serious malfunctioning. Refer to your local Tricity Bendix Service Centre. Always insist on genuine Tricity Bendix spare parts. GENERAL INFORMATION This Instruction book applies to the following models: Tricity Bendix CH550B Brown 52cm Tricity Bendix CH550W White 52cm This cooker hood is guaranteed and will give lasting service. @@@@Regulations and local Electricity Board regulations. @@@@The distance between the underside of adjoining wall cabinets and the worktop must not be less than 40cm (15 3/4"). Care should be taken when unpacking the cooker hood to ensure that the fixing kit, ducting spigot and literature pack are retained with the hood. Recirculation The hood is supplied specified for installation in the extraction mode. To convert the hood to recirculation it will be necessary to obtain the (optional) charcoal filter.

Charcoal filters can be obtained by using the order form enclosed. To fit the charcoal filter, open the metal inlet grille as illustrated in fig. 3. Remove the screw from the centre of the motor support grille and taking the filter in one hand place it over the support. Insert the screw with the other hand through the hole in the centre of the charcoal filters as illustrated in fig. 2 and finger tighten the screw until the filter fits flush to the diffuser. In the recirculation mode, contaminated air enters the cooker hood and passes through the grease filter and charcoal filter and out into the kitchen as illustrated in fig. 1. When installed in the recirculation mode it will be necessary for the installer to fabricate a chimney from the ducting spigot on the top of the hood to a terminal in the chimney/wall cabinet housing. Fitting IMPORTANT: Before fitting the hood beneath any type of wall cabinet/canopy housing ensure it is firmly fixed to the wall in accordance with the manufacturers instructions.

Care should be taken to check the wall to which the cabinet/canopy is to be fitted for electric cables, water pipes or gas pipes before drilling. If it is necessary to fix the cabinet/canopy to a hollow construction plaster or partition board structure then it must be sufficiently reinforced to be quite rigid in the area of the cabinet/canopy mounting system. Measure the underside of the cabinet/canopy to mark the position for the cut-out as illustrated in fig. 7. The cut-out should measure, width 497mm by depth 261mm.

Check the positioning of the holes is correct with the measurements above before making the cut-out. The hood is fixed using the holes located in rim around the cooker hood casing. Access to the 5 Ducting Fitting Fit the ducting spigot into the aperture on the top of the casing and make an air tight connection. The ducting used must be 100mm (4ins) diameter, and where flexible ducting is fitted it should not be turned through very tight bends as this could impair the performance of the hood. The ducting used must be 100mm (4ins) diameter and be manufactured from fire retardent material conforming to the relevant British Standard or DIN 4102-B1.

(The maximum length of ducting including one 90 Degree bend should be 3 metres, to be reduced by 1 metre for each 90 degree bend installed in the duct run). The (optional) charcoal filter is not required when the is installed in the ducting mode. OPERATING INSTRUCTIONS The cooker hood functions are controlled by three sliiance, or further information on Cookers, Cooker Hoods, Microwave Ovens, Refrigeration or Home Laundry equipment, you are invited to contact our Customer Care Department.



[You're reading an excerpt. Click here to read official TRICITY CH550B user guide](http://yourpdfguides.com/dref/946775)
<http://yourpdfguides.com/dref/946775>

We have fully trained Home Economists and Advisors just a telephone call away who can provide information and brochures. Do not hesitate to contact us by letter or telephone as follows: Customer Care Department Tricity Bendix 55 - 77 High Street Slough Berkshire SL1 1DZ Telephone: 08705 950 950 * * calls to this number may be recorded for training purposes. Do's and Don'ts Do's Do take extra care when frying. Do keep heating areas on your hob covered over with pots and pans when using the hob and cooker hood simultaneously. Don'ts Don't leave naked flames under the hood. @@@@- Check there is power to the Connection Unit. - Check the fuse in the Connection Unit.

- Check the mains fuse. 8 Rating Plate The rating plate is situated inside the casing on the back panel. It gives the MODEL AND SERIAL NUMBER, which should be quoted in any communication or if the service department is contacted. It is advisable to make a note of these below and keep for reference before the appliance is installed. MAKE AND MODEL NO. SERIAL NO. DATE OF PURCHASE CH 550 B CH 550 W PLEASE TICK V APPROPRIATE BOX This handbook is accurate at the date of printing but will be suspended and should be disregarded if specifications or appearance are changed in the interests of continued improvement. Dir. 89/336/CEE 73/23/CEE © Electrolux Household Appliances Limited 2000 4323986 05 - 290300 .



[You're reading an excerpt. Click here to read official TRICITY CH550B user guide](http://yourpdfguides.com/dref/946775)
<http://yourpdfguides.com/dref/946775>