



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY CH610B. You'll find the answers to all your questions on the TRICITY CH610B in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual TRICITY CH610B**  
**User guide TRICITY CH610B**  
**Operating instructions TRICITY CH610B**  
**Instructions for use TRICITY CH610B**  
**Instruction manual TRICITY CH610B**

## **TRICITY BENDIX**

**Better Products. Better Value.**



**Visor Cooker Hood - CH 520 and CH 610**

**Operating and Installation Instructions**



[You're reading an excerpt. Click here to read official TRICITY CH610B user guide](http://yourpdfguides.com/dref/946779)  
<http://yourpdfguides.com/dref/946779>

**Manual abstract:**

8 59.8 15.0 48.0 53.0 WEIGHT CH520 CH610 Gross Net Gross Net kg kg kg kg 8.2 7.2 8.7 7.7 ELECTRICAL CONNECTION Voltage Fan Lamps 2x40W Total Consumption 220-240V ~ 50Hz 110W 80 W 190W PERFORMANCE Speed Capacity m<sup>3</sup>/h Capacity lt/sec Pressure mmH<sub>2</sub>O Noise level dbA 1 130 36 10 45 2 180 50 18 51 3 250 69 25 59 1 WARNINGS It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance always ensure that the book is supplied with the appliance in order that the new owner can be acquainted with the functioning of the appliance and the relevant warnings.

Please ensure that you have read the whole instruction book before using the appliance and that you follow the recommendations given. These warnings are provided in the interest of safety. They must be read carefully before installing or using this appliance. This appliance is designed to be operated by adults.

Children should not be allowed to tamper with the controls or play with the product.

It is dangerous to alter the specifications or modify the product in any way. Any installation work must be undertaken by a qualified electrician or a competent person. This product should be serviced by an authorised Tricity Bendix Service Centre, and only genuine Tricity Bendix spare parts should be used. Never leave frying pans unattended during use as overheated fats and oils may catch fire. Never do flambe cooking under this cooker hood. It is a possible fire hazard if the grease and charcoal filter are not replaced as recommended. @@@@If the hood is installed for use above a gas appliance then the provision for ventilation must be in accordance with the Gas Safety (Installation & Use) Regulations 1994 No.1886 and the relevant building regulations. Details are contained in the following British Standard Codes of Practice BS.6172 BS.5440 and BS.6891 Current Edition. @@@The cut-out device will reset itself when the fan motor has cooled significantly. This cooker hood has been designed for installation over an electric hotplate with a maximum input of 7Kw or a gas hotplate with a maximum input of 10Kw when fitted in accordance with the heights recommended in this booklet. Under no circumstances should you attempt to repair the appliance yourself.

Repairs carried out by an inexperienced person may cause injury or more serious malfunctioning. Refer to your local Tricity Bendix Service Centre. Always insist on genuine Tricity Bendix spare parts. 2 GENERAL INFORMATION This instruction book applies to the following models: Tricity Tricity Tricity Tricity Bendix Bendix Bendix Bendix CH520B CH520W CH610B CH610W Brown White Brown White 50cm 50cm 60cm 60cm ELECTRICAL CONNECTION Before connecting to the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the cooker hood. WARNING: THIS APPLIANCE MUST BE EARTHED This appliance is fitted with a 3 core mains supply cable and should be permanently connected to the electricity supply via a double-pole switch having 3mm minimum contact gap on each pole. A Switched Fuse Connection Unit to BS.1363 Part 4 (fitted with a 3A fuse), is a recommended mains supply connection accessory to ensure compliance with the Safety Requirements applicable to fixed wiring instructions. CONNECTION TO THE MAINS POWER SUPPLY Any permanent electrical installation must comply with the latest I.E.E.

Regulations and local Electricity Board regulations. @@@@The cooker hood can be used to extract odours to the outside or to recirculate the air within the kitchen after passing the contaminated air through a cleansing charcoal filter which is supplied as standard. The cooker hood is convertible to either function by the movement of a change-over slider control. This enables the cooker hood when installed in the extraction mode, to be converted to recirculation during the winter months. The installation instructions which follow give instructions on how and where this hood may be fitted. If already installed check with the installer that all the requirements have been met. @@@The fixing kit comprises: 1- Wall/Suspended fixing template. 2- Wall fixing brackets. 4- Plastic rawl plugs. 4- Wall/Suspended fixing screws.

2- Shakeproof washers. 2- Security nuts. INSTALLATION brackets. @@@@Ensure that the cooker hood is correctly located before letting go. @@@@The grille pivots at the rear. @@@@The distance between the underside of adjoining wall cabinets and the worktop must not be less than 40cm (15 3/4"). WALL FITTING The cooker hood may be fitted to any rigid vertical surface. All the fittings supplied are to be found in a polythene bag inside the carton. IMPORTANT: Before installation check the wall to which the cooker hood is to be fitted for electric cables, water pipes or gas pipes before drilling. If it is necessary to fix the hood to a hollow construction plaster or partition board structure then it must be sufficiently reinforced to be quite rigid in the area of the cooker hood mounting INSTALLATION Cont'd Before fitting the cooker hood beneath any type of wall cabinet ensure it is firmly fixed to the wall in accordance with the manufacturers instructions.

Use the paper template provided to mark the hole positions on the underside of the cabinet. When marking the underside of the cabinet the front edge of the template must be aligned with the front edge of the cabinet carcass. Check the distances of the holes are correct with a tape measure as stated on the template. The four holes are 5mm (1/4") dia. @@Insert the fixing screws through the holes from inside the cabinet. @@@@Position -1 indicates the light is operating. @@Position -1 Should be selected when simmering or when using one pan. Position -2 Should be selected for normal cooking up to four pans. Position -3 Should be selected when frying or cooking food with strong odour. In the recirculation position, slider towards the charcoaled fats and oils may catch fire.

Don't do flambe cooking under this cooker hood. CHARCOAL FILTER The charcoal filter cannot be cleaned. It should be replaced at least once every three months or more frequently if the cooker hood is used for more than three hours a day. GREASE FILTER The grease filter is fitted to absorb grease and dust during cooking to help keep the appliance clean inside. FOAM GREASE FILTER The foam grease filter should be cleaned at least once a month with normal usage or more frequently if the cooker hood is used for more than three hours a day.

The foam filter may be washed by hand in warm water and mild household detergent or liquid soap or machine washed at a low 50oC maximum temperature wash. The foam filter should be squeezed dry and not wrung dry. To remove the grease filter open the metal inlet grille. carefully ease out the metal retaining clips to remove the grease filter.



[You're reading an excerpt. Click here to read official TRICITY CH610B user guide](http://yourpdfguides.com/dref/946779)  
<http://yourpdfguides.com/dref/946779>

@@@The telephone number and address for service is detailed on the list headed 'Tricity Bendix Service Centres'.

PLEASE NOTE that all enquiries concerning service should be addressed to your local Customer Service Centre. We strongly recommend that you carry out the following checks on your appliance before calling a Service Engineer. @@@- Check there is power to the Connection Unit. - Check the fuse in the Connection Unit. @@@Do not hesitate to contact us by letter or telephone as follows: Customer Care Department Tricity Bendix 55 - 77 High Street Slough Berkshire SL1 1DZ Telephone: 08705 950 950 \* \* calls to this number may be recorded for training purposes. 7 Rating Plate The rating plate is situated inside the casing on the back panel. It gives the MODEL AND SERIAL NUMBER, which should be quoted in any communication or if the service department is contacted. It is advisable to make a note of these below and keep for reference before the appliance is installed. MAKE AND MODEL NO. SERIAL NO.

DATE OF PURCHASE CH 520 B CH 520 W CH 610 B CH 610 W PLEASE TICK V APPROPRIATE BOX This handbook is accurate at the date of printing but will be suspended and should be disregarded if specifications or appearance are changed in the interests of continued improvement. Dir. 89/336/CEE 73/23/CEE © Electrolux Household Appliances Limited 2000 4323984 03 - 280300 .



[You're reading an excerpt. Click here to read official TRICITY](#)

[CH610B user guide](#)

<http://yourpdfguides.com/dref/946779>