




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY CH710X. You'll find the answers to all your questions on the TRICITY CH710X in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY CH710X
User guide TRICITY CH710X
Operating instructions TRICITY CH710X
Instructions for use TRICITY CH710X
Instruction manual TRICITY CH710X

INSTRUCTION BOOK

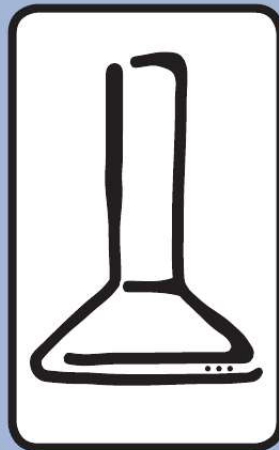

FOR ELECTROLUX
COOKER HOOD
CH 710

 Electrolux

 UK

cod. 436002549_01 - 050128



[You're reading an excerpt. Click here to read official TRICITY CH710X user guide](http://yourpdfguides.com/dref/946801)
<http://yourpdfguides.com/dref/946801>

Manual abstract:

436002549_01 - 050128 Thank you for buying a Electrolux product. To enable you to use your appliance effectively and safely, please read this instruction book carefully before using the appliance and retain for future reference. If you require guidance in the use of the appliance or require further information on Electrolux Products, please contact our Customer Care Department. For general enquiries concerning your Electrolux appliance or for further information, visit our website at <http://www.electrolux.co.uk> Customer Care Department Electrolux 55 - 77 High Street Slough Berkshire SL1 1DZ Tel: *Calls to this number may be recorded for training purposes. 08705 727727* To register ownership, please ensure you complete and return the guarantee card supplied with the appliance. For the User Important Safety Information For the Installer Technical Information Electrical Connections Your Appliance Operating Instructions Cooker Hood Controls To Operate Recirculation Extraction Electrical Requirements Electrical Connection Installing the Cooker Hood Installation Requirements Unpacking Fitting the Wall Brackets Fitting the Canopy Hood Venting Recirculation Fitting the Chimney Stack Maintenance and Cleaning External Cleaning Metal Grease Filters Charcoal Filters To Remove/Replace Charcoal Filter Changing the Halogen Light Something Not Working Service and Spare Parts Guarantee Conditions Guide to use the instruction book The following Symbols will be found in the text to guide you through the instruction book Safety instructions Step by step instructions 3 IMPORTANT SAFETY INFORMATION These warnings are provided in the interests of your safety. Ensure that you understand them all before installing or using this appliance.

Your safety is of paramount importance. If you are unsure about any of the meanings of these warnings contact the Customer Care Department. Installation - Any installation work must be undertaken by a qualified electrician or a competent person. This hood must be installed in accordance with the installation instructions and all measurements must be adhered to. If the cooker hood is installed for use above a gas appliance then the provision for ventilation must be in accordance with the Gas Safety Codes of Practice BS.

6172, BS.5440 and BS.6891 (Natural Gas) and BS.5482 (LP Gas) 1994, the Gas Safety (Installation & Use) Regulations, the Building Regulations issued by the Department of the Environment, the Building standards (Scotland) (Consolidated) Regulations issued by the Scottish Development Department. The fan motor of this cooker hood incorporates a cut-out device which will operate if the cooker hood is installed below the minimum height recommended under section 'Clearance Height', or if the motor becomes overheated.

If the cut-out device is activated, switch off the fan motor and allow the cooker hood to cool. The cut-out device will reset itself when the fan motor has cooled significantly. @@@@ The ducting system for this appliance must not be connected to any existing ventilation system which is being used for any other purpose. Do not install above a cooker with a high level grill. Child Safety This appliance is designed to be operated by adults. @@@ Never do flambé cooking under this cooker hood. Do not leave naked flames under the hood. This cooker hood is designed to extract unpleasant odours from the kitchen, it will not extract steam. Maintenance and Service This appliance can be a hazard if the synthetic paper and charcoal filters are not replaced as recommended. Under no circumstances should you attempt to repair the appliance yourself.

Repairs carried out by inexperienced persons may cause injury or more serious malfunction. Refer to your local Electrolux Service Force Centre. Always insist on genuine spare parts. 4 YOUR APPLIANCE 63 126 41 81 740 252 48 6 300 50 108 150 50 260 650 min. 520 420 530 598 698 OPERATING INSTRUCTIONS This cooker hood is designed to extract unpleasant odours from the kitchen, it will not extract steam. Cooker Hood Controls The cooker hood functions are controlled by four push button switches located centrally in the control fascia. L S Turns the worktop lighting On and Off Mains light - illumination indicates fan motor is running S V1 V2 V3 870 1200 L V1 Turns the fan motor On and Off at low speed, suitable for one pan or when simmering. V2 Medium fan speed, suitable for use when cooking with a number of pots and pans. V3 Maximum fan speed, suitable for cooking foods with strong odours. 5 To Operate Select the required fan speed and light if required.

Recirculation In the recirculation mode the contaminated air enters the cooker hood through the grease filters. @@@@ When used in the ducting mode the charcoal filters are not required. Never do flambé cooking under this cooker hood. @ Do not leave naked flames under the cooker hood. @@@@ Never use scouring pads or abrasive cleaners.

@@@ Cleaning The filters must be washed once every month, using a normal household detergent; their compact dimension also enables them to be washed in a dishwasher. Allow to dry completely before replacing. Removing and replacing the filters Remove the filters one at a time, press against the metal actuator to release the spring catch as illustrated. When replacing, ensure that the handles face outwards. Charcoal Filter In the recirculation mode the charcoal filter absorbs smells and unwanted odours.

The charcoal filter cannot be cleaned or regenerated, and must be replaced approximately every 4 months, or more frequently if the hood is subjected to heavy usage. Replacing the charcoal filter First remove the metal grease filters. Remove the saturated activated charcoal filter by releasing the fixing hooks as illustrated. 7 Position the new charcoal filter in the position marked and while holding the filter replace the fixing hooks as illustrated. This appliance can be a possible fire hazard if the grease and charcoal filters are not cleaned and replaced as recommended. Changing the Light Bulb Remove the screw fixing the lighting support. Pull the lighting support downwards. Remove the light bulb by unscrewing it anticlockwise. Insert the new light bulb into the lighting support and screw it clockwise taking care not to overtighten the light bulb. If one of the light bulbs has failed to function check that the lamps is fully screwed into the lighting support.

If lamp failure has occurred then it should be replaced with a 40W clear cylindrical lamp with an E14 screw cap. Replacement filters and light bulbs can be obtained from your local Service Force Centre. 8 SOMETHING NOT WORKING If, having followed these instructions carefully, your cooker hood fails to work properly please carry out the following checks. Symptom The cooker hood will not start Solution Check the hood is connected to the electricity supply.



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/946801)

[CH710X user guide](http://yourpdfguides.com/dref/946801)

<http://yourpdfguides.com/dref/946801>

· Make sure the switch is in the 'ON' position. · The safety cut-out device has been tripped.

When used in the extraction mode (ducting) the charcoal filters are not required and must be removed and destroyed. Hob A: Built-in Electric Hob; B: Built-in Gas hob; C: Slot-in Electric Cooker; D: Slot-in Gas Cooker: 650mm clearance 700mm clearance 685mm clearance 787mm clearance 13 INSTALLING THE COOKER HOOD Fitting the Wall Brackets
1÷2 11 12a 650 min. 116 116 306 Wall marking: · Draw a vertical line on the supporting wall up to the ceiling, or as high as practical, at the centre of the area in which the hood will be installed. · Draw a horizontal line at 650 mm above the hob.

· Place bracket 7.2.1 on the wall as shown about 1-2 mm from the ceiling or upper limit aligning the centre (notch) with the vertical reference line. · Mark the wall at the centres of the holes in the bracket. · Place bracket 7.

2.1 on the wall as shown at X mm below the first bracket (X = height of the upper chimney section supplied), aligning the centre (notch) with the vertical line.

· Mark the wall at the centres of the holes in the bracket. · Mark a reference point as indicated at 116 mm from the vertical reference line and 306 mm above the horizontal reference line. · Repeat this operation on the other side.

· Drill ϕ 8 mm holes at all the centre points marked. · Insert the wall plugs (not supplied) in the holes. · Fix the lower bracket 7.2.1 using the two screws (not supplied). · Fix the upper bracket 7.2.1 and the air outlet connection support 7.3 together using the two screws (not supplied). · Hook the hood body onto the two 4.

2x4.4mm screws item 12a. Fully tighten the screws item 12a. Using a screw driver and spirit level, adjust the screws item Vr until the hood body is level. 12a

Vr Extraction The cooker hood is more effective when used in the extraction mode (ducted to the outside). Venting kits may be purchased through your retailer or DIY store, and must be ducted to an outside vent of ϕ 125mm (5") or ϕ 150mm (6"). The ducting used must be manufactured from fire retardant material conforming to the relevant British Standard or DIN 4102-B1. When the cooker hood is ducted to the outside the charcoal filter must be removed.

Recirculation The cooker hood is supplied specified for use in the recirculation mode, with the charcoal filter fitted. In the recirculation mode contaminated air is passed through the charcoal filter to be purified and recirculated into the kitchen through the grille outlets on either side of the chimney.

To assemble the recirculation duct, place the recirculation outlet connection item 15 into the support item 7.3. Insert the extension ducts item 14..



[You're reading an excerpt. Click here to read official TRICITY](#)

[CH710X user guide](#)

<http://yourpdfguides.com/dref/946801>