




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY CH950X. You'll find the answers to all your questions on the TRICITY CH950X in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY CH950X
User guide TRICITY CH950X
Operating instructions TRICITY CH950X
Instructions for use TRICITY CH950X
Instruction manual TRICITY CH950X

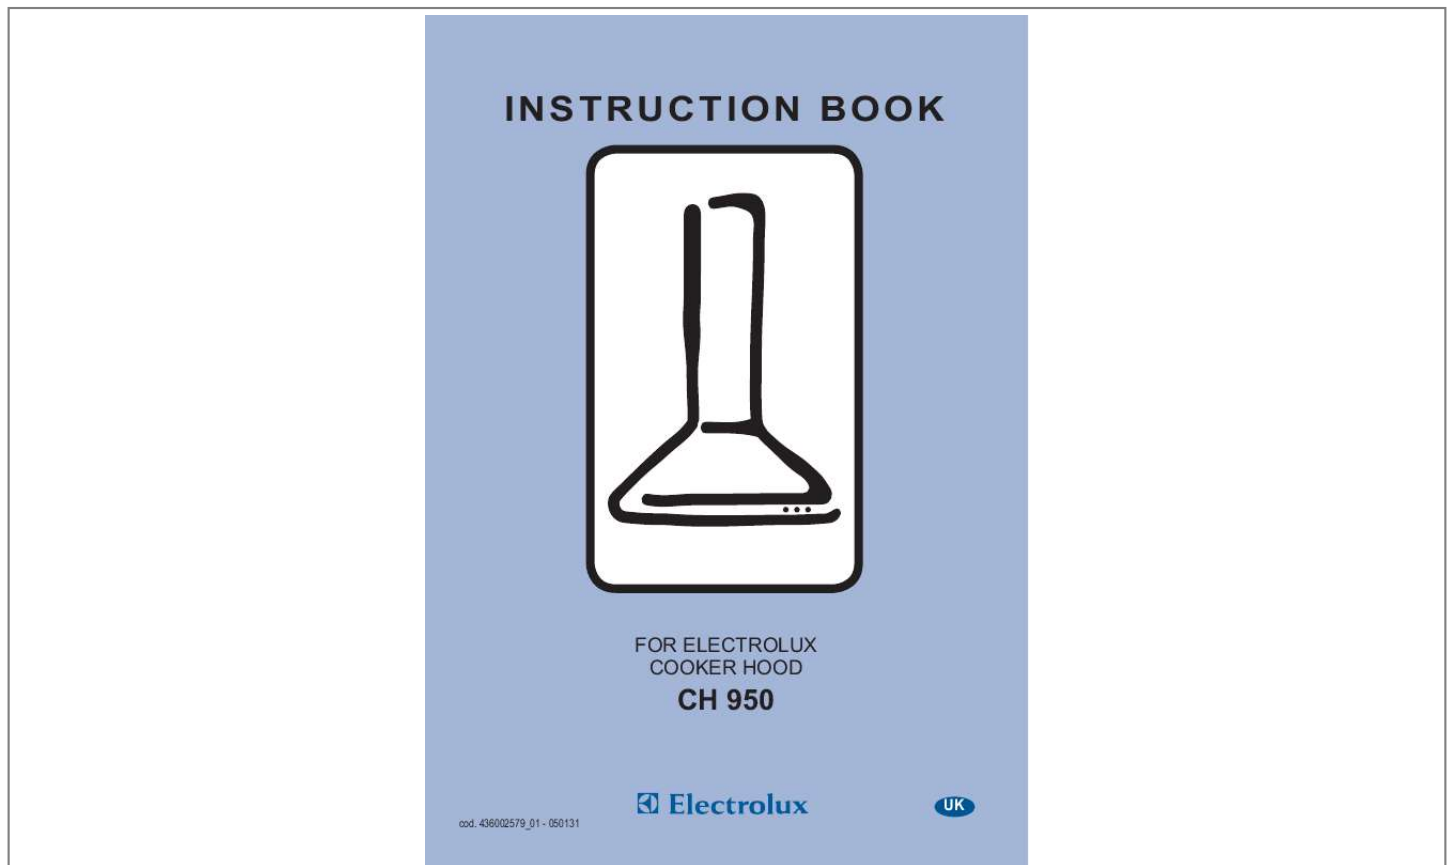

[You're reading an excerpt. Click here to read official TRICITY CH950X user guide](http://yourpdfguides.com/dref/946804)
<http://yourpdfguides.com/dref/946804>

Manual abstract:

436002579_01 - 050131 Thank you for buying a Electrolux product. To enable you to use your appliance effectively and safely, please read this instruction book carefully before using the appliance and retain for future reference. If you require guidance in the use of the appliance or require further information on Electrolux Products, please contact our Customer Care Department. For general enquiries concerning your Electrolux appliance or for further information, visit our website at <http://www.electrolux.co.uk> Customer Care Department Electrolux 55 - 77 High Street Slough Berkshire SL1 1DZ Tel: *Calls to this number may be recorded for training purposes. 08705 727727* To register ownership, please ensure you complete and return the guarantee card supplied with the appliance. For the User Important Safety Information For the Installer Technical Information Electrical Connections Your Appliance Operating Instructions Cooker Hood Controls To Operate Recirculation Extraction Electrical Requirements Electrical Connection Installing the Cooker Hood Installation Requirements Unpacking Fitting the Wall Brackets Fitting the Canopy Hood Venting Recirculation Fitting the Chimney Stack Maintenance and Cleaning External Cleaning Metal Grease Filters Charcoal Filters To Remove/Replace Charcoal Filter Changing the Halogen Light Something Not Working Service and Spare Parts Guarantee Conditions Guide to use the instruction book The following Symbols will be found in the text to guide you through the instruction book Safety instructions Step by step instructions 3 IMPORTANT SAFETY INFORMATION These warnings are provided in the interests of your safety. Ensure that you understand them all before installing or using this appliance.

Your safety is of paramount importance. If you are unsure about any of the meanings of these warnings contact the Customer Care Department. Installation - Any installation work must be undertaken by a qualified electrician or a competent person. @@@@ - The fan motor of this cooker hood incorporates a cut-out device which will operate if the cooker hood is installed below the minimum height recommended under section 'Clearance Height', or if the motor becomes overheated. If the cut-out device is activated, switch off the fan motor and allow the cooker hood to cool.

The cut-out device will reset itself when the fan motor has cooled significantly. @@@@ - The ducting system for this appliance must not be connected to any existing ventilation system which is being used for any other purpose. - Do not install above a cooker with a high level grill. Child Safety - This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the appliance.

During Use - This product is for domestic use only. - Never leave frying pans unattended during use as over-heated fats and oils might catch fire. - Never do flambé cooking under this cooker hood. - Do not leave naked flames under the hood. - This cooker hood is designed to extract unpleasant odours from the kitchen, it will not extract steam. Maintenance and Service - This appliance can be a hazard if the synthetic paper and charcoal filters are not replaced as recommended. @@@@ Refer to your local Electrolux Service Force Centre. @@@@ First speed. When pressed for about 1 seconds the motor is switched off. Second speed.

Third speed. Max. speed Intensive speed. Suitable for the strongest cooking vapours and odours. @@ After 10 minutes of functioning it turns off automatically. @@@@ The alarm is triggered after 100 working hours. (Reset; check the Maintenance-paragraph) indicates that the activated charcoal odour filter saturation alarm has been triggered, and the filter has to be replaced; the metal grease filters must also be washed. The activated charcoal odour filter is triggered after 200 working hours. (Activation and Reset; check the Maintenance-paragraph) S1 Led Fixed Flashing To Operate Select the required fan speed and light if required. Recirculation In the recirculation mode the contaminated air enters the cooker hood through the grease filters.

The air is cleaned by passing through the charcoal filters before being passed back into the kitchen through the grilles in either side of the chimney stack. Extraction In the extraction mode the contaminated air enters the cooker hood passing through the grease filters and is passed out through the ducting into the atmosphere. To obtain the best performance when cooking it is advisable to switch the cooker hood on for a few minutes before you start cooking and leave it running for about 15 minutes after finishing. When used in the ducting mode the charcoal filters are not required. Never do flambé cooking under this cooker hood.

Never leave frying pans unattended during use, as over-heated fats and oils can catch fire. Do not leave naked flames under the cooker hood. Ensure heating areas on your hob are covered with pots and pans when using the hob and cooker hood simultaneously. 6 MAINTENANCE AND CLEANING Before carrying out any maintenance or cleaning isolate the cooker hood from the mains supply. The cooker hood must be kept clean, as a build up of grease or fat can be a fire hazard.

External Cleaning Wipe the cooker hood frequently with warm soapy water using a mild detergent. Never use scouring pads or abrasive cleaners. Never use excessive amounts of water when cleaning particularly around the control panel. Metal Grease Filters The filters are washable and must be cleaned when the Led S1 lights up or at least every 2 months of operation, or more frequently for particularly heavy usage. Remove the metal grease filters one at a time by: Releasing the catches on the filters, the filters can be removed. The metal grease filters should be washed, by hand, in mild soapy water or in a dishwasher. Allow to dry completely before replacing. Alarm signal reset Switch off the lights and extractor motor. Press Button T3 for at least 3 seconds, until the leds start to flash. 7 MAINTENANCE AND CLEANING Before carrying out any maintenance or cleaning isolate the cooker hood from the mains supply.

Charcoal Filters In the recirculation mode the charcoal filters absorb smells and unwanted odours. Enabling the alarm signal In Recirculation version Hoods, the Filter saturation alarm can be enabled on installation or at a later date. Turn the Lights and the suction Motor off. Disconnect the Hood using the Main switch or the double-pole switch on the mains power supply. Restore the connection by pressing and holding T1. Release the button. @@ It must be replaced when led S1 flashes or at least every 4 months. @@@@ - Make sure the switch is in the 'ON' position. - The fan speed is set high enough for the task - The grease filter is clean.



[You're reading an excerpt. Click here to read official TRICITY](#)

[CH950X user guide](#)

<http://yourpdfguides.com/dref/946804>

@@@@@. The safety cut-out device has been tripped.

@@@@@The appliance has not been when the appliance is installed it is easily accessible to an engineer in the event of a breakdown.
@@@@@This appliance can be used in either extraction mode (ducting) or recycling mode (filtering).
The hood is suitable for recirculation with the charcoal filters fitted. When used in the extraction mode (ducting) the charcoal filters are not required and must be removed and destroyed. Hob A: Built-in Electric Hob: B: Built-in Gas hob: C: Slot-in Electric Cooker: D: Slot-in Gas Cooker: 650mm clearance 700mm clearance 685mm clearance 787mm clearance 13 INSTALLING THE COOKER HOOD Fitting the Wall Brackets 1÷2 11 12a 650 min.
116 116 310 Wall marking: · Draw a vertical line on the supporting wall up to the ceiling, or as high as practical, at the centre of the area in which the hood will be installed. · Draw a horizontal line at 650 mm above the hob. · Place bracket 7.2.1 on the wall as shown about 1-2 mm from the ceiling or upper limit aligning the centre (notch) with the vertical reference line.
· Mark the wall at the centres of the holes in the bracket. @@ · Mark the wall at the centres of the holes in the bracket. @@ · Repeat this operation on the other side. · Drill ø 8 mm holes at all the centre points marked. · Insert the wall plugs (not supplied) in the holes. · Fix the lower bracket 7.2.1 using the two screws (not supplied). · Fix the upper bracket 7.2.1 and the air outlet connection support 7.3 together using the two screws (not supplied). · Insert the two screws 12a (not supplied) supplied in the hood body fixing holes, leaving a gap of 5-6 mm between the wall and the head of the screw. Note: If the hood is to be installed onto a hollow construction or plaster or partition board wall then special fixing screws will be required (not supplied). 14 X 7.2.1 INSTALLING THE COOKER HOOD Fitting the Hood Body Before starting to fix the hood body, tighten the two screws Vr located on the top of the hood body. Hook the hood body onto the two screws item 12a (not supplied). Fully tighten the screws item 12a. Using a screw drive.



[You're reading an excerpt. Click here to read official TRICITY CH950X user guide](http://yourpdfguides.com/dref/946804)
<http://yourpdfguides.com/dref/946804>