



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY DH090. You'll find the answers to all your questions on the TRICITY DH090 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY DH090
User guide TRICITY DH090
Operating instructions TRICITY DH090
Instructions for use TRICITY DH090
Instruction manual TRICITY DH090

TRICITY BENDIX

*INSTRUCTION BOOK
Part 2*



Dishwasher

DH 090



[You're reading an excerpt. Click here to read official TRICITY DH090 user guide](http://yourpdfguides.com/dref/946749)
<http://yourpdfguides.com/dref/946749>

Manual abstract:

3. 4. 5. 6. 7. 8. @@Upper basket 11. Levelling spacers 12. Worktop 2 The control panel 1 2 3 4 1. MAINS ON indicator light 2. On/Off push button 3. Programme guide 4. Door handle 5. Programme marker 6. Programme selector dial 7.

Programme sequence indicator As the programme progresses, the programme selector dial turns, to show the phase in the wash programme the appliance has reached. @@Partial load (to be completed later in the day). Starting Required position of the push button programme selector Recommended quantity of detergent Wash Prewash Cycle description RINSE & HOLD 1 On/Off // 1 cold rinse (to avoid food scraps from sticking together). Cold prewash Main wash up to 65°C 1 cold rinse 1 hot rinse Drying Main wash up to 65°C 1 cold rinse 1 hot rinse * POWER WASH Normal soil Crockery and cutlery 2 On/Off 20 g 5g NORMAL WASH Light soil Crockery and cutlery 3 On/Off 25 g / ** ECO WASH Light soil Crockery, cutlery and party crockery 4 On/Off 25 g / * Testing programme for EN 50242 (see "Hints for Test Centres"). ** This is a special programme for quick washing a full load of lightly soiled dishes, glasses and crockery (except pots) so that you may re-use them promptly.

4 Operating sequence 1. Check the filters Ensure they are clean and properly positioned (see "Maintenance and cleaning" Instruction book Part 1). 9. At the end of the washing programme At the end of the programme the dishwasher will automatically stop. 2. Check that there is rinse aid and salt (See Instruction book - Part 1). 10. Switch off the dishwasher Switch off the dishwasher by pressing the On/Off push button. Wait 15/20 minutes before opening the dishwasher's door; in this way you will avoid burning yourself when removing the dishes and avoid also the damage of the nearby furniture caused by the escape of steam. @@@@ in it.

Slide the baskets back into the machine. 4. Ensure that the spray arms can rotate freely. Measure out detergent Add the required amount of detergent into the dispenser according to the "Washing programmes" chart. @@@@ The MAINS ON indicator light will come on and the machine will start.

@@@@ Take care when loading or unloading sharp items such as knives. @@@ Mix spoons with other cutlery to prevent them from sticking together. U145 6 The upper basket The upper basket is designed for plates (dessert plates, saucers, dinner plates of up to 24 cm in diameter), salad bowls, cups and glasses. Arrange items so that water can reach all surfaces. Light items (plastic bowls etc.

) should be loaded in the upper basket and arranged so they do not move. US07 Before closing the door, ensure that the spray arms can rotate freely.

Adjusting the height of the upper basket If washing very large plates (over 27 cm and up to 31 cm in diameter) you can load them in the lower basket after moving the upper basket to the higher position. To move to the higher position proceed as follows: 1. @@2.

@@@ Insert the machine after adjusting height and levelling with the adjustable feet. When inserting the machine, ensure that the water inlet and drain hoses are not kinked or squashed. 570- 600 450 IN04 Levelling Good levelling is essential for correct closure and sealing of the door. When the appliance is correctly levelled, the door will not catch on the levelling spacers on either side of the cabinet. @08705 950 950 From the Electrolux Group.

The world's No.1 choice. The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. @@.



[You're reading an excerpt. Click here to read official TRICITY](#)

[DH090 user guide](#)

<http://yourpdfguides.com/dref/946749>