



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY DH104W. You'll find the answers to all your questions on the TRICITY DH104W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY DH104W
User guide TRICITY DH104W
Operating instructions TRICITY DH104W
Instructions for use TRICITY DH104W
Instruction manual TRICITY DH104W

TRICITY BENDIX

INSTRUCTION BOOK



Dishwasher

DH 104

0 0304



[You're reading an excerpt. Click here to read official TRICITY DH104W user guide](http://yourpdfguides.com/dref/946758)
<http://yourpdfguides.com/dref/946758>

Manual abstract:

This information has been provided in the interest of your safety. You MUST read it carefully before installing or using the appliance. Installation q Check your dishwasher for any transport damage. Never connect a damaged machine. If your dishwasher is damaged, you should contact your supplier. For safety reasons it is dangerous to alter the specifications or attempt to modify this product in any way. Any electrical and plumbing work required to install this appliance should be carried out by a qualified and competent person. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. The sides of the dishwasher must never be drilled to prevent damage to hydraulic components. Disposal Dispose of the dishwasher packaging material correctly.

All packaging materials can be recycled. Plastic parts are marked with standard international abbreviations: >PE< for polyethylene, e.g. sheet wrapping material. >PS< for polystyrene, e.

g. padding material (always CFCfree). >POM< for polyoxymethylene, e.g. plastic clips.

Cardboard packaging is manufactured from recycled paper and should be deposited in the waste paper collection for recycling. As and when you cease to use your dishwasher and withdraw it from service, you should render it unserviceable before having it disposed of. Warning! Children at play could lock themselves in your dishwasher or otherwise endanger their lives. Therefore cut off the power supply cable and make the door closing device unusable to prevent children from being trapped inside. For the disposing of the appliance please take it to a recycling centre or to your dealer who may, for a small contribution to the costs, dispose it for you. q q q Child safety q q This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the product. Packaging parts may be dangerous for children, who could even be suffocated! You should therefore keep all packaging well away from children. The water in your dishwasher is not for drinking. Detergent residues may still be present in your machine.

Keep children well away from your dishwasher when the door is open. Keep all detergents in a safe place out of children's reach. q q q Economical and ecological dishwashing q Ensure that the water softener is correctly adjusted. Do not pre-wash under running water. Select the wash programme to suit the nature and degree of the soiling on the dishes. Do not use more detergent, dishwasher salt and rinse aid than is recommended in these operating instructions and by the manufacturer of the respective product. Your dishwasher in day-to-day use q q q Items that are contaminated by petrol, paint, steel or iron debris, corrosive, acidic or alkaline chemicals must not be washed in this dishwasher. Under no circumstances should you open the door whilst the appliance is in operation, especially during the washing phase, hot water may escape. However, if the door is opened, a safety device ensures that the machine stops. Only use products (detergent, salt and rinse aid) specifically designed for use in dishwashers.

Long bladed knives stored in an upright position are a potential hazard. Long and/or sharp items of cutlery such as carving knives must be positioned horizontally in the upper basket. When finishing loading or unloading close the door, as an open door can be a hazard. Do not sit or stand on the open door.

Isolate the appliance from the power supply and turn off the water supply after use.

This product should be serviced by an authorised service engineer, and only genuine spare parts should be used. Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Force Centre. Always insist on genuine spare parts.

3 q q q q q q q q q q Description of the appliance 1. 2. 3. 4. 5. 6. 7. 8. 9. Upper basket stop Water hardness switch Salt container Detergent dispenser Control panel Rating plate Rinse aid dispenser Filters Lower spray arm 10.

Upper spray arm 11. Upper basket 12. Worktop IN144 The control panel Programme sequence indicator: As the programme progresses, the programme selector dial turns, to show the phase in the wash programme the appliance has reached. Prewash - Rinse and Hold Main wash Cold rinse Hot rinse Drying 4

Prior to using for the first time Before using your dishwasher for the first time: 1. Ensure that the electrical and water connections comply with the installation instructions 2. Remove all packaging from inside the appliance 3. Set the water softener 4. Pour 1 litre of water inside the salt container and then fill with dishwasher salt 5. Fill the rinse aid dispenser Filling with salt Only use salt specifically designed for use in dishwashers. All other types of salt not specifically designed for use in a dishwasher, especially table salt, will damage the water softener.

Only fill with salt just before starting one of the complete washing programmes. This will prevent any grains of salt or salty water, which may have been spilt, remaining on the bottom of the machine for any period of time, which may cause corrosion. The water softener The dishwasher is equipped with a water softener designed to remove minerals and salts from the water supply, which would have a detrimental or adverse effect on the operation of the appliance. The higher the content of these minerals and salts, the harder your water is. Water hardness is measured in equivalent scales, Clarke degrees, French degrees (°TH) and mmol/l (millimol per litre).

The softener should be adjusted according to the hardness of the water in your area. Your local Water Authority can advise you on the hardness of the water in your area. To fill: 1. Open the door, remove the lower basket and unscrew the cap of the salt container by turning it anticlockwise. 2.

Pour 1 litre of water inside the container (this is necessary only before filling with salt for the first time). 3. Using the funnel provided, pour in the salt until the container is full. 4. Replace the cap making sure that there is no trace of salt on the screw thread or on the gasket. 5. Screw on the cap tightly turning it clockwise until it stops with a click. LE SA UT ZO LT SA LZ SA L SE Setting the water softener 1. Open the dishwasher door. 2.

Remove the lower basket from the dishwasher. 3. Turn the water hardness switch until the required level (see table) corresponds with the marker . 4. Replace the lower basket. The dishwasher is factory set at position 2. SR14 The salt container will require topping up periodically. The salt cap has a refill indicator window in the centre. A green float is clearly visible when there is salt inside the container and almost disappears when the salt has finished reminding you to add salt. AA08 SR22 Do not worry if water over flows from the unit when filling with salt, this is quite normal.



[You're reading an excerpt. Click here to read official TRICITY](#)

[DH104W user guide](#)

<http://yourpdfguides.com/dref/946758>

Water hardness Clarke degrees 57 - 63 43 - 56 28 - 42 15 - 27 5 - 14 <5 French degrees (°TH) in mmol/l (millimol per litre, international unit for the hardness of water) Range Setting of the water softener level 5 level 4 level 3 level 2 level 1 level 1 Use of salt 81 - 90 61 - 80 41 - 60 21 - 40 8 - 20 <8 8,3 - 8,9 6,3 - 8,2 4,0 - 6,2 2,0 - 3,9 0,7 - 1,9 < 0,7 IV IV IV III I/II I yes yes yes yes no 5 Rinse aid Rinse aid is automatically added during the last rinse, ensuring thorough rinsing, and spot and streak free drying. The dispenser, which is positioned inside the door, holds about 110 ml of rinse aid, which is sufficient for 16 - 40 dishwashing programmes, depending upon the dosage setting. Filling with rinse aid 1. Open the container by pressing the release button (A). 2.

Add the rinse aid until the container is completely full. The maximum level for filling is indicated by "max". BR10 BR16 Ensure that the lid is closed after every refill. Clean up any rinse aid spilt during filling with an absorbent cloth to avoid excess foaming during the next wash. Only use branded rinse aid for dishwashers.

Never fill the rinse aid dispenser with any other substances (e.g. dishwasher cleaning agent, liquid detergent). This would damage the appliance. Adjusting the dose According to the finish and drying results obtained, adjust the dose of rinse aid by means of the 6 position selector (position 1 minimum dosage, position 6 maximum dosage). The dose is factory set in position 4. Increase the dose if there are drops of water or lime spots on the dishes after washing. Reduce it if there are sticky whitish streaks on the dishes or a bluish film on glassware or knife blades. BR12 Top up the rinse aid when the indicator (B) becomes clear. BR11 6 In daily use q Check if it's necessary to refill with dishwasher salt or rinse aid Load cutlery and dishes into the dishwasher.

Fill with dishwasher detergent . Select a wash programme suitable for the cutlery and dishes. Start the wash programme. Loading cutlery and dishes Sponges, household cloths and any object that can absorb water may not be washed in the dishwasher. q q q q q Before loading the dishes, you should: - Remove large left-overs. - Soften remnants of burnt food in pans When loading the dishes and cutlery, please note: - Dishes and cutlery must not impede the rotation of the spray arms . - Load hollow items such as cups, glasses, pans, etc. with the opening downwards so that water cannot collect in the container or a deep base. - Dishes and items of cutlery must not lie inside one another, or cover each other. - To avoid damage to glasses, they must not touch.

- Lay small objects in the cutlery basket. Plastic items and pans with teflon have a tendency to retain water drops; these items will not dry as well as porcelain and steel items. q q For washing in the dishwasher the following cutlery/dishes are not suitable: - Cutlery with wooden, horn, china or mother-of-pearl handles - Plastic items that are not heat resistant - Older cutlery with glued parts that is not temperature resistant - Bonded cutlery items or dishes - Pewter or copper items - Lead crystal glass - Steel items subject to rusting - Wooden platters - Items made from synthetic fibres Open the door and slide out the baskets to load the dishes. are of limited suitability: - Only wash stoneware in the dishwasher if it is specifically marked as being dishwasher-safe by the manufacturer. - Glazed patterns may fade if machine washed frequently - Silver and aluminium parts have a tendency to discolour during washing. Residues, e.g. egg white, egg yolk and mustard often cause discolouring and staspenser. Use of "3 in 1" combi detergents General advice These products are detergents with integrated and combined detergent/rinse-aid and salt functions. 1.

Before using these products you should first check that the water hardness in your supply is compatible with the use of these products as per the detergent manufacturers (on the product packaging). 2. These products should be strictly used according to the detergent manufacturers instructions. 3. If you encounter problems when using 3 in 1 products for the first time then please contact the detergent manufacturers care line (the telephone number is given on the product packaging). Concentrated detergent Based on their chemical composition, dishwasher detergents can be split into two basic types: - conventional, alkaline detergents with caustic components. - low alkaline concentrated detergents with natural enzymes. The use of 50°C washing programmes in conjunction with concentrated detergents reduces pollution and is good for your dishes; these wash programmes are specially matched to the dirt-dissolving properties of the enzymes in the concentrated detergent. For this reason 50°C wash programmes in which concentrated detergents are used can achieve the same results that can otherwise only be achieved using 65°C programmes. Special advice When using combination 3 in 1 products select the lowest possible setting for water hardness.

If you decide to turn back to the use of the standard detergent system we advise that you: q q Refill both the salt container and rinse aid dispenser. Switch the water hardness setting to the highest possible position and run from 1 to 3 normal washing programmes without a load. Readjust the water hardness setting again according to the hardness of the water in your area. q Combi detergents If you are using dishwasher detergent that includes the rinse aid function, this must be placed in the detergent compartment. In this case the rinse aid compartment must be empty, in order to avoid a double dosage. If in the rinse aid compartment there is still rinse aid you must wait until it has finished before using these kind of detergents. For best results we recommend the use of Finish detergents, rinse aid and salt. POURING EASY PACK TION DOUBLE AC BRILLIANT SHINE FOR A N EW LIQUID GEL POWDER RINSE C O N C E N T

R A T E D D I S H W A S H E R D E T E R G E N T DE15 9 Washing programmes Programme Degree of soil and type of load Starting position of the programme selector dial Cycle description (3) Consumption values Programme duration (in minutes) Energy consumption (in kWh) Water consumption (in litres) Rinse & Hold Any. Partial load (to be completed later in the day). 1 1 cold rinse (to avoid food scraps from sticking together).

This programme does not require the use of detergent. Cold prewash Main wash up to 65°C 1 cold rinse 1 hot rinse Drying Main wash up to 65°C 1 cold rinse 1 hot rinse Drying Main wash up to 65°C 1 hot rinse 10 0,1 12 (1) Power Wash 65°C Heavy soil Crockery, cutlery, pots and pans 2 102 - 115 1,2 - 1,3 14 - 15 Normal Wash 65°C Normal soil Crockery and cutlery Fresh soil Crockery and cutlery 3 90 - 100 1,2 - 1,3 11 - 12 (2) Eco Wash 65°C 4 30 - 40 1,1 - 1,2 12 - 13 (1) (2) Testing programme for EN 50242 (see "Hints for Test Centres").



[You're reading an excerpt. Click here to read official TRICITY](#)

[DH104W user guide](#)

<http://yourpdfguides.com/dref/946758>

Ideal for washing crockery and cutlery of breakfast and dinner (fresh soil). Characterised by a short duration. This is the perfect daily programme, made to meet the needs of a family of 4 persons who only wish to load breakfast and dinner crockery and cutlery.

The consumption values are intended as a guide and depends on the pressure and the temperature of the water and also by the variations of the power supply.

(3) 10 Starting a washing programme 1. Check that the baskets have been loaded correctly and that the spray arms can rotate freely 2. Turn on the water tap 3. Close the dishwasher door 4.

Set and start of the programme Turn the programme selector dial clockwise until the number of the programme you wish to select corresponds with the programme marker on the control panel. Depress the On/Off push button, The On/Off indicator light illuminates and the machine will start. 5. Interrupting a washing programme in progress Interrupt a washing programme in progress ONLY if it's absolutely necessary. Attention! Hot steam may escape when the door is opened. Open the door carefully. a) Open the dishwasher door; the programme will stop. Close the door; the programme will start from the point in which it was interrupted. b) Press the On/Off push button (in this case the On/Off indicator light turns off). Press the On/Off push button again; the programme will start from the point in which it was interrupted.

6. End of the washing programme The dishwasher will automatically stop. Switch off the dishwasher by pressing the On/Off push button, the On/Off indicator light turns off. @@Unloading the dishwasher Hot dishes are sensitive to knocks. @@@@@@@If necessary use only neutral detergents.

@@@@@@@@@9. @@@@@@@Dirty filters will degrade the washing result. 1. Open the door, remove the lower basket. 2.

@@@@@@@@@Unplug the appliance and then turn off the water. 2. @@3. @@@@@@@@5. Clean all filters thoroughly under running water.

6. @@Unplug it. 2. Turn the water tap off. 3.

Remove the water inlet and discharge hoses. 4. Pull the machine out together with the hoses. Avoid over tilting the machine during transportation. MA31 7.

Put the flat filter (D) back in the base of the washing compartment. 8. Place the coarse/fine filter (A/B) in the microfilter (C) and press together. 12 What to do, when..

. Certain problems are due to the lack of simple maintenance or oversights, which can be solved with the help of the instructions given here, without calling out an engineer. ...there are problems when operating the dishwasher The dishwasher will not start or stops during operation. Press the On/Off push button to switch the dishwasher off and carry out the following suggested corrective actions. Important: If you call out an engineer to a fault listed below or to repair a fault caused by incorrect use or installation a charge will be made, even if the appliance is in guarantee. Malfunction Possible cause The water tap is blocked or furred with limescale. Solutions Clean the water tap.

Turn the water tap on. Clean the filter in the threaded hose fitting. Check the water inlet hose connection. The machine does not fill with water. The water tap is turned off.

The filter (where present) in the threaded hose fitting at the water inlet valve is blocked. The water inlet hose has not been correctly laid or it is bent or squashed. The siphon is blocked. Clean out the siphon. Check the water drain hose connection.

The dishwasher will not drain. The water drain hose has not been correctly laid or it is bent or squashed. The dishwasher door has not been properly closed.

The programme does not start The main plug is not plugged in. The fuse has blown in the household fuse box. There is a whistling noise during washing The whistling is not a cause for concern. Close the door. Insert the mains plug. Replace the fuse. Use a different brand of detergent.

Once the checks have been carried out, press the On/Off push button, the programme will continue from the point in which it was interrupted. If the malfunction reappears contact the Service Force Centre. ...the wash results are not satisfactory The dishes are not clean q q q q q q q q The wrong washing programme has been selected. The dishes were arranged in such a way as to stop water reaching all parts of the surface. The baskets must not be overloaded.

The spray arms do not rotate freely due to wrong arrangement of the load. The filters in the base of the washing compartment are dirty or incorrectly positioned.

Too little or no detergent has been used. Where there are limescales deposits on the dishes; the salt container is empty or the wrong level of the water softener has been selected. The drain hose connection is not correct. The salt container cap is not properly closed. The dishes are wet and dull q q Rinse aid was not used.

The rinse aid dispenser is empty. There are streaks, milky spots or a bluish coating on glasses and dishes q Decrease rinse aid dosing. Water drops have dried onto glasses and dishes q q Increase rinse aid dosing. The detergent may be the cause. Contact the detergent manufacturer's consumer care line.

13 If after all these checks, the problem persists, contact your local Service Force Centre, quoting the model (Mod.), product number (PNC) and serial number (S.N.). This information can be found on the rating plate located on the side of the dishwasher door (see picture). So that you always have these numbers at hand, we recommend you to make a note of them here: Mod. :

.....

... PNC : .

.....

.....

.. S.N. :

.....

.....

.. RA08 This product should be serviced by an authorised service engineer, and only genuine spare parts should be used. Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Force Centre. Always insist on genuine spare parts. 14 Service and Spare Parts In the event of your appliance requiring service, or if you wish to purchase spare parts please contact your local Service Force Centre by telephoning: 08705 929929 Your telephone call will be automatically routed to the Service Force centre covering your post code area. For the address of your local Service Force Centre and further information about Service Force, please visit the website at www.serviceforce.com.

co.uk Before calling out an engineer, please ensure you read the details under the heading Something not working. When you contact the Service Force Centre you will need to give the following details: 1. Your name, address and post code 2. Your telephone number 3. Clear and concise details of the fault 4.

The model and serial number (found on the rating plate) 5. The purchase date Please note that a valid purchase receipt or guarantee documentation is required for in-guarantee service calls. For Customer Service in Ireland please contact us at the address below: Tricity Bendix Electrolux Group (Irl) Ltd



[You're reading an excerpt. Click here to read official TRICITY
DH104W user guide](#)
<http://yourpdfguides.com/dref/946758>

eid@electrolux.

ie Customer Care Department For general enquiries concerning your Tricity Bendix appliance or for further information on Tricity Bendix products please contact our Customer Care Department by letter or telephone at the address below. Customer Care Department Tricity Bendix 55-77 High Street Slough Berkshire SL1 1DZ Tel: 08705 950950 (*) * calls to this number may be recorded for training purposes 15 Guarantee Conditions Standard guarantee conditions We, Tricity Bendix, undertake that if within 12 months of the date of purchase this Tricity Bendix appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that: q European Guarantee If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications: q The guarantee starts from the date you first purchased your product. The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products. This guarantee relates to you and cannot be transferred to another user. Your new home is within the European Community (EC) or European free Trade Area.

The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household. The product is installed taking into account regulations in your new country. The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.

The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions. The appliance has not been serviced, maintained repaired, taken apart or tampered with by any person not authorised by us. All service work under this guarantee must be undertaken by a Service Force Centre. Any appliance or defective part replaced shall become the Company's property. This guarantee is in addition to your statutory and other legal rights. q q q q q q q q Home visits are made between 8.30am and 5.30pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged. Before you move please contact your nearest Customer Care centre, listed below, to give them details of your new home.

They will then ensure that the local service Organisation is aware of your move and able to look after you and your appliances. France Senlis Nurnberg Pordenone Stockholm Slough Dublin +33 (0) 3 44 62 20 13 +49 (0) 800 234 7378 +39 (0) 800 117511 +46 (0) 20 78 77 50 +44 (0)1753 219898 +353 (0)1 4090752 Exclusions This guarantee does not cover: q Germany Italy Sweden UK Ireland Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic. Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom. Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements. Products of Tricity Bendix manufacture which are not marketed by Tricity Bendix. q q q 16 Installation instructions Any electrical and/or plumbing work required to install this appliance should be carried out by a qualified electrician and/or plumber or competent person. Remove all packaging before positioning the machine. If possible, position the machine next to a water tap and a drain. Water supply connections This dishwasher must be plumbed into a cold water supply. For making the connection itself, the coupling nut fitted to the machine's supply hose is designed to screw onto either a 3/4" inch gas thread spout or to a purpose made quick-coupling tap such as the Press-block.

The water pressure must be within the limits given in the "Technical specifications". Your local Water Authority will advise you on the average mains pressure in your area. The water inlet hose must not be kinked, crushed, or entangled when it is being connected up. The dishwasher features fill and drain hoses which can be turned either to the left or the right to suit the installation by means of the locknut. The locknut must be correctly fitted to avoid water leaks.

(Attention! NOT all models of dishwashers have fill and drain hoses provided with locknut. In this case, this kind of facility is not possible). If the machine is connected to new pipes or pipes which have not been used for a long time, you should run the water for a few minutes before connecting the inlet hose. Do not use, for connection, old hoses which have been used in another appliance. The dishwasher is fitted with safety devices that prevent the wash water returning into the drinking water system and comply with the applicable plumbing regulations.

Fitting under a counter (kitchen worktop or sink) By removing the machine's worktop, you can install it under a close fitting sink unit or a pre-existing top, providing the dimensions of the recess correspond to those shown in the picture. 570 - 600 600 IN05 Proceed as follows: Remove the machine's worktop by unscrewing the two rear retaining screws, pull the worktop from the back of the machine and slide out the front slots, lifting the worktop. Insert the machine after adjusting height and levelling with the adjustable feet. When inserting the machine, ensure that the water inlet and drain hoses are not kinked or squashed. During all operations that involve accessibility to internal components the dishwasher has to be unplugged. Be sure that once the appliance has been installed, it is easily accessible for the consumer service department. If the dishwasher is later used as a free-standing appliance, the original worktop must be re-mounted. The plinth on free-standing appliances is not adjustable. Levelling Good levelling is essential for correct closure and sealing of the door. When the appliance is correctly levelled, the door will not catch on either side of the cabinet.

If the door does not close correctly, loosen or tighten the adjustable feet until the machine is perfectly level. 820 17 Water outlet hose connection The end of the drain hose can be connected in the following ways: 1. To the sink outlet spigot, securing it to the underside of the work surface. This will prevent waste water from the sink running into the machine. 2. @ @ 3. @ @ @ @ @ The sink plug must not be in place when the machine is draining as this could cause the water to siphon back into the machine. If you use a drain hose extension it must be no longer than 2 metres and its internal diameter must be no smaller than the diameter of the hose provided. Electrical connection This appliance must be earthed. The manufacturer declines any responsibility should this safety measure not be observed.



[You're reading an excerpt. Click here to read official TRICITY](#)

[DH104W user guide](#)

<http://yourpdfguides.com/dref/946758>

If the plug that is fitted to your appliance is not suitable for the socket, it must be cut off and the appropriate plug fitted. Important The wires on the mains lead are coloured in accordance with the following code: Green and Yellow Blue Brown - Earth - Neutral - Live If you fit your own plug, the colours of the wires in the mains lead of your appliance may not correspond with the markings identifying the terminals in your plug. Proceed as follows: 1. Connect the Green and Yellow (earth) wire to the terminal in the plug which is marked with the letter "E" or the earth symbol or coloured green and yellow. 2. Connect the Blue (neutral) wire to the terminal in the plug which is marked with the letter "N" or coloured black. 3. Connect the Brown (live) wire to the terminal in the plug which is marked with the letter "L" or coloured red. E 13 A N CS18 L Likewise the internal diameter of the couplings used for connections to the waste outlet must be no smaller than the diameter of the hose provided. CE04 Attention! Our appliances are supplied with a security device to protect against the return of dirty water back into the machine.

If the spigot of your sink has a "no return valve" incorporated this can prevent the correct draining of your dishwasher. We advise you therefore to remove it. The plug moulded onto the lead incorporates a 13amp BSI362 fuse. Only ASTA or BSI fuses should be used. The plug must not be used if the fuse cover/carrier is lost. The cover/carrier is indicated by the coloured insert at the base of the plug. A replacement cover/carrier must be obtained from your local Service Force Centre. To isolate the dishwasher from mains, remove the mains plug. Important! The plug must still be accessible after the appliance has been installed. The appliance should not be connected to the electrical supply by means of an extension cable.

In case that the electrical cable has to be replaced, please contact your local Service Force Centre. 18 Hints for test centres Testing in accordance with EN 60704 must be carried out with appliance fully loaded and using the test programme (see "Washing programmes" chart). Test in accordance with EN 50242 must be carried out when the salt dispenser and rinse aid container have been filled with salt and rinse aid respectively and using the test programme (see "Washing programmes" chart). Load: Rinse aid setting: Detergent dosage : 12 standard place settings position 4 (Type III) 5 g + 25 g (Type B) Arrangement upper basket Arrangement lower basket Arrangement cutlery basket 19 Tricity Bendix, 55-77 High Street, Slough, Berkshire, SL1 1DZ Customer care telephone number... 08705 950 950 From the Electrolux Group. The world's No.1 choice. The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use.

More than 55 million Electrolux Group products (such as refrigerators, cookers, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. 14 billion USD in more than 150 countries around the world. 152963 13/0 Subject to change without notice UK © Electrolux plc 2004 .



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/946758)

[DH104W user guide](http://yourpdfguides.com/dref/946758)

<http://yourpdfguides.com/dref/946758>