



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY E715GR. You'll find the answers to all your questions on the TRICITY E715GR in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual TRICITY E715GR**  
**User guide TRICITY E715GR**  
**Operating instructions TRICITY E715GR**  
**Instructions for use TRICITY E715GR**  
**Instruction manual TRICITY E715GR**



OPERATING AND INSTALLATION INSTRUCTIONS

MODEL NO.  
E 715



[You're reading an excerpt. Click here to read official TRICITY E715GR user guide](http://yourpdfguides.com/dref/946638)  
<http://yourpdfguides.com/dref/946638>

**Manual abstract:**

@@@Any electrical installation work must be undertaken by a qualified electrician/competent person. This cooker is heavy and care must be taken when moving it. Do not try to move the cooker by pulling the door handles. All packaging, both inside and outside the cooker must be removed before the cooker is used. It is dangerous to alter the specifications or modify the cooker in any way. After installation please dispose of the packaging with due regard for safety and the environment. Stand clear when opening the drop down oven doors. Support the doors using the handles until fully open. Do not place sealed cans or aerosols inside the oven. They may explode if they are heated.

Ensure that all control knobs are in the OFF position when not in use. Do not stand on the cooker or on the open oven doors. Do not hang towels, dishcloths or clothes from the cooker or its handles. They are a safety hazard. **CLEANING AND MAINTENANCE** The cooker is heavy and care must be taken. This cooker should be kept clean at all times.

A build-up of fats or other foodstuffs could result in a fire, especially in the grill pan. Do not leave cookware containing foodstuffs, e.g. fat or oil in the cooker in case it is inadvertently switched on. Always allow the cooling fan to cool the cooker down before switching off at the wall prior to carrying out any cleaning / maintenance work.

Only clean this cooker in accordance with the instructions given in this book. Repairs should not be carried out by inexperienced persons as this may cause injury or serious malfunction. This cooker should be serviced by an authorised Service Engineer and only genuine approved spare parts should be used.

Details of servicing and repair arrangements are supplied on page 37 of this book. **CHILD SAFETY** This cooker is designed to be operated by adults. Young children must not be allowed to tamper with the controls or play near or with the cooker. The cooker and accessible parts especially around the grill area become hot when the cooker is in use. Keep children away until it has cooled. **DURING USE** Do not use this cooker if it is in contact with Take great care when heating fats and oils as they will ignite if they become too hot.

This cooker has been designed for cooking edible foodstuffs only, and must not be used for any other purposes. Never place plastic or any other material which may melt in or on the oven. Do not leave the grill pan handle in position when grilling and ensure oven gloves are used to remove and replace the handle, as it will become hot. Always use oven gloves to remove and place food in the oven. Ensure that all vents are left unobstructed to ensure ventilation of the oven cavity. Never line any part of the cooker with aluminium foil. Do not allow heatproof cooking material, e.g. roasting bags to come into contact with oven elements because they may catch fire. Always stand back from the cooker when opening the oven door to allow any build up of steam or heat to release. water. Never operate it with wet hands. **SERVICE** When the time comes to dispose of your cooker please contact your local Council Authority. They can arrange to dispose of the cooker in a safe and controlled manner. The number will be in the telephone book.

Please read this instruction book carefully before use and retain for future reference. **AT THE END OF THE COOKERS LIFE** 2 CONTENTS FOR THE USER Important Safety Information Description of the Cooker Getting to Know Your Oven The Cooling Fan for the Controls Control Panel Indicator Neons Before Using The Cooker Rating Plate When First Switching On Condensation and Steam Cookware The Trivet Grill and Oven Furniture The Electronic Timer The Dual Grill Uses of the Grill How To Use the Dual Grill Things To Note The Grill Pan and Handle Hints and Tips Grilling Chart The Convenience Oven Uses of the Convenience Oven How To Use the Convenience Oven Things To Note To Fit the Oven Shelf Hints and Tips Oven Cooking Chart The Fan Oven Uses of the Fan Oven How To Use the Fan Oven Things to Note To Fit the Fan Oven Shelves Hints and Tips Fan Oven Cooking Chart Roasting Chart Defrost Feature Uses of Defrost Feature How To Defrost Things to Note Hints and Tips 2 5 6 7 7 8 8 8 8 9 9 10 11 15 15 15 15 16 16 18 19 19 19 19 20 21 22 22 22 23 23 24 25 26 26 26 26 26 Care and Cleaning Cleaning Materials Cleaning the Outside of the Cooker Cleaning the Outer and Inner Door Glass Panels Cleaning Inside the Ovens To Remove the Wirework Runners Cleaning the Shelves, Wirework Runners and Oven Furniture Care of Stayclean Surfaces The Oven Cleaning Cycle Things to Note Hints and Tips Replacing an Oven Light Bulb If Something Doesn't Work Guarantee Conditions Service and Spare Parts Customer Service Centres 28 28 28 29 30 31 31 31 32 32 32 33 34 36 37 38 Please read the whole instruction book before using the cooker. To help you the following symbols will be found in the text. Safety Instructions Step by Step Instructions Hints and Tips 3 **FOR THE INSTALLER** Technical Details Things You Need to Know Warnings Things to Note Getting Things Ready Choice of Electrical Connection Preparing Cabinet for Fitting Oven Recommended Cabinet Dimensions How to Finish Unpacking Tools Required Making the Electrical Connections Preparing Cable To Remove Cover of Mains Terminal Connecting to the Mains Terminal Checking Electrical Connections Connecting to a Hob or Cooker Point 40 41 41 41 42 42 43 43 44 44 45 45 45 46 47 47 .

4 **DESCRIPTION OF THE COOKER** Built in electric double oven **WARNING: THIS COOKER MUST BE EARTHED** Electronic Timer Dual Grill Convenience Oven Fan Oven Your built in cooker comprises of a conventional oven and dual grill in the top compartment.

The top oven is convenient and economical for mid-week use because of its size. The main fan oven is the larger of the two ovens. It is particularly suitable for cooking larger quantities of food. The main fan oven can be automatically controlled by the electronic timer. 5 **GETTING TO KNOW YOUR OVEN** The Control Panel Electronic Timer Dual Grill Control Grill Indicator Neon Convenience Oven Temperature Control Convenience Oven Indicator Neon Fan Oven Temperature Control Fan Oven Indicator Neon 6 **THE COOLING FAN FOR THE CONTROLS** Your cooker has a cooling fan fitted behind the controls to prevent them from overheating. The cooling fan will come on immediately when the grill is switched on and after a short time when either of the ovens are in use. The cooling fan may cycle on and off when the cooker is in use. This is quite normal. The cooling fan may run on after the ovens or grill are switched off for a period of time to cool the cooker down. It may continue to switch on and off until the cooker is cool.

Always allow the cooling fan to cool the cooker down before switching off at the wall prior to carrying out any cleaning or maintenance work.



[You're reading an excerpt. Click here to read official TRICITY](#)

[E715GR user guide](#)

<http://yourpdfguides.com/dref/946638>

*NOTE* The action of the cooling fan will depend on how long the ovens or grill have been used and at what temperature. It may not switch in at all at lower temperature settings nor run on where the grill or oven has only been used for a short time. **CONTROL PANEL INDICATOR NEONS** These lights indicate whether the ovens or grill are switched on. In the case of the ovens, the Convenience and Fan oven neons also indicate when the set temperature has been reached. They will cycle on and off during use to show that the temperature is being maintained. The grill neon does not cycle on and off when the grill is in use. The Fan oven neon does not operate with the Defrost setting. If the neons do not operate as the instructions indicate the controls have been incorrectly set. Return all controls to zero and re-set following the instructions for the required setting.

**7 BEFORE USING THE COOKER WHEN FIRST SWITCHING ON** The timer must be set to manual operation before the fan oven can be operated. This must be done whenever the cooker is switched off at the wall or when there has been a power failure. For instructions on how to set the timer see page 11. If the Fan oven indicator neon does not glow when the oven controls are switched on, it is most likely that the timer is set for automatic cooking. The Convenience Oven and the Dual Grill are not controlled by the electronic timer.

**RATING PLATE** Record the model, product and serial numbers of your cooker on the back page of this instruction book for future reference. You can find these numbers on the rating plate on the front frame of the cooker upon opening the top oven door. The cooker must be protected by a suitably rated fuse or circuit breaker. The rating of the cooker is given on the rating plate. **PREPARING TO USE YOUR COOKER** Wipe over the base of the ovens with a soft cloth and hot soapy water and wash the grill and oven furniture before use.

We suggest that you run all the elements for a short period to burn off any residue from their surfaces. To do this, run the ovens at 220°C for approximately 45 minutes. During this period an unpleasant odour may be emitted, it is therefore advisable to open a window for ventilation. **CONDENSATION AND STEAM** When food is heated it produces steam in the same way as a boiling kettle does. The ovens are vented to allow some of this steam to escape. However, always stand back from the cooker when opening the oven doors to allow any build up of steam or heat to release. If the steam comes into contact with a cool surface on the outside of the cooker, e.g. a trim, it will condense and produce water droplets. This is quite normal and is not caused by a fault on the cooker.

To prevent discolouration occurring, regularly wipe away condensation and any soilage from the cooker surfaces. **8 COOKWARE** Baking trays, dishes etc., should not be placed directly against the grid covering the fan at the back of the oven. Do not use baking trays larger than 30cm x 35cm (12" x 14") as they will restrict the circulation of heat and may affect performance. Advice on the effect of different materials and finishes of bakeware is given in 'Hints and Tips' in the appropriate oven section. **THE TRIVET** When roasting we recommend that you use the trivet in the meat tin. Fat and meat juices will drain into the meat tin below and can be used to make gravy. The trivet also prevents splashes of fat from soiling the oven interior. Note. The meat tin should not be placed on a heated hotplate as this may cause the enamel to crack.

**9 GRILL AND OVEN FURNITURE** The following items of oven furniture have been supplied with the cooker. 1 grill pan 1 grill pan handle 1 grill pan grid 1 trivet 1 meat tin 2 shelves for Fan oven cooking 1 shelf for grilling and Convenience oven cooking Scuffing of the Stayclean sides and back panel by the oven furniture pack may occur during transit. These marks will disappear after the oven has been used for the first time. **10 THE ELECTRONIC TIMER** The electronic timer can indicate the time of day, operate as a minute minder and automatically time the fan oven. A Auto Symbol ( automatic cooking ) Bell Symbol ( minute minder ) Cookpot Symbol ( manual cooking ) Please note that this is a 24 hour clock, for example 2pm is shown as 14.

00. If the oven is switched off at the wall or there is loss of power the clock will stop and you will not be able to use the cooker. When you first switch the electricity supply on, the timer display will flash. Cookpot Symbol Auto Symbol Bell Symbol **TO SET THE TIME OF DAY 1.** Press buttons and Release the buttons. **2.** Within 5 seconds press the + button until the time of day shows in the display. The cookpot symbol ( ) will be showing. **TO CHANGE THE TONE OF THE ALARM** The timer has three different tones to the alarm. You can change the sound of the alarm if you wish. **1.** Ensure the clock shows the correct time of day. **2.** Press the - button to change the sound of the alarm.

You will hear each of the three tones with each press of the button. Keep pressing the button until you hear the tone you prefer. The next time the minute minder or timer is used the tone you selected will sound. **THE MINUTE MINDER 1.** Press and release the button. **2.** Within 5 seconds press the + button until the display shows the time you want. Our diagram **CONVENIENCE OVEN 3.** Ensure the Convenience Oven control is in the Off position '0'. The grill door must be left open when grilling.

**THINGS TO NOTE** The cooling fan for the controls will operate as soon as the grill control is turned. For more information on the operation of the cooling fan turn to page 7. The outer section of the grill element may appear to glow brighter than the inner section. This is quite normal. The grill indicator neon will illuminate.

You can use the grill pan on the shelf in positions 3 and 5 only. If you use the grill pan in position 3 the shelf must be withdrawn before the pan can be located or removed. Ensure the located grill pan is properly 5 4 3 2 1 **15 THE GRILL PAN AND HANDLE** The grill pan has a removable handle. To insert the handle, press the button on the handle with the thumb and pivot the handle slightly upwards inserting the lip into widest part of the bracket.

Move the handle towards the left, lower into position and release the button. Ensure the handle is positively located. To remove the handle, press the button on the handle with the thumb and pivot the handle slightly upwards and towards the right to remove from the bracket. Protect your hands when removing the grill pan handle. Always remove the grill pan handle during grilling. To correctly locate the grill pan on the shelf, ensure that the cut out on the underside of the handle bracket locates over the front bar of the shelf. To check the progress of the food being grilled, the grill pan should be withdrawn on the shelf to attend to food during cooking. Ensure that you support the grill pan when it is withdrawn.



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/946638)

[E715GR user guide](http://yourpdfguides.com/dref/946638)

<http://yourpdfguides.com/dref/946638>

**HINTS AND TIPS** Most foods should be placed on the grilling grid in the grill pan. This allows maximum circulation of air by raising the food out of fats and juices.

Foods such as fish, liver and kidneys may be placed directly on the trivet in the grill pan if preferred. Adjust the grid and grill pan runner position to allow for different thicknesses of food. Position the food close to the element for faster cooking and further away for more gentle cooking. 16 The grill pan grid is reversible. This is useful if you want to cook foods of varying thickness. As a general rule, bread for toasting should be placed on the grid in the 'high' position in the grill pan. Foods such as chicken pieces or chops may be grilled using the grilling grid in the low position. Food should be thoroughly dried before grilling to minimise splashing. Brush lean meats and fish lightly with a little oil or melted butter to keep them moist during cooking. Accompaniments such as tomatoes and mushrooms may be placed underneath the grid when grilling meats.

The food should be turned over during cooking as required. The grill door must be left open when grilling. For convenience the grill door can be left ajar. Preheat the grill on full setting for a few minutes before searing steaks or toasting. Adjust the heat setting and the shelf position as necessary during cooking.

17 GRILLING CHART The chart below gives recommended cooking times and shelf positions. Remember that these are a guide and should be adjusted to suit personal taste. Note Shelf positions are counted from the bottom upwards. FOOD Bacon Rashers Beefburgers Chicken Joints Chops - Lamb - Pork Fish - Whole Trout / Herring Fillets - Plaice / Cod Kebabs Kidneys - Lamb Pig Liver - Lamb / Pig Grill Time (Min) 3 - 5 each side 6 - 10 each side 15 - 20 each side 7 - 10 each side 10 - 15 each side 8 - 12 each side 4 - 6 each side 10 - 15 each side 4 - 6 each side 8 - 10 each side 5 - 10 each side 10 - 15 turn as required 3 - 6 each side 6 - 8 each side 7 - 10 each side 3 - 5 mins Shelf 5 5 3 5 5 5 5 5 5 5 5 5 5 5 5 5 3 Grid Position High Low High Low Low Low Low Low Low Low Low

Low Low Low Low Sausages Steaks - Rare Medium Well Done Browning e.g.

au gratin, lasagne, shepherd's pie - 18 THE CONVENIENCE OVEN USES OF THE CONVENIENCE OVEN The Convenience oven is the smaller of the two ovens. The Convenience oven is a conventional oven, i.e. without a fan. It is convenient where smaller quantities or convenience foods are being cooked. It is important to refer to the cooking chart as a guide to shelf positions and temperatures as these may differ from previous cookers you may have used.

CONVENIENCE OVEN HOW TO USE THE CONVENIENCE OVEN 1. Turn the Convenience Oven temperature control to the required setting. THINGS TO NOTE The Convenience oven indicator neon will glow until the oven has reached the desired temperature and then go out. It will cycle on and off periodically during cooking showing that the temperature is being maintained.

The cooling fan for the controls will operate after a time. See page 7 for more information on the operation of the cooling fan. Do not place dishes, tins and trays directly on the oven base as it becomes very hot and damage will occur. TO FIT THE OVEN SHELF There are 5 shelf positions in the Convenience oven. Shelf positions are counted from the bottom upwards. 5 4 3 2 1 The shelf should be fitted with the straight rods uppermost on the frame and the forms towards the back of the oven. If not fitted correctly the anti-tilt and safety stop mechanism will be affected. Straight Rods Back of the oven Frame 19 HINTS AND TIPS Use the convenience oven when you want to warm plates. Use a setting of 80°C - 100°C on the oven temperature control. You can only cook on one shelf when using the Convenience oven.

For the best results food should be placed in the centre of the oven. To increase top browning e.g. for au gratin dishes, the food should be placed towards the top of the oven. Similarly for foods which benefit from the base being browned, e.

g. pizza, quiches and flans place the food on a lower shelf. There should always be at least 2.5cm (1") between the top of the food and the grill element. This gives best cooking results and allows room for rise in yeast mixtures, Yorkshire puddings etc.

When cooking cakes, pastry, scones bread etc., place the tins or baking trays centrally on the shelf. Ensure that food is placed centrally on the shelf and there is sufficient room around the baking tray or dish to allow for maximum circulation. Where a larger quantity of food is to be cooked we recommend you use the fan oven. Place dishes on a suitably sized baking tray on the shelf to prevent spillage onto the oven base and to help reduce cleaning. The material and finish of the baking tray and dishes will affect the degree of base browning of the food. Enamelware, dark, heavy or non-stick utensils increase base browning.

@@ Do not use the grill pan or meat tin as a baking tray as this will increase base browning of the food. Because of the smaller cooking space and lower temperatures, shorter cooking times are sometimes required. Be guided by the recommendations in the cooking chart.

For economy leave the door open for the shortest possible time, particularly when placing food into a pre-heated oven. 20 When roasting we recommend that you use the trivet in the meat tin. Fat and meat juices will drain into the meat tin below and can be used to make gravy. The trivet also prevents splashes of fat from soiling the oven interior. Note. The meat tin should not be placed on a heated hotplate as this may cause the enamel to crack. CONVENIENCE OVEN

COOKING CHART Note: Shelf positions are counted from the bottom upwards. FOOD Biscuits Bread Bread Rolls / Buns Cakes: Small & Queen Sponges Victoria Sandwich Madeira Rich Fruit Gingerbread Meringues Flapjack Shortbread Baked Custard Casseroles : Beef / Lamb Chicken Convenience Foods Fish Fish Pie - potato topped Fruit Pies, Crumbles Milk Puddings Pasta / Lasagne etc. Pastry : Choux - eclairs/profiteroles Flaky / Puff pies Shortcrust Mince pies Meat pies Quiche, Tarts, Flans Roast Meat / Poultry Scones Shepherds Pie Soufflés Vegetables : Baked Jacket Potatoes Roast Potatoes Yorkshire Puddings - large - individual SHELF POSITION 3 3 3 3 2 2 3 3 2 3 3 2 2 3 3 3 3 3 3 3 3 3 3 3 3 3 1 3 3 3 3 3 3 TEMP (°C) 170 -190 210 - 220 210 -220 180 - 190 180 - 190 180 - 190 160 - 170 140 - 150 150 - 160 80 - 100 180 - 190 140 - 150 160 - 170 150 - 160 140 - 160 According to manufacturers

instructions 170 - 190 200 - 210 190 - 200 140 - 150 190 - 200 190 - 200 200 -210 190 - 200 190 - 200 210 - 220 180 - 190 160 - 180 220 -230 200 - 210 190 - 200 190 - 200 200 - 210 210 - 220 210 - 220 21 THE FAN OVEN USES OF THE FAN OVEN The Fan oven is particularly suitable for cooking larger quantities of food or for weekend or celebration meals. The advantages of Fan oven cooking are: PREHEATING The Fan oven quickly reaches its temperature so it not usually necessary to preheat the oven.



**You're reading an excerpt. [Click here to read official TRICITY](#)**

**[E715GR user guide](#)**

**<http://yourpdfguides.com/dref/946638>**

Without preheating however you may need to add an extra 5 - 10 minutes on the recommended cooking times. For recipes needing high temperatures e.g. bread, pastries, scones, soufflés etc., best results are achieved if the oven is preheated first.

**COOKING TEMPERATURES** Fan oven cooking generally requires lower temperatures than conventional cooking. Follow the temperatures recommended in the chart on page 24 until you are familiar with the lower temperatures associated with Fan oven cooking. As a guide reduce temperatures by 20°C - 25°C for your own recipes. **BATCH BAKING** The Fan oven cooks evenly on all shelf levels, especially useful when batch baking. **FAN OVEN HOW TO USE THE FAN OVEN 1.**

Turn the Fan oven temperature control to the required setting. **THINGS TO NOTE** The oven light will come on when the control is turned. The oven fan will operate continually during cooking. The cooling fan for the controls will operate after a time. See page 7 for further details on the operation of the cooling fan. The fan oven indicator neon will glow until the oven has reached the desired temperature. It will cycle on and off periodically during cooking showing that the temperature is being maintained. If an automatic programme has been set, the oven fan and oven light do not come on until the cook time begins. **22 TO FIT THE FAN OVEN SHELVES** The shelves should be fitted with the straight rods uppermost on the frame and the forms towards the back of the oven. If not fitted correctly the anti-tilt and safety stop mechanism will be affected.

**Back of the oven Straight Rods Frame HINTS AND TIPS** Arrange the shelves in the required positions before switching the oven on. Shelves are numbered from the bottom upwards. **14 1** When cooking more than one dish in the fan oven, place dishes centrally on different shelves rather than cluster several dishes on one shelf, this will allow the heat to circulate freely for the best cooking results. It is recommended that when baking larger quantities, the shelf positions should be evenly spaced to suit the load being cooked. @@Enamelware, dark, heavy or non-stick utensils increase base browning. @@The use of excessively high temperatures can cause uneven browning. It may be necessary to reduce temperatures slightly. @@@@Turn the Fan oven temperature control to Defrost setting. **2. @@THINGS TO NOTE** The oven fan and internal oven light will operate.

@@The actual speed of defrosting is influenced by room temperature. On warm days defrosting will be faster than on cooler days. It is preferable to thaw fish, meat and poultry slowly in the fridge. @@@@Always cook thoroughly immediately after thawing. **DO NOT** leave food at room temperature once it is defrosted.

Cook raw food immediately or store cooked food in the fridge. Care must always be taken when handling foods in the home. @@@@Regularly wipe over the control panel and oven doors using a soft cloth well wrung out in warm water to which a little liquid detergent has been added. Do not attempt to remove any of the control knobs from the panel as this may cause damage and is a safety hazard. **28 CLEANING THE OUTER AND INNER DOOR GLASS PANELS** To prevent damaging or weakening the door glass panels avoid the use of the following: | Household detergents and bleaches | Impregnated pads unsuitable for non-stick saucepans | Brillo/Ajax pads or steel wool pads | Chemical oven pads or aerosols | Rust removers | Bath/Sink stain removers The outer oven door removable for cleaning.

glass panels are **TO REMOVE THE OUTER GLASS 1.** Open the oven door slightly to gain access to the two cross head screws on the top of the oven door. **2.** Loosen the two screws using a Pozidrive screwdriver. **3.** Holding the door glass securely in place with one hand remove the screws and washers with the other hand. The screws and washers retain the trim on the top of the grill door. Note the position of the trim on the door. **4.** Holding the door and glass with one hand, gently pull towards you and slightly lift the door glass with the other hand to disengage the panel from the location point at the bottom of the door.

Gently release the door to close it. **5.** Clean the outer and inner glass using hot soapy water or Hob Brite. Should the inner face of the outer door glass be heavily soiled it is recommended that soapy water with a high concentration of soap is used. To prevent streaking a glass cleaning spray may be applied and the glass polished with a soft cloth. Ensure that all parts are well rinsed and thoroughly dry before attempting to replace the outer door glass. If the door glass panel becomes chipped or has deep scratches the glass will be weakened and must be replaced to prevent the possibility of the panel shattering. Please contact your local Service Centre who will be pleased to advise further. **Grill Door Trim 29 TO REPLACE THE OUTER DOOR GLASS 1.** Holding the door glass panel with both hands, gently place the locators into the holes of the brackets at the bottom of the oven door.

**2.** Holding the door glass with your left hand, use your right hand to open the oven door. Bring the door gently towards the glass panel ensuring the screw location holes line up. **3.** Place the trim in the correct position on the top of the grill door. **4.** Hold the glass in place with one hand and insert the cross head screws with washers into the location holes with the other hand. Give the screws one turn to ensure the glass is secure. **5.** Tighten the screws positively with a Pozidrive screwdriver before closing the oven door.

**DO NOT** attempt to use the oven without the glass being in place. **TO CLEAN THE INNER GLASS DOOR** The inner glass door is not removable. Clean using hot soapy water or Hob Brite and a soft cloth. **DO NOT** use abrasives as they may damage the glass or seal. **CLEANING INSIDE THE OVENS** The oven top, sides and back panels are coated with a Stayclean finish. The Stayclean areas should not be cleaned manually. See Care of Stayclean Surfaces on page 31. The base of the ovens can be cleaned using normal oven cleaners or aerosol oven cleaners with care. Ensure that the manufacturers instructions are followed and that all parts are well rinsed afterwards. Do not use any cleaning agents or scrapers on the oven tops, sides, back panels and door seals.

Damage will occur if soap impregnated steel wool pads, aerosol cleaners or any abrasive cleaners are used. **30 TO REMOVE THE WIREWORK RUNNERS** The wirework runners in both ovens can be removed for cleaning. **1.** Remove all shelves and furniture from the oven. **2.** Hold the wirework at the bottom and gently pull towards the centre of the oven. **3.** Unhook the runner at the top and remove it from the cavity. **4.** To replace, hook the wirework back into the oven sides.

Ensure that the wirework runners are firmly in place before refitting the oven shelves. **CLEANING THE SHELVES, WIREWORK RUNNERS AND OVEN FURNITURE** Soak the oven shelves, wirework runners and grilling grid in hot soapy water if heavily soiled, they will then clean more easily.



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/946638)

[E715GR user guide](http://yourpdfguides.com/dref/946638)

<http://yourpdfguides.com/dref/946638>

If the shelves are heavily soiled a soap impregnated steel wool pad can be used. The grill pan, meat tin and trivet can be cleaned using a soap impregnated steel wool pad. All items of grill and oven furniture are dishwasher safe with the exception of the grill pan handle.

**CARE OF STAYCLEAN SURFACES** The top, sides and back panels of both ovens are coated with a Stayclean finish. They should not be cleaned manually. Aerosol cleaners must not be used on Stayclean surfaces and must not come into contact with elements or the door seal, as this may cause damage. During normal use the Stayclean coating will become splashed with fats and food residues. By running the oven without food, the Stayclean surfaces burn off any soilage.

Regular use of the oven cleaning cycle will help to keep the panels in good condition. See page 32. **31 THE OVEN CLEANING CYCLE - BOTH OVENS 1.** Remove oven shelves, wirework runners and bakeware from oven. 2. Turn the required oven temperature control to 220°C and allow the oven to run for an hour or so. **FAN OVEN CONVENIENCE OVEN THINGS TO NOTE** The oven indicator neon will glow until the oven has reached the desired temperature and then go out. It will then cycle on and off showing that the oven temperature is being maintained. The internal oven light will come on. The cooling fan for the controls will operate after a short time when the oven cleaning cycle is selected.

It may run on after the controls are switched off until the cooker has cooled. See page 7 for more details on the operation of the cooling fan. **HINTS AND TIPS** Slight discolouration and polishing of the Stayclean surfaces may occur in time, but this will not affect their self cleaning properties. A good time to use the oven cleaning cycle is after the weekly roast. If you do a lot of roasting and very little baking you should follow the cleaning cycle every week. If you roast very little you will only need to follow the cleaning cycle every 2 - 3 weeks. Follow the recommendations below to keep soilage to a minimum. **COOKING TO REDUCE SOILAGE** Cook at the recommended temperatures. Higher temperatures during roasting will increase soilage. Try cooking at lower temperatures for an increased length of time, you will save energy and often the joint is more tender.

**32** Use minimal, if any, extra oil or fat when roasting meat, potatoes only require brushing with fat before cooking. Extra fat in the oven during roasting will increase splashing and soilage. It is not necessary to add water to the meat tin when roasting. The water and the fat juices from the joint create excessive splattering during cooking, even at normal temperatures, as well as causing condensation. Covering joints during cooking will also prevent splashing onto the interior surfaces.

Removing the covering for the last 20-30 minutes will allow extra browning if required. Some large joints and turkeys especially benefit by this method of cooking, allowing the joint to cook through before the outside is overbrowned. Do use the trivet in the roasting tin. During roasting the fat from the joint will be contained beneath the trivet and therefore prevent it from splattering onto the Stayclean finish. **REPLACING AN OVEN LIGHT BULB** Isolate the cooker from the electricity supply before replacing the bulb.

The type of bulb required is a 300°C, 25 watt small Edison Screw. 1. Make sure the cooker is cool before you replace a bulb. 2. Open the oven door and remove the shelves and wirework runners. Instructions on how to remove the wirework runners are given on page 31. 3. Pull the glass bulb cover towards you and then pull it off. If necessary use a screwdriver to carefully lever off the cover, taking care not to damage the oven cavity. 4.

Unscrew the bulb by turning it to the left. 5. Fit a new bulb and then replace the glass bulb cover. 6. Refit the wirework runners and replace the oven shelves. 7. Restore the cooker to the electricity supply and reset the time of day. **33 IF SOMETHING DOESN'T WORK** Please carry out the following checks on your cooker before calling a Service Engineer. It may be that the problem is a simple one which you can solve yourself without the expense of a service call. If our Service Engineer finds that the problem is listed below you will be charged for the call whether or not the cooker is under guarantee.

**PROBLEM** The grill, ovens and timer do not work **POSSIBLE SOLUTION** Check that the cooker has been wired in to the cooker supply and is switched on at the wall. Check that the main cooker fuse is working. The Grill and Convenience Oven work but the Fan Oven does not. Check that the timer is set for manual operation. See page 11.

The Grill does not work or cuts out after being used for a long period of time. Check that only the Grill control has been turned. If the Convenience Oven control has been turned it will override the grill. Ensure that the grill door is open when grilling. Leave the grill door open and allow the grill to cool. After a couple of hours check that the grill works as normal. Ensure the cooling fan is running when the grill is on. If the cooling fan fails, the grill will cycle on and off. Contact your nearest Service Centre. The timer does not work Check that the instructions for the operation of the timer are being closely followed. The indicator correctly neons are not working Check that you have selected only the function you require. Ensure all other controls are in the Off '0' position.

The oven is not cooking evenly Check that the cooker is correctly installed and is level. Check that the recommended temperatures and shelf positions are being used. **34** The oven light fails to illuminate The oven light bulb may need replacing see page 33.

If the Fan Oven is set for automatic cooking the light will illuminate when the cook time begins. The oven fan is noisy Check that the oven is level. Check that shelves and bakeware are not vibrating in contact with the oven back panel. The oven temperature is too high or low Check that the recommended temperatures and shelf positions are being used. See page 24. Be prepared to adjust up or down by 10°C to achieve the results you want. **35 GUARANTEE CONDITIONS** Standard guarantee conditions We, Tricity Bendix, undertake that if within 12 months of the date of the purchase this Tricity Bendix appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same **FREE OF CHARGE** for labour, materials or carriage on condition that: 1 The appliance has been correctly installed and used only on the electricity supply stated on the rating plate. 1 The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions. 1 The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us. 1 All service work under this guarantee must be undertaken by a Tricity Bendix service centre.



[You're reading an excerpt. Click here to read official TRICITY](#)

[E715GR user guide](#)

<http://yourpdfguides.com/dref/946638>

*Any appliance or defective part replaced shall become the Company's property. This guarantee is in addition to your statutory and other legal rights. Home visits are made between 8.30am and 5.30pm Monday to Friday.*

*Visits may be available outside these hours in which case a premium will be charged. Exclusions This guarantee does not cover: Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic. Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom. Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements. Products of Tricity Bendix manufacture which are not marketed by Tricity Bendix.*

*European Guarantee If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications: The guarantee starts from the date you first purchased your product. The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products. This guarantee relates to you and cannot be transferred to another user. Your new home is within the European Community (EC) or European Free Trade Area. The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household. The product is installed taking into account regulations in your new country. Before you move please contact your nearest Customer Care centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.*

*France Germany Italy Sweden UK Senlis Nürnberg Pordenone Stockholm Newbury +33 (0)3 44 62 28 28 +49 (0)911 323 2600 +39 (0)1678 47053 +46 (0)20 78 77 50 +44 (0)1635 525 542 36 SERVICE AND SPARE PARTS HELP US TO HELP YOU Please determine your type of enquiry before writing or telephoning. SERVICE It is a recommendation by the manufacturer that annual servicing of the product is done by the manufacturer's approved service organisation. In the event of your appliance requiring service, or if you wish to purchase spare parts please contact your local Tricity Bendix Service Force Centre by telephoning: 0990 929929 The address of your local Service Force Centre is detailed on the following pages headed Tricity Bendix Service Force.*

*Before calling out an engineer, please ensure you have read the details under the heading 'Something Not Working?' and have the model number and purchase date to hand. Please note that all enquiries concerning service should be addressed to your local Service Centre. CUSTOMER CARE DEPARTMENT For general enquiries concerning your Tricity Bendix cooker or for further information on Tricity Bendix products, you are invited to contact our Customer Care Department by letter or telephone as follows: Customer Care Department Tricity Bendix PO Box 47 Newbury Berkshire RG14 5XL Tel: (01635) 525542 37 TRICITY BENDIX SERVICE FORCE To contact your local Tricity Bendix Service Centre telephone 0990 CHANNEL ISLANDS GUERNSEY Guernsey Electricity PO Box 4 Vale, Guernsey Channel Islands JERSEY Jersey Company PO Box 45 Queens Road St Helier Jersey Channel Islands JE4 8NY (OWN SALES) WHALSAY Electricity (OWN SALES) SHETLAND SHETLAND ORKNEY (M65) Corsie Domestic 7 King Street Kirkwall Orkney KW15 Tait Ltd. Holmsgarth Road Lerwick Shetland ZE1 0PW Bolts Shetland Ltd 26 North Road Lerwick Shetland ZE1 0PE Leask Electrical Harlsdale Symbister, Whalsay (OWN SALES) Shetland ZE2 9AA HULL (M41) GRIMSBY (M42) Electronic Systems GATESHEAD (M39) Unit 356a Dukesway Court Dukesway Team Valley Gateshead NE11 0BH Unit 2 Cromwell Road Grimsby South Humberside DN31 2BN Unit 1 Boulevard Estate Hull HU3 4AY ABERDEEN (M05) 8 Cornhill Arcade Cornhill Drive Aberdeen AB2 5UT AUCHTERMUCHY (M03) 33A Burnside Auchtermuchy Fife KY14 7AJ BLANTYRE (M07) Unit 5 Block 2 Auchenraith Ind Estate Rosendale Way Blantyre G72 0NJ DUMFRIES (M01) 93 Irish Street Dumfries Scotland DG1 2PQ DUNOON (M67) Briar Hill 7 Hill Street, Dunoon Argyll PA23 7AL GLASGOW (M04) 20 Cunningham Road Clyde Estate Rutherglen, Glasgow, G73 1PP INVERNESS (M06) Unit 3B Smithton Indust. Est. Smithton Inverness IV1 AJ ISLE OF ARRAN Arran Domestic Unit Centre Brodick (OWN SALES) Isle of Arran KA27 8AJ ISLE OF BARRA J Zerfah 244 Bruernish Isle of Barra (OWN SALES) Western Islands HS9 5QY ISLE OF BUTE (M66) Walker Engineering Glenhorr Upper Serpentine Road Rothesay Isle of Bute PA20 9EH ISLE OF LEWIS (M69) ND Macleod 16 James Street Stornoway Isle of Lewis PA87 2QW KELSO (M08) 2-8 Wood Market Kelso Borders TD5 7AX STOCKPORT (M16) PRESTON (M13) 4 The Douglas OSWESTRY (M17) HAVERFORDWEST (M75) DYFED (M77) CLYWD (M14) CARDIFF (M28) Guardian Estate Clydesmuir Road Tremorfa, Cardiff CF2 2QS Unit 6-7 Coed - Parc Abergele Road Rhuddlan Clwyd Wales LL18 5UG Maes Y Coen High Mead Llanybydder Dyfed SA40 9UL Cromlech Lodge Amerlston Haverfordwest SA62 5DS Plas Ffynnon Warehouse Middleton Road Oswestry SY11 2PP MANCHESTER (M09) LIVERPOOL (M15) ISLE OF MAN (M64) CARLISLE (M10) Industrial SHEFFIELD BELFAST (M27) Owenmore House Kilwee Industrial Estate Upper Dunmury Lane Belfast BT17 0HD Industrial 929929 NORTH EAST SCOTLAND NORTHERN IRELAND LEEDS (M37) 64-66 Cross Gates Road Leeds LS15 7NN NEWTON AYCLIFFE (M45) Unit 16 Gurney Way Aycliffe Ind Estate Newton Aycliffe DL5 6UJ Pennine House Roman Ridge Ind. Roman Ridge Road Sheffield S9 1GB WALES (M38) NORTH WEST BIRKENHEAD (M11) 1 Kelvin Park Dock Road Birkenhead L41 1LT Unit 8 South John Street Carlisle CA2 5AJ South Quay Ind Estate Douglas Isle of Man Unit 1 Honeys Green Precinct Honeys Green Lane Liverpool L12 9JH Unit 30, Oakhill Trading Estate Devonshire Road Worsley Manchester M28 3PT Unit 250 Dawson Place Walton Summit Bamber Bridge Preston Lancashire PR5 8AL Unit 20 Haigh Park Haigh Avenue Stockport SK4 1QR 38 TRICITY BENDIX SERVICE FORCE To contact your local Tricity Bendix Service Centre telephone 0990 MIDLANDS BIRMINGHAM (M18) 66 Birch Road East, Wyrley Estate Witton Birmingham B6 7DB BOURNE (M44) Manning Road Ind Estate Pinfold Road Bourne PE10 9HT BRIDGNORTH (M72) 1 Underhill Street Bridgnorth Salop WV16 4BB GLOUCESTER (M23) 101 Rycroft Street Gloucester GL1 4NB HEREFORD (M31) Unit 3 Bank Buildings Cattle Market Hereford HE4 9HX HIGHAM FERRERS (M51) The Old Barn Westfield Terrace Higham Ferrers NN10 8BB ILKESTON (M43) Unit 2 Furnace Road Ilkeston DE7 5EP LEICESTER (M22) MAIDENHEAD (M60) LETCHWORTH (M50) HARPENDEN (M46) GRAVESEND (M57) ENFIELD (M49) COLINDALE (M53) Road Industrial 929929 LONDON & EAST ANGLIA CHELMSFORD (M47) Hanbury Road Widford Ind Estate Chelmsford Essex CM12 3AE Unit 14 Capitol Park Capitol Way Colindale London NW9 0EQ 284 Alma Road Enfield London EN3 7BB Unit B4, Imperial Business Estate Gravesend Kent DA11 0DL Unit 4 Riverside Estate Coldharbour Lane Harpenden AL5 4UN 16-17 Woodside Ind Est.*



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/946638)

[E715GR user guide](http://yourpdfguides.com/dref/946638)

<http://yourpdfguides.com/dref/946638>

Works Road Letchworth Herts SG6 1LA Reform Road Maidenhead Berkshire SL6 8BY MOLESEY (M61) 10 Island Farm Avenue West Molesey Surrey KT8 2UZ NEWBURY (M24) PO Box 5627 Newbury Berkshire RG14 5GF Industrial IPSWICH (M48) Unit 2B Elton Centre Hadleigh Road Ipswich IP2 0DD NORWICH (M52) 2b Trafalgar Street Norwich NR1 3HN SUNBURY (M63) Unit 1a The Summit Hanworth Road Hanworth Ind Estate Sunbury on Thames TW16 5D SYDENHAM (M62) Unit 6 Metro Centre Kangley Bridge Road Sydenham SE26 EMSWORTH (M33) Park Business BRISTOL (M25) BARNSTAPLE (M30) TONBRIDGE (M56) FLEET (M59) ASHFORD (M58) SOUTH EAST Unit 2 Bridge Road Business Estate Bridge Road Ashford Kent TN2 1BB Unit 1 Redfields Estate Church Crookham Fleet Hampshire GU13 0RD HAYWARDS HEATH (M55) 21-25 Bridge Road Haywards Heath Sussex RH16 1UA Unit 30 Deacon Trading Estate Morley Road Tonbridge Kent TN9 1RA Industrial SOUTH WEST P.O. Box 12 Barnstaple North Devon EX31 2YB BOURNEMOUTH (M26) 63-65 Curzon Road Bournemouth Dorset BH1 4PW BRIDGEWATER (M35) 6 Hamp Industrial Estate Bridgewater Somerset TA6 3NT 11 Eldon Way Eldonwall Trading Bristol Avon BS4 3QQ 266 Main Road Southbourne Emsworth PO10 8JL ISLE OF WIGHT (M34) Unit 8 Enterprise Court Ryde Business Park Ryde Isle of Wight PO33 1DB NEWTON ABBOT (M29) Unit 2 Zealley Industrial Estate Kingsteignton Newton Abbot S. Devon TQ12 3TD PLYMOUTH (M32)) 16 Faraday Mill Cattedown Plymouth PL4 0ST REDRUTH (M36) Unit 7D Pool Industrial Estate Wilson Way, Redruth, Cornwall TR15 3QW Unit 7 Oaks Industrial Estate Coventry Road Narborough Leicestershire LE9 5GF Unit 8 Stonefield Park Clifton Street Lincoln LN5 8AA LINCOLN (M40) NEWCASTLE LYME (M12) UNDER 18-21 Croft Road Brampton Estate Newcastle under Lyme Staffordshire ST5 0TW NUNEATON (M21) 19 Ptarmigan Place Townsend Drive Nuneaton CV11 6RX REDDITCH (M20) 13 Thornhill Road North Moons Moat Redditch Worcestershire B98 9ND TAMWORTH (M19) Unit 3 Sterling Park Claymore Tamworth B77 5DO WORCESTER (M73) Unit 1 Northbrook Close Gregorys Mill Ind Estate Worcester WR3 8BP WEST DRAYTON (M76) 2 / 4 Royal Lane Yiewsley West Drayton Middlesex UB7 8DL 39 TECHNICAL DETAILS Voltage: Loading Info: Top Oven\* Dual Grill: Base Element: Main Oven Fan Element: Fan Motor: Oven Light: Wattage: Height: Width: 1.7kW 2.

8kW 1.0kW 230/240 Volts AC 50Hz 2.5kW 0.03kW 0.05kW 5.

0.5.5kW 720 mm 593 mm Depth: 585 mm (excluding handles and knobs) \* Cannot be used at the same time as the grill element. This appliance complies with: European Council Directive 73/23/EEC. EMC Directive 89/336/EEC. CE Marking Directive 93/68/EEC. 40 INSTALLATION INSTRUCTIONS WARNINGS: THINGS YOU NEED TO KNOW WARNINGS: This cooker must be installed by a qualified electrician/competent person. Safety may be impaired if installation is not carried out in accordance with these instructions. This cooker must be earthed. Do not remove the screws from the earth tab extending from the oven mains terminal block (Fig. 1).

Before connecting the cooker make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. The rating plate can be seen by opening the top oven door and looking below the oven door seal. Do not alter the electrical circuitry of this cooker. Fig. 1 CHOICE OF ELECTRICAL CONNECTION The cooker should be operated using at least 6mm<sup>2</sup> twin core and earth PVC insulated multicore cable. Please choose from the most appropriate after reading the descriptions: By connecting the cooker to a cooker point having a double pole isolating switch providing at least 3mm contact separation in all poles and protected with a fuse or miniature circuit breaker at your mains fuse box. If you wish to connect an oven and a hob to a cooker point you can, by connecting the oven and hob separately to the cooker point. See Fig. 2. Fig.

2 41 INSTALLATION INSTRUCTIONS NOTE: It is good practice to: Fit an Earth Leakage Circuit Breaker to your house wiring. Wire your appliance to the latest IEE regulations. THINGS TO NOTE This cooker is designed to be fitted between cabinets with the recommended dimensions as shown in Fig. 3 & 4. If there is an existing housing unit it must be removed.

The dimensions given provide adequate air circulation around the unit within the cabinet, ensuring compliance with BS EN60-335. This appliance must not be installed on a wooden base board. Enquiries regarding the installation of the cooker point if required should be made to your Regional Electricity Company to ensure compliance with their regulations. The cooker point should be within 2m of the cooker to make it accessible to switch off the cooker in case of an emergency. To protect the hands wear gloves when lifting the oven into its housing.

NOTE: HOUSE CIRCUIT Earth leakage / continuity tests must be carried out before the cooker is connected to the mains supply and re-checked after fitting. Fig. 4 Fig. 3 42 INSTALLATION INSTRUCTIONS PREPARING CABINET FOR FITTING OVEN Make sure the space between the cabinets is the correct size for the appliance to be fitted (Ref. Fig. 5 & 6). The plinth board spanning the space into which the appliance is to be installed should be removed. Fig. 5 If the size between adjacent cabinets is 605-610\*mm, then the cabinets should be modified so that the recommended dimension of at least 600-605mm is maintained. The adjacent cabinets must be stable and firmly secured to the wall or floor.

If necessary, make arrangements to ensure the work surface below which the oven will rest is level. Drill two pilot screw holes into the sides of the adjacent cabinets, in the positions indicated by Fig. 5. Fig. 6 Fit the appliance mounting brackets using the two holes indicated in Fig. 7 to the adjacent cabinets ( Ref. Fig.5 & 6 ) Fig. 7 43 INSTALLATION INSTRUCTIONS Check that the mounting brackets are level. @@@@See Fig.

8. @@@@First remove retaining screw with pozidrive screwdriver. See Fig. 9. Fig.

9 Prise cover loose using screwdriver in position (1) then lever off with screwdriver in position (2) at either side. See Fig. 10. Fig. 10 Lift cover and remove screw from cable clamp.

See Fig. 11. Fig. 11 45 INSTALLATION INSTRUCTIONS CONNECTING TO THE MAINS TERMINAL Warning: This cooker must be earthed. We recommend you use a new length of 6mm<sup>2</sup> twin core and earthed cable to ensure your safety. Make connection as shown in Fig. 12 by proceeding as follows:Preform wires to the appropriate shape to suit fitting into the mains terminal block. Strip inner insulation wirestrippers. on wires using Fig. 12 Twist the bared wires using pliers.

Cut bared wires 10mm away from the end of the inner insulation. Where uninsulated Earth wires are used ensure they are suitably sheathed to leave 10mm bare wire to fit into the terminal. Clamp bare wires into the relevant terminal and check they are held by tugging each one in turn. Clamp the mains cable securely ensuring 5mm of the outer insulation is inside the terminal block and that the wires are not taught but not so slack as to cause any fouling.



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/946638)

[E715GR user guide](http://yourpdfguides.com/dref/946638)

<http://yourpdfguides.com/dref/946638>



See Fig. 12. Connect the remaining end of the mains cable to the cooker point / junction box Place fuse / miniature circuit breaker in circuit and switch on at mains. 46 INSTALLATION INSTRUCTIONS CHECKING ELECTRICAL CONNECTIONS Confirm the cooker is correctly connected by switching on and observing the various oven functions indicators. The electronic timer will flash on and off. CONNECTING TO A HOB OR COOKER POINT Either follow in general terms the instructions for connecting to the terminal block or refer to the hob suppliers installation instructions.

Feed the cable through the cabinet and arrange to route the cable away from the cooker. NOTE: HOUSE CIRCUIT Earth leakage / continuity tests must be carried out before the cooker is connected to the mains supply and re-checked after fitting. 47 INSTALLATION INSTRUCTIONS FITTING INTO THE SPACE BETWEEN CABINETS IMPORTANT: Ensure that the oven is switched off at the wall before any further work is carried out. Ensure the cooker is in front of the cabinet. See Fig.

13. Take out all oven furniture before installation to reduce the weight you need to lift. To place the cooker into the space between cabinetry follow the procedure below: N.B. Two people will be required to carry out the lifting procedure.

Each person should squat either side of the cooker. Tilt the cooker so that your hands can support the underside of the cooker. Raise the appliance to the correct height. Rest the rear underside of the cooker on the mounting brackets while your hands support the front. The cooker can be pushed fully into the space. Take care to avoid fouling the mains lead. Ensure the cooker is central and level. When the cooker is fully housed, screw the stability screws (supplied with the cooker) into the underside of the worksurface in the positions indicated (see Fig. 14), taking care not to distort the trim. It is advisable to turn each screw alternately to avoid damaging the trim.

Place the top trim flush with the edge of the worksurface, with the cork spacers upover (see Fig.15) and screw into position using the screws supplied with the cooker. Replace the plinth board. Switch on the cooker and refer the user to the operating instructions. Fig.13 Fig.14 Fig.15 48 49 E715 - 311391502 50 27 RATING PLATE REFERENCE MAKE AND MODEL NO. SERIAL NO. DATE OF PURCHASE PRODUCT NO.

IMPORTANT NOTICE In line with our continuing policy of research and development, we reserve the right to alter models and specifications without prior notice. This handbook is accurate at the date of printing, but will be superseded and should be disregarded if specifications or appearance are changed. TRICITY BENDIX, PO BOX 47, NEWBURY, BERKSHIRE, RG14 5XL TELEPHONE (01635) 525542 MODEL NO. PART NO. E 715 311391502 1998 " .



[You're reading an excerpt. Click here to read official TRICITY E715GR user guide](http://yourpdfguides.com/dref/946638)  
<http://yourpdfguides.com/dref/946638>