



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY FDF107G. You'll find the answers to all your questions on the TRICITY FDF107G in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY FDF107G
User guide TRICITY FDF107G
Operating instructions TRICITY FDF107G
Instructions for use TRICITY FDF107G
Instruction manual TRICITY FDF107G



INSTALLATION AND INSTRUCTION MANUAL

FROST FREE FRIDGE/FREEZER FDF107W



[You're reading an excerpt. Click here to read official TRICITY FDF107G user guide](http://yourpdfguides.com/dref/946642)
<http://yourpdfguides.com/dref/946642>

Manual abstract:

O. @@@@Your safety is of paramount importance. If you are unsure about any of the meanings or these warnings contact the Customer Care Department. Installation This appliance is heavy. Care should be taken when moving it. It is dangerous to alter the specifications or attempt to modify this product in any way. Ensure that the appliance does not stand on the electrical supply cable. If the supply cord is damaged, it must be replaced by a special cord available from your local Service Force Centre. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Parts which heat up should not be exposed.

Whenever possible, the back of the appliance should be close to a wall but leaving the required distance for ventilation as stated in the installation instructions. The appliance should be left for 2 hours after installation before it is turned on, in order to allow the refrigerant to settle. Maintenance and Cleaning Switch off, and unplug the appliance before carrying out any cleaning or maintenance work. Servicing This product should be serviced by an authorised engineer, and only genuine spare parts should be used. Under no circumstances should you attempt to repair the machine yourself.

Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Force Centre. At the End of the appliance Life When disposing of your appliance, use an authorised disposal site. Remove the plug and ensure that any locks or catches are removed, to prevent young children being trapped inside. Child Safety Do not allow children to tamper with the controls or play with the product.

During Use This appliance is designed for domestic use only, specifically for the storage of edible foodstuffs only. Frozen food should not be refrozen once it has thawed out. Do not place carbonated or fizzy drinks in the freezer. Ice lollies can cause 'frost/freezer burns' if consumed straight from the freezer. Do not remove items from the freezer if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns. Manufacturers' recommended storage times should be adhered to. @@@@Do not use soap or detergent as the smell may linger. Dry the appliance thoroughly. Do not use detergents, abrasive powders, highly perfumed cleaning products, wax polishes or products containing alcohol. To Start the Appliance 1.

Allow the appliance to stand for 2 hours after installation. 2. Plug in the appliance and switch on at the mains supply. 3. Turn the thermostat control to the required setting. A midway setting is usually suitable for normal operation (see thermostat control). 4. Leave the appliance for approximately 4 hours for the correct temperature to be reached before placing food inside. Thermostat Control The thermostat control is situated in the top panel and is marked from 1 - 6, the higher the number the colder the setting. The thermostat control regulates the temperature both within the fridge and freezer compartments.

I (Cold) 6 (Coldest) The temperature will be affected by: Room temperature How often the door is opened How much food is stored Position of the appliance In determining the correct temperature control setting, all these factors have to be considered and some experimentation may be necessary. Do not allow children to tamper with the controls or play with the product. 6 Indicator Light The green indicator light is situated in the control panel. When the appliance is switched on at the mains the green indicator light will glow and continue to glow until the appliance is switched off at the mains. GREEN INDICATOR

LIGHT LOW AMBIENT TEMPERATURE CONTROL Your appliance has been designed to operate in room temperatures of 10°C to 32°C.

By use of an air circulation slider control situated at the rear of the fridge compartment the amount of cold air circulated through the fridge compartment can be varied. In room temperatures of between 10°C and 16°C, should you find your fridge temperatures too cold, reposition the slider control to the "cold" position. NB. Positioning the slider control to the "cold" position does not stop the flow of cold air, only restrict it. At room temperatures above 16°C the slider control can be adjusted between "cold" and "coldest" to increase the amount of cold air circulating through the fridge compartment.

Maximum circulation will be achieved with the slider control set at "coldest". @@@@Gently ease the shelf in the directions shown.

@@@@@@@@Place the fresh food in the bottom two baskets. Food may need rearranging to achieve this. Frozen food should not be refrozen once it has thawed out. Do not remove items from the freezer if your hands are damp/wet, as this could cause skin abrasions or 'frost/freezer burns'. Hints and

Tips Any opened packets of frozen food, should be rewrapped in airtight materials to prevent surface evaporation which cause s drying or 'freezer burn'. Frozen food which is allowed to thaw accidentally should either be used immediately or thrown away. Alternatively if the food is uncooked and has not been completely defrosted it can be cooked and then refrozen. Aim to check dates on packets and rotate food regularly.

Although storage longer than recommended is not harmful, flavours and textures begin to change. Frozen Food Storage The appliance has the following net storage volume: 80 litres (2.8 cuft) 25.6 kg (56.4 lb) This is a standard measurement and the actual capacity depends upon the density and sizes of the food. The above figures are based on an average density of 0.32kg per litre (20 lb per cuft). Pre packed commercially frozen food should be stored in accordance with the manufacturer's instructions for a 4 star frozen food compartment and should be put in the freezer as soon as possible after purchase. Your freezer provides for long term storage which generally means up to 3 months but the length of the time can vary and it is important to follow the recommended times shown on packets of commercially frozen food. Do not place sealed containers or carbonated liquids such as fizzy drinks into the freezer as it creates pressure on the container which may cause it to explode resulting to damage to the freezer.

Ice cubes and ice lollies should not be consumed immediately after removal from the freezer as it may result in low temperature skin abrasions.

Manufacturers storage times should be adhered to. 9 HINTS AND TIPS Food Storage To obtain the best results from your appliance, neither hot foods nor liquids which may evaporate, should be placed in the larder compartment. Avoid buying frozen food if you cannot store it straight away. The use of an insulated container is advisable.

When you arrive home place the frozen food in the freezer immediately. Keep the time between buying chilled food and placing it in your fridge as short as possible.



[You're reading an excerpt. Click here to read official TRICITY](#)

[FDF107G user guide](#)

<http://yourpdfguides.com/dref/946642>

Do not push food together too much, try to allow air to circulate around each item. Do not store food uncovered. @@@@Thaw frozen food in the fridge. @@@@It is advisable to per Appliance is Not in Use When the appliance is not in use for long periods, disconnect from the electricity supply, empty all of the food and clean the appliance, leaving the door ajar to prevent unpleasant smells. 12 WHAT HAPPENS IF SOMETHING GOES WRONG BEFORE contacting your local service force centre, check the following points: Symptom No power to the appliance Solution Check there is power at the socket. Check there is not a power cut by checking the household lights. @@Replace the bulb if it has blown. @@@@See page 6. Check that the doors are closed.

@@@Check that nothing is preventing the doors from closing. @@@@The service department will require this information. @@@Est. @@@@Devon TQ12 3TD PLYMOUTH (M32)) 16 Faraday Mill Cattledown Plymouth PL4 0ST REDRUTH (M36) Unit 7D Pool Industrial Estate Wilson Way, Redruth, Cornwall TR15 3QW Unit 7 Oaks Industrial Estate Coventry Road Narborough Leicestershire LE9 5GF Unit 8 Stonefield Park Clifton Street Lincoln LN5 8AA LINCOLN (M40) NEWCASTLE UNDER LYME (M12) 18-21 Croft Road Brampton Industrial Estate Newcastle under Lyme Staffordshire ST5 0TW NUNEATON (M21) 19 Ptarmigan Place Townsend Drive Nuneaton CV11 6RX REDDITCH (M20) Heming Road Washford Redditch Worcestershire B98 0DH TAMWORTH (M19) Unit 3 Sterling Park Claymore Tamworth B77 5DO WORCESTER (M73) Unit 1 Northbrook Close Gregorys Mill Ind Estate Worcester WR3 8Bnce backwards, resting the top on a stool, or something similar, at least 30cm (12") from the floor.

@@@6. @@@8. Remove blanking plate (M) using a flat blade screwdriver. 9. @@@10. @@11. @@Refit the top door by carefully sliding it onto the upper hinge pin (P). 13. @@Gently press the centre hinge up into the door. To secure the centre hinge to the cabinet, refit screw (J). @@This can be achieved by sideways movement of the centre hinge. 14. Refit the bottom door by sliding it onto the centre hinge pin. @@@Three holes will then line up with the hinge foot and screws (C) should be used to secure the hinge. Refit level adjuster and spacer (A) in the opposite side of the cabinet. 15. The base of your product should now be in line with the diagram. B A C 16. Stand the appliance upright. 21 GUARANTEE CONDITIONS Standard guarantee conditions We, Tricity Bendix, undertake that if within 12 months of the date of the purchase this Tricity Bendix appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that: 11111 The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.

The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions. The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us. All service work under this guarantee must be undertaken by a Tricity Bendix service centre. Any appliance or defective part replaced shall become the Company's property. This guarantee is in addition to your statutory and other legal rights. Home visits are made between 8.30am and 5.30pm Monday to Friday. @@@@l Products of Tricity Bendix manufacture which are not marketed by Ticity Bendix. European Guarantee If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications: l The guarantee starts from the date you first purchased your product.

l The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products. l This guarantee relates to you and cannot be transferred to another user. l Your new home is within the European Community (EC) or European Free Trade Area. l The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household. l The product is installed taking into account regulations in your new country. Before you move please contact your nearest Customer Care centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances. France Germany Italy Sweden UK Senlis Nürnberg Pordenone Stockholm Newbury +33 (0)3 44 62 28 28 +49 (0)911 323 260 +39 (0)1678 47053 +46 (0)20 78 77 50 +44 (0)1635 525 542 FROST FREE FRIDGE FREEZER FDF107GR 822020579-01 22 11/1997 822020577-01 .



[You're reading an excerpt. Click here to read official TRICITY FDF107G user guide](http://yourpdfguides.com/dref/946642)
<http://yourpdfguides.com/dref/946642>