



# Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY HC312B. You'll find the answers to all your questions on the TRICITY HC312B in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual TRICITY HC312B**  
**User guide TRICITY HC312B**  
**Operating instructions TRICITY HC312B**  
**Instructions for use TRICITY HC312B**  
**Instruction manual TRICITY HC312B**

**TRICITY BENDIX**



we'll do the homework

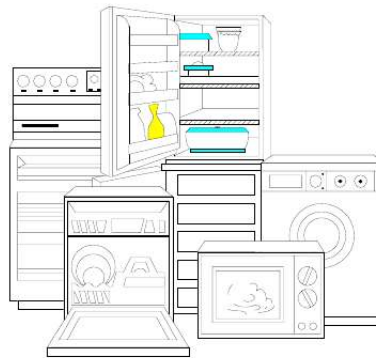

Operating and Installation Instructions



[You're reading an excerpt. Click here to read official TRICITY HC312B user guide](http://yourpdfguides.com/dref/946289)  
<http://yourpdfguides.com/dref/946289>

**Manual abstract:**

Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is supplied with the appliance in order that the new owner can be acquainted with the functioning of the appliance and the relevant warnings. Please ensure that you read the 'Before Use' passage on page 9 before using the appliance and that you follow the recommendations given. 2 CONTENTS Please refer to the sections in this booklet that apply to your particular model. Specification .....

.....  
.....

.....  
.....  
.....  
.....

*. 4 Technical Specification .....*

.....  
.....

*.... 5 Warnings .*

.....  
.....  
.....  
.....  
.....  
.....

*.. 6 Installation ...*

.....  
.....  
.....  
.....  
.....  
.....

*.... 7 Electrical Connections .*

.....  
.....  
.....  
.....

*.. 8 How to use your Hob .....*

.....  
.....  
.....  
.....

*... 9 Cooking Equipment ..*

.....  
.....  
.....  
.....

*.... 10 Maintenance and Cleaning .....*

.....

.....  
.....  
..... 12 Preserving .

.....  
.....  
.....

.....  
.....  
.....  
.....

..... 14 Help us to help you .

.....  
.....  
.....

.....  
.....  
.....

..... 15 Before calling a Service engineer .....

.....  
.....  
.....

..... 16 Guarantee .....

.....  
.....  
.....

.....  
.....  
.....

..... 16 Tricity-Bendix-Service-Centres .....

.....  
.....  
.....

..... 17 3 SPECIFICATION HC 312 B/W 1. Heat Zone (single circuit) 2. Heat Zone (single circuit) 3. Heat Zone (single circuit) 4. Heat Zone (single circuit) 180 mm 1800 W 145 mm 1200 W 180 mm 1700 W 145 mm 1200 W 2 3 5. Residual Heat Indicator 1 5 4 HH 322 B/W 1. Heat Zone (halogen) 2. Heat Zone (single circuit) 3. Heat Zone (double circuit) 4.

Heat Zone (single circuit) 180 mm 1800 W 145 mm 1200 W 120/180 mm 1700 W 145 mm 1200 W 2 3 H 1 5 4 2 3 5. Residual Heat Indicator HH 352 B/W 1. Heat Zone (halogen) 2. Heat Zone (single circuit) 3. Heat Zone (double circuit) 4. Heat Zone (halogen) 180 mm 1700 W 145 mm 1200 W 120/180 mm 1700 W 145 mm 1200 W H 1 5 5. Residual Heat Indicator H 4 4 TECHNICAL DATA HC 312 B/W Outside Dimensions : width depth height Cutout Dimensions : width depth 572 mm 502 mm 49 mm 560 mm 490 mm Typ 082.0 Instr. No. HC 312 B Ser.

No. 240 V ~ 50 Hz SWISS MADE Prod.No. 941 689 284 5.8kW TRICITY BENDIX Total connected load : 5.8 kW Voltage Frequency Rating plate : 240 V : ~ 50 Hz Typ 082.0 Instr. No. HC 312 W Ser.No.

Prod.No. 941 689 285 5.8kW TRICITY BENDIX 240 V ~ 50 Hz SWISS MADE HH 322 B/W Outside Dimensions : width depth height Cutout Dimensions : width depth 572 mm 502 mm 49 mm 560 mm 490 mm Typ 107.0 Instr. No. HH 322 B Ser.No. 240 V ~ 50 Hz SWISS MADE Prod.No.

@@No. @@No. HH 352 B Ser.No. 240 V ~ 50 Hz SWISS MADE Prod.No. @@No. @@This appliance is designed to be operated by adults only. Children should not be allowed to tamper with the controls or play with or near the product. Any installation work must be undertaken by a qualified electrician or competent person.

The appliance must be installed according to the instructions. Any electrical work required to install this appliance should be carried out by a qualified electrician. It is dangerous to alter the specifications or modify the product in any way. This product should be serviced by an authorised Service Engineer and only genuine approved spare parts should be used. Details of servicing arrangements are supplied.

Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or more serious malfunctioning. Refer to your local Service Centre. Always insist on approved spare parts. Details of servicing arrangements are supplied.

Always ensure that all control knobs are in the "off" position when not in use. Take great care when heating fats and oils as they will ignite if they become too hot. For hygiene and safety reasons this appliance should be kept clean at all times. A built-up of fats or other foodstuffs could result in a fire. Do not leave utensils containing foodstuffs e.g. fat or oil on the appliance in case it is inadvertently switched on. This product has been designed for cooking edible foodstuffs only, and must not be used for any other purposes. Always switch off the isolator switch at the cooker point and allow the appliance to cool before any maintenance or cleaning work is carried out. Only clean this appliance in accordance with the instructions given in this book.

*This appliance is heavy and care must be taken when moving it. Cookers and hobs become very hot with use, and retain their heat for a long period of time after use. You must therefore take care when using the appliance. Supervise children at all times and do not allow them to touch the cooker or hob surface or be in the vicinity of the appliance until it has cooled after use. Ensure that all packaging, both inside and (where applicable) outside the appliance is removed before the appliance is used. If you use a saucepan which is smaller than the heated area on the hob the handle may become hot. Ensure that you protect your hand before touching the handle. Never cook directly on the hob surface without a saucepan/cooking utensil. Never place plastic or any other material which may melt on the hob surface. Always carefully lift saucepans on and off the hob.*

*@@@ You must follow the recommendations for saucepans given in this book. @@ Contact your Customer Service Centre. Details supplied in this book. Do not place heavy weights on the ceramic glass. Do not heat sealed cans or aerosols on the hob.*

*They may explode if they are heated. Do not stand on the appliance. Do not hang towels or dishcloths from the appliance. Do not use this appliance if it is in contact with water. @@@@ Cabinet Dimensions 1.*

*The dimensions and positioning of the necessary cut out sizes are detailed in fig.1. These dimensions are important and failure to comply with them may result in restricted air circulation and discolouration to adjacent surfaces. 2. The distance between the worktop aperture and the rear wall must be at least 50 mm. The distance between the worktop aperture and a sidewall must be at least 100 mm. Fig.1 Installing The Hob Fix the spring clips with the enclosed screws on the sides of the worktop inside the cut-out. The upper fold on the clip-spring is there to stop the hob. Position the springs has to be made in accordance with the enclosed template.*

*Lower the hob into the opening and carefully press first the rear, then the front side of the hob down until it "snaps" into the springs. An adhesive foam seal is already fixed to the underside of the hob's frame. The seal on the underside of the hob will ensure that it is airtight between the hob and the work surface, this will prevent any spillages from seeping into the cabinet below. Place the hob carefully into the recess, with the cable outlet of the hob at the back. Press firmly around the edge of the hob, to compress the foam strip and ensure an airtight seal. Then, proceed to fix the hob firmly into the working surface, with the 6 fixing clamps as shown in Fig.3, making sure that the seal between the hob and the work surface is secure by tightening the fixing clamps. Fig.2 20 The distance between the underside of the hob and the furniture under-neath must be at least 20 mm. Fig.*

*3 7 ELECTRICAL CONNECTIONS WARNING: THIS APPLIANCE MUST BE EARTHED. The manufacturer declines any liability should this safety measure not be observed. Switch OFF the electricity supply at the mains.*



[You're reading an excerpt. Click here to read official TRICITY HC312B user guide](http://yourpdfguides.com/dref/946289)  
<http://yourpdfguides.com/dref/946289>

The electrical connection of the ceramic hob to the specially provided built-in switch box and to the built-in range should only be carried out by a trained technician. To wire the hob, carefully place the unit, face downward on a flat surface with the control area overhanging, to avoid damage to the controls. Remove the screws securing the cover to the terminal box, remove the cover and connect the supply cable via the cable clamp (Fig.4), to the terminals provided. The cable connecting the electricity supply to this appliance must have conductors of sufficiently high cross sectional area to prevent overheating and degradation. Six square millimetres (6mm<sup>2</sup>) is the recommended cross sectional area. The cord should be routed away from potentially hot areas. You MUST ensure that the cabinet is stable and level. This appliance complies with EEC Directive number 76/889 and amendment 82/499 relating to the suppression of radio and TV interference. Rating Plate The rating plate is situated on the underside of the unit and gives the model and serial number of the appliance (which should be quoted in any communication). It is advisable to make a note of these in the back of this instruction book before the appliance is installed. Fig.4 ATTENTION: Should a visible crack appear in the ceramic glass the equipment should be switched off at the mains and a service engineer called. Connect the earth wire to the terminal marked with the letter 'E' or with the earth symbol. Connect the live wire to the terminal marked with the letter 'L' and coloured brown. @@@@This applies to aerosols which could explode. @@@@Pans must NOT overlap the hob trims.

How To Use Your Hob 1. @@@@2. @@@@Close fitting lids on the saucepans will ensure faster results. 3. @@@@4. @@@@Please see notes on the care and cleaning of your hob. On ceramic hobs, sugar solutions e.g. @@@@5. It is inadvisable to leave an empty pan on a heated area. 6. @@@@Do not cover the pan with a lid and do not leave the pan unattended. @@@@1. @@@@Do not use a basket with batter coated food as they will stick. 2. @@@@3. @@@@4. Cooking the food Lower the food gently into the oil. @@@@Once cooked, drain on absorbent paper, kitchen roll for example. e of Cleaner Conditioner.

These scratches do not affect the cooking performance. @@@@Do not use a pan that overlaps the perimeter of the hob trim. 2. @@@@It is better to use two pans rather than overfill one, or use half quantities. 3. Use firm fruit or vegetables and wash well before using. 4. Preserving sugar gives clear jam, however granulated sugar is cheaper and gives equally good flavour. 5. Crystallization may be caused if sugar is not completely dissolved before bringing jam to the boil.

Over boiling will affect the flavour, setting properties and colour of the jam. 6. To test jam for setting: If a jam thermometer is available, boil jam to 104°C. Marmalade should be boiled to 106°C. If a thermometer is not available, remove pan from heat, place sample of jam on a cold dish and cool quickly (i.e. in a freezer or frozen food storage compartment of a refrigerator). When cold, it will crinkle and hold the mark of a finger run through, if it is ready. 7. The scum should be removed as soon as possible after setting, but marmalade should be allowed to cool before potting to prevent the peel rising.

8. Remove soilage from sugar solutions on ceramic glass hobs before the syrup has set otherwise subsequent damage of the glass ceramic surface will occur. 14 HELP US TO HELP YOU Please determine your type of enquiry writing or telephoning: 1. SERVICE In the event of your appliance requiring service Tricity Bendix Limited have an arrangement with Electrolux Group Service. @@@@We have fully trained Home Economists and Advisors just a telephone call away who can provide product information and brochures.

Do not hesitate to contact us by letter or telephone as follows (or see Service Centres): TRICITY BENDIX LTD. 99 Oakley Road Luton Bedfordshire LU4 9QQ Tel.: 0582 494000 15 BEFORE CALLING A SERVICE ENGINEER We strongly recommend that you carry out the following checks on your appliance before calling a Service Engineer. It may be that the problem is a simple one, which you can solve yourself without the expense of a Service call. If our Service Engineer finds that the problem is listed below you will be charged for the call whether or not the appliance is under guarantee: Problem - Solution: The hob does not work check that it is switched on at the control panel.

check that the cooker point fuse is working. The hotplates are slow to boil: check that the recommended saucepans are being used (see instructions). The hotplates simmer inadequately: check that the recommended saucepans are being used (see instructions). @@@@b) Service under the guarantee must be carried out by a Tricity Bendix service representative or authorised agent. c) The guarantee may be invalidated by unauthorised repair or modification of the appliance. 16 Proof of the date of purchase will be required before service under guarantee is provided. Addresses or telephone numbers for service requests are detailed on "Tricity Bendix Service Centres". We must point out that this guarantee does not cover liability for loss of food or other contents. TRICITY BENDIX Service centre ABERDEEN BELFAST BIRMINGHAM BRISTOL CANVEY ISLAND Postcode areas covered DD, IV, KW, AB, PH BT WR, DY, B, WV, TF, ST, WS, SY (BA, BS, SN, TA) (TQ, EX, TR, PL) RM, CM, SS, CO, IG Telephone no. 0224-696569 0232-746591 021-358 7076 0272-21 18 76 0626-65909 0268 694144 SERVICE CENTRES Address 8 Cornhill Arcade, Cornhill Drive, Aberdeen AB2 5UT Unit C3, Edenderry Ind.

Estate, 326 Crumlin Road, Belfast BT 14 7EE 8Lammermoor Avenue, Great Barr, Birmingham B43 6ET Waring House, Redcliffe Hill, Bristol BS1 6TB Canvey Centre 2-4Sandhurst, Kings Road, Canvey Island SS80QY Guardian Industrial Estate, ClydesmuirRoad Tremorfa, Cardiff CF2 2QS 20 Cunningham Road, ClydeEstate, Rutherglen, Glasgow G73 1PP 64-66 Cross Gates Road, Leeds LS15 7NN 10-12 Buckminster Road, Leicester LE3 9AR Unit 1, Honeys Green Lane, West Derby, Liverpool L12 9JR CARDIFF CF, HR, LD, NP, SA 0222 460131 GLASGOW LEEDS LEICESTER LIVERPOOL LONDON (North) LONDON (South) LONDON (West) NEWTON AYCLIFFE DG, KA, ML, G, PA, KY, EH, TD, FK S, DN, HU, YO, WF, HX, HD, LS, HG, BD LE, DE, CV, NG, LN, PE, IP, NR CW, CH, LL, L, WA E, EC, WC, N, NW W, EN SE, SM, CR, BR, SW AL, CB, LU, MK, SG, WD, HA, UB, TW (CA, DL, DH, NE, SR, TS) (SK, M. BL. OL, BB, 041 647 4381 0532 608511 0533 515131 051 254 1724 081-443 3464 London North Centre 2-4 Sandhurst, Kings Road, Canvey Island SS8 0QY 081-658 9069 London South Centre 2-4 Sandhurst, Kings Road, Canvey Island SS8 0QY 081-965 9699 London West Centre 2-4 Sandhurst, Kings Road, Canvey Island SS8 0QY 0325-301 400 0282-74621-4 0993-704 411 0705-667 411 0732- 357 722 0273-694 341 PO Box 40 Preston Road, Aycliffe Industrial Estate, Newton Aycliffe, Co. Durham DL5 6XL Suite 3, Windrush Court, 56 A High Street, Witney OX8 6BL Limberline Road, Hilsea Portsmouth PO3 5JJ 61-63 High Street, Tonbridge TN9 1SD 17 OXFORD PORTSMOUTH TONBRIDGE GL, HP, NN, OX, SL, RG BH, DT, PO, SO, CT, DA, ME, TN, BN, RH This handbook is accurate at the date of printing but will be superseded and should be disregarded if specifications or appearance are changed in the interests of continued improvement.



[You're reading an excerpt. Click here to read official TRICITY HC312B user guide](http://yourpdfguides.com/dref/946289)  
<http://yourpdfguides.com/dref/946289>