



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY SE210W. You'll find the answers to all your questions on the TRICITY SE210W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY SE210W
User guide TRICITY SE210W
Operating instructions TRICITY SE210W
Instructions for use TRICITY SE210W
Instruction manual TRICITY SE210W

TRICITY BENDIX

*OPERATING & INSTALLATION
INSTRUCTIONS*

*ELECTRIC COOKER
SE 210*



GB



[You're reading an excerpt. Click here to read official TRICITY SE210W user guide](http://yourpdfguides.com/dref/946411)
<http://yourpdfguides.com/dref/946411>

Manual abstract:

Take care when moving it. Remove all packaging before using the cooker. @ @ Do not attempt to modify the cooker in any way. . . . Never leave the cooker unattended when cooking with oil and fats. This cooker should be kept clean at all times. A build-up of fats or foodstuffs could result in a fire. Never use plastic dishes in the oven or on the hob hotplates. Never line any part of the oven with aluminium foil. Always ensure that the oven vent, which is located at the centre back of the hob, is left unobstructed to ensure ventilation of the oven cavity. Perishable food, plastic items and aerosols may be affected by heat and should not be stored above the cooker.

. . . . Child Safety . . This cooker is designed to be operated by adults. Do not allow children to play near or with the cooker. The cooker gets hot when it is in use and retains their heat for a long period after use. Children should be kept away until it has cooled. Children can also injure themselves by pulling pans or pots off the cooker.

Service . This cooker should only be repaired or serviced by an authorised Service Engineer and only genuine approved spare parts should be used. .

Environmental Information . . After installation, please dispose of the packaging with due regard to safety and the environment. When disposing of an old appliance, make it unusable, by cutting off the cable. During Use . This cooker is intended for domestic cooking only. It is not designed for commercial or industrial purposes.

. Do not use this cooker if it is in contact with water. Do not operate the cooker with wet hands. . The grill pan will become hot during use, always use oven gloves when removing or replacing a hot grill pan. . During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven. . Ensure the control knobs are in the 'OFF' position when not in use. . When using other electrical appliances, ensure the cable does not come into contact with the hot surfaces of the cooker. . Unstable or misshapen pans should not be used on the hob burners as unstable pans can cause an accident by tipping or spillage. Keep this instruction book for future reference and ensure it is passed on to any new owner. 4 DESCRIPTION OF THE APPLIANCE Hob Control panel Door handle 2 3 Oven door 1 4 Adjustable small feet 1.

Hotplate 145 2. Hotplate 180 3. Hotplate 145 4. Hotplate 180 1000W 1500W 1000W 2000W Control panel THERMOSTAT MAIN 0 50 0 1 6 1 0 6 1 0 6 1 0 6 250 200 150 100 2 3 4 52 3 4 52 3 4 52 3 4 5 SE210W 1 2 3 4 5 6 7 1. Oven function control knob 2. Oven thermostat pilot light 3. Main pilot light 4. 5. 6. 7. Front left hotplate control knob Back left hotplate control knob Back right hotplate control knob Front right hotplate control knob 5 ELECTRIC HOTPLATES To switch on a hotplate, turn the relevant control knob to the required heat setting. The control knob is numbered 0 6 0 OFF 1 Minimum 6 Maximum. The hob has two types of hotplates: Normal Hotplates We recommend the plates are switched to maximum (6) for a short while to boost the plate, and then adjusted to the required setting. Rapid Hotplate (Front right) The rapid hotplate indicated by a red spot, will heat up more quickly than a normal plate. Over a period of time the red spot may disappear, this will not affect the performance of the hotplate.

It is important to note that the hotplate may smoke and produce a slightly unpleasant odour when used for the first time. This is quite normal and will disappear after some time. Main pilot light This light will illuminate when the oven function control knob is set or the hotplate control knobs are turned on and remains lit while these are in use. Do not put anything on the hob that is liable to melt. Suggestions for the correct setting of the plates are given in the following table: OFF Very Gentle Gentle 0 1 To keep food warm To melt butter and chocolate 2 To prepare cream-sauces, stews and milk puddings or to fry eggs 3 Dried vegetables, frozen food, fruit, boiling water or milk potatoes, fresh 4 Boiled vegetables, pâtés, soups, broths, pancakes or fish 5 Larger stews, meat roll, fish, omelettes, steaks 6 Steaks, escalopes and frying 0 1 6 2 3 4 5 Slow Medium High Fast 6 Hints and Tips Saucepans for use on solid plates should have several characteristics: - They should be fairly heavy duty - They should fit the heat area exactly, or be slightly larger for efficient use, NEVER smaller.

- They should have a flat base to ensure good contact with the plate. This is particularly important when using pans for high temperature frying or pressurecooking. As soon as liquid starts boiling, turn down the plate control knob so that it will barely keep the liquid simmering. You can switch off the plate a short while before you finish cooking, and the final stage will be completed on the accumulated heat. Similarly, stews etc. cooked in well-covered saucepans cook at lower temperature, which is more economical. Ensure pans are large enough to avoid liquids being spilt into the plates. Never leave the plates on without a pan on them or with an empty pan on them. Take care never to lean on reach over a hot electric plate. Always point pan handles inward or over the work surface next to the hob to avoid accidentally knocking over a pan as you pass by.

Take care when frying food in hot oil or fat, as the overheated splashes could easily ignite. If the control knobs become difficult to turn, please contact your local Service Force Centre. Good use Bad use (Power waste) 7 ELECTRIC OVEN Before the First Use of the Oven Before the first use ensure that the room is well ventilated: V.M.C. (Mechanic ventilation) or opened window. Remove all packaging, both inside and outside the oven, before using the oven. Before first use, the oven should be heated without food. During this time, an unpleasant odour may be emitted. This is quite normal.

1. Remove the oven accessories. 2. Remove any adhesive labels or protective films, if there are any. 3.

Turn the thermostat control knob to 250°C and heat the oven for about 45 min. This procedure should be repeated with the grill function for approximately 5-10 minutes. Clean the accessories with a soft and warm water to which a little mild washing up liquid has been added. Rinse and dry carefully. During cooking, the oven door is hot.

Take care that children do not play near it. The electric oven is equipped with 3 heating elements: - 2 heating elements (1 top and 1 bottom) for using the oven. - 1 heating grill element, placed in the middle of top for grilling with door half opened. Use The oven can be used either for traditional cooking or for grilling, but not simultaneously.



[You're reading an excerpt. Click here to read official TRICITY](#)

[SE210W user guide](#)

<http://yourpdfguides.com/dref/946411>

Please note that it will be necessary to provide proof of purchase for any inguarantee service calls. CUSTOMER CARE For general enquiries concerning your Tricity Bendix appliance and or for further information on our products, contact our Customer Care Department by letter or telephone as follows: Customer Care Department Tricity Bendix 55-77 High Street Slough Berkshire SL1 1DZ Tel: 08705 950950 (*) (*) calls to this number may be recorded for training purposes.

15 GUARANTEE CONDITIONS Standard Guarantee Conditions We Tricity Bendix undertake that if, within 12 months of the date of the purchase, this Tricity Bendix appliance or any part thereof is proved to be defective by any reason only of faulty workmanship or materials, we will, at our option, repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that: · The appliance has been correctly installed and used only on the electricity supply stated on the rating plate. · The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions. · The appliance has not been serviced maintained, repaired, taken apart or tampered with by any person not authorised by us. · All service work under this guarantee must be undertaken by a Tricity Bendix Service Force Centre. · Any appliance or defective part replaced shall become the Company's property. · This guarantee is in addition to your statutory and other legal rights. Home visits are made between 8.30am and 5.30pm Monday to Friday. Visits may be available outside these hours, in which case a premium will be charged.

Exclusions This guarantee does not cover: · Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic. · Costs incurred for calls to put right an appliance, which is improperly installed, or calls to appliance outside the United Kingdom. · Appliances found to be in use within a commercial or similar environment, plus those, which are the subject to rental agreements. Products of Tricity Bendix manufacture which are not marketed by Tricity Bendix. European Guarantee If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications: · The guarantee starts from the date you first purchased your product. · The guarantee is for the same period and to the same extent for labour and parts as exist in the new country of use for this brand or range of products. · This guarantee relates to you and cannot be transferred to another user. · Your new home is within the European Community (EC) or European Free Trade Area. ·

The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household · The electrical supply complies with the specification given in the rating label. · The product is installed taking into account regulations in your new country. Before you move, please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances. France Germany Italy Sweden UK Senlis Nürnberg Pordenone Stockholm Slough +33 (0) 3 44 62 20 13 +49 (0) 800 234 7378 +39 (0) 800117511 +46 (0) 20 78 77 50 +44 (0) 1753 219898 16

INSTRUCTIONS FOR THE INSTALLER TECHNICAL FEATURES Free standing Hob Front right Back right Front left Back left Total hob rating Oven Oven Oven power Grill Grill power Total oven rating Accessories Trivet Dripping pan / roasting tray Roasting grid Grill deflector Legs Rated voltage Rated frequency Total rating Dimensions Height to the hob Width Depth Hotplate 180mm (rapid) Hotplate 145mm (normal) Hotplate 145mm (normal) Hotplate 180mm (rapid) Class X 2000 W 1000 W 1000 W 1500 W 5500 W Electric 1900 W Electric 1800 W 1900 W Chromed Enamelled Chromed Enamelled Supply 240/415V 50 Hz 7400 W 880- 890 mm 500 mm 600 mm This appliance complies with the following EEC Directives : 73/23 - 90/683 ; (Low Voltage Directive) and subsequent modifications, 89/336 (Electromagnetical Compatibility Directive) 93/68 (General Directives) and subsequent modifications.

17 IMPORTANT SAFETY REQUIREMENTS Important This cooker must be installed in accordance with the IEE Wiring Regulations (Current Edition).

Detailed recommendations are contained in the following British Standards Codes Of Practice: B.S. 6172/ B.S.

5440, Par.2 and B.S. 6891 Current Editions. LOCATION The appliance must not be installed in a bed-sitting room of volume less than 20m³ or in a bathroom or shower room. @@@@The levelling feet fitted to the appliance will achieve a nominal height to hotplate of 900mm+10mm. The appliance must be installed in accordance with EN 1116-1995, regarding the depth of the superior furniture. max 400 690 690 min 600 C C 1G 2 3 4 678 5 1G 2 3 4 678 5 400 100 less 40 min 570 Levelling Fix the support with two legs with the washer and nuts, delivered with the cooker, see the figure. · Unscrew the legs as far as possible (approx. 16mm from fully screwed in).

· Place the plinth (pos.3) so that the springs (pos.2) reach the threaded area of the legs and the clamp of the plinth (pos.4) is in front of the holes (pos.5) on the under side of the structure. · Push the plinth towards the appliance with both hands until the springs fasten on the legs and the clamps go into the corresponding holes. · Adjust the legs as necessary. 4 5 3 2 1 18 **ELECTRICAL CONNECTIONS** Any electrical work required to install this hob and the supply cable should be carried out by a qualified electrician or competent person, in accordance with the current regulations. **THIS COOKER MUST BE EARTHED.** The manufacturer declines any liability should these safety measures not be observed.

Before any maintenance or cleaning can be carried out, you must DISCONNECT the cooker from the electricity supply. This cooker is designed to be connected to a 230-240V AC, 50Hz electrical supply. To connect to the electricity supply, use cable type H05 RR-F. Before connection, make sure the electricity supply voltage is the same as that indicated on the rating plate. The cooker is supplied without supply cable.

A flexible supply cable must be fitted, in accordance with the specification given in the relevant table no. 1. The electrical connection should be made using a double pole-isolating switch (cooker control switch) with at least 3mm contact separation in all poles. The cable must have conductors of sufficiently high cross-sectional area to prevent overheating or deterioration. The switch should be sited within 2m of the cooker and be easily accessible at all times.

The switch must not interrupt the yellow-green earth wire.



[You're reading an excerpt. Click here to read official TRICITY SE210W user guide](http://yourpdfguides.com/dref/946411)
<http://yourpdfguides.com/dref/946411>

NOTE: The earth wire should be about 2 cm longer than the live and neutral wires. After installation and connecting, the cable must be placed so that it cannot at any point reach a temperature of more than 50°C above the ambient temperature. If the supply cable is damaged, the manufacturer or its service agent or a similarly qualified person must replace it in order to avoid a hazard. Before connecting check that: · · The fuse and household electrical installation can carry the absorbed current of the appliance (see rating plate); The cooker connection outlet or the cooker control switch is easily accessible when the appliance is installed. How to proceed? · · · · Unscrew and remove the protective cover at the back of the appliance; Connect the power cable to the terminal block of the cooker according to the table no.1; Secure by means of cable clamp; Make sure that the connection to the terminal block is matching the supply system, see table no.1; Refit and screw the protective cover on the back of the appliance. Table no.1 Connection type Cable connection to the terminal block Mains Voltage Voltage of heating elements Fuse capacity Cable section Single phase (UK) 12345 L1 N PE 240 V 240 V 45 A 2 3x6 mm 19 Customer Care Department Tricity Bendix 55-77 High Street Slough Berkshire SL1 1DZ Tel: 08705 950 950 SE 210 - 342724766 © Electrolux plc 2003 From the Electrolux Group.

The world's No.1 choice The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world. .



[You're reading an excerpt. Click here to read official TRICITY](#)

[SE210W user guide](#)

<http://yourpdfguides.com/dref/946411>