



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY SG205WL. You'll find the answers to all your questions on the TRICITY SG205WL in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY SG205WL  
User guide TRICITY SG205WL  
Operating instructions TRICITY SG205WL  
Instructions for use TRICITY SG205WL  
Instruction manual TRICITY SG205WL

**TRICITY BENDIX**

*OPERATING & INSTALLATION  
INSTRUCTIONS*

**GAS COOKER  
SG 205WL**



GB



[You're reading an excerpt. Click here to read official TRICITY SG205WL user guide](http://yourpdfguides.com/dref/946713)  
<http://yourpdfguides.com/dref/946713>

### Manual abstract:

Take care when moving it. @@ · Remove all packaging before using the cooker. @@ It shall be installed and connected in accordance with current installation regulations. Particular attention shall be given to the relevant requirements regarding ventilation. · Ensure that the gas supply complies with the type stated on the adjustment label, located near the gas supply pipe. · Do not attempt to modify the cooker in any way. · When using other electrical appliances, ensure the cable does not come into contact with the hot surfaces of the cooker. · Unstable or misshapen pans should not be used on the hob burners as unstable pans can cause an accident by tipping or spillage. · Never leave the cooker unattended when cooking with oil and fat. · Never pull the appliance by the oven handle.

· This cooker should be kept clean at all times. A build-up of fat or foodstuff could result in a fire. · Never use steam or high-pressure appliances for cleaning the oven. · Never use plastic dishes in the oven or on the hob burners. Never line any part of the oven with aluminium foil.

· Always ensure that the oven vent, which is located at the centre back of the hob, is left unobstructed to ensure ventilation of the oven cavity. · Perishable food, plastic items and aerosols may be affected by heat and should not be stored above the cooker. · The appliance is fitted with a lid: this is designed as a dust cover when closed, and as a splash back when open. Do not use for any other purpose. · After using the cooker, the lid **MUST NOT** be closed until the hob and oven are completely cold.

· Do not use the lid to switch off the gas burners. Always use the control knobs. Child Safety · This cooker is designed to be operated by adults. Do not allow children to play near or with the cooker. · The cooker gets hot when it is in use. Children should be kept away until it has cooled. · Children can also injure themselves by pulling pans or pots off the cooker. During Use · This cooker is intended for domestic cooking only. It is not designed for commercial or industrial purposes. · When in use a gas cooker will produce heat and moisture in the room in which it has been installed.

Ensure there is a continuous air supply, by keeping air vents in good condition or installing a cooker hood with a venting hose. · When using the cooker for a long period time, opening a window or increasing the extractor speed should improve the ventilation. · Do not use this cooker if it is in contact with water. Do not operate the cooker with wet hands. · The grill pan will become hot during use, always use oven gloves when removing or replacing a hot grill pan. ·

Ensure the control knobs are in the 'OFF' position when not in use. Service · This cooker should only be repaired or serviced by an authorised Service Engineer and only genuine approved spare parts should be used. Environmental Information · After installation, please dispose of the packaging with due regard to safety and the environment. When disposing of an old appliance, make it unusable. Keep this instruction book for future reference and ensure it is passed on to any new owner.

4 DESCRIPTION OF THE APPLIANCE Hob Cooker lid 2000W 1000W 2 3 Control panel Door handle 1 4 Oven door with glass 2000W 2600W 1. 2. 3. 4. Adjustable small feet Front left burner (semi-rapid) Back left burner (semi-rapid) Back right burner (auxiliary) Front right burner (rapid) Control panel SG205WL 1.

Oven/grill knob 2. Front left burner control knob 3. Back left burner control knob 4. Back right burner control knob 5. Front right burner control knob 5

USING THE APPLIANCE Before the First Use of the Cooker Remove all packaging both inside and outside of the cooker, before using it.

Before first use, the oven should be heated without food. During this time, an unpleasant odour may be emitted. This is quite normal. 1. Lift the lid. 2. Remove the oven accessories and ensure all packaging has been removed. 3. Ignite the oven burner (see instructions) and turn the control knob to 9 (maximum). 4.

Open a window for ventilation. 5. Allow the oven to run empty for approximately 45 minutes. This procedure should be repeated with the grill function for approximately 5-10 minutes. Using the Oven The cooker gets hot when it is in use. Children should be kept away until it has cooled. Stand clear when opening the drop down oven door. Do not allow it to fall open - support the door using the door handle, until it is fully open. When using the oven the cover has to be opened to avoid over-heating. The oven has three shelf levels, and is supplied with one shelf.

The shelf positions are counted from the bottom of the oven as shown in the diagram. Do not place cookware or foil directly on the oven base. Oven Safety device The cooker features a thermocouple; if for any reason the flame should extinguish, the device will stop the gas flow. 3 Shelf levels 2 1 Use The oven can be used for traditional cooking, or for grilling, but not both functions simultaneously. The symbol on the knob corresponds to the symbol on the control panel.

Off "9" Maximum "1" Minimum Grill function (heat come from the top burner only. 6 Ignition · Open the oven door and lift the small lid on the bottom of the cavity, push and turn the control knob to the left to position 9, keeping the control knob pressed. · Release the knob after 10 seconds and check that the burner is ignited through the holes in the bottom lid. If for any reason the flame should extinguish turn control knob to the off position, after at least 1 minute, try to re-ignite the oven. Cooking in the Oven Traditional cooking is made by natural convection; the heated air circulates on the principle of ascending and descending draughts.

It is necessary to pre-heat the oven. All cookers vary and it is important to be aware of the approximate cooking temperatures before you use the cooker. The chart shows the gas mark temperatures together with the approximate equivalent temperatures in °C. It may be necessary to adjust the temperature to suit your individual requirements. Only experience will enable you to determine the correct setting for your personal requirements. Gas Mark 1 2 3 4 5 6 7 8 9 Temperature °C 150 162 175 187 200 212 225 237 250 7 Hints and Tips Condensation and steam When food is heated it produces steam in the same way as a boiling kettle. The oven vents allow some of this steam to escape. However, always stand back from the oven when opening the oven door to allow any build up of steam or heat to release. If the steam comes into contact with a cool surface on the outside of the oven, e.g.

a trim, it will condense and produce water droplets. This is quite normal and is not a fault with the oven. To prevent discolouration, regularly wipe away condensation and also soil age from surfaces.



[You're reading an excerpt. Click here to read official TRICITY SG205WL user guide](http://yourpdfguides.com/dref/946713)  
<http://yourpdfguides.com/dref/946713>

*Cookware Use any ovenproof cookware, withstand temperatures of 250°C. which will Oven Cooking · Turn off the oven 5 minutes before the end of cooking time, and use residual heat to complete the cooking. · The thickness, the material and the colour of the pan will influence the cooking results. · When cooking, certain dishes increase in volume, ensure the pan is large enough. · To prevent fat dripping when roasting use tall rim pans proportional to the item being roasted. · Prick the skin of poultry and sausages with a fork before cooking to avoid spitting. · Use heatproof glass dishes for soufflés.*

*The effects of dishes on cooking results Dishes and tins vary in their thickness, conductivity, colour, etc. which affects the way they transmit heat to the food inside them. A Aluminium, earthenware, oven glassware and bright shiny utensils reduce cooking and base browning. B Enamelled cast iron, anodised aluminium, aluminium with non-stick interior and coloured exterior and dark, heavy utensils increase cooking and base browning. Oven dishes, etc. should not be placed directly on the oven base. 8 Using the Grill Accessible parts may become hot when the grill is in us. Children should be kept away. The grill pan will become hot during use, always use oven gloves when removing or replacing a hot grill pan. All grilling must be carried out with the oven door closed.*

*Heat comes from the top of the oven. It is suitable for grilling meat (steak, bacon etc...) that remains tender, for toast or to brown food already cooked. Grill burner ignition · Open the oven door. · Hold a flame to the gas grill burner holes (see fig.). · Press the oven/grill function control knob, then turn it to the "grill symbol". Upon ignition, keep the knob pressed for approximately 10 seconds (until the safety valve automatically keeps the grill burner lit).*

*· Ensure that you avoid contact with any flame of hot parts. If for any reason the flame should extinguish turn the control knob to the OFF position, leave for at least 1 minute and then re-ignite. Grilling When grilling, only the top burner is heating. It is not necessary to preheat the grill. 1. Insert the food on the 2nd level. 2. Turn the knob to position "grill". 3. Adjust the grid and pan position to allow for different thickness of food.*

*Position the food closer to the grill for faster cooking and further away for slower cooking. Heat comes from the top of the oven. It is suitable for grilling meat (steak, bacon etc...)*

*) that remains tender, for toast or to brown already cooked dishes. Grilling meat · Prepare the meat to be grilled, lightly brush it with oil on both sides. · Place it on the roasting grid. · Turn the oven/grill control knob to position "grill". · Slide the roasting grid together with the roasting tray in the guide 2.*

*· When the first side is brown, turn the meat without pricking it in order that the juices are not lost. · Grill the second side. Cooking time is determined by the thickness of the piece to be grilled not by its weight. 9 Browning · Turn the oven/grill control knob to the "grill" position. · Place the dish on the grid and slide it on shelf guide 2 or 3. · Leave the dish under the grill for a few minutes. Using the Hob The Hob Burners The symbol on the knob corresponds to a symbol on the control panel (See description of appliance). Each burner has a safety device. In case the flame dies out the safety device stops the gas supply. Off Maximum level Minimum level Use the maximum level for boiling and the minimum for simmering.*

*Always choose positions between the minimum and maximum, never between maximum and off. Ignition of the burners · Push the corresponding knob in completely and turn it left to the maximum position and ignite with a match. @@ · Upon ignition, adjust the flame as required. @@». The Do each should NOT be used as they may dull the surface finishes. Harsh abrasives should also be avoided. 1. Open the door completely. 2. Turn the two locking levers (1) on the hinge arms fully upwards.*

*3. @@4. @@@@2. @3. @@@@ For this purpose remove the 2 fixing screws.*

*Clean the outer and inner door glass using warm soapy water. @@@@If this precaution is not observed the glass panel may shatter. @@@@ Rinse and dry with a soft cloth. @@@@ The gas ring burns unevenly 3. One of the oven or grill burners does not ignite 4.*

*Cooking results are not satisfactory 5. @@ When you contact the Service Force Centre you will need to give the following details: 1. 2. 3. 4. 5. Your name, address and postcode. Your telephone number Clear and concise details of the fault The model and serial number of the appliance (found on the rating plate\*) The purchase date \* The rating plate can be found on the lower left hand corner of the front frame of the cavity. Please note that valid purchase receipt or guarantee documentation is required for in-guarantee service calls. 15 SERVICE AND SPARE PARTS In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning:- 08705 929929 Your telephone call will be automatically routed to the Service Force Centre covering your postcode area.*

*For the address of your local Service Force Centre and further information about Service Force, please visit the website at [www.serviceforce.co.uk](http://www.serviceforce.co.uk) For Customer Service in the Republic of Ireland please contact us at the address below: Tricity Bendix Electrolux Group ( Ire ) Ltd Long Mile Road Dublin 12 Republic of Ireland Tel: + 353 (0) 1 4090 752 Email: [service.eid@electrolux.ie](mailto:service.eid@electrolux.ie) In-guarantee customers should ensure that the checks under the heading "Something Not Working" have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown. Please note that it will be necessary to provide proof of purchase for any inguarantee service calls. CUSTOMER CARE For general enquiries concerning your Tricity Bendix appliance and or for further information on our products, contact our Customer Care Department by letter or telephone as follows: Customer Care Department Tricity Bendix 55-77 High Street Slough Berkshire SL1 1DZ Tel: 08705 950950 (\*) (\*) Calls to this number may be recorded for training purposes. 16 GUARANTEE CONDITIONS Standard Guarantee Conditions We Tricity Bendix undertake that if, within 12 months of the date of the purchase, this Tricity Bendix appliance or any part thereof is proved to be defective by any reason only of faulty workmanship or materials, we will, at our option, repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that: · The appliance has been correctly installed and used only on the electricity supply stated on the rating plate. · The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.*



[You're reading an excerpt. Click here to read official TRICITY](#)

[SG205WL user guide](#)

<http://yourpdfguides.com/dref/946713>

· The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us. · All service work under this guarantee must be undertaken by a Tricity Bendix Service Force Centre. · Any appliance or defective part replaced shall become the Company's property. ·

This guarantee is in addition to your statutory and other legal rights. Home visits are made between 8.

30am and 5.30pm Monday to Friday. Visits may be available outside these hours, in which case a premium will be charged. Exclusions This guarantee does not cover: · Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic. · Costs incurred for calls to put right an appliance which is improperly installed or calls to appliance outside the United Kingdom.

· Appliances found to be in use within a commercial or similar environment, plus those, which are the subject to rental agreements. Products of Tricity Bendix manufacture which are not marketed by Tricity Bendix. European Guarantee If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications: · The guarantee starts from the date you first purchased your product. · The guarantee is for the same period and to the same extent for labour and parts as exist in the new country of use for this brand or range of products. · This guarantee relates to you and cannot be transferred to another user. · Your new home is within the European Community (EC) or European Free Trade Area. · The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household · The electrical supply complies with the specification given in the rating label. · The product is installed taking into account regulations in your new country.

Before you move, please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances. France Germany Italy Sweden UK Senlis Nürnberg Pordenone Stockholm Slough +33 (0) 3 44 62 20 13 +49 (0) 800 234 7378 +39 (0) 800117511 +46 (0) 20 78 77 50 +44 (0) 1753 219898 17 INSTRUCTIONS FOR THE INSTALLER TECHNICAL FEATURES Free standing Class 1 Hob Cover Pan support Front right Back right Front left Back left Oven Oven power Grill Grill power Oven grid Dripping pan / roasting tray Trivet Legs Height with the lid closed Height to the hob Width Depth Painted Enamelled Rapid Auxiliary Semi-rapid Semi-rapid 2,60 kW 1,00 kW 2,00 kW 2,00 kW Gas 3,20 kW Gas 1,80 kW Chromed Enamelled Chromed Oven Accessories Dimensions 910 - 920 mm 880 - 890 mm 500 mm 536 mm This appliance complies with the following EEC Directives : 93/68 ; 73/23 (Low Voltage Directive) and subsequent modifications, 89/336, 90/31, 93/68 (Electromagnetic Compatibility Directive) and subsequent modifications, 90/396 (Gas Appliance Directive) 93/68 (General Directives) and subsequent modifications. 18 ADVICE FOR SAFETY Gas connections · · · Before installation ensure gas type and pressure and the pre-setting of the appliance are consistent. This appliance must be installed only in a room with good ventilation. This appliance must not connect to a flu. It has to be installed and connected in accordance with the rules in force. Special attention should be paid to ventilation requirements. The adjacent furniture panels have to be heat resistant or protected by such material. The gas type for this appliance is stated on the rating plate.

· · Connection to gas supply. Check that the gas flow and the diameter of the supply pipe are sufficient to supply all the appliances of the installation. · Check that all connections are tight. · Install an accessible and visible gas tap to isolate the appliance. Installation of flues and ventilation for gas appliances of rated input not exceeding 60 kW (1st, 2nd and 3rd family gases) Part 2 Specification for installation of ventilation for gas appliances BS 5440; Gas burning appliances Part 3 Domestic cooking appliances burning gas BS 5386; Specification for installation of low pressure gas pipe work of up to 20mm (R1) in domestic premises (2nd family gas) BS 6891; Pipe threads for tubes and fittings where pressure-tight joints are made on the threads (metric dimensions) BS 21: 1985; Flexible hoses, end fittings and sockets for gas burning appliances BS 669; Installation of domestic gas cooking appliances (1st, 2nd and 3rd family gases) BS 6172: 1990; For appliances installed in the Republic of Ireland please refer to NSAI-Domestic Gas Installation IS813 Current Editions. - - - - 19 INSTALLATION Location of appliance The appliance must not be installed in a bed-sitting room of volume less than 20m<sup>3</sup> or in a bathroom or shower room. It is essential that the appliance is positioned as in the enclosed figure i.e. shelves, wall cabinets and cooker hoods must be fitted a minimum of 690mm directly above the hob and 400mm above the hob when fitted in line with the outside of the appliance. If the units are intended to be fitted adjacent to the appliance but less than 400mm above the hob, then a minimum space of 100mm must be maintained between the sides of the unit and the appliance (see fig).

If fitted next to or between two base units a minimum space of 1mm must be left between each unit and the sides of the appliance. The levelling feet fitted to the appliance will achieve a nominal height to hob of 900mm+10mm. The appliance must be installed in accordance with EN 1116-1995, regarding the depth of the superior furniture. L.P.G. cookers or ovens MUST NOT be installed below ground level, i.e. in a basement, or aboard any boat, yacht or other vessel. The cooking appliance must be fitted with a stability chain firmly secured to the wall (see fig).

max 400 690 690 min 600 C 1G 2 3 4 678 5 400 100 less than 400 C 1G 2 3 4 678 5 min 570 Stability hook Firmly fix chain to rear of cooker Chain to be as short as practicable Ventilation The room containing the cooker should have an air supply in accordance with B.S. 5440: Part 2: Current Editions. The following requirements for ventilation must be met. The cooker should not be installed in a bed sitting room with a volume of less than 20m<sup>3</sup>, if it is installed in a room of volume less 5m<sup>3</sup> an air vent of effective area of 110cm<sup>2</sup> is required; if it is installed in a room of volume between 5m<sup>3</sup> and 10m<sup>3</sup>, an air vent of effective area 50cm<sup>2</sup> is required, while if the volume exceeds 11m<sup>3</sup> no air vent is required. However, if the room has a door, which opens directly to the outside, no air vent is required even when the volume is between 5m<sup>3</sup> and 11m<sup>3</sup>.



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/946713)

[SG205WL user guide](http://yourpdfguides.com/dref/946713)

<http://yourpdfguides.com/dref/946713>

If there are other fuels burning appliances in the same room, B.S. 5440: Part. 2: Current Editions should be consulted to determine the requisite air vent requirements.

**Stability chain 20 Levelling** Fix the support with two legs by means of washer and nuts, delivered with the cooker, see the figure. **GAS CONNECTIONS** Your cooker is delivered adjusted for the kind of gas stated on the rating plate. If the appliance is supplied with natural gas and the pressure for natural gas is 20mbar, the following methods of connection to the gas supply must be used: **Right Hand Connection (from front)** Ensure that the rubber hose is not in contact with any part of the shaded area shown in the diagram and that the loop of the hose when connected is not in contact with the floor when the appliance is in position. **BACK OF THE COOKER BACK OF THE COOKER Left Hand Connection (from front)** Ensure that the rubber hose is not in contact with any part of the shaded area shown in the diagram and the hose is retained in the clamp provided, it will be necessary to fit the maximum length hose when using this method. **Rigid Connection** Where it is not possible to make the connection using a rubber hose, a rigid pipe work connection must be used. **Recommendations when using an appliance flexible connector are as follows:** - For NATURAL the gas installation pipes to the termination point shall comply with: Specification for installation of low-pressure gas pipe work of up to 20mm (R1) in domestic premises (2nd family gas) BS 6891; A Connection of flexible hose **Clamp 21** Connection shall be by means of an appliance flexible connector for use with a self-sealing plug-in device, complying with: Flexible hoses, end fittings and sockets for gas burning appliances BS 669; The appliance flexible connector should not be subjected to undue forces either in normal use or whilst connected or disconnected; The socket which the plug of the appliance flexible connector fits should be permanently attached to a firmly fixed gas installation pipe and positioned such that the appliance flexible connector hose hangs freely downwards (see fig.); The appliance flexible connector should be positioned such that it will not suffer mechanical damage, e.g. abrasion from the surrounding kitchen furniture, which may be moved in use such as a drawer or door, or by being trapped by any stability device. - The plug-in-connector bayonet should be accessible for disconnection after moving the appliance.

**Right angled bayonet socket Distributor incorporating pipe spring loaded Adaptor valve backplate Female elbow Copper pipe Alternative backplate elbow Cooker hose with bayonet fixing Straight bayonet socket incorporating spring loaded valve Cooker hose with bayonet fixing 22 CONVERSION OF GAS** Your cooker is designed to work with propane or butane, and is convertible for use with natural gas. The natural gas conversion kit is available from your Service Force Centre and must be fitted by a Registered engineer/ competent person. For changing the gas type it is necessary to: · replace the nozzles (hob, oven and grill); · adjust the minimum level (hob and oven); · adjust the primary air (oven and grill); · check the gas connection; Stick the label supplied with the replacement nozzles (from the Service Force Centre) corresponding to the gas type utilized. **SPECIFICATION NOZZLES Table no.1 (Cat : II 2H3+)**

Burner	Normal power (kW)	Simmer power (kW)	Bypass (mm)	Gas Type	Natural Gas	Butane	Propane	Natural Gas	Butane	Propane	Natural Gas	Butane	Propane	Nozzle diameter (mm)	Cons m3/h	
20	28-30	37	20	28-30	37	20	28-30	37	20	28-30	37	20	28-30	37	20	
28	30	37	20	28-30	37	20	28-30	37	20	28-30	37	20	28-30	37	20	
37	20	28-30	37	20	28-30	37	20	28-30	37	20	28-30	37	20	28-30	37	
NOZZLE diameter (mm)	Cons	m3/h	0.248	0.191	0.093	g/h	189,05	185,68	145,43	142,83	72,71	71,41	232,68	228,52	130,88	128,55

**RAPID SEMIRAPID AUXILIARY 2.60 0.72 0.**

42 2.00 0.43 0.32 1.00 0.35 0.29 OVEN 3.20 1.00 0.46 GRILL 1.

80 - - 1.12 0,86 0,86 0.96 0,71 0,71 0.70 0,50 0,50 1.30 0,88 0,88 1,00 0,67 0,67 0.

305 0,172 - 23 Replace the nozzles of the hob burners Every appliance has spare nozzles for every type of gas. The whole length of every nozzle is marked in millimetres on the nozzle. **Hob burners** · · · Remove the pan support; Remove the caps and the burner crowns; Using a No 7 socket spanner unscrew the nozzles and replace them with those required for the type of gas in use (see table no.1). Reassemble the parts following the same procedure in reverse. These burners do not need any primary air regulation. @@@@The air admission is correct when the flame is about 4 mm in length. The top burners do not need adjustment of primary air. @@@@ · For LPG screw completely the by-pass screw. Reassemble the parts following the same procedure in reverse. Check that, when turning the knob quickly from the maximum position to the minimum one, the flame does not go out. no air correct adjustment excess of air 24 Replace the nozzles of the oven burners **Oven burner** To replace the gas oven nozzle, follow this procedure: · Check the table no.1 for diameter of nozzle; · Remove the oven removable base panel; · Remove the screw "B" on the oven burner; · Remove the oven burner by pushing it backwards. · Replace the nozzle (C) by means of a No 10 socket spanner; Reassemble the parts following the same procedure in reverse. **Grill burner** To replace the gas grill nozzle, follow this procedure: · Remove the grill burner after removing the fixing screw.

· Replace the nozzle by means of a No 10 socket spanner; · Refit all parts and test. **Flame adjustment Oven burner** The burner is correctly adjusted when the flame is stable, silent and goes out without any noise. · When the flames are too short, the nozzle is whistling or the flames have the tendency to detach from the burner, it means that there is too much air in the valve. If there is too much air there is a risk that the flames will extinguish. · But, if the flames are too long, soft, lighting, there is not enough air in the valves. These flames discolour the bottom of pans. · Loosen the fixing screw M, which fixing the air adjuster A; · Move the air adjuster A forward or backward until achieving the right mixture (see table no. 2); · Tighten the fixing screw M. **Grill burner** · Loosen the screw fixing the Venturi. · Move the adjusting collar left or right until achieving the correct flame picture (see table no.

2). · Tighten the fixing screw. **Table no.2 Gas type G20 G30 G31 Air adjusting (mm) Oven Grill 2,5 25,5 3,5 30 3,5 30 air adjusting M A opening adjusting collar screw 25 Adjustment of minimum level Oven burner** · · · · · Remove the top pan support as well as the burner caps and the burner crowns.



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/946713)

[SG205WL user guide](http://yourpdfguides.com/dref/946713)

<http://yourpdfguides.com/dref/946713>

*Unscrew and remove the 2 top plate-fixing screws and remove the top plate.*

*Light the burner knob on position 9 and leave the oven door closed for about 10 min. Turn the knob slowly to position 1. Pull off the knob to adjust minimum flow. Unscrew or screw the by-pass screw (is it above of tap shaft) until a regular small flame is reached. · For LPG, adjust the by-pass screw for minimum flame setting.*

*The flame shouldn't extinguish when closing the oven door. Grill burner The grill temperature cannot be adjusted. To obtain a lower temperature or slower cooking time the grill pan must be lowered away from the flame. After completion of any repairs, conversion or adjustments, the statutory safety tests must be carried out. by-pass 26 342 725 716-A-290305-01 The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. Customer Care Department Tricity Bendix 55-77 High Street Slough Berkshire SL1 1DZ Tel: 08705 950 950 SG 205WL - 342725716-A-110405-01 © Electrolux plc 2005 From the Electrolux Group. The world's No.*

*I choice The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world. .*



[You're reading an excerpt. Click here to read official TRICITY SG205WL user guide](http://yourpdfguides.com/dref/946713)  
<http://yourpdfguides.com/dref/946713>