



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY SG211X. You'll find the answers to all your questions on the TRICITY SG211X in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY SG211X
User guide TRICITY SG211X
Operating instructions TRICITY SG211X
Instructions for use TRICITY SG211X
Instruction manual TRICITY SG211X

TRICITY BENDIX

*OPERATING & INSTALLATION
INSTRUCTIONS*

**GAS COOKER
SG 211**



GB



[You're reading an excerpt. Click here to read official TRICITY SG211X user guide](http://yourpdfguides.com/dref/946717)
<http://yourpdfguides.com/dref/946717>

Manual abstract:

Take care when moving it. @@ · Any electrical installation must be carried out by a qualified electrician/competent person. · Remove all packaging before using the cooker. · This cooker must not be connected to a combustion products evacuation device. It shall be installed and connected in accordance with current installation regulations. Particular attention shall be given to the relevant requirements regarding ventilation. · This cooker is designed to be connected to a 230-240V, 50Hz electrical supply. · Ensure that the gas and electrical supply complies with the type stated on the rating plate, located near the gas supply pipe. · Do not attempt to modify the cooker in any way. · Unstable or misshapen pans should not be used on the hob burners as unstable pans can cause an accident by tipping or spillage.

· Never leave the cooker unattended when cooking with oil and fat. · Never pull the appliance by the oven handle. · This cooker should be kept clean at all times. A build-up of fat or foodstuff could result in a fire. · Never use steam or high-pressure appliances for cleaning the oven. · Never use plastic dishes in the oven or on the hob burners. Never line any part of the oven with aluminium foil. · Always ensure that the oven vent, which is located at the centre back of the hob, is left unobstructed to ensure ventilation of the oven cavity. · Perishable food, plastic items and aerosols may be affected by heat and should not be stored above the cooker. Service · This cooker should only be repaired or serviced by an authorised Service Engineer and only genuine approved spare parts should be used.

After installation, please dispose of the packaging with due regard to safety and the environment. When disposing of an old appliance, make it unusable, by cutting off the cable. Child Safety · This cooker is designed to be operated by adults. Do not allow children to play near or with the cooker. · The cooker gets hot when it is in use. Children should be kept away until it has cooled. · Children can also injure themselves by pulling pans or pots off the cooker.

Environmental Information · · During Use · This cooker is intended for domestic cooking only. It is not designed for commercial or industrial purposes. · When in use a gas cooker will produce heat and moisture in the room in which it has been installed.

Ensure there is a continuous air supply, by keeping air vents in good condition or installing a cooker hood with a venting hose. · When using the cooker for a long period time, the ventilation should be improved, by opening a window or increasing the extractor speed. · Do not use this cooker if it is in contact with water. Do not operate the cooker with wet hands. · The grill pan will become hot during use, always use oven gloves when removing or replacing a hot grill pan. · Ensure the control knobs are in the 'OFF' position when not in use. · When using other electrical appliances, ensure the cable does not come into contact with the hot surfaces of the cooker. 4 The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. Keep this instruction book for future reference and ensure it is passed on to any new owner. INSTRUCTIONS FOR THE USER USE AND CARE Control panel SG211X 1 2 3 4 5 6 1. Back left burner control knob 2. Front left burner control knob 3.

Front right burner control knob 4. Back right burner control knob 5. Ignition switch 6. Oven/Grill burner control knob (selector) Hob 1 4 2 3 1. Back left burner (auxiliary) 2.

Front left burner (rapid) 3. Front right burner (semi-rapid) 4. Back right burner (semi-rapid) 5 USE OF APPLIANCE Before the First Use of the Cooker Remove all packaging both inside and outside of the cooker, before using it. Before first use, the oven should be heated without food. During this time, an unpleasant odour may be emitted. This is quite normal. 1. Remove the oven accessories and ensure all packaging has been removed. 2. Ignite the oven burner (see instructions) and turn the control knob to maximum.

3. Open a window for ventilation. 4. Allow the oven to run empty for approximately 45 minutes. This procedure should be repeated with the grill function for approximately 5-10 minutes. Using the Oven The cooker gets hot when it is in use. Children should be kept away until it has cooled. Stand clear when opening the drop down oven door. Do not allow it to fall open support the door using the door handle, until it is fully open. Attention: when turning on the oven and grill burner the oven door has to be opened.

The oven has four shelf levels, and is supplied with one shelf. The shelf positions are counted from the bottom of the oven as shown in the diagram. Oven Safety device The cooker features a thermocouple; if for any reason the flame should extinguish, the device will stop the gas flow. 4 3 2 1 Use The oven can be used for traditional cooking, or for grilling, but not both functions simultaneously. The symbol on the knob corresponds to the symbol on the control panel. "8" "1" Off Maximum Minimum Grill function 6 Ignition Attention: when turning on the oven and grill burner the oven door has to be opened. · Open the oven door, push and turn the control knob to the left to position 8, keeping the control knob pressed. · At the same time, push the electronic ignition knob (see fig). Keep it pushed until the gas ignites (1 spark / second). · Release the knob after 10 seconds and check that the burner is ignited through the holes in the burner cover.

OR During a power cut · Open the oven door, push and turn the control knob to the left to position 8, and hold a flame near the hole in the bottom; · Release the knob after 10 seconds and check that the burner is ignited through the holes in the burner cover. If for any reason the flame should extinguish turn the control knob to the off position, after at least 1 minute, try to re-ignite the oven. To adjust the flame, turn the oven knob to the position corresponding to the temperature desired, after a few minutes of operation. Turning off the oven burner Turn the knob clockwise to mark « ». Cooking in the Oven Traditional cooking is made by natural convection; the heated air circulates on the principle of ascending and descending draughts.



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/946717)

[SG211X user guide](http://yourpdfguides.com/dref/946717)

<http://yourpdfguides.com/dref/946717>

It is necessary to pre-heat the oven. All cookers vary and it is important to be aware of the approximate cooking temperatures before you use the cooker. The chart shows the gas mark temperatures together with the approximate equivalent temperatures in °C. It may be necessary to adjust the temperature to suit your individual requirements. Only experience will enable you to determine the correct setting for your personal requirements.

Gas Mark 1 2 3 4 5 6 7 8 Temperature °C 150 165 180 195 205 220 235 250 7 Using the Grill When grilling, the accessible parts of the appliance are hot and the appliance should not be left unattended. Take care that children do not play near it. While the grill is operating leave the oven door half open and put the grill deflector "A" into place. A Grill burner ignition Attention: when turning on the oven and grill burner the oven door has to be opened. . . . Open the oven door push and turn the control knob to the right to the "grill symbol" and keep the control knob pressed. At the same time, push the electronic ignition knob (see fig). Keep it pushed until the gas ignites (1 spark / second). Upon ignition, keep the knob pressed for approximately 10 seconds (until the safety valve automatically keeps the grill burner lit). OR During a power cut . Open the oven door. . Hold a flame to the gas grill burner holes (see fig). . Press the oven/grill function control knob, then turn it to the "grill symbol". Upon ignition, keep the knob pressed for approximately 10 seconds (until the safety valve automatically keeps the grill burner lit). If for any reason the flame should extinguish turn the control knob to the " " position, leave for at least 1 minute and then re-ignite. The grill pan will become hot during use, always use oven gloves when removing or replacing a hot grill pan.

Grilling When using the grill it has to be supervised, the oven door opened and the grill deflector "A" in its place. When grilling, only the top burner is heating. It is not necessary to preheat the grill. . Insert the grill pan on the fourth level. . Turn the knob to position "grill". . Adjust the grid and pan position to allow for different thicknesses of food. Position the food close to the grill for faster cooking and further away for gentler cooking. 8 Heat comes from the top of the oven. It is suitable for grilling meat (beef bacon, pork bacon ...) that remains tender, for toast or to brown dishes already cooked dishes. Grilling meat When using the grill it has to be supervised, the oven door opened and the grill deflector "A" in its place. . Prepare the meat to be grilled, lightly brush it with oil on both sides. . Place it on the roasting grid.

. Turn the oven/grill control knob to position "grill". . Slide the roasting grid in the guide 4 and the roasting tray in the guide 3. . When the first side is brown, turn the meat without pricking it in order that the juices are not lost. . Grill the second side. Cooking time is determined by the thickness of the piece to be grilled not by its weight. 4 3 2 1 Browning . Turn the oven/grill control knob to the "grill" position. . Place the dish on the grid and slide it on shelf guide 4. . Leave the dish under the grill for a few minutes. 9 COOKING CHART Tray type or dimension (dxwxh) cm No. of tray Preheating Shelf Thermoposition stat pos.

Time (min) Thermostat pos. Cooking Time (min) Food Material of the tray Roasting meal - beef - lamb - pork and veal Roasting tray delivered with the cooker
1 Enamelled 1 1 3 3 3 5 5 20 20 20 5 5 5 20 min. for each 0.5 Kg / rare 25 min. for each 0.5 Kg / medium 30min. for each 0.5 Kg/well done 25 min. for each 0.5 Kg/ medium 30min.
for each 0.5 Kg/well done 30 min. for each 0.5 Kg/ medium 35min. for each 0.5 Kg/well done Poultry - chicken - turkey below 4.5 Kg - turkey over 4.5 Kg - duck Roasting tray delivered with the cooker Enamelled 1 1 1 1 2 1 1 2 1 2 1 2 1 3 3 3 3 2 and 4* 3*** 3*** 3*** 2 and 4* 3*** 2 and 4* 3*** 3** 3*** 5
4 4 5 8 8 4 1 4 4 5 5 5-6 5 20 20 20 20 20 15 15 15 15 15 15 15 5 5 5 5 8 8 4 1 4 4 5 5 5-6 5 25-30 min. for each 0.5 Kg 25 min.

for each 0.5 Kg 25 min. for each 0.5 Kg 25 min. for each 0.5 Kg Cakes - scones - fittles sponge cake - rich fruit cake - small cake - Victoria sandwich - apple ps, are covered; - Preheat the oven for about 15-20 minutes before introducing the food to be roasted or baked. Cookware Use any ovenproof cookware, withstand temperatures of 250°C. . The thickness, the material and the colour of the pan will influence the cooking results. . When cooking, certain dishes increase in volume, ensure the pan is large enough. . To prevent fat dripping when roasting use tall rim pans proportional to the item being roasted. . Prick the skin of poultry and sausages with a fork before cooking to avoid spitting. . Use heatproof glass dishes for soufflés. The effects of dishes on cooking results Dishes and tins vary in their thickness, conductivity, colour, etc. which affects the way they transmit heat to the food inside them. A Aluminium, earthenware, oven glassware and bright shiny utensils reduce cooking and base browning.

B Enamelled cast iron, anodised aluminium, aluminium with non-stick interior and coloured exterior and dark, heavy utensils increase cooking and base browning, which will Oven dishes, etc. should not be placed directly on the oven base. Oven Cooking . Turn off the oven 5 minutes before the end of cooking time, and use residual heat to complete the cooking. 13 MAINTENANCE AND CLEANING The oven should be kept clean at all times.

A build-up of fats or other foodstuffs could result in a fire. Before cleaning, ensure all control knobs are in the OFF position, and the appliance has cooled completely. Before any maintenance or cleaning can be carried out, you must DISCONNECT the cooker from the electricity supply. @@@@A steam cleaner is not to be used. Harsh abrasives should also be avoided. @@@@These also provide a protective film against finger marks. @@Burners The burner caps and crowns can be removed for cleaning. @@@@After cleaning, be sure to wipe dry with a soft cloth. @@@@ Rinse and dry with a soft cloth. @@If this precaution is not observed the glass panel may shatter.

@@@@@@@@@The gas ring burns unevenly 3. One of the oven or grill burners does not ignite 4. Cooking results are not satisfactory 5. @@@@2. 3. 4. 5. Your name, address and post code. @@Please note that a valid purchase receipt or guarantee documentation is required for inguarantee service calls. 15 SERVICE AND SPARE PARTS In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning:- 08705 929929 Your telephone call will be automatically routed to the Service Force Centre covering your post code area.



[You're reading an excerpt. Click here to read official TRICITY](#)

[SG211X user guide](#)

<http://yourpdfguides.com/dref/946717>

For the address of your local Service Force Centre and further information about Service Force, please visit the website at www.serviceforce.co.uk In-guarantee customers should ensure that the checks under the heading "Something Not Working" have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown. Please note that it will be necessary to provide proof of purchase for any in-guarantee service calls.

CUSTOMER CARE For general enquiries concerning your Tricity Bendix appliance and for further information on our products, contact our Customer Care Department by letter or telephone as follows: Customer Care Department Tricity Bendix 55-77 High Street Slough Berkshire SL1 1DZ Tel: 08705 950950 (*) (*) calls to this number may be recorded for training purposes.

16 GUARANTEE CONDITIONS Standard Guarantee Conditions We Tricity Bendix undertake that if, within 12 months of the date of the purchase, this Tricity Bendix appliance or any part thereof is proved to be defective by any reason only of faulty workmanship or materials, we will, at our option, repair or replace the same **FREE OF ANY CHARGE** for labour, materials or carriage on condition that: · The appliance has been correctly installed and used only on the electricity supply stated on the rating plate. · The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions. · The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us. · All service work under this guarantee must be undertaken by a Tricity Bendix Service Force Centre.

· Any appliance or defective part replaced shall become the Company's property. · This guarantee is in addition to your statutory and other legal rights. Home visits are made between 8.30am and 5.30pm Monday to Friday. Visits may be available outside these hours, in which case a premium will be charged.

Exclusions This guarantee does not cover: · Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic. · Costs incurred for calls to put right an appliance which is improperly installed or calls to appliance outside the United Kingdom. · Appliances found to be in use within a commercial or similar environment, plus those, which are the subject to rental agreements. Products of Tricity Bendix manufacture which are not marketed by Tricity Bendix.

European Guarantee If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications: · The guarantee starts from the date you first purchased your product. · The guarantee is for the same period and to the same extent for labour and parts as exist in the new country of use for this brand or range of products. · This guarantee relates to you and cannot be transferred to another user. · Your new home is within the European Community (EC) or European Free Trade Area. · The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household · The electrical supply complies with the specification given in the rating label. · The product is installed taking into account regulations in your new country. Before you move, please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

France Germany Italy Sweden UK Senlis Nürnberg Pordenone Stockholm Slough +33 (0) 3 44 62 20 13 +49 (0) 800 234 7378 +39 (0) 800117511 +46 (0) 20 78 77 50 +44 (0) 1753 219898 17

INSTRUCTIONS FOR THE INSTALLER TECHNICAL FEATURES Free standing Hob Pan support Front right burner Back right burner Front left burner Back left burner Hob ignition Oven Oven burner power Grill Grill burner power Oven ignition Cleaning Height Width Depth Oven volume Oven shelf Roasting tray Roasting grid Grill deflector Height Width Depth 900 mm 500 mm 600 mm Enamelled Semirapid Semirapid Rapid Auxiliary Class 1 2000 W 2000 W 3000 W 1000 W Spark Gas 3000 W Gas 2000 W Spark Manual 267 mm 405 mm 381 mm 41,2 l Oven Cavity dimensions Accessories Dimensions This appliance complies with the following EEC Directives : 93/68 ; 73/23 (Low Voltage Directive) and subsequent modifications, 89/336, 90/31, 93/68 (Electro-magnetical Compatibility Directive) and subsequent modifications, 90/396 (Gas Appliance Directive) 93/68 (General Directives) and subsequent modifications.

18 ADVICE FOR SAFETY Gas connections · Before installation ensures that the local distribution conditions (gas type and pressure) and the pre-setting of the appliance are consistent. · This appliance must be installed only in a room with good ventilation. · This appliance must not connect to a chimney. It has to be installed and connected in accordance with the rules in force.

Special attention should be paid to the applicable disposal concerning ventilation. · The adjacent furniture panels have to be heat proof or protected by such material. · The adjusting conditions of this appliance are mentioned on the rating plate. Connection to gas supply. Check that the gas flow and the diameter of the supply pipe are sufficient to supply all the appliances of the installation.

· Check that all connections are tight. · Install an accessible and visible gas tap to isolate the appliance. The manufacturer declines any responsibility for possible damages resulting from an installation, which doesn't comply with current legislation. Installation of flues and ventilation for gas appliances of rated input not exceeding 60 kW (1st, 2nd and 3rd family gases) Part 2 Specification for installation of ventilation for gas appliances BS 5440; Gas burning appliances Part 3 Domestic cooking appliances burning gas BS 5386; Specification for installation of low pressure gas pipe work of up to 20mm (R1) in domestic premises (2nd family gas) BS 6891; Pipe threads for tubes and fittings where pressure-tight joints are made on the threads (metric dimensions) BS 21: 1985; Flexible hoses, end fittings and sockets for gas burning appliances BS 669; Installation of domestic gas cooking appliances (1st, 2nd and 3rd family gases) BS 6172: 1990; For appliances installed in the Republic of Ireland please refer to NSAI-Domestic Gas Installation IS813 Current Editions. - - - - 19 Electrical connections Any electrical work required to install this cooker should be carried out by a qualified electrician or competent person, in accordance with the current regulations. **THIS COOKER MUST BE EARTHED.**



[You're reading an excerpt. Click here to read official TRICITY](#)

[SG211X user guide](#)

<http://yourpdfguides.com/dref/946717>

The manufacturer declines any liability should these safety measures not be observed. This cooker is designed to be connected to a 230-240V AC 50Hz electrical supply. Before switching on, make sure the electricity supply voltage is the same as that indicated on the cooker rating plate. The rating plate is located on the oven frame.

Before connecting check that: The cooker is supplied with a 3-core flexible supply cord incorporating a 13amp plug fitted. In the event of having to change the fuse, a 13amp ASTA approved (BS 1362) fuse must be used. Should the plug need to be replaced for any reason, the wires in the mains lead are coloured in accordance with the following code: Green and Yellow Blue Brown - Earth - Neutral - Live · The plug used for connection is easily accessible when the appliance is installed. A cut off plug inserted into a 13-amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely.

Permanent Connection In the case of a permanent connection, it is necessary that you install a double pole switch between the cooker and the electricity supply (mains), with a minimum gap of 3mm, between the switch contacts and of a type suitable for the required load in compliance with the current electric regulations. The switch must not break the yellow and green earth cable at any point. Ensure that the cooker supply cord does not come into contact with surfaces with temperatures higher than 50 deg. C . - Connect the green and yellow (earth) wire to the terminal in the plug, which is marked with or the letter 'E' or the earth symbol coloured green and yellow.

Connect the blue (neutral) wire to the terminal in the plug, which is marked with the letter 'N' or coloured black. Connect the brown (live) wire to the terminal in the plug, which is marked with the letter 'L' or coloured red. - NOTE: The earth wire should be about 2 cm longer than the live and neutral wires. Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath. 20 INSTALLATION Location of appliance The appliance must not be installed in a bed-sitting room of volume less than 20m³ or in a bathroom or shower room.

It is essential that the appliance is positioned as in the enclosed figure i.e. shelves, wall cabinets and cooker hoods must be fitted a minimum of 690mm directly above the hob and 400mm above the hob when fitted in line with the outside of the appliance. If the units are intended to be fitted adjacent to the appliance but less than 400mm above the hob, then a minimum space of 100mm must be maintained between the sides of the unit and the appliance (see fig).

If fitted next to or between two base units a minimum space of 1mm must be left between each unit and the sides of the appliance.

The levelling feet fitted to the appliance will achieve a nominal height to hob of 900mm+10mm. The appliance must be installed in accordance with EN 1116-1995, regarding the depth of the superior furniture. The appliance must be set on a heatproof floor. The adjustable feet must not be removed. L.P.G. cookers or ovens MUST NOT be installed below ground level, i.e. in a basement, or aboard any boat, yacht or other vessel.

The cooking appliance must be fitted with a stability chain firmly secured to the wall (see fig). Stability chain Chain to be as short as possible. max 400 690 690 min 600 100 less than 400 400 min 570 Stability hook Firmly fix chain to rear of cooker Ventilation The room containing the cooker should have an air supply in accordance with B.S. 5440: Part 2: Current Editions. The following requirements for ventilation must be met. The cooker should not be installed in a bed sitting room with a volume of less than 20m³, if it is installed in a room of volume less 5m³ an air vent of effective area of 110cm² is required; if it is installed in a room of volume between 5m³ and 10m³, an air vent of effective area 50cm² is required, while if the volume exceeds 11m³ no air vent is required. However, if the room has a door, which opens directly to the outside, no air vent is required even when the volume is between 5m³ and 11m³. If there are other fuels burning appliances in the same room, B.S.

5440: Part. 2: Current Editions should be consulted to determine the requisite air vent requirements. 21 Levelling The appliance is provided with adjustable small feet placed in the back and front corners of the base. By adjusting the small feet it is possible to change the height of the appliance so as to ensure a better levelling with other surfaces and a uniform distribution of the liquids contained in pans or pots. GAS CONNECTIONS Gas connection must be carried out according to the rules in force.

Your cooker is delivered adjusted for the kind of gas stated on the rating plate. If the appliance is supplied with natural gas and the pressure for natural gas is 20mbar. @@@@ Recommendations when using an appliance flexible connector are as follows: - For NATURAL the gas installation pipes to the termination point shall comply with: Specification for installation of low-pressure gas pipe work of up to 20mm (R1) in domestic premises (2nd family gas) BS 6891; power cord connection of flexible hose connection of flexible hose power cord 22 Connection shall be by means of an appliance flexible connector for use with a self-sealing plugin device, complying with: Flexible hoses, end fittings and sockets for gas burning appliances BS 669; The appliance flexible connector should not be subjected to undue forces either in normal use or whilst connected or disconnected; The socket which the plug of the appliance flexible connector fits should be permanently attached to a firmly fixed gas installation pipe and positioned such that the appliance flexible connector hose hangs freely downwards (see fig.); The appliance flexible connector should be positioned such that it will not suffer mechanical damage, e.g.

abrasion from the surrounding kitchen furniture, which may be moved in use such as a drawer or door, or by being trapped by any stability device. - The plug-in-connector bayonet should be accessible for disconnection after moving the appliance. Right angled bayonet socket incorporating spring loaded valve

Adaptor backplate Copper pipe Alternative backplate elbow Cooker hose with bayonet fixing Distributor pipe Cooker hose with bayonet fixing 23 CONVERSION OF GAS Your cooker is designed to work with natural gas, and is convertible for use with propane or butane. The LPG conversion kit is available from your Service Force Centre and must be fitted by a Corgi Registered engineer. For changing the gas type it is necessary to: · replace the nozzles (hob, oven and grill); · adjust the minimum level (hob and oven); · check the gas connection; Stick the label supplied with the appliance (in the nozzles bag) corresponding to the gas type utilised.



[You're reading an excerpt. Click here to read official TRICITY SG211X user guide](http://yourpdfguides.com/dref/946717)
<http://yourpdfguides.com/dref/946717>

SPECIFICATION NOZZLES Table no.1 (Cat : II 2H3+) Burner Normal power (kW) Simmer power (kW) Bypass (mm) Gas Type Natural Gas Butane Propane Natural Gas Butane Propane Natural Gas Butane Propane Natural Gas Butane Propane Natural Gas Butane Propane Pressure (mbar) 20 28-30 Nozzle diameter (mm) Cons m³/h 0,267 0,190 0,095 0,267 0,190 g/h 218,1 214,2 145,4 142,8 72,7 71,4 218,1 214,2 145,4 142,8 RAPID SEMIRAPID AUXILIARY 3,00 0,72 0,42 37 20 28-30 2,00 0,43 0,32 37 20 28-30 1,00 0,35 0,29 37 20 28-30 OVEN 3,00 1,10 0,46 37 20 28-30 GRILL 2,00 - - 37 1.19 0,88 0,88 0,96 0,71 0,71 0,70 0,50 0,50 1.

16 0,82 0,82 0,96 0,71 0,71 24 Replace the nozzles of the hob burners Before any modifications or conversion to a kind of different gas, you must DISCONNECT the cooker from the electricity supply and ensure that all control knobs are in the OFF position, and the appliance has cooled completely. Hob burners · · · Remove the pan supports; Remove the caps and the burner crowns; Using a No 7 socket spanner unscrew the nozzles and replace them with those required for the type of gas in use (see table no. 1). Reassemble the parts following the same procedure in reverse. These burners do not need any primary air regulation. Adjustment of minimum level for the hob burners The burner is correctly adjusted when the flame is stable silent and goes out without any noise. When changing the type of gas check that the minimum level is correct. The air admission is correct when the flame is about 4 mm in length. The top burners do not need adjustment of primary air. Check that, turning the knob quickly from the maximum position to the minimum one, the flame does not go out. Hob burners To adjust the minimum level: · Light the burner · Turn the knob to the position of the minimum flame; · Remove the knob; · Unscrew or screw the by-pass screw (on the right above of tap shaft) until a regular small flame is reached. · For LPG screw completely the by-pass screw. Reassemble the parts following the same procedure in reverse. Check that, when turning the knob quickly from the maximum position to the minimum one, the flame does not go out. no air correct adjustment excess of air 25 Replace the nozzles of the oven burners Oven burner To replace the gas oven nozzle, follow this procedure: ·

Check the table no. 1 for diameter of nozzle; · Remove the oven removable base panel; · Remove the screw 1 on the oven burner · Remove the oven burner by pulling it forwards. · Replace the nozzle by means of a No 7 socket spanner; Reassemble the parts following the same procedure in reverse. Before fixing of the screw 1, ensure that the oven burner is pushed correctly to the back panel. Grill burner To replace the gas grill nozzle, follow this procedure: · Remove the grill burner after removing the fixing screws. · Replace the nozzle by means of a No 7 socket spanner; · Refit all parts and test.

Before fixing of the screws, ensure that the grill burner is pushed correctly to the back panel. Adjustment of minimum level Oven burner · Light the burner knob on position maximum and leave the oven door closed for about 10 min. · Turn the knob slowly to position minimum. · Pull off the knob to adjust minimum flow. · Unscrew or screw the by-pass screw (is it above of tap shaft) until a regular small flame is reached. · For LPG screw completely the by-pass screw. The flame shouldn't extinguish when closing the oven door. Grill burner The grill temperature cannot be adjusted. To obtain a lower temperature or slower cooking time the grill pan must be lowered away from the flame. After completion of any repairs, conversion or adjustments, the statutory safety tests must be carried out.

by-pass 26 Customer Care Department Tricity Bendix 55-77 High Street Slough Berkshire SL1 1DZ Tel: 08705 950 950 SG 211 - 342701424-A-030505-01 © Electrolux plc 2005 From the Electrolux Group. The world's No.1 choice The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world. .



[You're reading an excerpt. Click here to read official TRICITY SG211X user guide](http://yourpdfguides.com/dref/946717)
<http://yourpdfguides.com/dref/946717>