



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY SG335XN. You'll find the answers to all your questions on the TRICITY SG335XN in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY SG335XN
User guide TRICITY SG335XN
Operating instructions TRICITY SG335XN
Instructions for use TRICITY SG335XN
Instruction manual TRICITY SG335XN

TRICITY BENDIX

OPERATING & INSTALLATION
INSTRUCTIONS



SLIP IN GAS COOKER

SG335

PLEASE READ THIS INSTRUCTION BOOKLET BEFORE USING THE APPLIANCE



[You're reading an excerpt. Click here to read official TRICITY SG335XN user guide](http://yourpdfguides.com/dref/946724)
<http://yourpdfguides.com/dref/946724>

Manual abstract:

@@@ When you are lighting any burner check that it is lit before you leave the appliance. When turning off a burner, do not leave the appliance until the flame has gone out. Never place plastic or any other material that may melt in or on the oven. Do not leave the grill pan handle in position when grilling as it will become hot. Always support the grill pan when it is in the withdrawn or partially withdrawn position. Always use oven gloves to remove and place food in the oven. Ensure cooking utensils are large enough to contain foods to prevent spillages and boil overs. During use the appliance becomes hot. Care should be taken to avoid touching the heating elements inside the oven. Ensure that all vents are not obstructed to ensure ventilation of the oven cavity.

Never line any part of the appliance with foil. Always stand back from the appliance when opening the oven door to allow any build up of steam or heat to release. Never leave the appliance unattended when the oven doors are open. Do not place sealed cans or aerosols inside the oven. They may explode if they are heated.

Ensure that all control knobs are in the OFF position when not in use. Do not stand on the appliance or on the open oven doors. Do not hang towels, dishcloths or clothes from the appliance or its handles. Do not use this appliance if it is in contact with water. Never operate it with wet hands.

INSTALLATION The appliance must be installed according to the instructions supplied. The installation work must be undertaken by a competent person as stated in the Gas Safety (Installation & Use) Regulations current editions and the IEE Wiring Regulations. The appliance should be serviced by an authorised Service Engineer and only genuine approved spare parts should be used. It is important that the appliance is suitable for your gas supply. Your installer should check the rating plate. Make sure that a stability bracket is fitted. The appliance must be installed in an adequately ventilated room. If the appliance is to be placed on a base, measures must be taken to prevent the appliance from slipping from the base. This appliance is heavy and care must be taken when moving it. Do not attempt to lift or move this appliance by the handles.

All packaging, both inside and outside the appliance must be removed before the appliance is used. It is dangerous to alter the specifications or modify the appliance in any way. After installation please dispose of the packaging with due regard for safety and the environment. Your local authority can arrange this. **CHILD SAFETY** Do not allow children to play with any part of the packaging. Do not allow children to sit or climb on the drop down doors. This appliance is designed to be operated by adults. Young children must not be allowed to tamper with the controls or play near or with the appliance.

CAUTION: Accessible parts may be hot when the grill is in use. Young children should be kept away.

CLEANING AND MAINTENANCE For hygiene and safety reasons this appliance should be kept clean at all times. A build-up of fats or other foodstuffs could result in a fire especially in the grill pan. Do not leave cookware containing foodstuffs, e.g. fat or oil in the appliance in case it is inadvertently switched on. Do not disconnect the appliance from the gas supply if the supply pipe does not have a bayonet connection as described in the installation section. If this is the case contact the person who installed the appliance. Always allow the appliance to cool before switching off at the wall prior to carrying out any cleaning/maintenance work. Only clean this appliance in accordance with the instructions given in this book. **DURING USE** This appliance is not intended to be operated by means of an external timer or separate remote control system.

This appliance has been designed for domestic use to cook edible foodstuffs only and must not be used for any other purposes. **2 CONTENTS FOR THE USER**
Important Safety Information Description of the Appliance Getting to Know Your Appliance Before Using the Appliance Rating Plate Preparing to Use your Appliance Condensation and Steam Cookware Grill and Oven Furniture 2 4 5 6 6 6 6 6 Care and Cleaning Cleaning Materials Cleaning the Outside of the Appliance Cleaning the Control Knobs and Handles Cleaning the Hob When Replacing Hotplate Burner Parts Cleaning the Shelves and Grill/Oven Furniture Cleaning the Grill Cleaning Inside the Grill and Oven Compartments Hints and Tips Cleaning the Door(s) Something Not Working? Service and Spare Parts Guarantee Conditions 17 17 17 18 18 18 19 19 19 21 22 23 **FOR THE INSTALLER** The Gas Hob Using the Hob To Light the Hob Burners To Turn Off Any Burner Things to Note Hints & Tips 7 7 7 8 8 Technical Details Important Safety Requirements Provision For Ventilation Moving Your Appliance For Your Safety Location of Appliance Levelling the Appliance Connecting to Gas Supply Fitting the Stability Bracket The Battery Testing General Note Notes 24 25 25 26 26 26 27 27 28 28 29 30 The Grill Using the Grill Things to Note The Grill Pan and Handle Hints and Tips Grilling Chart 9 9 9 9 10 10 To help you the following symbols will be found in the text. The Main Oven Using the Main Oven Heat Zones Preheating Things to Note To Fit the Main Oven Shelves Hints and Tips Cooking Chart 11 11 11 11 11 12 Hints and Tips Safety Instructions Please read the instruction book carefully before use and retain for future reference. 13 **AT THE END OF THE APPLIANCE'S LIFE** Roasting Chart 14 The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. Slowcook Using Slowcook Food Preparation General Points 15 15 15 16 3 **DESCRIPTION OF THE APPLIANCE SLIP-IN GAS SINGLE OVEN** Control Panel Grill Main Oven 4 **GETTING TO KNOW YOUR APPLIANCE THE CONTROL PANEL** A B C D 7 9 6 **E FEATURES** A - Hotplate Controls B - Grill Control C - Main Oven Temperature Control D - Hotplate Controls E - Ignition Switch 5 34 5 8 1 2 **BEFORE USING THE APPLIANCE RATING PLATE** This is situated on the front frame of the appliance and can be seen upon opening the door. Alternatively the rating plate may also be found on the back or top of some models (where applicable). The appliance must be protected by a suitably rated fuse or circuit breaker.

The rating of the appliance is given on the rating plate.



[You're reading an excerpt. Click here to read official TRICITY](#)

[SG335XN user guide](#)

<http://yourpdfguides.com/dref/946724>

Do not remove the rating plate from the appliance as this may invalidate the guarantee. **GRILL AND OVEN FURNITURE** The following items of grill and oven furniture have been supplied with the appliance:- 1 grill pan **PREPARING TO USE YOUR APPLIANCE** Wipe over the base of the oven(s) with a soft cloth and hot soapy water and wash the furniture before use. We suggest that you run the oven elements for 10-15 minutes at 220°C to burn off any residue from their surfaces. The procedure should be repeated with the grill for approximately 5-10 minutes. During this period an odour may be emitted, it is therefore advisable to open a window for ventilation. 1 grill pan handle **CONDENSATION AND STEAM** When food is heated it produces steam similar to a boiling kettle. The vents allow some of this steam to escape. However, always stand back from the appliance when opening the door(s) to allow any build up of steam or heat to release. If the steam comes into contact with a cool surface on the outside of the appliance, e.

g. a trim, it will condense and produce water droplets. This is quite normal and is not caused by a fault on the appliance. To prevent discolouration, regularly wipe away condensation and also soilage from surfaces. For your safety wall coverings at the rear of the appliance should be securely fixed to the wall.

1 grill pan grid **COOKWARE** Main oven - Do not use baking trays larger than 30cm x 30cm (12" x 12") as they will restrict the circulation of heat and may affect performance. 1 straight shelf for grilling only 2 straight shelves for fan oven cooking 6 **THE HOB USING THE HOB** The gas hob has different burner sizes to suit different types of cooking: To ensure maximum burner efficiency only use pots and pans with flat bases appropriate to the burner size used.

Larger burner (Rapid) - use a large pan for food such as chips. Medium burners (Normal) - use for everyday cooking. Small burner (Simmer) - use for simmering foods such as soups and stews.

The largest pan which you should use on any burner is 230mm (9"). The base of the smallest pan should not measure less than 100mm (4"). Ensure the pan supports are correctly fitted before using the hob. **TO LIGHT THE HOB BURNERS** The hob ignition works by means of a battery. · Lift up the lid. You cannot use the hob when the lid is down. · Push in and turn the control knob to the left to the highest setting. This is shown by a large flame symbol. Press the ignition button immediately. · When the burner has lit release the control and ignition button, adjust the setting as required.

Warning: If the ignition button is not pressed immediately a build up of gas may cause the flame to spread. If you close the lid of the appliance while any of the hotplate burners are lit, the gas will go out. This is because it would be dangerous if the burners stayed on when the lid was closed. Always use the control knob to turn off a burner. Do not use the lid as a cut-off device. This will only cut off the gas when the lid is closed. The gas will flow again when the lid is opened. **TO TURN OFF ANY BURNER** 1. Turn the control knob to the off position. This is shown by a large dot.

When lighting any burner, ensure that it is lit before you leave the appliance. When turning off a burner, ensure the flame has gone out before leaving the appliance. 7 In the event of the burner flames being accidentally extinguished, turn off the burner control and do not attempt to reignite the burner for at least

1 min. **THINGS TO NOTE** If you are having any difficulty lighting a hob burner turn all the hob controls off and make sure the burner parts have been replaced correctly. **HINTS AND TIPS** · · Do not overfill pans or they will boil over.

Do not use pans with very heavy handles which cause the pan to tip. Do not use the lid as a work surface or chopping board. This could damage the glass and reduce its strength. Place pans on the centre of the burners. Position pans so the handles cannot be accidentally knocked or overhang the appliance.

Lift pans on and off the pan supports. Do not slide them across the hob. · Do not leave accidental spillage on the hob or removable parts. The spillage should be wiped up and the parts washed and carefully dried as soon as the hob, pan supports and burner parts are cool enough to touch. A flat based Wok will stand stable on the pan supports. If you use a round Wok with a collar support, the collar must be the open wirework type otherwise the performance of the burner will be affected. · Take care to avoid burns and scalds when reaching across the hotplate. Take extra care when deep fat frying, do not cover the pan with a lid. Do not leave a pan unattended. If the pan catches fire, leave it where it is and turn off all controls.

Place a damp cloth or a fitting lid over the pan to smother the flames. Never put water on the fire. Leave to cool for 30 minutes. 8 **THE GRILL WARNING** Accessible parts may become hot when the grill is in use. Keep children away. When you first operate the grill you may hear some sounds as the burner heats up, this is quite normal and is not a fault on the appliance. **USING THE GRILL** · · Fully open the grill door. Push in the control knob and turn **TO FIT THE MAIN OVEN SHELVES** The shelves should be fitted with the straight rods uppermost on the frame and the forms towards the back of the oven. If not fitted correctly the anti-tilt and safety stop mechanism will be affected. 11 1 23 4 5 67 · **HINTS AND TIPS** · Arrange the shelves in the required positions before switching the oven on.

Shelf positions are counted from the top downwards. Ensure that food is placed centrally on the shelf and there is sufficient room around the baking tray/dish to allow for maximum circulation. Do not push dishes too far back as food will burn if it overhangs the burner flame. Stand dishes on a suitably sized baking tray on the shelf to prevent spillage onto the oven base and to help reduce cleaning. The material and finish of the baking tray and dishes used affect base browning.

Enamelware, dark, heavy or non-stick utensils increase base browning. Shiny aluminum or polished steel trays reflect the heat away and give less base browning. When cooking more than one dish in the oven, place dishes centrally on different shelves rather than cluster several dishes on one shelf, this will allow the heat to circulate freely for the best cooking results. If you are cooking more than one tray of similar items, for example cakes or biscuits, swap the trays during cooking or you can remove the top tray when the food is cooked and move the lower tray to the higher shelf to finish cooking. Do not place baking trays directly on the oven base as it interferes with the oven air circulation and can lead to base burning; use the lower shelf position.

· · · · · Do not place cookware and cooking pots with rough bases e.



[You're reading an excerpt. Click here to read official TRICITY SG335XN user guide](http://yourpdfguides.com/dref/946724)
<http://yourpdfguides.com/dref/946724>

g. cast iron on the oven door as damage to the glass may occur. 12 **COOKING CHART** The oven temperatures are intended as a guide only. It may be necessary to increase or decrease the temperatures to suit individual preferences and requirements. **FOOD** Biscuits Bread rolls/buns Cakes: Small & Queen Sponges Victoria Sandwich (7") Madeira (7") Rich Fruit (8") Christmas (8") Gingerbread Meringues Flapjack Shortbread Casseroles: Beef/Lamb Chicken Convenience Foods Fish Fish Pie (Potato Topped) Fruit Pies, Crumbles Milk Puddings Pasta Lasagne etc. Pastry: Choux Eclairs, Profiteroles Flaky/Puff Pies Mince Pies Meat Pies Quiche, Tarts, Flans **SHELF POSITION** 2+4 3 2 2+4 2+4 2+4 4 4 4 3 5 3 3 4 4 2 3 3 3 2 2 2+4 2 2 3 2+4 3 3 2 2 2 2 Gas Mark 4 8* 8* 5 4 4 4 2 2 1 5 3 **APPROX. COOK TIME (min)** 10 - 20 30 - 40 10 - 20 15 - 25 18 - 20 20 - 30 1 - 1¼ 2½h - 2¾ 4 - 5h depends on size 1¼ - 1½h 2½ - 3h 25 - 30 45 - 65 3 2½ - 3h 4 1¼ - 1½h Follow manufacturer's instructions 4 20 - 30 6 20 - 25 6 40 - 50 3 1½ - 2h 5 30 - 40 6 5 6 5 7 5 5 7 7 5 5 6 7 7 30 - 35 20 - 30 25 - 40 15 - 20 25 - 35 25 - 45 see roasting chart 8 - 12 30 - 40 20 - 30 1½h - 2h 1 - 1½h 25 - 40 15 - 25 **Shortcrust Roasting Meat, Poultry Scones Shepherd's Pie Soufflés Vegetables: Baked Jacket Potatoes Roast Potatoes Yorkshire Pudding: Large Individual** *When baking bread cook for 10 minutes at gas mark 8 then reduce to mark 6 for the remaining cook time. Note: Shelf positions are counted from the top of the oven downwards. To help pastry dishes brown on the underside cook on a metal plate or place on a baking tray.

13 **ROASTING CHART INTERNAL TEMPERATURES** Rare : 50-60°C; Medium : 60-70°C; Well done : 70-80°C **MEAT** Beef Gas Mark 5 **COOKING TIME** 20-35 minutes per ½kg (1lb) and 20-35 minutes over 25-35 minutes per ½kg (1lb) and 25-35 minutes over 25-35 minutes per ½kg (1lb) and 25-35 minutes over 30-40 minutes per ½kg (1lb) and 30-40 minutes over 30-40 minutes per ½kg (1lb) and 30-40 minutes over 20-25 minutes per ½kg (1lb) and 20 minutes over 20-25 minutes per ½kg (1lb) up to 3½kg (7lb) then 10 minutes per ½kg (1lb) over 3½kg (7lb) 25-35 minutes per ½kg (1lb) and 25-30 minutes over 35-40 minutes per ½kg (1lb) and 35-40 minutes over 20 minutes per ½kg (1lb) and 20 minutes over Beef, boned 5 Mutton and Lamb 5 Pork and Veal 5 Ham 5 Chicken 5 Turkey and Goose 5 Duck 5 Pheasant 5 Rabbit 5 The roasting temperatures and times given in the chart should be adequate for most joints, but slight adjustments may be required to allow for personal requirements and the shape and texture of the meat. However, lower temperatures and longer cooking times are recommended for less tender cuts or larger joints. If you cover the food with foil or lid allow an extra 10-15 minutes for each ½kg (1lb) 14 **SLOW COOK** The slow cook setting gives a very low heat in the oven. It is particularly useful when you are cooking soups, stews and casseroles because the long slow cooking will make cheaper, tougher cuts of meat more tender. Some foods such as pastry and biscuits are not suitable for slow cooking because the temperature is too low. Cover all food during cooking to prevent it from drying out. You can uncover food for the last half hour if it is normally served golden brown. **USING SLOW COOK** · You need to cook food at gas mark 6 for 30 minutes before you turn the oven down to the slow cook setting. This makes sure that the temperature of the food gets hot enough to start the food cooking. 1 23 4 5 **FOOD PREPARATION - SLOW COOKING JOINTS OF MEAT AND POULTRY** · · · · · Do not cook meat joints over 2.

7kg (6lb). Do not cook poultry over 2 kg (4lb 8oz). Cook on the middle shelf of the oven or above. Cook stuffing separately. Cook for at least six hours. Only cook joints of pork if you can make sure, by using a meat thermometer, that the temperature inside the joint is at least 88°C. For good air circulation always stand joints on a rack in a roasting tin or casserole. Thaw all frozen meat and poultry before you cook it. Prime cuts of meat do not benefit from slow cooking. Remove excess fat and skin unless it is browned first.

9 15 · · · · **SOUPS, CASSEROLES AND STEWS** · · · · Do not cook casseroles over 2.7 kg (6lb). Bring to the boil on the hotplate then cook on slow cook. Cook on the middle shelf of the oven or above. Cover food with a tight fitting lid or tin foil. 67 8 **Vegetables** · · Cut into small pieces. Dried beans must be pre-soaked then boiled in an open pan for 15 minutes before adding to any dish. Place vegetables under meat in casseroles. Cover food with a tight fitting lid or tin foil. · · **MILK PUDDINGS** · · Cover the cereal with boiling water and leave it to stand for 30 minutes.

Drain and make the pudding in the usual way. **GENERAL POINTS FOR SLOW COOKING** Frozen Foods Thaw thoroughly before cooking. Thickening Toss meat in flour for casseroles. Alternatively blend cornflour with water and add it at the end of cooking. Flavouring Flavours are held in the food because there is little evaporation. Adjust flavouring at the end of the cooking time. Liquid Use slightly less liquid as there is little evaporation during cooking. Always add milk and milk products, for example cream towards the end of cooking to prevent them from curdling. Reheating Cool left over food quickly and then put it in the fridge. Do not reheat food using the slow cook setting.

Reheat food in the usual way or in a microwave. Only reheat food once. 16 **CARE AND CLEANING** Before cleaning always allow the appliance to cool down. **CLEANING MATERIALS** Before using any cleaning materials on your appliance, check that they are suitable and that their use is recommended by the manufacturer. Cleaners that contain bleach should NOT be used as they may dull the surface finishes.

Harsh abrasives must also be avoided. **CLEANING THE OUTSIDE OF THE APPLIANCE** Do not use abrasive cleaning materials e.g. Hob Brite, Brillo pads or scourers on painted or printed finishes as damage may occur. Regularly wipe over the control panel, doors and appliance sides using a soft cloth and hot soapy water.

To prevent streaking finish with a soft cloth. Stainless Steel cream cleaners are abrasive and should be avoided as they may dull the surface finish. Any spillage on the stainless steel finish must be wiped off immediately. Do not attempt to remove any of the control knobs from the appliance as this may cause damage and is a safety hazard. **CLEANING THE CONTROL KNOBS AND HANDLES** It is strongly recommended that only hot soapy water is used for cleaning the control knobs and handles.



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/946724)

[SG335XN user guide](http://yourpdfguides.com/dref/946724)

<http://yourpdfguides.com/dref/946724>

ANY OTHER CLEANING MATERIALS MAY DULL THE SURFACE FINISH. CLEANING THE HOB Clean the hotplate top using a mild abrasive. Take care not to damage the spark electrodes. If the spark electrodes are damaged the burners will not light. You can remove the pan supports, burner caps and burner crowns to clean them.

Again take care not to damage the spark electrodes. Clean the burner crowns and pan supports by soaking them in very hot soapy water. Aluminium based saucepans can leave shiny metal marks on the pan supports. You can remove any stubborn stains by scouring with a soap impregnated steel wool pad. If you look after the burner crowns and pan supports in this way they will stay reasonably clean. However the surface will dull with time. After cleaning the appliance parts, dry them thoroughly before you put them back. **17 WHEN REPLACING HOTPLATE BURNER PARTS** 1. Crown to body. (Do not try to force the crown on to the body).

Make sure that the hole in the crown is over the electrode. Check that the location pegs sit in the slots in the body. When the crown is in this position let it fall freely on to the body. Check that the crown can be moved slightly from side to side. 2.

Cap to crown. Place cap centrally on the top of crown (enamel side up). Move sideways and front to back to check the cap is properly fitted. 3. Check for ignition.

If a burner will not light then you need to check the crown and cap positions. **CLEANING THE SHELVES AND GRILL/OVEN FURNITURE** All removable parts, except the grill pan handle can be washed in the dishwasher. The grill pan, grill pan grid and oven shelves may be cleaned using a soap impregnated steel wool pad. @@@@They should not be cleaned manually. @@@@This DOES NOT affect the Stayclean properties in any way. @@@@It is NOT necessary to add water to a meat tin when roasting. @@@@2. Loosen the two screws using a Pozidrive screwdriver. 3. @@@@4.

@@5. @@Do not use Hob Brite on the Stainless Steel or painted finishes. Do not try to clean the foil which is inside the door. @@@@If the door glass panel becomes chipped or has deep scratches the glass will be weakened and must be replaced to prevent the possibility of the panel shattering. Please contact your local Service Force Centre who will be pleased to advise further. **TO REPLACE THE OUTER GLASS** 1. Holding the oven glass with both hands, gently place the locators into the holes of the brackets at the bottom of the oven door. 2. Push the top of the oven glass towards the oven door, ensuring the screw location holes line up. 3.

Hold the glass in place with one hand and insert the cross head screws into the location holes with the other hand. Give the screws one turn to ensure the glass is secure. 4. Tighten the screws positively with a Pozidrive screwdriver before closing the oven door. Do not attempt to use the oven without the glass being in place.

TO CLEAN THE INNER GLASS DOOR PANELS Clean the inner glass door panels using a soft cloth and hot water to which a little washing up liquid has been added. If the inner panel is heavily soiled, Hob Brite may be used. Do not use abrasive cleaning materials on the door glass. Ensure that all parts are well rinsed and thoroughly dried before attempting to replace the glass. **20 SOMETHING NOT WORKING?** Maintenance must only be carried out by a competent/qualified person.

Do not try to alter/modify the appliance yourself, as this could be dangerous. We recommend that your appliance has an annual gas safety check carried out by our approved service organisation. Please carry out the following checks on your appliance before calling a Service Engineer. It may be that the problem is a simple one that you can solve yourself without the expense of a service call. In-guarantee customers should make sure that the checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown. Please note that proof of purchase is required for in-guarantee service calls. **PROBLEM** The grill and oven do not work. **POSSIBLE SOLUTION** Check that there is not a problem with your gas supply. You can do this by making sure the other gas appliances such as central heating or gas fires are working. The battery may need replacing.

If you have checked the above: Allow the appliance to cool for a couple of hours. The appliance should now be working normally. Check that the appliance is correctly installed and is level. Check that the recommended temperatures and shelf positions are being used. Check that the recommended temperatures and shelf positions are being used. Be prepared to adjust the temperature up or down slightly to achieve the results you want. Ensure the burner parts have been placed correctly. The battery may need replacing. Check that there is not a problem with your gas supply. You can do this by making sure the other gas appliances such as central heating or gas fires are working.

The oven is not cooking evenly. The oven temperature is too high or too low. The hob burners will not light. **21 SERVICE AND SPARE PARTS** In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning:- 0870 5 929929 Your telephone call will be automatically routed to the Service Force Centre covering your post code area. For the address of your local Service Force Centre and further information about Service Force, please visit the website at www.serviceforce.co.uk.

Before calling out an engineer, please ensure you have read the details under the heading "Something Not Working?". When you contact the Service Force Centre you will need to give the following details: 1.

2. 3. 4. 5. Your name, address and post code. Your telephone number. Clear and concise details of the fault. The model and serial number of the appliance (found on the rating plate). The purchase date. Please note that a valid purchase receipt or guarantee documentation is required for in-guarantee service calls.

CUSTOMER CARE DEPARTMENT For general enquires concerning your Tricity Bendix appliance, or for further information on Tricity Bendix products, please contact our Customer Care Department by letter or telephone at the address below; Customer Care Department Tricity Bendix 55 77 High Street Slough Berkshire SL1 1DZ Tel: 0870 5 950950 (*) *calls to this number may be recorded for training purposes. **22 GUARANTEE CONDITIONS** Standard guarantee conditions We, Tricity Bendix, undertake that if within 12 months of the date of the purchase this Tricity Bendix appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same **FREE OF CHARGE** for labour, materials or carriage on condition that: The appliance has been correctly installed and used only on the electricity supply stated on the rating plate. The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.



[You're reading an excerpt. Click here to read official TRICITY SG335XN user guide](http://yourpdfguides.com/dref/946724)
<http://yourpdfguides.com/dref/946724>

The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us. All service work under this guarantee must be undertaken by a Service Force Centre. Any appliance or defective part replaced shall become the Company's property. This guarantee is in addition to your statutory and other legal rights. Home visits are made between 8.30am and 5.30pm Monday to Friday.

Visits may be available outside these hours in which case a premium will be charged. Exclusions This guarantee does not cover: Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic. Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom. Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements. Products of Tricity Bendix manufacture which are not marketed by Tricity Bendix.

European Guarantee If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications: The guarantee starts from the date you first purchased your product. The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products. This guarantee relates to you and cannot be transferred to another user. Your new home is within the European Community (EC) or European Free Trade Area. The product is installed and used in accordance with our instructions and is only used domestically, i.

e. a normal household. The product is installed taking into account regulations in your new country. Before you move please contact your nearest Customer Care centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances. France Germany Italy Sweden UK Ireland Senlis Nürnberg Pordernone Stockholm Slough Dublin +33 (0) 3 44 62 20 13 +49 (0) 800 234 7378 +39 (0) 800117511 +46 (0) 20 78 77 50 +44 (0) 1753 219898 +353 (0) 1 4090752 23 TECHNICAL DETAILS DIMENSIONS Height: Width: Depth: Weight: 900 mm (nominal) 500 mm (nominal) 600 mm (to front of door panel) 54.4 Kg Net Space for fixing at hotplate level 2mm minimum clearance Space for fixing above hotplate level. See important note 'Location of Appliance'. Minimum space above hotplate 750mm (If cooker hood is fitted refer to the cooker hood installation instructions. Minimum distance from rear wall 5mm (spacer given by pressed spacer on vent panel) CONNECTIONS Gas connection: Electrical connection: IGNITION HOTPLATE Natural Gas R.

H.F 1.0kW (3412 Btu/h) 070 L.P.Gas 1.0kW (71.8g/h) 050 Rear left hand side of appliance at hotplate level Rc ½ (½" B.S.P. female) None Battery 1. 5 Volt AA size Heat Input Injector Marking Heat Input Injector Marking GRILL Heat Input Injector Marking MAIN OVEN Heat Input Injector Marking Thermostat By-Pass Marking GENERAL Ignition Spark Gap R.H.F 1.9kW (6483 Btu/h) 096 1.9kW (136.5g/h) 071 L.H.R 1.9kW (6483 Btu/h) 096 1.9kW (136.5g/h) 071 L.P.Gas 2.7kW (176g/h) 78 L.H.F 2.9kW (9895 Btu/h) 119 2.8kW (194.0g/h) 086 Natural Gas 2.7kW (9215 Btu/h) 121 2.

4kW (8189Btu/h) 108 69 2.4kW (172.4g/h) 78 48 (H.T. Spark) 3-4mm GAS CATEGORY COUNTRIES OF DESTINATION GB CAT. I2H GB CAT. I3+ This appliance complies with: European Council Directives Low voltage Directive 73/23/EEC ,Gas Directive 90/396/EEC EMC Directive 89/336/EEC, CE Marking Directive 93/68/EEC. 24 INSTALLATION INSTRUCTIONS IMPORTANT SAFETY REQUIREMENTS Where applicable Natural Gas and L.P Gas versions of this appliance are available. Check that this model is suitable for the type of supply available.

This appliance must be installed and/or serviced by a competent person in accordance with the Gas Safety (Installation and Use) Regulations Current Editions and the I.E.E. Wiring Regulations. Detailed recommendations are contained in the following British Standard Codes of Practice BS. 6172, BS.5440: Part 2 and B.S.6891. All British Standards must be 'Current Editions'.

This appliance must be installed by a qualified electrician / competent person (CORGI Registered). Safety may be impaired if installation is not carried out in accordance with these instructions. Before connecting the appliance make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. This is situated on the lower front frame of the appliance and can be seen upon opening the door. Alternatively the rating plate may also be found on the back or top of some models (where applicable). Do not alter the electrical circuitry of this appliance. PROVISION FOR VENTILATION This appliance is not connected to a combustion products evacuation device. It shall be installed and connected in accordance with the current installation regulations.

Particular attention shall be given to the relevant requirements regarding ventilation. The room containing the appliance should have an air supply in accordance with BS.

5440: Part 2 Current Edition. All rooms require an openable window or equivalent and some rooms will require a 3 permanent vent as well. For room volumes up to 5m² an air vent of 100cm is required: for room volumes 3 3 2 between 5m and 10m an air vent of 50cm is required. If the room has a door that opens directly to the outside, no air vent is required. For room 3 volumes that exceed 11m no air vent is required. If there are other fuel burning appliances in the same room, BS.5440: Part 2 Current Edition should be consulted to determine the requisite air vent requirements. Prolonged intensive use of the appliance may call for additional ventilation, for example opening a window, or more effective ventilation, for example increasing the level of mechanical ventilation where present. 25 MOVING YOUR APPLIANCE You may damage some soft or badly fitted floor coverings when you move the appliance. The floor covering under the appliance should be securely fixed so it does not ruck up when you move the appliance across it.

Alternatively you could remove the floor covering. This appliance is heavy and care must be taken when moving it. Do not try to move the appliance by pulling the door handles. To move the appliance open the grill door. Raise the appliance off its front feet by lifting it from inside the oven.

Pull the appliance forward. When you replace the appliance push it back to the stop and make sure there is the same gap at each rear corner. FOR YOUR SAFETY Do not try to disconnect the appliance from the gas supply if the supply pipe does not have a bayonet connection, as described in the installation instructions. If this is the case contact the person who installed the appliance.



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/946724)

[SG335XN user guide](http://yourpdfguides.com/dref/946724)

<http://yourpdfguides.com/dref/946724>

LOCATION OF APPLIANCE This appliance must not be installed in a bed-sitting 3 room of volume less than 20m³ or in a bathroom, shower room or garage.

It is essential that the appliance is positioned as Fig 1a. Shelves, wall cabinets and cooker hoods must be fitted a minimum of 750mm directly above the top of the hotplate (or greater for cooker hoods if recommended by manufacturers instructions) and 400mm above the hotplate when fitted in line with the outside of the appliance. If the units are intended to be fitted adjacent to the appliance but less than 400mm above the hotplate, then a minimum space of 50mm must be maintained between the sides of the unit and the appliance (See Fig 1b). Curtains must not be fitted immediately behind the appliance or within 150mm of the sides of the hotplate. If fitted next to or between two base units a minimum space of 2mm must be left between each unit and the sides of the appliance. The levelling feet fitted to the appliance will achieve a nominal height to hotplate trims of 900mm + 20mm. Note: - L.P.G. cookers **MUST NOT** be installed below ground level i.

e. in a basement or aboard any boat, yacht or other vessel. Fig 1.a Fig 1.b **LEVELLING THE APPLIANCE** Adjustment to suit floor conditions or height is obtained by rotating clockwise or anti clockwise the feet at the front and rear of the appliance. A spirit level should be placed on one of the shelves to confirm the appliance is correctly levelled.

26 CONNECTING TO GAS SUPPLY This appliance is designed to be installed with an appliance flexible connection only.

Supply piping $\frac{3}{8}$ should not be less than R/8. Connection is made to the Rc $\frac{1}{2}$ ($\frac{1}{2}$ " B.S. P.) female threaded entry pipe located just below the hotplate level on the rear left hand side of the appliance. NOTE: **ONLY LIQUID SEALANTS TO BE USED WHEN INLET GAS PIPE IS FITTED I.E.: DO NOT USE P.**

T.F.E. SEALANT TAPE. Carry out a gas tightness test after connecting to the gas supply.

The gas bayonet connector must be fitted in the shaded area indicated in Fig.2. Take into account that it must be possible to pull the appliance forward sufficiently. Ensure the hose does not become trapped when pushing the appliance into position. **IMPORTANT: FLEXIBLE TUBING USED MUST COMPLY WITH BS.669 CURRENT EDITION.** LPG Flexible connections must be a type suitable for L.P.G and capable of operation up to 50 mbar and carry a red stripe, band or label. Fig.

2. FITTING THE STABILITY BRACKET It is recommended that if the appliance is to be installed with a flexible supply pipe, a stability bracket be fitted and is available from your supplier (see Important Safety Requirements). These instructions should be read in conjunction with any leaflet packed with the stability bracket. 1. Place the appliance in its intended position and level appliance. 2. Mark off 250mm from the left hand side of the appliance as shown in dimension 'A', Fig 3a. This is the centre line of the fixing bracket. 3. Draw a line from the front edge of the feet (see Fig.

3a) and remove appliance from its position. Mark off dimension 'B' (see Fig.3a) back from this line on the centre line of the bracket to locate the front edge of the lower bracket. Fix lower bracket (with two fixing holes) to the floor then measure the height from floor level to engagement edge on back of appliance, dimension 'C' of Fig. 3b.

4. Assemble upper bracket to lower bracket so that the underside of bracket is dimension 'C' + 3mm above floor level. (See Fig. 3b) Reposition appliance and check that top bracket engages into appliance back as shown in Fig. 3b.

487mm (B) 100mm (C) (A) 250mm Fig.3a. Fig.3b. **27 THE BATTERY** 1. The battery is located on the left hand side of the front plinth. 2. @ @3. @ @See Fig. 4.

4. Close the lid of the battery holder. **PRESSURE TESTING** 1. The oven injector is used as a pressure test point. Remove the oven furniture. @ @Replace one clip back into the right hand side of the burner box. @ @phial. 2. Connect the pressure gauge to the oven injector. 3.

Check the supply pressure by turning the thermostat on and one hotplate tap full on and light the appropriate burner. The pressure should be either:(i) (ii) For Natural Gas 20mbar For LP. Gas. The pressure must be set to 28 mbar for use on butane or 37 mbar for use on propane. Fig.

4. 4. Turn off the taps, disconnect the pressure gauge and replace oven burner and cover, ensuring that the F.S.D phial is correctly located into the bracket on the burner.

5. Check operation of the oven. **CHECKING THE GRILL** Place the grill pan containing the grid, with the handle attached, into the grill compartment. Light the grill burner by turning the grill tap full on and pressing the ignition button on the fascia panel. As soon as the burner is lit the button can be released. **CHECKING THE HOTPLATE** Lift the lid. Fit the burner crowns and caps ensuring that they are correctly seated. Fit the pan supports. Check each of the hotplate burners in turn by turning the hotplate tap to its full on position and pressing the ignition button. As soon as the burners are lit the button can be released.

28 CHECKING LID SHUT-OFF DEVICE 1. Lift the lid 2. Turn one hotplate tap to its full on position and push the ignition button. 3. Close the lid. There should now be no gas supply to the hotplate and the burner will go out. 4. Turn off the hotplate and lift the lid. The gas supply should now be restored to the hotplate, when the tap is turned on. **CHECKING THE MAIN OVEN** 1.

Turn on the oven thermostat control knob to mark 9 and press the ignition button. As soon as the burner is alight the button can be released. 2. There should now be a low gas rate to the burner, which is the F.S.

D by pass rate. 3. When the F.S.D.

phial has heated up it opens the F.S.D valve which allows the main gas supply to the oven burner. 4. After 1 minute check that the flame covers the full width of the burner and is stable. 5. Set the oven control to Mk 2, close the oven door and check that after about 10 minutes the flame size has reduced. 6. Turn off the control and check that the oven flames go out. **GENERAL NOTE** Instruct the user on how to use the appliance and its ignition system.

Refer the user to the wording on the inside cover which gives advice on the safe operation of the appliance. **29 NOTES** 30 NOTES 31 Tricity Bendix, 55-77 High Street, Slough, Berkshire SL1 1DZ Consumer care telephone number 08705 950950 **IMPORTANT NOTICE** In line with our continuing policy of research and development, we reserve the right to alter models and specifications without prior notice. This instruction booklet is accurate at the date of printing, but will be superseded if specifications or appearance are changed. SG335 - 311740100 © Electrolux plc 2005 .



[You're reading an excerpt. Click here to read official TRICITY SG335XN user guide](http://yourpdfguides.com/dref/946724)
<http://yourpdfguides.com/dref/946724>