



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY T 45 UF. You'll find the answers to all your questions on the TRICITY T 45 UF in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY T 45 UF
User guide TRICITY T 45 UF
Operating instructions TRICITY T 45 UF
Instructions for use TRICITY T 45 UF
Instruction manual TRICITY T 45 UF

INSTRUCTION BOOK

FREEZER

T 45 UF (TT 120 F)

TRICITY

1330612

V7/5. (01.)



[You're reading an excerpt. Click here to read official TRICITY T 45 UF user guide](http://yourpdfguides.com/dref/947056)
<http://yourpdfguides.com/dref/947056>

@@@Do not store food uncovered. @@@@Fruits & Vegetables: If soft should be cooked and used up. Breads & Cakes: Can be refrozen without danger.

Shellfish: Should be refrigerated and used up quickly. Cooked Dishes: i.e. casseroles should be refrigerated and 2 °C. Check that the thermostat control knob is turned to the correct setting relative to ambient conditions. Set the thermostat control knob to a lower position. Check the door has not been left open. Check nothing is preventing the door from closing. Check the door gasket is intact and clean. Check if the appliance stands stable (all four feet should be on the floor).

The temperature in the appliance is too high If after the above checks your appliance still does not operate correctly, contact your local Tricity Bendix Service Force Centre. Please note that it will be necessary to provide proof of purchase for any in-guarantee service calls. 10 In-guarantee customers should ensure that the above checks have been made, as the engineer will make a charge if the fault is not a mechanical or electrical breakdown. Warranty and service Guarantee conditions Service and spare parts If calling the service is unavoidable, announce the trouble at a brand-mark service nearest to your place. When announcing the appliance has to be identified according to its data label.

The data label of the appliance is stuck to the wall of the interior beside the vegetable box in the fresh food compartment in the bottom on the left side.

@@@Serial No. Date of purchase: The manufacturer reserves the right to make any changes in the products. 11 Instructions for the Installer Technical data Model Gross capacity (l) Net capacity (l) Width (mm) Height (mm) Depth (mm) Energy consumption T 45 UF 117 100 550 850 600 0.75 274 B 15 17 120 39 (kWh/day) (kWh/year) Energy class, according to EU Standards Freezing capacity (kg/24h) Rising time (h) Rated power (W) Weight (kg) Installing the appliance Transportation, unpacking The appliance and the interior fitting are protected for transport.

Remove all packaging and any adhesive tape. Any remnants of adhesive can be removed using white spirit. After transportation the appliance must not be switched on for 2 hours. This is to allow the refrigerant to settle. Location The appliance should be positioned in a well ventilated, dry room. Energy use is affected by the ambient temperature. The appliance should therefore: not be installed next to radiators, cookers or other sources of heat only be installed at a location where the ambient temperature corresponds to the climate classification, for which the appliance is designed. The climate classification can be found on the serial plate. The following table shows which ambient temperature is correct for each climate classification: Climate Classification Ambient Temperature SN +10 to +32 °C N +16 to +32 °C ST +18 to +38 °C Cleaning Clean the accessories and the inside of the appliance with warm water and bicarbonate of soda (5 ml to 0.5 litres of water).

Rinse and dry thoroughly. Do not use detergents, abrasive powders, highly perfumed cleaning products, wax polishes or cleaning products containing bleach or alcohol. 12 Ventilation Requirements The appliance must have adequate ventilation to ensure correct operation. Diagram sh.



[You're reading an excerpt. Click here to read official TRICITY T 45 UF user guide](#)

<http://yourpdfguides.com/dref/947056>