



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY T 55 R. You'll find the answers to all your questions on the TRICITY T 55 R in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY T 55 R
User guide TRICITY T 55 R
Operating instructions TRICITY T 55 R
Instructions for use TRICITY T 55 R
Instruction manual TRICITY T 55 R

INSTRUCTION BOOK

REFRIGERATOR

T 55 R (TT 160**)

TRICITY

1330631

U/T/7. (01.)



[You're reading an excerpt. Click here to read official TRICITY T 55 R user guide](http://yourpdfguides.com/dref/947057)
<http://yourpdfguides.com/dref/947057>

Manual abstract:

(01.) This instruction book contains safety precautions, information on use and helpful hints and tips. To ensure you use this appliance effectively and safely, please read this instruction book carefully before installing or using this appliance and retain for future reference. The symbols below help you to find things more easily: Safety precautions Warnings and Safety information Hints, useful information Environmental information 2 IMPOR TANT S AFET Y INS TR UCTIONS These warnings are provided in the interests of your safety. Ensure that you understand them all before installing or using this appliance. Your safety is of paramount importance. If you are unsure about any of the meanings or these warnings contact the Customer Care Department. Prior to installation Check the appliance for transport damage. Under no circumstances should a damaged appliance be installed. In the event of damage please contact your retailer.

Installation This appliance is heavy. Care should be taken when moving it. @@@@Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Parts which heat up should not be exposed. @@@@There is a risk of suffocation! Keep packaging material away from children! @@It is not intended for commercial or industrial use.

Containers with flammable gases or liquids can leak at low temperatures. Do not store any containers with flammable materials, such as spray cans, fire extinguisher refill cartridges etc. Frozen food should not be refrozen once it has thawed out. Do not place carbonated or fizzy drinks in the freezer compartment. Ice lollies can cause 'frost/freezer burns' if consumed straight from the freezer compartment.

Keep this instruction book for future reference and ensure it is passed on to any new owner. 3 Do not remove items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns. Bottles and cans must not be placed in the freezer compartment they can burst when the contents freeze. Manufacturers' recommended storage times should be adhered to. Refer to relevant instructions. Maintenance and Cleaning Before cleaning, always switch off the appliance and disconnect from the electrical supply. When unplugging always pull the plug from the mains socket, do not pull on the cable. @@@@Contact your local Service Force Centre. @@@@Avoid damaging the cooling unit. @@It has a two-star frozen food compartment for ice making and frozen food storage.

To ensure correct operation, the appliance should be located where the ambient temperature is between 16-32 °C. Description of the appliance 1. Frozen food compartment 2. Drip tray 3. Wire shelf 4. Glass shelf 5. Salad drawer 6. Rating Plate 7. Adjustable feet 8. Ice tray 9. Butter compartment 10. Interior light/Thermostat control 11. Door shelf 12. Gasket 13. Bottle shelf 14.

Egg tray 15. Air circulation 16. Air vent 17. Condenser 18. Compressor 5 Using the Appliance Before Use Remove all securing tapes.

Wash the inside of the appliance with lukewarm water with a little bicarbonate of soda added (5 ml to 0,5 litre of water). Do not use soap or detergent as the smell may linger. Dry the appliance thoroughly. Do not use detergents, abrasive powders, highly perfumed cleaning products, wax polishes or products containing alcohol. 1. Allow the appliance to stand for 2 hrs after installation. 2. Plug in the appliance and switch on at the mains supply. 3. Turn the thermostat control to the required setting.

A setting of 3 - 4 is usually suitable for normal operation (see thermostat control). 4. Leave the appliance for approximately 4 hours for the correct temperature to be reached before placing food inside. F To Start the Appliance Thermostat Control The thermostat control situated inside the refrigerator regulates the temperature of the larder compartment. Thermostat control is marked from 1-5 the higher the number, the colder the setting. Position 0 Position 1 Position 5 Model T 55 R - Off - minimum coldness - maximum coldness If the ambient temperature is greater than +25 °C Position of drip tray Open (pos. @@@@2. 3. 4. 5.

6. 7. 8. 9. 10.

11. 12. @@@@The shelves can be re-arranged by opening the door to 90°. The door shelves are also adjustable.

@@@@Once or twice a year dust the condenser (black grille) and the compressor at the back of the appliance with a brush or vacuum cleaner, as an accumulation of dust will affect the performance of the appliance and cause excessive electricity consumption.

Internal Cleaning Clean the inside and accessories with warm water and bicarbonate of soda (5 ml to 0.5 litre of water). Rinse and dry thoroughly. Do not use detergents, abrasive powders, highly perfumed cleaning products, wax polishes or cleaning products containing bleach or alcohol. Regularly check the door seals and wipe clean to ensure they are clean and free from debris. 8 Defrosting Regular defrosting is necessary to ensure efficient operation of the refrigerator. @@Frost will build in the frozen food compartment. @@Empty the frozen food compartment. Push the drip tray into the closed position. @@Leave the refrigerator door open.

@@Place a container beneath the tray, and remove the plastic bung. @@@@There is a power cut. The fuse has blown. Thermostat control is set at 0. The appliance is located in an unsuitable position. The thermostf 10 cm above the appliance may be reduced to 5 cm providing a clearance space 2,5 cm is left on either side of the appliance. B: When freestanding Levelling The appliance must be level. Level the appliance by adjusting the two adjustable feet (1) at the front of the appliance. Door Reversal If required the opening direction of the door can be changed as follows: To reverse the bottom hinge assembly proceed as follows: Disconnect the appliance from the electricity supply. Tilt the appliance backwards, resting the top edge of the appliance on a stool or something similar.

Unscrew the adjustable feet situated on both sides at the front (2 pieces). Remove the lower door hinge plate by unscrewing the 3 retaining screws. Remove the hinge pin from the bottom of the door. Slot the hinge pin into the hole in the hinge plate and relocate the hinge assembly to the opposite location and refit using the retaining screws. Put the cabinet in the upright position.

12 To reverse the top hinge assembly proceed as follows: Remove the 2 worktop retaining screws from the back of the appliance. Slide the worktop towards the rear and lift clear of the appliance. Remove the 2 upper hinge plate retaining screws. Remove the hinge plate from the top of the door. @@@@Refit the 2 hinge plate retaining screws.

@@Remove blanking plugs on the opposite side. Relocate the handle to the opposite side and refit retaining screws (covers if fitted), and replace the blanking plugs. 13 Electrical Connection Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.



[You're reading an excerpt. Click here to read official TRICITY T 55 R user guide](http://yourpdfguides.com/dref/947057)
<http://yourpdfguides.com/dref/947057>

