



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY TBDW42. You'll find the answers to all your questions on the TRICITY TBDW42 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY TBDW42
User guide TRICITY TBDW42
Operating instructions TRICITY TBDW42
Instructions for use TRICITY TBDW42
Instruction manual TRICITY TBDW42

TRICITY BENDIX

User
manual

Dishwasher



TBDW42



[You're reading an excerpt. Click here to read official TRICITY TBDW42 user guide](http://yourpdfguides.com/dref/947135)
<http://yourpdfguides.com/dref/947135>

Manual abstract:

This could cause an explosion. @@ Only use products (detergent, salt and rinse aid) suitable for dishwashers. Avoid opening the door whilst the appliance is in operation, hot steam may escape. Do not take any dishes out of the dishwasher before the end of the dishwashing cycle. After use, isolate the appliance from the power supply and turn off the water supply. This product should be serviced only by an authorised service engineer, and only genuine spare parts should be used. q Ensure that the door of the dishwasher is always closed when it is not being loaded or unloaded. In this way you will avoid anybody tripping over the open door and hurting themselves. Do not sit or stand on the open door. q q Child safety q q This appliance is designed to be operated by adults. Don't allow children to use the dishwasher unsupervised. Keep all packaging well away from children. There is risk of suffocation. Keep all detergents in a safe place out of children's reach. Keep children well away from the dishwasher when the door is open.

q q q q q q Installation q General safety q Check your dishwasher for any transport damage. Never connect a damaged machine. If your dishwasher is damaged contact your supplier. All packaging must be removed before use. Any electrical and plumbing work required to install this appliance must be carried out by a qualified and competent person.

For safety reasons it is dangerous to alter the specifications or attempt to modify this product in any way. Dishwasher detergents can cause chemical burns to eyes, mouth and throat. Could endanger life! Comply with the safety instructions of the dishwasher detergent manufacturer. The water in your dishwasher is not for drinking. Detergent residues may still be present in your machine. q q q q 3 q Never use the dishwasher if the electrical supply cable and water hoses are damaged; or if the control panel, work top or plinth area are damaged such that the inside of the appliance is freely accessible. Contact your local Service Force centre, in order to avoid hazard. All sides of the dishwasher must never be drilled to prevent damage to hydraulic and electric components. WARNING! For electrical and water connection carefully follow the instructions given in specific paragraphs. q Control panel and functions In this fully integrated appliance the controls are located on the top of the door.

@@ On-Off button End light Programme/Cancel button IMPORTANT! @@ @@ Press the On-Off button. 2. @@ 3. Press the Programme/Cancel as many times as necessary to illuminate the light corresponding to the desired programme. 4. Close the dishwasher's door, the programme will start automatically.

Programme/Cancel button IMPORTANT! Once the programme has started, if you want to change the selection made you must cancel the washing programme in progress. q Cancel the washing programme in progress: 1. Open the door. 2.

Press and hold the Programme/Cancel button until the light of the running programme turns off and the End light is flashing. 3. Release the Programme/Cancel button. 4. Switch off the machine by pressing the On-Off button or select a new washing programme (check that there is detergent in the detergent dispenser.

Illuminates when the washing programme has ended (visible with opened door). Switch off the dishwasher by pressing the On-Off button. End light It also has added functions of visual signalling as: - the setting of the water softener, - deactivation/activation of the audible signals. - intervention of an alarm due to the malfunction of the machine. 5 Audible signals Audible signals have been introduced to help indicate which operations the dishwasher is performing. - end of the washing programme, - malfunction of the appliance. Factory setting: audible signals activated. Deactivation/activation of the audible signals 1. The dishwasher must be switched off. Switch on the dishwasher by pressing the On-Off button. 2. Press and hold Programme/Cancel button until programme light 1 flashes and programme light 2 illuminates with fixed light. 3. Press Programme/Cancel button again: programme light 1 becomes fixed and programme light 2 starts flashing. 4.

After a few seconds programme light 1 turns off, programme light 2 goes on flashing and End light illuminates with fixed light. The illumination of the End light means that the audible signals are active. 5. To deactivate the audible signals, press the Programme/Cancel button, the End light turns off indicating that the audible signals have been deactivated. 6. To memorise the operation, switch off the dishwasher by pressing the On-Off button. 7. @@ @@ Crockery, cutlery, pots and pans Light soil. Crockery and cutlery Normal soil. Crockery and cutlery Any.

Partial load (to be completed later in the day). This programme does not require the use of detergent. @@ Check whether these detergents are suitable for your water hardness. Follow the manufacturers instructions. - Set the water hardness to level 1.

IMPORTANT! If the drying results are not satisfactory we recommend that you: 1. Fill up the rinse aid dispenser with rinse aid. 2. Set the rinse aid dosage to position 2. @@ @@ @@ @@ @@ @@ @@ @@ 8 IMPORTANT! @@ 2) (TH) French degree, measure of the water hardness.

3) (mmol/l) millimol per litre, international unit for water hardness Setting the water softener manually (see table) The water softener is factory set at position 2. Set switch to position 1 or 2 9 Setting the water softener electronically (see table) The water softener is factory set at position 5. The dishwasher must be switched off. Switch on the dishwasher by pressing the On-Off button. Press and hold Programme/Cancel button until programme light 1 flashes and programme light 2 illuminates with fixed light. Wait until programme light 2 turns off, programme light 1 goes on flashing and simultaneously End light starts flashing. The number of flashes of the End light corresponds to current level set The End light might flash 5 times, for example. The flashing is repeated every 5 seconds. To change the level, press the Programme/Cancel button. Each time the button is pressed the level increases.

(Level 1 follows level 10). The End light indicates the new setting. To memorise the operation, switch off the dishwasher by pressing the On-Off button. 10

Filling with dishwasher salt CAUTION! Use only special salt suitable for dishwashers Unscrew the cap. Only before filling with salt for the first time, fill the salt container with water Using the funnel provided, pour in the salt until the container is full. IMPORTANT! Immediately start a complete programme.

Remove any trace of salt. Replace the cap tightly turning it clockwise until it stops with a click. IMPORTANT! The salt container will require topping up periodically. The salt cap has a refill indicator window in the centre in which a green float is clearly visible when there is salt inside the container and almost disappears when the salt has finished.



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/947135)

[TBDW42 user guide](http://yourpdfguides.com/dref/947135)

<http://yourpdfguides.com/dref/947135>

70 11 74 00 +49 180 32 26 622 +37 2 66 50 030 +34 902 11 63 88 www.electrolux.fr +44 8705 929 929 +30 23 10 56 19 70 +385 1 63 23 338 +353 1 40 90
753 +39 (0) 434 558500 +37 17 84 59 34 +370 5 27 80 609 Sjllandsgade 2, 7000 Fredericia Muggenhofer Str. 135, 90429 Nrnberg Mustame tee 24, 10621
Tallinn Carretera M-300, Km. 29,900 Alcal de Henares Madrid Addington Way, Luton, Bedfordshire LU4 9QQ 4 Limnou Str., 54627 Thessaloniki Slavonska
avenija 3, 10000 Zagreb Long Mile Road Dublin 12 C.so Lino Zanussi, 26 - 33080 Porcia (PN) Kr. Barona iela 130/2, LV-1012, Riga Verki- 29, LT-09108
Vilnius Luxembourg Magyarorszg Nederland Norge sterreich Polska Portugal Romania Schweiz/Suisse/Svizzera Slovenija Slovensko +35 2 42 43 13 01 +36
1 252 1773 +31 17 24 68 300 +47 81 5 30 222 +43 18 66 400 +48 22 43 47 300 +35 12 14 40 39 39 +40 21 451 20 30 +41 62 88 99 111 +38 61 24 25 731
+421 2 43 33 43 22 Rue de Bitbourg, 7, L-1273 Hamm H-1142 Budapest XIV, Erzsbet kirlyn tja 87 Vennootsweg 1, 2404 CG - Alphen aan den Rijn Riskkvn.



[You're reading an excerpt. Click here to read official TRICITY
TBDW42 user guide
http://yourpdfguides.com/dref/947135](http://yourpdfguides.com/dref/947135)

