



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY TBS749X1 FAE MP.TRI. You'll find the answers to all your questions on the TRICITY TBS749X1 FAE MP.TRI in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY TBS749X1 FAE MP.TRI
User guide TRICITY TBS749X1 FAE MP.TRI
Operating instructions TRICITY TBS749X1 FAE MP.TRI
Instructions for use TRICITY TBS749X1 FAE MP.TRI
Instruction manual TRICITY TBS749X1 FAE MP.TRI

Important Safety Instructions



These warnings are provided in the interest of safety. You **MUST** read them carefully before installing or using the appliance. Your safety is of paramount importance. If you are unsure about any of the meanings of these WARNINGS, contact the Customer Care Department.

Installation

The oven must be installed according to the instructions supplied. Any electrical work must be undertaken by a qualified electrician/competent person.

This oven is heavy and care must be taken when moving it. Do not try to move the appliance by pulling the door handle.

Remove **all packaging**, both inside and outside the oven, before using the appliance. After installation, please dispose of the packaging with due regard to safety and the environment.

It is dangerous to alter the specifications or modify the appliance in any way.

During Use

This oven has been designed for cooking edible foodstuffs only and **must not** be used for any other purposes.

Never line any part of the oven with **aluminium foil**. Do not allow heatproof cooking material, e.g. roasting bags, to come into contact with oven elements.

Never place plastic or any other material which may melt in or on the oven.

Do not place sealed cans or aerosols inside the oven. They may explode if they are heated.

Do not hang towels, dishcloths or clothes from the oven or its handle. They are a **safety hazard**.

Do not use this oven if it is in contact with water and never operate it with wet hands.

Always cook with the oven door closed.

Use any oven proof cookware which will withstand temperatures of 270 °C.

Take **great care** when heating fats and oils as they will ignite if they become too hot.

Always use oven gloves to remove and replace food in the oven. Similarly always use oven gloves to remove and replace the grill pan handles, before and after grilling.

Always remove the grill pan handles when grilling. Ensure that you **support** the grill pan when removing it from the oven.

Take care to follow the recommendations given for tending the food when grilling.

Always stand back from the oven when opening the oven door, to allow any build-up of steam or heat to release.

Stand clear when opening the drop down oven door. **Do not** allow it to fall open – support the door using the door handle, until it is fully open.

Ensure that all control knobs are in the **OFF** position when not in use.

Do not leave cookware containing foodstuffs, e.g. fat or oil in or on the oven in case it is inadvertently switched **ON**.

When using other electrical appliances, ensure the cable does not come into contact with the hot surfaces of the cooking appliance.

Child Safety

This appliance is designed to be operated by adults. Young children **must not** be allowed to tamper with the controls or play near or with the appliance.

Accessible parts, especially around the grill area, become hot when the cooker is in use. Children should be **kept away** until it has cooled.

The front of the oven gets hot during use: always keep small children away.

Maintenance and Cleaning

Only clean this oven in accordance with the instructions.

The oven should be kept clean at all times. A build-up of fats or other foodstuffs could result in a fire, especially in the grill pan.

For safety reasons, do not clean the appliance with a steam or high-pressure cleaner.

Always switch off at the electrical supply prior to carrying out any cleaning or maintenance work.

3



[You're reading an excerpt. Click here to read official TRICITY TBS749X1 FAE MP.TRI user guide](http://yourpdfguides.com/dref/947052)
<http://yourpdfguides.com/dref/947052>

Manual abstract:

,1* 6(77,1*6 &22.,1*)81&7,216)DQ RYHQ 7KHUPDO JULOOLQJ 5RDVWLQJ PHDW 3UHKHDWLQJ &RQYHQWLRQDO RYHQ *ULOO +,176)25
68&&(66)8/ &22.,1* &22.,1* *8,(6 &/(\$1,1* \$1' &\$5(3URJUDPPLQJ VHPLDXWRPDWLF FOHDQLQJ 3URJUDPPLQJ IXOO\DXWRPDWLF
FOHDQLQJ 5(3/\$&,1* 7+(29(1/,*+7,) 620(7+,1* '2(61·7 :25. @@7,0(μ '2Qμ LV GLVSODNHG ,PPHGLDWHO\WXUQ WKH WLPH VHWLQJ NQRE
FORFNZLVH ZLWK RQH VWHS RQ\ '2Iμ LV GLVSODNHG 7KH FKLOG VDIHW\ VPERO LV GLVSODNHG DIWHU D IHZ VHFROGV 7R
GHDFWLYDWH WKH FKLOG VDIHW\ UHSHDW WKLV RSHUDWLQJ 7KH FKLOG VDIHW\ VPERO GLVSSHDUV\RX FDQ QRZ XVH\RXU
RYHQ 29(1 &21752/6 7KH IXQFWLRQ VHOHFWRU 7R REWDLQ WKH GHVLUH FRRNLQJ PRGH WXUQ WKH IXQFWLRQ VHOHFWRU 2YHQ
OLJKW)DQ RYHQ 7KHUPDO JULOOLQJ 5RDVWLQJ PHDW 3UHKHDWLQJ &RQYHQWLRQDO RYHQ 7RS HOHPHQW *ULOO)XOO JULOO
3UROWLF FOHDQLQJ)81&7,21 6(/(&725 2QFH D IXQFWLRQ KDV EHHQ VHOHFWHG DQ DSSURSULDWH WHPSHUDWXUH PXVW EH VHW
IRU WKH RYHQ WR KHDW XS 7R VZLWFK RII WKH RYHQ WXUQ WKH WHPSHUDWXUH FRQWURO WR DQG WKHQ WKH IXQFWLRQ
VHOHFWRU WR 7KH RYHQ OLJKW FRPHV RQ DV VRRQ DV WKH IXQFWLRQ VHOHFWRU LV WXUQH 7KH OLJKW UHPDLQV RQ GXULQJ
FRRNLQJ 7KH WHPSHUDWXUH FRQWURO 7KH WHPSHUDWXUH LV VHOHFWHG E\ WXUQLQJ WKH WHPSHUDWXUH FRQWURO NQRE
FORFNZLVH 7KH NQRE LV JUDGXDWHG IURP & WR & 7(03(5\$785(7KH QHRQ LQGLFDWRU OLJKW 2YHQ RQ 7KH LQGLFDWRU OLJKW
FRPHV RQ ZKHQ WKH DSSOLDQFH LV VZLWFKHG RQ DQG JRHV RXW ZKHQ WKH IXQFWLRQ VHOHFWRU LV LQ WKH 2II SRVLWLQJ
7HPSHUDWXUH 7KH LQGLFDWRU OLJKW FRPHV RQ ZKLOH WKH RYHQ LV SUHKHDWLQJ DQG JRHV RXW ZKHQ WKH UHTXLUH
WHPSHUDWXUH LV UHDFKHG ,W VZLWFKHV RQ DQG RII GXULQJ FRRNLQJ WR LQGLFDWH WKDW WKH WHPSHUDWXUH LV EHLQJ
PDLQWLQJ 3UROWLF FOHDQLQJ 7KH LQGLFDWRU OLJKW FRPHV RQ ZKHQ WKH IXQFWLRQ VHOHFWRU LV RQ WKH 'SUROWLF
FOHDQLQJμ VHWLQJ \$IWHU XVH HQVXUH WKH NQREV DUH RQ 2IISRVLWLQJ WHPSHUDWXUH FRQWURO WR DQG IXQFWLRQ
VHOHFWRU WR 7+(29(1 &\$9,7< 6KHOI UXQQHUV)DQ 5RRI *ULOO HOHPHQWV 2YHQ OLJKW /RZHU KHDWLQJ HOHPHQW XQGHU WKH
EDVH SDQH WR &RRLQJ OHYHOV 2YHQ DFFHVVRULHV ,Q DGGLWLQJ WR WKH DFFHVVRULHV VXSSOLHG ZLWK\RXU RYHQ XVH
RQ\ RYHQZDUH WKDW LV RYHQSURRI WR YHU\ KLJK WHPSHUDWXUH IROORZ PDQXIDFWXUHUV·LQVWUXFWLRQV <RXU RYHQ LV
HTXLSSHG ZLWK ZLUH VKHOYHV JULOO SDQ 7KH ZLUH VKHOI 7KH ZLUH VKHOYHV 'LVKHV FDNH WLQV DQG VR RQ FDQ EH SODFHG
RQ WKHVH VKHOYHV ,W FDQ EH XVHG KLJK VLGH XS RU ORZ VLGH XS WR DGMXVW WKH SRVLWLQJ RI\RXU GLVKHV LQ UHODWLQJ
WR WKH VRXUFH RI KHDW)RU YHU\ KHDY\ GLVKHV NJ RU PRUH DOZDV XVH WKH VKHOI KLJK VLGH XS +LJK VLGH XS /R.



[You're reading an excerpt. Click here to read official TRICITY
TBS749X1 FAE MP.TRI user guide
<http://yourpdfguides.com/dref/947052>](#)