




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY TBUL140. You'll find the answers to all your questions on the TRICITY TBUL140 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY TBUL140
User guide TRICITY TBUL140
Operating instructions TRICITY TBUL140
Instructions for use TRICITY TBUL140
Instruction manual TRICITY TBUL140

TRICITY BENDIX

OPERATING & INSTALLATION

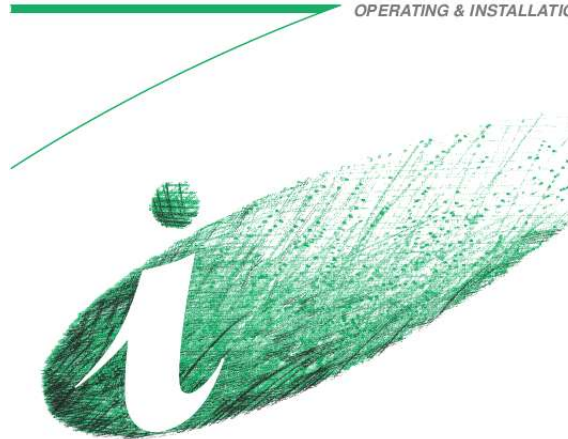

REFRIGERATOR

TBUL 140

2222683-02



[You're reading an excerpt. Click here to read official TRICITY TBUL140 user guide](http://yourpdfguides.com/dref/946898)
<http://yourpdfguides.com/dref/946898>

Manual abstract:

Ensure that you understand them all before installing or using this appliance. Your safety is of paramount importance. If you are unsure about any of the meanings of these warnings contact the Customer Care Department. Prior to Installation ☞ Check the appliance for transport damage. Under no circumstance should a damaged appliance be installed. In the event of damage please contact your retailer. General Safety ☞ This appliance contains hydrocarbons in its cooling unit; maintenance and recharging must therefore only be carried out by authorised technicians. ☞ Take utmost care when handling your appliance so as not to cause any damages to the cooling unit with consequent possible fluid leakages. ☞ The appliance must not be located close to radiators or boilers. ☞ Avoid prolonged exposure of the appliance to direct sunlight.

☞ Do not use other electrical appliances (such as ice cream makers) inside of refrigerating appliances. Installation ☞ This appliance is heavy. Care should be taken when moving it. ☞ It is dangerous to alter the specifications or attempt to modify this product in any way. ☞ Ensure that the appliance does not stand on the electrical supply cable.

Important: if the supply cable is damaged, it must be replaced by authorised service or qualified personnel using a special cable of the same type. @@☞ Parts which heat up should not be exposed. @@@@It is not intended for commercial or industrial use. @@Do not store any containers with flammable materials, such as spray cans, fire extinguisher refill cartridges etc. in the refrigerator.

Refrigerant ☞ The refrigerant isobutane (R600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable. ☞ During transportation and installation of the appliance, be certain that none of the components of the refrigerant circuit become damaged. @@@@☞ Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Force Centre. Child Safety ☞ Do not allow children to tamper with the controls or play with the product. ☞ There is a risk of suffocation! Keep packaging material away from children! 2 At the end of the Appliance Life ☞ When disposing of your appliance use an authorised disposal site. The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. @@.

.2 Operation

. . .4 Before use . .

4 Setting the temperature

. . .4 Fresh food refrigeration . . .

. . . .4 The door shelves

.5 Normal Operating Sounds

.5 Health and Safety Guidelines

.5 Defrosting . . .

.6 Maintenance and Cleaning .

.6 Internal cleaning . . .

setting, allow 24 hours for the temperature to stabilise before making further changes. Important During prolonged periods of abnormally hot weather, if the thermostat is set on too high a number, the cooling system may operate continuously and the fridge cooling plate may not defrost. Turning the knob to a lower number will cause the automatic defrosting to resume. If you wish to return to a lower temperature, turn the thermostat knob to a higher number, however you should turn the setting lower occasionally to allow automatic defrosting. D040 4 The door shelves To permit storage of food packages of various sizes, the central door shelf can be adjusted in height. To do this proceed as in the figure.

Normal Operating Sounds You may hear faint gurgling or bubbling sounds when the refrigerant is pumped through the coils or tubing at the rear, to the cooling plate. When the compressor is on, the refrigerant is being pumped round, and you will hear a whirring sound or pulsating noise from the compressor. A thermostat controls the compressor, and you will hear a faint 'click' when the thermostat cuts in and out. CPISIG For more thorough cleaning, the top door shelf and the bottle shelf can be removed by pulling them in the direction of the arrows, then refitting them in position. Health and Safety Guidelines Because of consumer demand, preservatives have been removed from many pre-prepared foods. This together with the changes in shopping habits to a once-a-week shop, mean that safe handling and storage of food is even more important than ever. The following tips should help you to ensure that the food in your home is in as perfect condition as possible.



[You're reading an excerpt. Click here to read official TRICITY](#)

[TBUL140 user guide](#)

<http://yourpdfguides.com/dref/946898>

Keep the time between buying chilled food and placing it in your fridge as short as possible. It then took 11 hours to get down to 7°C in the refrigerator. Keep the refrigerator door closed as much as possible.

Take care not to let the meat juices drip onto other food. If the meat does drip, remove everything and clean thoroughly. Do not store food uncovered. Never allow spillages to dry and harden. Store eggs in the egg rack provided in the refrigerator door.

Discard any broken or chipped eggs. Remove the plinth (1), then the ventilation grid (2); 2. Rinse and dry thoroughly. Clean the drain hole of the water trough at re post code 2.

Your telephone number 3. Clear and concise details of the fault 4. Home visits are made between 8.30am and 5.30pm Monday to Friday. a normal household. The product is installed taking into account regulations in your new country. Before you move please contact your nearest Customer Care centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliance.

France Germany Italy Sweden UK Ireland Senlis NYrnberg Pordenone Stockholm Slough Dublin +33 (0) 3 44 62 29 29 +49 (0) 800 234 7378 +39 (0) 0434 39 4700 +46 (0) 8 672 53 90 +44 (0) 1753 219897 +353 (0) 1 4090751 9 Technical Specifications DIMENSIONS Height Width Depth 81,5 59,6 54 cm cm cm POWER SUPPLY VOLTAGE AND FREQUENCY TOTAL POWER

ABSORBED AVERAGE DAILY UNITS ELECTRICITY (*) GROSS CAPACITY NET CAPACITY 220-240 V / 50 Hz 70 W 0,40 kWh 142 l 140 l (*) This figure is based on standard test results in accordance with European Standard EN153.

Actual consumption will depend on how the appliance is used and where it is located. Installation Warning IF YOU ARE DISCARDING AN OLD APPLIANCE THAT HAS A LOCK OR CATCH ON THE DOOR, YOU MUST ENSURE THAT IT IS MADE UNUSABLE TO PREVENT YOUNG CHILDREN BEING TRAPPED INSIDE. Depending upon the position which you choose for your appliance, you may wish to reverse the way in which the door opens. To do this, refer to instructions under Door reversal. Important It must be possible to disconnect the appliance from the mains power supply; the plug must therefore be positioned so that the plug is not placed in the recess. To fit these brackets remove the two screws at the top left and right hand front corners of the cabinet. - Position the two brackets as shown in the figure and replace the two securing screws. 2 Left hand bracket Right hand bracket 13 2. Push the appliance into place. The plug socket necessary for connection of the appliance to the electricity supply should be positioned, so that the plug is not placed in the recess.

To fit the pads, press them onto the rear feet. If required, the dimensions of these pads can be reduced by breaking them where marked. 1 10 2 a C 4 3 b 6 14 I F 27,5 cm 27,5 cm 55 cm 10 7 1 45° 2 a C b 3 click 11 click c 1 Upper part of kitchen furniture panel Möbeltür Innenseite 8 a I = 2 = 10 = c 12 9 b 15 Fitting the plinth Important For the efficient operation of the appliance, it is important that the original ventilation grid is used.

For an opening height dimension A=820 mm and a plinth height dimension a=100 mm, the plinth may be fitted without adjustments. The same applies to an opening height dimension B=870 mm and a plinth height dimension b=150 mm. For plinth heights greater than a=100 mm, b=150 mm, a cut should be made in the plinth, 580 mm wide, in the centre of the appliance position, leaving a remaining height of a=100 mm, b=150 mm. Attach plinth to the kitchen units. 13 7.

Refit the covering strip (A). A = 820 B = 870 A 580 25 - 80 25 DO008 Important The plinth must be positioned at a minimum distance of 25 mm from the door. 14 L 90° L 115° 15 16 a = 100 b = 150 Tricity Bendix, 55-77 High Street, Slough, Berkshire SL1 1DZ Consumer care telephone number 08705 950 950 © Electrolux Household Appliances Limited 2005 .



[You're reading an excerpt. Click here to read official TRICITY](#)

[TBUL140 user guide](#)

<http://yourpdfguides.com/dref/946898>