




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY TM221W. You'll find the answers to all your questions on the TRICITY TM221W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY TM221W  
User guide TRICITY TM221W  
Operating instructions TRICITY TM221W  
Instructions for use TRICITY TM221W  
Instruction manual TRICITY TM221W

**TRICITY BENDIX**

OPERATING & INSTALLATION  
INSTRUCTIONS

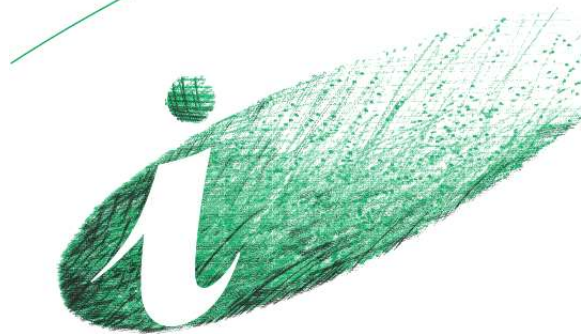

TUMBLE DRYER

**TM 221 W**

136905580-03



[You're reading an excerpt. Click here to read official TRICITY  
TM221W user guide  
http://yourpdfguides.com/dref/946929](http://yourpdfguides.com/dref/946929)

**Manual abstract:**

Please contact your Local Service Force Centre for further advice. 2 Important Safety Information In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety. General safety · It is dangerous to alter the specifications or attempt to modify this product in any way. · This appliance is not intended for use by persons (including children) with reduced physical, sensory or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. · Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using. · Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. · In order to avoid danger of fires caused by excessive drying, do not use appliance to dry the following items: Cushions, quilts and the like (these items accumulate heat).

· Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer. · Always unplug the appliance after use, cleaning and maintenance. · Under no circumstances should you attempt to repair the machine yourself. @@ Contact your local Service Centre. Always insist on genuine spare parts.

· Items that have been soiled with substances such as cooking oil acetone, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer. · Danger of explosion: Never tumble dry items that have been in contact with inflammable solvents 3 (petrol, methylated spirits, dry cleaning fluid and the like). As these substance are volatile, they could cause an explosion. Only tumble dry items washed with water. @@@@ Never stop a tumble dry before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

**RISK OF FIRE! Installation** · This appliance is heavy. Care should be taken when moving it. · When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre. · All packing must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual. · The final part of a tumble dryer cycle occurs without heat ( cool down cycle ) to ensure that the items are left at a temperature that ensures that items will not be damaged. · Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. · Care must be taken to ensure that the appliance does not stand on the electrical supply cable.

· If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance. · After having installed the appliance, check that it is not pressing or standing on its electrical supply cable, inlet hose and drain hose. · If the tumble dryer is placed on top of a washing machine, it is compulsory to use the stacking kit (optional accessory). Use · This appliance is designed for domestic use. @@ · Only wash fabrics which are designed to be machine dried. Follow the instructions on each garment label. · Do not dry unwashed items in the tumble dryer. · Do not overload the appliance. See the relevant section in the user manual. @@@@ Refer to your local Tricity Bendix Service Centre.

Always insist on genuine Tricity Bendix spare parts. Environment Protection The materials used on this appliance marked with the symbol are recyclable. This means that they can be recycled by disposing of them properly in appropriate collection containers. If you take your appliance to a refuse disposal site, cut off the power cable flush with the appliance to avoid the danger of the appliance being re-used, and disable the door catch to prevent children from becoming trapped inside. Old appliance The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by in appropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product. Child safety · This machine is not intended for use by young children or infirm persons without supervision. · Children should be supervised to ensure that they do not play with the appliance.

· The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach. · Keep all detergents in a safe place out of children's reach. Use Control panel 1 23 4 5 4 1 Programme Chart This will help you to select the correct time for drying. 5 Drying Time Selector Dial The selector dial incorporates two drying cycles, one of up to 150 minutes at a high temperature (red section) for cotton and linen, and one of up to 100 minutes at a low temperature (grey section) for synthetic fabrics. To set the machine to the selected time, turn the dial clockwise until the time you want coincides exactly with the pointer. NEVER attempt to turn the dial in an anticlockwise direction. When selecting the drying time, you should remember that it includes a 10 minute cooling phase (position ) on the dial). This phase should not be shortened, stopped or avoided, as this could cause skin burns or damages to the laundry.

Additional drying If at the end of the programme the laundry is still too damp, set the dial for a further period of drying (remembering to take into account the cooling period). 2 Delicate Button Press this button to reduce the temperature when drying particularly delicate cotton or linen items. In this case you should select a longer drying time. On the programmes for synthetics the temperature is automatically reduced.



[You're reading an excerpt. Click here to read official TRICITY TM221W user guide](http://yourpdfguides.com/dref/946929)  
<http://yourpdfguides.com/dref/946929>

Control panel 2. Rating plate 3. Door handle 4. Fluff filter 5. Adjustable Feet 6. Side vent outlets 7. Ring nut 8. Do not start by selecting a long drying time. Load the laundry Open the door by pulling it outward. Always follow the instructions on garment labels. may be tumble dried tumble dry normal (high temperature) 2. Select the required option Depress Delicate if desired. tumble dry delicate (low temperature) do not tumble dry 3. Your name, address and post code 2. Your telephone number 3. Clear and concise details of fault 4. 5. Prod. No. ....

Ser. No. a normal household. Home visits are made between 8.30am and 5.30pm Monday to Friday.

The appliance expels hot, very moist air. The rest of the house must be able to easily absorb this moisture. Normally, absorption is only possible in houses where there is very little humidity. Otherwise, the room must have ventilation towards the outside; generally, an open door or window is enough. The capacity of the venting circuit must be at least 150 m<sup>3</sup>/hour.

Check that the air inlet and outlet vents are unobstructed. The best way of evacuating the moisture is through a vent hose to the outside of the building. Use the special 100 mm diameter flexible hose supplied with the appliance connected to one of the air outlet vents with the collar supplied. The unused outlets must be covered. Never connect the air vent hose into an existing discharge pipe or duct, as this could be dangerous, might disturb neighbours and could cause the dryer to malfunction.

This product is supplied with a 2.50 metre vent hose, although the maximum length of the vent hose may be: 4 metres with no bends, or 2 metres with 2 bends.

This is an unavoidable natural phenomenon. (See picture, point A). Problems can be encountered in rooms fitted with a very powerful central extractor fan. If you find that drying times are too long, switch off the extractor or close its grille whilst the tumble dryer is in use. A highly effective solution is to simply poke the vent hose through a window or skylight. This might however cause problems in winter because the dryer will draw in very cold (and often also very damp) air through the open window, so increasing drying times and leading to very high energy consumption. If the dryer is fitted next to kitchen units, make sure that the vent hose is not squashed. If the hose is partially squashed, drying efficiency will be reduced, resulting in longer drying times and higher energy consumption.

If the hose is completely squashed, the safety cut-outs with which the machine is fitted may operate. Condensation discharge through the vent hose Condensation may be discharged either through a vent outlet provided at the back or through the left or right side outlet. The vent hose collar is placed inury through failure to comply with the above safety precautions. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre. 12 Customer Care Department Major Appliances Addington Way Luton Bedfordshire LU4 9QQ Consumer care telephone number 08705 950950 .



[You're reading an excerpt. Click here to read official TRICITY TM221W user guide](http://yourpdfguides.com/dref/946929)  
<http://yourpdfguides.com/dref/946929>