



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY TM310W. You'll find the answers to all your questions on the TRICITY TM310W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual TRICITY TM310W**  
**User guide TRICITY TM310W**  
**Operating instructions TRICITY TM310W**  
**Instructions for use TRICITY TM310W**  
**Instruction manual TRICITY TM310W**

## **TRICITY BENDIX**

OPERATING & INSTALLATION  
INSTRUCTIONS



TUMBLE DRYER  
**TM 310 W**

1259935 10



[You're reading an excerpt. Click here to read official TRICITY TM310W user guide](http://yourpdfguides.com/dref/946930)  
<http://yourpdfguides.com/dref/946930>

**Manual abstract:**

Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is supplied with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant warnings. These warnings have been provided in the interest of safety. You MUST read them carefully before installing or using the appliance. Installation · This appliance is heavy. Care should be taken when . . . . moving it. It is dangerous to alter the specifications or attempt to modify this product in any way. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. @ @ @ @ @ As some bulky items such as duvets and eiderdowns should be dried in large commercial machines because of their bulk, check with the manufacturer of the item if it is suitable for drying in a domestic machine, even if the dry weight of the item is within the limit advised. @ @ @ @ As these substance are volatile, they could cause an explosion. Tumble dry only items washed with water.

@ @ Items containing rubber foam or materials similar to rubber foam. not being used. This will allow the seal to be preserved. Clean fluff filters after using tumble dryer. @ @ · Children should not be allowed to tamper with the controls or play with the product.

Pets and children have been known to climb into tumble dryers. Please check your drum before use. Keep all packaging well away for children. · Leave the door slightly ajar when the appliance is · Do not allow fluff to accumulate around the dryer. · Under no circumstances should you attempt to repair the machine yourself.

Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Tricity Bendix Service Centre. Always insist on genuine Tricity Bendix spare parts. 2 Contents For the User Important Safety Information 2 2 2 2 4 4 5 5 5 5 5 5 6 7 8 9 9 9 9 10 10 11 11 12 For the Installer Installation Instructions Technical Specifications 13 13 14 14 14 14 14-15 · Installation · Child Safety · Use Your New Tumble Dryer Description of the Appliance The Control Panel · Unpacking · Positioning · Stacking kit (optional accessory) · Door reversal · Electrical connection · Programme Chart · Mains-on Light · Low Temperature Button · Start Button · Water Full Indicator Light · Time Selector Dial/On-Off Switch Programme Chart Operating Sequence Hints & Tips on Drying Maintenance and Cleaning · External cleaning · Cleaning the door · Cleaning fluff filters · Cleaning the condenser unit · Emptying the water reservoir · Cleaning the air intake grille Something Not Working Customer Care Guarantee Conditions Guide to use the Instruction Book The following symbols will be found in the text to guide you throughout the instructions: Safety instructions Hints and tips Environmental information 3 Your New Tumble Dryer This tumble dryer will give your wash that soft, relaxed feel whatever the weather. Extremely high quality standards both during development and manufacturing guarantee a long service life for your appliance. Maximum economy in the operation of your dryer is achieved through very frugal electricity consumption and short drying times. Energy saving tips To save energy we recommend that you follow these hints: · Try to load the maximum capacity of the machine as small loads are uneconomical. · Always load well spun laundry. The higher the spin speed, the lower the electricity consumption and the shorter the drying times. @ @ @ @ · Ventilate the room well.

@ @ @ @ @ @ @ @ @ @ To set the machine to the selected time, turn the dial clockwise until the the knob pointer coincides exactly with the time you want. NEVER attempt to turn the dial in an anticlockwise direction. When selecting the drying time you should remember that it includes a 10 minute cooling phase (position on the dial). This phase should not be shortened, stopped or avoided, as this could cause skin burns or damages to the laundry. On "O" position the dryer is switched off. 3 Low Heat Button Press this button to reduce the temperature when drying particularly delicate cotton or linen items. In this case you should select a longer drying time. 4 Start Button Press this button to start the dryer after having selected the programme. If the door of the appliance or the small door at the bottom is opened while the programme is running, this button must be pressed again after closing the door(s) in order to restart the programme from the point at which it was interrupted. 5 Programme Chart Cottons Selector dial up to 150 minutes (high temperature section) Drying time in minutes for laundry spun at 800/1000 rpm Cotton Towelling Shirts Sheets Hand towels Tablecloths Table napkins 5 kg Store dry (wardrobe dry) 2.

5 kg Iron dry (not completely dry; suitable for ironing) 5 kg 2.5 kg 60 - 75 70 - 90 45 - 60 80 - 100 Type of laundry Degree of drying Amount of laundry Synthetics Selector dial up to 100 minutes (low temperature section) Drying time in minutes for laundry spun at a minimum speed of 650 rpm 65 - 75 30 - 40 45 - 55 25 - 35 Type of laundry Synthetics or mixed fabrics which do not require ironing. Degree of drying Amount of laundry 2.5 kg Store dry 1 kg Iron dry (not completely dry; suitable for ironing) 2.5 kg 1 kg Synthetics or mixed fabrics which require ironing.

Attention! Please follow the instructions on labels when drying mixed fabrics. Drying times are given as a guide only and vary according to the size of the load, the type of laundry, the degree of spinning prior to drying. Start by selecting a short drying time. If necessary, perform an additional drying cycle afterwards. Experience will soon enable you to estimate the drying time needed for your usual laundry loads.

It is advisable to take note of them. Size of load It is not necessary to weigh the laundry, if these instructions are followed: · Cottons, linen: full drum, but not overloaded. · Synthetics: half drum. For a mixed load (cotton and synthetics, for example) select the drying time suitable for the most delicate fabrics and then increase it by approx 10 mins. 6 Operating Sequence Before using your tumble dryer for the first time, we recommend you place a few damp cloths inside the appliance and dry for 20 minutes. There may be dust inside a brand new tumble dryer. After each use · Clean the filters (see page 9). · Empty the water reservoir (see page 10). Important! If the drying programme has to be stopped before it reaches the end, we recommend that you turn the Time Selector Dial to position (cooling) and wait until the end of this phase before removing the laundry.



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/946930)

[TM310W user guide](http://yourpdfguides.com/dref/946930)

<http://yourpdfguides.com/dref/946930>

*This will avoid a build-up of heat inside the appliance.*

@@Connect the appliance. 2. Open the door as per picture. P1149 P1108 3. Load the items one at a time, shaking them out loosely. 4. Close the door. @@5. Select the drying time by turning the Time Selector Dial clockwise. 6.

If required, press the "low heat" Button. 7. Press the Start Button: the machine starts operating. The "mains on" light comes on. The drum turns alternately in both directions during drying.

@@@The mainson light goes out. 8. @@@@. DO NOT load dripping wet laundry into the dryer. Roll the article in a towel or spin to remove excess water. · Close poppers and zips and fasten any buttons.

&midothe condenser, turn the red stops upwards and close the door. @@@@The "full tank" light will stay on for approx. 2 minutes before the programme starts. @@In this case it must be filtered (e.g. @@@@. The plug is not properly inserted in the power socket. · There is no current at the socket. · The main fuse or the fuse in the plug has blown. · The selector dial is not set correctly. · The Start Button has not been depressed.

@@· The filters and/or the condenser are clogged up. · The water reservoir is full or not correctly inserted. · The room temperature is too high. @@· The "low heat" function has been selected. · There is too much laundry inside the appliance. @@@@Your name, address and post code 2. Your telephone number 3. Clear and concise details of fault 4. @@5. @@@@All service work under this guarantee must be undertaken by a Tricity able to circulate freely all round the appliance.

Do not obstruct the front ventilation grille or the air intake grille at the back of the machine. To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface. Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, raise or lower the feet until it is. The feet must never be removed.

Do not restrict the floor clearance through deeppile carpets, strips of wood or similar. This might cause heat build-up which would interfere with the operation of the appliance. Important The hot air emitted by the tumble dryer can reach temperatures of up to 60°C. The appliance must therefore not be installed on floors which are not resistant to high temperatures. @@WARNING: THIS APPLIANCE MUST BE EARTHED.

@@@ (See picture on page 4). The appliance is supplied with a 13amp plug fitted. @@@@The wire coloured brown must be connected to the terminal marked «L» or coloured red. Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath. WARNING: A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely.

Permanent connection In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations. The switch must not break the yellow and green earth cable at any point. 15 Tricity Bendix, 55-77High Street, Slough, Berkshire SL1 1DZ  
Consumer care telephone number 08705 950950 © Electrolux plc 2002 .



[You're reading an excerpt. Click here to read official TRICITY](#)

[TM310W user guide](#)

<http://yourpdfguides.com/dref/946930>