




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY TM320W. You'll find the answers to all your questions on the TRICITY TM320W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY TM320W
User guide TRICITY TM320W
Operating instructions TRICITY TM320W
Instructions for use TRICITY TM320W
Instruction manual TRICITY TM320W

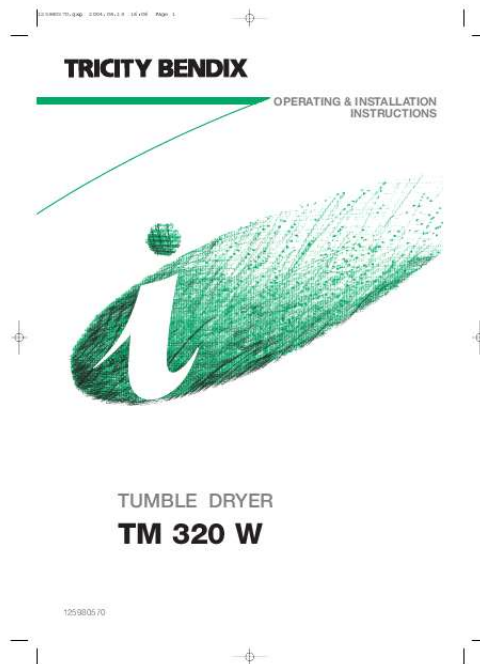

[You're reading an excerpt. Click here to read official TRICITY TM320W user guide](http://yourpdfguides.com/dref/946931)
<http://yourpdfguides.com/dref/946931>

Manual abstract:

xp 2004.08.19 16:06 Page 1 OPERATING & INSTALLATION INSTRUCTIONS TUMBLE DRYER TM 320 W 125980570 125980570.xp 2004.08.19 16:06

Page 2 Important Safety Information It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is supplied with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant warnings. These warnings have been provided in the interest of safety. You **MUST** read them carefully before installing or using the appliance. Installation · This appliance is heavy.

Care should be taken when · · · · moving it. It is dangerous to alter the specifications or attempt to modify this product in any way. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely.

If the tumble dryer is placed on top of a washing machine, it is compulsory to use the stacking kit (optional accessory). Use · Do not overload the appliance (see programme · · chart). Clothes which are dripping wet should not be placed in the dryer. As some bulky items such as duvets and eiderdowns should be dried in large commercial machines because of their bulk, check with the manufacturer of the item if it is suitable for drying in a domestic machine, even if the dry weight of the item is within the limit advised. @@@@As these substance are volatile, they could cause an explosion.

Tumble dry only items washed with water. @@Items containing rubber foam or materials similar to rubber foam. not being used. This will allow the seal to be preserved. Clean fluff filters after using tumble dryer. @@ · Children should not be allowed to tamper with the controls or play with the product. Pets and children have been known to climb into tumble dryers. Please check your drum before use. Keep all packaging well away for children. · · Leave the door slightly ajar when the appliance is · · Do not allow fluff to accumulate around the dryer.

· Under no circumstances should you attempt to repair the machine yourself. @@Contact your local Tricity Bendix Service Centre. @@@@Maximum economy in the operation of your dryer is achieved through very frugal electricity consumption and short drying times. Energy saving tips To save energy we recommend that you follow these hints: · Try to load the maximum capacity of the machine as small loads are uneconomical. · Always load well spun laundry.

The higher the spin speed, the lower the electricity consumption and the shorter the drying times. · Do not over-dry laundry, this avoids creasing and saves energy. · Clean the filters regularly to avoid excessive drying times and high electricity consumption. · Ventilate the room well. The room temperature should not exceed +35°C during drying.

In the interest of the environment · Materials marked with the symbol · · are recyclable. Check with your local Council or Environmental Health Office to see if there are facilities in your area for re-cycling this appliance. When the appliance is to be scrapped, cut off the power supply cable and make the door closing device unusable to prevent young children from being trapped inside. @@@@@NEVER attempt to turn the dial in an anticlockwise direction.

@@@@@@@If the door of the appliance or the small door at the bottom is opened while the programme is running, this button must be pressed again after closing the door(s) in order to restart the programme from the point at which it was interrupted.

5 125980570.xp 2004.08.19 16:06 Page 6 Programme Chart Cottons Selector dial up to 150 minutes (high temperature section) Drying time in minutes for laundry spun at 800/1000 rpm Cotton Towelling Shirts Sheets Hand towels Tablecloths Table napkins 5 kg Cupboard dry 2.5 kg Iron dry (not completely dry; suitable for ironing) 5 kg 2.

5 kg 60 - 75 70 - 90 45 - 60 80 - 100 Type of laundry Degree of drying Amount of laundry Synthetics Selector dial up to 100 minutes (low temperature section) Drying time in minutes for laundry spun at a minimum speed of 650 rpm 65 - 75 30 - 40 45 - 55 25 - 35 Type of laundry Synthetics or mixed fabrics which do not require ironing. Degree of drying Amount of laundry 2.5 kg Cupboard dry 1 kg Iron dry (not completely dry; suitable for ironing) 2.5 kg 1 kg Synthetics or mixed fabrics which require ironing. Attention! Please follow the instructions on labels when drying mixed fabrics. Drying times are given as a guide only and vary according to the size of the load, the type of laundry, the degree of spinning prior to drying. Start by selecting a short drying time. If necessary, perform an additional drying cycle afterwards. Experience will soon enable you to estimate the drying time needed for your usual laundry loads. It is advisable to take note of them.

Size of load It is not necessary to weigh the laundry, if these instructions are followed: · Cottons, linen: full drum, but not overloaded. · Synthetics: half drum. For a mixed load (cotton and synthetics, for example) select the drying time suitable for the most delicate fabrics and then increase it by approx 10 mins. 6

125980570.xp 2004.08.19 16:06 Page 7 Operating Sequence Before using your tumble dryer for the first time, we recommend you place a few damp cloths inside the appliance and dry for 20 minutes. There may be dust inside a brand new tumble dryer. After each use · Clean the filters (see page 9). · Empty the water reservoir (see page 10).

Important! If the drying programme has to be stopped before it reaches the end, we recommend that you turn the Time Selector Dial to position (cooling) and wait until the end of this phase before removing the laundry. This will avoid a build-up of heat inside the appliance. Modifying the programme To change a programme which is running, turn the Time Selector Dial clockwise to the required position. Drying 1. Connect the appliance.

2. Open the door as per picture. P1149 P1108 3. Load the items one at a time, shaking them out loosely. 4.

Close the door. Please check the laundry does not get caught between the door and filter. 5. Select the drying time by turning the Time Selector Dial clockwise. 6. If required, press the "low heat" Button. 7. Press the Start Button: the machine starts operating. The "mains on" light comes on. The drum turns alternately in both directions during drying.

All drying programmes end with a 10 minute cooling phase (position on selector dial).



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/946931)

[TM320W user guide](http://yourpdfguides.com/dref/946931)

<http://yourpdfguides.com/dref/946931>

The machine stops automatically at the end of this phase (knob pointer on position "O"). The mains-on light goes out. 8. Immediately remove the laundry. 7
125980570.qxp 2004.08.19 16:06 Page 8 Hints & Tips on Drying Before placing articles of laundry in your tumble dryer, check the care labels to ensure they
are recommended for tumble drying. @@@@It is not due to excessive wear caused by the dryer.

@@@The reservoir must be re-inserted correctly. Push it until it clicks. @@@In this case it must be filtered (e.g. @@@Important! @@Re-fit the
condenser, turn the red stops upwards and close the door.

@@@@The reservoir can be emptied even in the middle of a programme. @@@@The plug is not properly inserted in the power socket. · There is
no current at the socket. · The main fuse or the fuse in the plug has blown. · The selector dial is not set correctly.

&midd a front loading washing machine with a worktop depth of between 48 and 60 cm. The instructions are supplied with the kit. @@@This operation
must be carried out by qualified personnel. @@The tumble dryer must be installed in a clean place, where dirt does not build up. Air must be able to circulate
freely all round the appliance. Do not obstruct the front ventilation grille or the air intake grille at the back of the machine. To keep vibration and noise to a
minimum when the dryer is in use, it should be placed on a firm, level surface. Once in its permanent operating position, check that the dryer is absolutely
level with the aid of a spirit level. If it is not, raise or lower the feet until it is. The feet must never be removed.

Do not restrict the floor clearance through deeppile carpets, strips of wood or similar. This might cause heat build-up which would interfere with the
operation of the appliance. @@@@14 Electrical connection Any electrical work required to install this appliance should be carried out by a qualified
electrician or competent person. WARNING: THIS APPLIANCE MUST BE EARTHED. The manufacturer declines any liability should this safety measure not
be observed. Should the appliance power supply cable need to be replaced, this should be carried out by our Service Centre. @@(See picture on page 4). The
appliance is supplied with a 13amp plug fitted. @@@@The wire coloured brown must be connected to the terminal marked «L» or coloured red. Upon
completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.

WARNING: A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely. Permanent
connection In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains),
with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations.

The switch must not break the yellow and green earth cable at any point. 15 125980570.

qxp 2004.08.19 16:06 Page 16 Tricity Bendix, 55-77High Street, Slough, Berkshire SL1 1DZ Consumer care telephone number 08705 950950 © Electrolux
plc 2004 .



[You're reading an excerpt. Click here to read official TRICITY
TM320W user guide
http://yourpdfguides.com/dref/946931](http://yourpdfguides.com/dref/946931)