




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY TM321W. You'll find the answers to all your questions on the TRICITY TM321W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY TM321W
User guide TRICITY TM321W
Operating instructions TRICITY TM321W
Instructions for use TRICITY TM321W
Instruction manual TRICITY TM321W

TRICITY BENDIX

OPERATING & INSTALLATION
INSTRUCTIONS

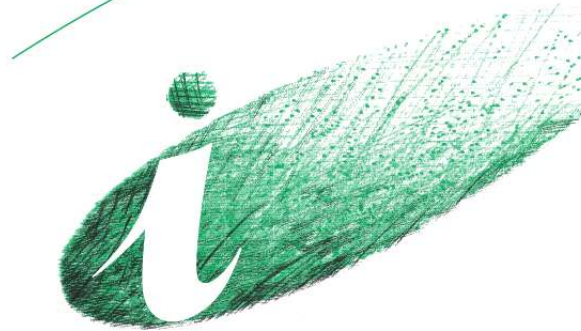

TUMBLE DRYER

TM 321 W

136905590.02



[You're reading an excerpt. Click here to read official TRICITY
TM321W user guide
http://yourpdfguides.com/dref/946932](http://yourpdfguides.com/dref/946932)

Manual abstract:

· Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using. · Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. · In order to avoid danger of fires caused by excessive drying, do not use appliance to dry the following items: Cushions, quilts and the like (these items accumulate heat). · Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer. · Always unplug the appliance after use, cleaning and maintenance. · Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.

· Items that have been soiled with substances such as cooking oil acetone, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer. · Danger of explosion: Never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). As these substance are volatile, they could cause an explosion. Only tumble dry items washed with water. · Risk of fire: items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer.

· If you have washed your laundry with stain 2 remover you must execute an extra rinse cycle before loading your tumble dryer. · Please make sure that no gas lighters or matches have accidentally been left in pockets of garments to be loaded into appliance **WARNING!** Never stop a tumble dry before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated. **RISK OF FIRE!** Installation · This appliance is heavy. Care should be taken when moving it. · When unpacking the appliance, check that it is not damaged.

If in doubt, do not use it and contact the Service Centre. · All packing must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual. · After having installed the appliance, check that it is not pressing or standing on its electrical supply cable. · If the tumble dryer is placed on top of a washing machine, it is compulsory to use the stacking kit (optional accessory). Use · This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. · Only dry fabrics which are designed to be machine dried. Follow the instructions on each garment label.

· Do not dry unwashed items in the tumble dryer. · Do not overload the appliance. See the relevant section in the user manual. · Clothes which are dripping wet should not be placed in the dryer. · Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. · Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. · Never use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible. · Fabric softeners, or similar products should be used as specified by the fabric softener instructions. Child safety · This machine is not intended for use by young children or infirm persons without supervision.

· Children should be supervised to ensure that they do not play with the appliance. · The packaging components (e.g. plastic film, polystyrene) can be dangerous to children danger of suffocation! Keep them out of children's reach. · Keep all detergents in a safe place out of children's reach. · Always load well spun laundry. · Ventilate the room well. · Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by in appropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

Description of the Appliance 01 02 03 04 05 06 07 Worktop Control panel Fluff filters Rating Plate Condenser unit Water reservoir Adjustable feet 1 3 DRYING TIME 20 40 60 80 full tank on start 0 150 120 100 80 60 100 0 20 40 mains CS SYNTHETI 650 at rpm Dry Spun Cupboard Dry 1 kg Cupboard 2.5 kg Iron Dry 1 kg Iron Dry 2.5 kg Cool tumble low heat TM 320 W COTTON 800/1000 at rpm Dry Spun Cupboard Dry 2.5 kg Cupboard 5 kg Iron Dry 2.5 kg Iron Dry 5 kg Cool tumble min 60 - 75 min 80 - 100 min 45 - 60 min 70 - 90 min 00 - 10 min 30 - 40 min 65 - 75 min 25 - 35 min 45 - 55 min 00 - 10 SE REVER N ACTIO 2 4 5 4 8 67 5 The Control Panel 1 1 Time Selector Dial Allows you to select time controlled drying. Turn the dial to the required time. 23 4 5 5 Start Pause Button Press this button to start the dryer after having selected the programme and the options. 2 Delicate button Pressing this button allows drying to be performed at a lower temperature, for delicate items. 3 Textile Button You can select 2 different options: - Cotton: to be used for cotton, - Synthetics: to be used for synthetic or delicate items. 4 Indicator Lights · Drying · End/Anticrease · Condenser · Filter · Empty Tank 6 Drying Programmes Programme Max load kg Type of laundry Options Description of programme 6 Time Cotton Textile · Synthetics · Cotton Delicate 3 Synthetics If the Time programme has been selected, programme duration time of 15 minutes up to 150 minutes can be set by intervals of 5 minutes or 10 minutes.

Drying thick or multi-layered textiles, e.g. terry towelling items. Size of load It is not necessary to weigh the laundry, if these instructions are followed: · Cottons, linen: full drum, but not overloaded. · Synthetics: half drum. For a mixed load (cotton and synthetics, for example) select the drying time suitable for the most delicate fabrics and then increase it by approx 10 mins. Drying Times COTTON Iron Dry Spun at 6kg 3kg 1000 105-115 75-85 1400 90-100 65-75 1000 120-135 85-95 Cupboard dry 1400 105-120 75-85 SYNTHETICS Cupboard dry Spun at 3kg 1kg 1200 50-60 30-40 7 Operating Sequence Before using your tumble dryer for the first time, we recommend you place a few damp cloths inside the appliance and dry for 20 minutes.



[You're reading an excerpt. Click here to read official TRICITY](#)

[TM321W user guide](#)

<http://yourpdfguides.com/dref/946932>

There may be dust inside a brand new tumble dryer. **Drying Textile Button** Press the Textile button repeatedly, to select the desired option. The relevant light will light up.

You can select 2 different options: Cotton: to be used for cotton, . Synthetics to be used for synthetic or delicate items. When the programme has finished the pilot lights End /Anticrease is on. **Start/Pause Button** Press this button to start the dryer after having selected the programme and the options. The relevant light will stop flashing.

If the programme selector dial is turned to another position, when the machine is running, the buzzer will sound and the programme phase indicator lights will flash. The drum turns alternately in both directions during drying. All drying programmes end with a 10 minute cooling phase . You may remove the laundry after this phase. If the door of the appliance or the small door at the bottom is opened while the programme is running, this button must be pressed again after closing the door in order to restart the programme from the point at which it was interrupted.

This button must be depressed also after a power failure and after having reinserted the water reservoir to 500 g Table Napkin 50 to 100 g Kitchen Towel 70 to 120 g Linen Hand Towel 100 to 150 g Hand Towel 150 to 250 g Bath Towel 700 to 1000 g Bathrobe 1000 to 1500 g Shirt 200 to 300 g Apron 150 to 200 g . Always load well spun laundry. The higher the spin speed the lower the electricity consumption and the shorter the drying time. · DO NOT load dripping wet laundry into the dryer. Roll the article in a towel or spin to remove excess water. · Close poppers and zips and fasten any buttons. · Sort the laundry. Separate synthetics from cotton/linens, and dry separately. @@ · Use a fabric conditioning sheet to reduce static. @@ · Mix the load i.e.

large and sty Bendix undertake that if, within 12 months of the date of the purchase, this Tricity Bendix appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option, repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that: · The appliance has been correctly installed and used only on the electricity supply stated on the rating plate. · The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions. · The appliance has not been serviced, maintained, repaired, taken apart or tampered with, by any person not authorised by us. All service work under this guarantee must be undertaken by a Tricity Bendix Service Force Centre. Any appliance or defective part replaced shall become the Company's property. This guarantee is in addition to your statutory and other legal rights. Home visits are made between 8.30am and 5.30pm Monday to Friday. @@@@ @@@@ a normal household.

@@@@ @@@@ · Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements. · Products of Tricity Bendix manufacture which are NOT marketed by Tricity Bendix. 14 Installation Instructions It is dangerous to alter the specifications or attempt to modify this product in any way. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

Technical Specifications DIMENSIONS Height Width Depth 85 cm (33.5") 60 cm (23.6") 58 cm (22.8") 230-240 V/50 Hz 2350 W (13A) Cotton, linen Synthetics 6.kg 3 kg 108 l Cotton, linen Cotton, linen Synthetics 3.

8 kWh (6 kg store dry) 3 kWh (6 kg iron dry) 1.36 kWh (3 kg store dry) POWER SUPPLY VOLTAGE TOTAL POWER ABSORBED MAXIMUM RECOMMENDED LOAD DRUM VOLUME CONSUMPTIONS This appliance complies with the following E.E.C. @@ Pull off adhesive strips from inside machine on top of drum. resistant to high temperatures. @@ The instructions are supplied with the kit. @@@@ Air must be able to circulate freely all round the appliance. Do not obstruct the front ventilation grille or the air intake grille at the back of the machine. To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface.

Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, raise or lower the feet until it is. The feet must never be removed. Do not restrict the floor clearance through deeppile carpets, strips of wood or similar. This might cause heat build-up which would interfere with the operation of the appliance. The appliance must not be installed behind the lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance. Important The hot air emitted by the tumble dryer can reach temperatures of up to 60°C. @@ This operation must be carried out by qualified personnel. Please contact the nearest Service Force Centre. @@ WARNING: THIS APPLIANCE MUST BE EARTHED.

@@@ Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate. (See picture on page 6). The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS 1363/A) fuse must be used. Should the plug need to be replaced for any reason, proceed as described below.

The wires in the mains lead are coloured in accordance with the following code: Green and Yellow - Earth Blue - Neutral Brown - Live GREEN & YELLOW E 13 A N L BROWN BLUE P1041 CORD CLAMP The wire coloured green and yellow must be connected to the terminal marked with the letter «E» or by the earth symbol or coloured green and yellow. The wire coloured blue must be connected to the terminal «N» or coloured black. The wire coloured brown must be connected to the terminal marked «L» or coloured red. Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath. WARNING: A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard.

Ensure that the cut off plug is disposed of safely. Permanent connection In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations. The switch must not break the yellow and green earth cable at any point. 17 Customer Care Department Major Appliances Addington Way Luton Bedfordshire LU4 9QQ Consumer care telephone number 08705 950950 .



[You're reading an excerpt. Click here to read official TRICITY TM321W user guide](http://yourpdfguides.com/dref/946932)
<http://yourpdfguides.com/dref/946932>