



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY TM565C. You'll find the answers to all your questions on the TRICITY TM565C in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY TM565C  
User guide TRICITY TM565C  
Operating instructions TRICITY TM565C  
Instructions for use TRICITY TM565C  
Instruction manual TRICITY TM565C

## Your New Tumble Dryer

This tumble dryer will give your wash that soft, relaxed feel whatever the weather. It is fitted with a condensation system. The moisture extracted from the wash is condensed and then collected in a water tank. Extremely high quality standards both during development and manufacturing guarantee a long service life for your appliance. Maximum economy in the operation of your dryer is achieved through very frugal electricity consumption and short drying times.


### Energy saving tips

To save energy we recommend that you follow these hints:

- Try to load the maximum capacity of the machine as small loads are **uneconomical**.
- Always load well spun laundry. The higher the spin speed, the lower the electricity consumption and the shorter the drying times.  
Clothes which are dripping wet should not be placed in the dryer.
- Do not over-dry laundry; this avoids creasing and saves energy.
- Clean the filter and the condenser regularly to avoid excessive drying times and high electricity consumption.
- Ventilate the room well. The room temperature should not exceed +35°C during drying.



### In the interest of the environment

- Materials marked with the symbol  are recyclable.
- Check with your local Council or Environmental Health Office to see if there are facilities in your area for re-cycling this appliance.
- When the appliance is to be scrapped, cut off the power supply cable and make the door closing device unusable to prevent young children from being trapped inside.
- Help to keep your country tidy - use authorised disposal sites for your old appliance.

How do we help to protect the environment? We use recycled paper!



[You're reading an excerpt. Click here to read official TRICITY TM565C user guide](http://yourpdfguides.com/dref/946944)  
<http://yourpdfguides.com/dref/946944>

**Manual abstract:**

It is fitted with a condensation system. The moisture extracted from the wash is condensed and then collected in a water tank. Extremely high quality standards both during development and manufacturing guarantee a long service life for your appliance. Maximum economy in the operation of your dryer is achieved through very frugal electricity consumption and short drying times. Energy saving tips To save energy we recommend that you follow these hints: s Try to load the maximum capacity of the machine as small loads are uneconomical. s Always load well spun laundry. The higher the spin speed, the lower the electricity consumption and the shorter the drying times. Clothes which are dripping wet should not be placed in the dryer. s Do not over-dry laundry, this avoids creasing and saves energy. s Clean the filter and the condenser regularly to avoid excessive drying times and high electricity consumption. s Ventilate the room well. The room temperature should not exceed +35°C during drying. s In the interest of the environment s s Materials marked with the symbol are recyclable. Check with your local Council or Environmental Health Office to see if there are facilities in your area for re-cycling this appliance. When the appliance is to be scrapped, cut off the power supply cable and make the door closing device unusable to prevent young children from being trapped inside.

Help to keep your country tidy - use authorised disposal sites for your old appliance. How do we help to protect the environment? @@@@These warnings have been provided in the interest of safety. @@Care should be taken when moving it. @@Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely. @@@@Pets and children have been known to climb into tumble dryers. Please check your drum before use. @@As some bulky items such as duvets and eiderdowns should be dried in large commercial machines because of their bulk, check with the manufacturer of the item if it is suitable for drying in a domestic machine, even if the dry weight of the item is within the limit advised. Please make sure that no gas lighters have accidentally been left in pockets of garments to be loaded into appliance. Danger of explosion: Never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). As these substance are volatile, they could cause an explosion. Tumble dry only items washed with water. In order to avoid danger of fires caused by excessive drying, do not use appliance to dry the following items: Cushions, quilts and the like (these items accumulate heat). Items containing rubber foam or materials similar to rubber foam.

Leave the door slightly ajar when the appliance is not being used. This will allow the seal to be preserved. Clean fluff filter after using tumble dryer. To prevent fire risks, do not use the appliance if the fluff filter is non placed properly or damaged. @@@@Contact your local Tricity Bendix Service Centre. Always insist on genuine Tricity Bendix spare parts. s 3 Contents For the User Your New Tumble Dryer Important Safety Information Installation s Child Safety s Use s For the Installer 2 3 3 3 3 5 6 6 6 7 8 8 8 9 9 9 9 10 10 10 10 11 11 13-17 Installation Instructions Technical Specifications Positioning Important information regarding installation s Stacking kit (optional accessory) s Electrical connections s s 18 18 19 19 20 Description of the Appliance The Control Panel s s Door opening Control lights Drying time selector dial Programme Chart Operating Sequence Load the laundry Select drying time s End of cycle s s Drying Hints Sort and prepare laundry before drying Never tumble dry the following s Starched fabrics s Shrinking s What is fluff? s Time and energy consumption s How much does dry laundry weigh? s s Maintenance and Cleaning Cleaning fluff filter Emptying water container s Cleaning tumble dryer s Cleaning inside part of drum s Cleaning condenser s s Something Not Working Service and Spare Parts Tricity Bendix Guarantee Conditions Tricity Bendix Service Centres Guide to use the Instruction Book The following symbols will be found in the text to guide you throughout the instructions: Safety instructions i Hints and tips Environmental information 4 Description of the Appliance 01. 02. 03. 04.

05. 06. 07. 8. 09.  
10. 11. 12. 13. @@@@ATTENTION! @@@@Do not shorten or interrupt the cooling phase.  
@@@@It switches off at the end of selected drying time. 4 Door opening button To open the door, press this button. Should the door be opened while appliance is working, the tumble dryer will stop functioning. 6 Programme Chart Cotton and linen Heating element - 2400 W Drying time in minutes for laundry spun at 800 rpm 1000 rpm 1200 rpm Type of laundry: Degree of drying Amount of laundry in kg Cotton Towelling Shirts Sheets Hand towels Tablecloths Table napkins 5.0 95-110 90-105 85-100 Cupboard dry (wardrobe dry) 2.5 65-75 60-70 55-65 Iron dry (not completely dry; suitable for ironing) 5.0 80-95 75-90 65-80 2.5 50-60 45-55 40-50 Synthetics Heating element - 1800 W Amount of laundry in kg 2.0 Type of laundry: Degree of drying Drying time in minutes for laundry spun at a minimum speed of 650 rpm 30-40 25-35 20-30 25-35 15-25 15-20 Synthetics or mixed fabrics which do not require ironing. Cupboard dry 1,5 0.

5 2.0 Synthetics or mixed fabrics requiring ironing Iron dry 1,5 0.5 ATTENTION! Please follow the instructions on labels when drying mixed fabrics. 7 Operating Sequence Before using your tumble dryer for the first time, we recommend to place a few damp cloths inside the appliance and dry for approximately 20 minutes. There may be dust or dirt inside a brand new tumble dryer. 1. Load the laundry Open the door by pressing the "door opening" button. Load spun laundry. Do not press laundry in appliance. Close door making sure that there are no laundry items preventing the door from being closed. P0871 2. Select drying time Turn the dial clockwise until the desired drying time is under the symbol on the front panel. @@The selector dial will return to the 'zero' position. Open the door and take out cooled laundry. IMPORTANT! @@Close all zips and tie all strings.  
@@@@@@@@@@@@Items containing rubber foam or materials similar to rubber foam. Woollens or mixed-wool garments, as these will shrink and felt.  
@@@@@@@@@@@@When the cycle has been completed, clean tumble dryer drum with a damp cloth and then with a dry cloth in order to remove any remaining starch. Shrinking Some items (such as shirts and the s s s Space surrounding the appliance is overheating.



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/946944)

[TM565C user guide](http://yourpdfguides.com/dref/946944)

<http://yourpdfguides.com/dref/946944>

*s If after all these checks, the problem persists, contact your local Service Centre, quoting the model and serial number.*

*@@@ Contact your local Service Centre. @@@ Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements. Products of Tricity Bendix manufacture which are not marketed by Tricity Bendix Ltd. EU Countries. The standard guarantee is applicable but subject to the owner's responsibility and cost to ensure the appliance meets the standards set by the country to which the product is taken. s The appliance has been installed correctly and used only on the electricity supply stated on the rating plate. The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's operating and maintenance instructions. The appliance has not been serviced, maintained, repaired, taken apart or tampered with, by any person not authorised by us. s s s s All service work under this guarantee must be undertaken by a Tricity Bendix service representative or authorised agent. Any appliance or defective part replaced shall become our property.*

*@@ Home visits are made between 8.30 am and 5.30 pm Monday to Friday. @@@@ Services Carlisle Enterprise Centre James Street Carlisle CA2 5AP Tricity Bendix After Sales Service Allan Crossan (Service) 93 Irish Street Industrial Estate 326 Crumlin Road Belfast, BT14 7EE Tricity Bendix After Sales Service G & O (Armagh) Service Owenmore House Kilwee Business Park Upper Dunmurray Lane Belfast, BT17 0HD Tricity Bendix After Sales Service Unit 23-24 Alliance Business Park Townsend Drive Nuneaton Warwickshire, CV11 6RX Tricity Bendix After Sales Service Refrigeration Sales and Service Hatson Ind. @@ Robertson Ltd. @@ J. @@ Care must be taken to ensure that the appliance does not stand on the electrical supply cable. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Technical Specifications DIMENSIONS Height Width*

*Depth Depth with door open 85 cm (33.5") 60 cm (23.6") 60 cm (23.6") 1200 cm (47.2") 220-240 V/50 Hz 2650 W (13A) Cotton, linen Synthetics 5 kg (11 lbs) 2 kg (4.5 lbs) POWER SUPPLY VOLTAGE TOTAL POWER ABSORBED MAXIMUM RECOMMENDED LOAD DRUM VOLUME 108 l This appliance complies with the following E.E.*

*C. Directives: - 73/23 EEC of 19.2.73 (Low Voltage Directive) and subsequent modifications; - 89/336 EEC of 3.5.*

*89 (Electromagnetic Compatibility Directive) and subsequent modifications. 18 Positioning Install the appliance on a flat floor or on a washing machine. In any case, the appliance must be perfectly horizontal. Check this by using a spirit level and make any necessary adjustments to appliance's adjustable feet. Please make sure that there is adequate ventilation underneath the appliance and adequate air change between the grid and base. In consideration of the above, it is not advisable to place the appliance on a carpet. Important information regarding installation s s s s Hot air emitted by the appliance may reach temperatures of up to 60°C. @@@@ Please keep space surrounding tumble dryer as clean as possible. Do not remove the appliance's adjustable feet. It is essential to provide a certain amount of space between the floor and the appliance for ventilation purposes.*

*Blocking ventilation would inevitably cause the appliance's inside temperature to increase and would therefore affect the appliance's efficiency. Stacking Kit (optional accessory) This tumble dryer may be stacked on a front-loading washing machine. However, the tumble dryer will have to be fixed to the washing machine. @@@@ Remove the fuse from the cut off plug. @@ Connect the blue (neutral) wire to the terminal in the plug which is marked with the letter «N» or coloured black. Connect the brown (live) wire to the terminal in the plug which is marked with the letter «L» or coloured red. The plug moulded on to the lead incorporates a fuse. For replacement, use a 13 Amp BS1362 fuse. Only ASTA or BSI approved fuses should be used. The plug must not be used if the fuse cover/carrier is lost.*

*The cover/carrier is indicated by the coloured insert at the base of the plug. A replacement cover/carrier must be obtained from your local Tricity Bendix Service Centre. There is a list of these in this instruction book. GREEN & YELLOW 13 AMP FUSE 13 AMP BROWN BLUE P0329 CORD CLAMP 20 Tricity Bendix, 99 Oakley Road, Luton, Beds LU49QQ Consumer care telephone number 0990-929929 OPERATING & INSTALLATION INSTRUCTIONS COTTONS 2.5 kg Cupboard 5 kg Cupboard Dry 55 - 75 2.*

*5 kg min Iron Dry Dry 85 -110 5 kg min Iron Dry 40 60 min Refresher 65 95 min 10 min LINENS SYNTHETIC S MIXED FABRICS 1 kg Cupboard 2 kg Cupboard Dry 25 1 kg Iron Dry Dry 30 35 min 2 kg - 40 Iron Dry min 15 25 Refresher min 25 35 min 10 min FULL TANK MAINS ON CON DEN SER DRY ER DRYING TIME IMPORTANT: PLEASE TM 565 READ C BOOK THE INSTRUCTION BEFORE USE. DOOR OPENING TUMBLE DRYER TM 565 C 125996870.*



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/946944)

[TM565C user guide](http://yourpdfguides.com/dref/946944)

<http://yourpdfguides.com/dref/946944>