



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY WDR1030. You'll find the answers to all your questions on the TRICITY WDR1030 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY WDR1030
User guide TRICITY WDR1030
Operating instructions TRICITY WDR1030
Instructions for use TRICITY WDR1030
Instruction manual TRICITY WDR1030

TRICITY BENDIX

OPERATING & INSTALLATION
INSTRUCTIONS



WASHER-DRYER

WDR 1030

132996070



[You're reading an excerpt. Click here to read official TRICITY WDR1030 user guide](http://yourpdfguides.com/dref/946959)
<http://yourpdfguides.com/dref/946959>

Manual abstract:

@@Care should be taken when moving it. @@All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in instructions. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. @@@@Pets and children have been known to climb into washer-dryers. Please check your drum before use. The glass door becomes very hot during the washing and drying cycle.

@@Keep all packaging well away from children. @@Do not overload the appliance. See relevant section in the instruction book. Only wash and dry fabrics which are designed to be machine washed and dried. If in doubt, consult the care label on the clothes.

Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing 2 G G frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed. Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. Garments which have been in contact with volatile petroleum products should not be machine washed.

If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum. Only use the advised quantities of fabric softener. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities. As some duvets and eiderdowns should be washed/dried in large commercial machines because of their bulk, please check with the manufacturer of the item before washing in a domestic machine. The users should always check that they have not left their gas lighters (disposable or otherwise) in their clothing. Never tumble dry items that have had contact with chemicals such as dry cleaning fluid. These are of a volatile nature and could cause an explosion. Only tumble dry items which have been washed in water or require airing.

Plastic detergent dispensers should not remain in the drum during the drying cycle, as the plastic used is not designed to withstand the heat. If you wish to wash-through-to-dry you should use the conventional detergent dispenser drawer. Leave the porthole door slightly ajar between washes to preserve the door seal. Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Tricity Bendix Service Force Centre. Always insist on genuine Tricity Bendix spare parts. Contents For the User Important Safety Information Your New Washer-Dryer Description of the Appliance The Control Panel Operating sequence Washing 4.5 kg of white cotton at 95°C Load the laundry Measure out the detergent Measure out the fabric softener Select the required option Select the required programme Start the machine At the end of the programme Washing 2 kg of mixed fabrics at 50°C Load the laundry Measure out the detergent Measure out the fabric softener Select the required option Select the programme Start the machine At the end of the programme Drying 2.25 kg of cotton Load the laundry Select the programme Select the required time Start the machine At the end of the programme Autodrying 1 kg of mixed fabrics Load the laundry Add the washing powder and additive Select the programme Select the required time Start the machine At the end of the programme Which detergent to use?.

... And in which form? Fabric Conditioners 2 4 5 5 6 7-10 7 7 7 7 7 8 8 9 9 9 9 9 10 11 11 11 11 11 11 12 12 12 12 12 12 13 14 14 14 15 16-17 18 Detergent dispenser drawer Descaling After each wash Maintenance wash External cleaning Cleaning the dispenser drawer Cleaning the drawer recess Cleaning the filter The dangers of freezing Maintenance and Cleaning 19-20 19 19 19 19 19 20 21-22 22 23 24-25 Something Not Working Service and Spare Parts Guarantee Conditions Service Force Centres For the Installer Installation Instructions Technical Specifications Unpacking Positioning Water inlet Water drainage Levelling Special conditions In the interest of the environment Electrical connection 26 26 27 27 27 28 29 29 30 Washing and Drying Hints Wash Care Symbols Washing Programmes Drying Programmes Guide to use the Instruction Book The following symbols will be found in the text to guide you throughout the instructions: Safety instructions Hints and tips Environmental information 3 Your New Washer-Dryer Your new washer-dryer meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption. It is gentle with your laundry, simple to use and easy to care for.

G G G G The special wool programme with its new delicate wash system treats your woollens with extreme care. The anti-unbalance device ensures that the machine remains stable when spinning. Automatic cooling of the wash water to 60°C before draining, with the 95°C programme. This reduces thermal shock to fabrics, helping to prevent creasing. The two drying programmes will give your wash that soft, relaxed feel whatever the weather. In the interest of the environment G G G Ecological hints To save water and energy and help protect the environment, we recommend that you follow these hints: G Adjust the quantity of detergent according to the hardness of your water supply, the amount of laundry and the degree of soiling. G A programme without prewash is sufficient for normally soiled laundry. G Try to load the maximum drying capacity of the machine as small loads are uneconomical. G Always load well spun laundry. The higher the spin speed, the lower the electricity consumption and the shorter the drying times. G Materials marked with the symbol are recyclable. Check with your local Council or Environmental Health Office to see if there are facilities in your area for re-cycling this appliance. When the appliance is to be scrapped, cut off the power supply cable and make the door lock device unusable to prevent young children from being trapped inside. Help to keep your country tidy - use authorised disposal sites for your old appliance. How do we help to protect the environment? We use recycled paper! Important Your machine is fitted with a balance control device, which ensures the machine is stable during the spin.

If the wash load appears not to have been spun sufficiently at the end of the wash cycle, because it is not evenly distributed in the drum, the balance control device may have operated.



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/946959)

[WDR1030 user guide](http://yourpdfguides.com/dref/946959)

<http://yourpdfguides.com/dref/946959>

It will therefore be necessary to redistribute the wash load manually and select a spin programme. For more detailed information see the section headed "Something Not Working".

4 Description of the Appliance
 1 Detergent dispenser drawer
 2 Programme guide
 3 Drying indicator Light
 4 Drying Time Selector Dial
 5 ON/OFF Button
 6 Half Load Button
 7 Rinse Hold Button
 8 "Mains-on" Light
 9 Programme Selector Dial
 10 Door opening handle
 11 Filter
 12 Adjustable feet
 1 3 5 7 6 8 9 1 WHITES WITH PREWASH
 2 WHITES
 3 FAST COLOURED
 4 NON FAST COLOURED
 5 RINSES
 6 SPIN 1000
 7 FULL HEAT DRYING
 8 MIXED FABRICS
 9 QUICK & COOL WASH
 10 SPIN 850
 11 HALF HEAT DRYING MIXED FABRICS - SYNTHETICS
 30° COTTONS - LINENS
 12 WOOL WASH
 13 DELICATES
 14 RINSES
 15 DRAIN WOOL - DELICATES PROGRAMME DRYING TIME WASH&DRY HALF LOAD 1000 RINSE HOLD MAINS ON WDR 1030 IMPORTANT: PLEASE READ THE INSTRUCTION BOOK BEFORE USE.

24 10 11 12 Detergent dispenser drawer
 Prewash Main wash Fabric softener C0026
 5 The Control Panel
 1 2 3 4 5 6 7 COTTONS - LINENS WHITES WITH PREWASH WHITES FAST COLOURED
 NON FAST COLOURED RINSES SPIN 1000 FULL HEAT DRYING MIXED FABRICS - SYNTHETICS 30°
 12 13 14 15 WOOL - DELICATES WOOL WASH DELICATES RINSES DRAIN DRYING TIME PROGRAMME WASH&DRY HALF LOAD 1000 RINSE HOLD MAINS ON 8 MIXED FABRICS
 9 QUICK & COOL WASH 10 SPIN 850 11 HALF HEAT DRYING WDR 1030 IMPORTANT: PLEASE READ THE INSTRUCTION BOOK BEFORE USE.

1 2 3 4 5 6 7 8 1 Programme guide
 2 Drying indicator Light This light illuminates when the machine is drying.
 6 RINSE HOLD Button Press this button to make the machine stop with water in the drum after the cotton, synthetic or delicate wash cycles. This prevents any creasing which may take place if the clothes are left damp in the drum. When it is convenient for you to empty the machine, simply press this button again so that the machine can proceed to drain and spin, or select the drain programme "15". If this button is not activated, the washing programmes will end with a spin. The Rinse Hold button must not be depressed when using NON-STOP operation (automatic washing and drying).

3 Drying time Selector Dial Graduated up to 120 mins for cottons (dark green section) and synthetics, (light green section) this dial allows you to select the desired drying time according to the type and quantity of laundry and the required degree of dryness. Turn the dial clockwise only. Cooling phase To allow the laundry to cool down, a cooling phase starts automatically 10 minutes before the end of drying and this phase must in no circumstances be reduced or interrupted.

7 MAINS-ON Light This light illuminates when the machine starts working and goes out when the ON/OFF button is released.

4 On/Off Button 8 Programme Selector Dial Turn the dial clockwise to select the required wash and drying programme. Before setting the dial to any position the machine must be switched off by depressing the ON/OFF button again. By depressing this button the machine starts operating. When depressed again, the machine stops.

5 HALF LOAD Button Select this button to reduce water consumption on the rinse cycle when washing a smaller load of cottons or linens (maximum load size = 2.25 kg).

6 Operating Sequence Before the first wash, we recommend that you run a cotton cycle at 60°C, without any laundry in the machine, to remove any manufacturing residue from the drum and tub. Pour 1/2 a measure of detergent into the main wash compartment of the dispenser drawer and start the machine. WASHING 4.5 KG OF WHITE COTTON AT 95°C Suppose you have 4.5 kg of normally soiled laundry to wash. It is white cotton and is suitable for high temperature washing.

3. Measure out the fabric softener If required, pour fabric softener into the compartment marked (the amount used must not exceed the "MAX" mark in the drawer). Close the drawer gently.

1. Load the laundry Open the door by pulling the door handle outwards. Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door. C0024
 4. Select the RINSE HOLD option if required HALF LOAD RINSE HOLD P0004
 2. Measure out the detergent Pull out the dispenser drawer until it stops. Measure out the amount of detergent required and pour it into the main wash compartment. If finished you are advised to unplug the appliance and turn off the water taps.

1. Load the laundry Open the door by pulling the catch outward. Load the items one at a time and close the door.
 2. Select the programme Turn the programme selector dial clockwise to programme 7. 7 P0977C
 3. Select the required time Following indications given in the programme chart on page 18, turn the time selector dial clockwise to the 60 mins setting (dark green section). 60 80 M0031S
 4. Start the machine Depress the ON/OFF button, the mains-on light and drying light will illuminate and the machine starts operating. T0003
 11 AUTODRYING 1 KG OF MIXED FABRICS You intend to wash and dry automatically 1 garments with metal inserts, nylon stockings, bulky garments such as anoraks, bedcovers, quilts, sleeping bags and duvets must not be machine dried. Garments padded with foam-rubber or materials similar to foam-rubber must not be machine dried; they represent a fire hazard.

Also, fabrics containing residues of setting lotions or hair sprays, nail solvents or similar solutions must not be machine dried in order to avoid the formation of harmful vapours. For drying, follow the indications given on the manufacturer's labels. May be tumble dried Drying at high temperature Drying at reduced temperature Do not tumble dry Important: As a dryer, the machine works on the condensation principle. Therefore, the water taps must be open and the drain hose must drain water into a sink or into the drain pipe, even during the drying cycle.

13 Which detergent?.... To ensure you obtain the best wash results from your appliance, it is important to use the right detergent in your everyday wash, and only detergents recommended for use in automatic machines. To maintain the appearance of your clothes and household textiles and to make them last longer you should use different types of detergent for different washes, whether for whites, colours or delicates.

And in which form? Not only are there different types of detergent, but they are also available in different forms. Whether you chose a powder or liquid in traditional or compact form is your own personal choice. TRADITIONAL POWDERS Pour the powder directly into the dispenser drawer. Do not sprinkle powder onto clothes in the machine drum. WHITES We recommend the Ariel product range which is biological and designed to provide excellent cleaning and stain removal even at low temperatures. TRADITIONAL LIQUIDS Liquid can be placed in the main wash compartment of the detergent drawer marked with the symbol, start the machine immediately upon placing the detergent in the dispenser drawer.



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/946959)

[WDR1030 user guide](http://yourpdfguides.com/dref/946959)

<http://yourpdfguides.com/dref/946959>

Alternatively the detergent is measured into the specially designed dosing device* which should be placed on top of the laundry, and at the back of the machine drum. **NON BIOLOGICAL** If you prefer to use a non biological detergent, which does not contain enzymes we recommend Fairy. Fairy provides good cleaning and stain removal. **COMPACT POWDERS AND LIQUIDS** Compact detergents (or concentrates as they are also known) are available in liquid or powder form, and generally require a smaller dosage.

Follow the manufacturer's instructions to ensure the most economical usage. Pour the detergent directly into the dispenser drawer, or alternatively measure the detergent into the specially designed dosing device* which should be placed on top of the laundry, and at the back of the machine drum. * If you use a dosing device in a washer dryer, please ensure the dosing device/ball is removed before carrying out a drying programme. **COLOURED** For coloured items you should use a detergent which is designed to clean while maintaining the original colour. Ariel Color does not contain bleach and therefore helps to preserve colours.

DELICATE ITEMS When washing delicates such as woollens, you should use a product which is specially designed to care for fine fabrics. Dreft Automatic is suitable for woollens and other delicates. **FABRIC CONDITIONERS** These are ideal for improving 'softness', and also reduce static cling on synthetics and make ironing easier. They are available in two types: For example Lenor liquid fabric softener, for use in the washing machine/washer dryer. The liquid fabric softener should be poured into the compartment marked with the symbol .

Follow the manufacturer's dosage instructions and never exceed the MAX level. Bounce conditioning sheets for use in a tumble dryer. We recommend the conditioning sheets are pinned (using a safety pin) to an article of laundry and placed in the tumble dryer. **14 LAUNDRY BLEACH** For additional stain removal you may wish to use a product such as Ace Gentle Bleach which is used in addition to your chosen detergent. Ace is suitable for all washable fabrics including silks, woollens and coloureds. **Wash Care Symbols** Wash care labels inside garments recommend how to launder your clothes with the best results.

The care labelling code is in line with care labelling used in the rest of Europe. The symbols used make it easy to select the correct programme on your washing machine. **WASHING SYMBOL 95 WASH ACTION Normal (Maximum) Normal (Maximum) FABRIC White Cotton or Linen without Special Finishes Cotton, Linen or Viscose without Special Finishes Colourfast at 60°C. @ Cotton, Linen or Viscose Colourfast at 40°C but not 60°C.**

Acrylics, Acetate, Triacetate, Wool mixes, Polyester/wool blends. @@@@Once the dispenser has been filled, close it by pushing it in gently. @@@@We recommend that a maintenance wash be performed on a regular basis. To run a maintenance wash: **G** The drum should be empty of laundry. **G** Select the hottest cotton wash programme. @@@@The water should drain by gravity into the bowl. When the bowl is full, hook the hose back up and empty the bowl. @@@@Flush it out under a tap, to remove any traces of accumulated powder. @@@@I Turn off the water taps. I Unscrew the inlet hoses.

@@Run the draining programme. I Disconnect the appliance. I Screw the inlet hoses and reposition the drain hose. @@@@It is therefore a good idea to clean them from time to time. Turn off the water taps. Unscrew the water inlet hoses. Clean the filters using a hard bristle brush. Tighten up the inlet hoses. **P1090 20 Something Not Working** Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Force Centre, please carry out the checks listed below.

IMPORTANT: if you call out an engineer to a fault listed below, or to repair a fault caused by incorrect use or installation, a charge will be made even if the appliance is under guarantee. **Symptom** The machine does not start **Possible causes** I I I I I The door has not been closed. The plug is not properly inserted in the power socket. There is no supply at the socket The main fuse or the fuse in the plug has blown. The selector dial is not correctly positioned. The ON/OFF button has not been depressed. Ensure the water taps are open. The filters in the inlet hoses are blocked. The inlet hoses may be squashed or kinked. The door has not been closed.

The end of the drain hose is too low. The end of the drain hose is submerged in water. There is no vent in the end of the drain hose. The drain hose may be squashed or kinked. The RINSE HOLD option has been selected. The drain filter may be blocked. The drain hose extension, if fitted, is not correct. Follow the instructions for connecting to the waste. The drainage system pipes are blocked. The wash load is unbalanced: redistribute the clothes inside the drum to allow the machine to spin.

Too much detergent or unsuitable detergent has been used (creates too much foam). Check whether there are any leaks from one of the inlet hose(s) fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. The drain hose may be damaged or not securely positioned. The detergent dispenser drawer or recess is clogged.

The drainage system pipes are blocked. Too little detergent or unsuitable detergent has been used. An insufficient amount of detergent leaves the laundry looking grey and causes lime scale to form. Stubborn stains have not been treated prior to washing The correct wash programme has not been selected. Too much laundry has been placed in the drum.

The internal packing has not been removed. The machine is in contact with the wall or furniture. The machine is not stable and level (check diagonally). The washing load is badly distributed in the drum. Maybe there is very little laundry in the drum. **21** The machine does not fill I I I I The machine fills then empties immediately The machine does not empty and/or does not spin I I I I I I I I There is water on the floor I I I I Unsatisfactory washing results I I I I The machine vibrates when spinning I I I I **Symptom** The door will not open **Possible causes** I I I The programme is still running. The door lock has not yet released. Water in the tub: the door cannot be opened if water is present in the tub. The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum.

This may happen several times before the unbalance disappears and normal spinning can resume. If, after 10 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin. In this case, redistribute the load manually and reselect the spin programme. The machine is fitted with a type of motor which makes an unusual noise compared with other traditional motors.



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/946959)

[WDR1030 user guide](http://yourpdfguides.com/dref/946959)

<http://yourpdfguides.com/dref/946959>

This new motor ensures a softer start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine. Machines based on modern technology operate very economically using very little water without affecting performance. The drying time has not been selected. The RINSE HOLD option has been selected. The water taps are not turned on. The drain filter is clogged. The machine is overloaded. The selected drying time/section is not suitable for the laundry. Mod. ..

.....
... Prod. No.

..... Ser. No. ..

.....

.. Spinning starts late or the machine does not spin I The machine makes an unusual noise I No water is visible in the drum The machine does not dry or does not dry properly I I I I I I I Service & Spare Parts In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Tricity Bendix Service Force Centre by telephoning: 0870 5 929929 Your telephone call will be automatically routed to the Service Force Centre covering your post code area. The addresses are listed on the following pages and can also be found in your local telephone directory under "T".

@ @ @ @ Your name, address and post code 2.

Your telephone number 3. Clear and concise details of fault 4. @ @ 5. The purchase date P0042 Mod.

.... Prod. No.

.....

.. Ser. No. @ @ @ @ @ @ @ @ @ @ Home visits are made between 8.

30am and 5.30pm Monday to Friday. @ @ @ @ Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements. Products of Tricity Bendix manufacture which are NOT marketed by Tricity Bendix. European guarantee If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications: G The guarantee starts from the date you first purchased your product. G The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products. G The guarantee relates to you and cannot be transferred to another user. G Your new home is within the European Community (EC) or European Free Trade Area. G The product is installed and used in accordance with our instructions and is only used domestically, i.e.

a normal household. G The product is installed taking into account regulations in your new country. Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances. France Senlis +33 (0)344 62 22 22 Germany Nurnberg +49 (0)911 323 2600 Italy Pordenone +39 (0)1678 47053 Sweden Stockholm +46 (0)8 738 79 50 UK Slough +44 (0)1753 219898 23 To contact your local Service Force Centre telephone 08705 929 929 NORTH EAST CHANNEL ISLANDS GUERNSEY ISLE OF LEWIS Guernsey Electricity PO Box 4 Vale, Guernsey Channel Islands GY1 3AD Jersey Electricity Company Haut De Lorme Rue De Haut De Lorme Trinity Jersey Channel Islands JE3 5FG ND Macleod 16 James Street Stornoway Isle of Lewis PA87 2QW 2, 6 & 8 Woodmarket Kelso Borders TD5 7AX 7 King Street Kirkwall Orkney KW15 1JF Scottish Hydro Electric Central Warehouse Inveralmond Perth PH1 3AF 3-4 Carlton Place Lerwick Shetland ZE1 0PW Bolts Shetland 26 North Road Lerwick Shetland ZE1 0PE Leask Electrical Harisdale Symbister, Whalsay Shetland ZE2 9AA GATESHEAD KELSO Unit 356a Dukesway Court Dukesway Gateshead NE11 0BH 15 Hainton Avenue Grimsby N. E. Lincs DN32 9AS Unit 1 Boulevard Industrial Estate Hull HU3 4AY 64-66 Cross Gates Road Cross Gates Leeds LS15 7YS Unit 23 Northfield Way Aycliffe Industrial Park Newton Aycliffe DL5 6EJ Pennine House Roman Ridge Road Sheffield S9 1GB JERSEY GRIMSBY ORKNEY HULL SCOTLAND ABERDEEN PERTH 54 Clarendon Street Aberdeen AB10 6RA 33a Burnside Auchtermuchty Fife KY14 7AJ Unit 5 Block 2 Auchentraith Ind. Estate Rosendale Way Blantyre G72 0NJ 93 Irish Street Dumfries DG1 2 PQ 7 Hill Street Dumoon Argyll PA23 7AL Unit 12 Dumbyden Ind. Estate 2 Dumbyden Road Edinburgh EH14 2AB Unit 4 Wellington Road Bishopriggs Glasgow G64 2SA Unit 3BI Smithton Ind. Estate Smithton Inverness IV2 7WL R Haggerty Bruach Blackwaterfoot Isle of Arran J Zerfah 244 Bruernish Isle of Barra Western Islands HS9 5QY Walker Engineering Glenmhor Upper Serpentine Road Rothesay Isle of Bute PA20 9EH LEEDS (OWN SALES) SHETLAND AUCHTERMUCHTY NEWTON AYCLIFFE BLANTYRE (OWN SALES) SHETLAND (OWN SALES) WHALSAY SHEFFIELD DUMFRIES DUNOON (OWN SALES) NORTH WEST BIRKENHEAD NORTHERN IRELAND BELFAST EDINBURGH Owenmore House Kilwee Business Park Dunmurry Belfast BT17 0HD 1 Kelvin Park Dock Road Birkenhead CH41 1LT Unit 7 James Street Workshops James Street Carlisle Cumbria CA2 5AH South Quay Ind.

Estate Douglas Isle of Man IM1 5AT Unit B Central Industrial Estate St Marks Street Bolton BL3 6NR Unit 250 Dawson Place Bamber Bridge Preston Lancashire PR5 8AL Unit 20 Haigh Park Haigh Avenue Stockport SK4 1QR CARLISLE GLASGOW WALES CARDIFF ISLE OF MAN INVERNESS Unit 4 Guardian Industrial Estate Clydesmuir Road Cardiff CF2 2QS Unit 6-7 Coed Parc Abergele Road Rhuddlan Clwyd LL18 5UG Unit 9 St. Clears Business Park Tenby Road St. Clears Carmarthen SA33 4JW Plas Ffynnon Warehouse Middleton Road Oswestry SY11 2PP BOLTON CLYWD ISLE OF ARRAN PRESTON ISLE OF BARRA DYFED STOCKPORT ISLES OF BUTE OSWESTRY 24 To contact your local Service Force Centre telephone 08705 929 929 SOUTH EAST MIDLANDS BIRMINGHAM LONDON & EAST ANGLIA BECKENHAM 66 Birch Road East Wyrley Trading Estate Witton Birmingham B6 7DB Pinfold Road Bourne PE10 9HT 68 St. Marys Street Bridgnorth Shropshire WV16 4DR 101 Rycroft Street Gloucester GL1 4NB Units 3 & 4 Bank Buildings Cattle market Hareford HE4 9HX Higham Ferrers Northants NN10 8PL Unit 2 Furnace Road Ilkeston DE7 5EP Unit 7 Oaks Industrial Estate Coventry Road Narborough Leicestershire LE9 5GF Unit 8 Clifton Street Stone Field Park Lincoln LN5 8LQ 18-21 Croft Road Brampton Ind. Estate Newcastle under Lyme Staffordshire ST5 0TW 13 Thornhill Road North Moons Moat Redditch Worcestershire B98 9ND Unit 3 Sterling Park Claymore Tamworth B77 5DQ Units 1 & 2 Northbrooks Close Gregorys Mill Ind.

Estate Worcester WR3 8BP 11a Gardner Ind. Estate Kent House Lane Beckenham Kent BR3 1QZ Hanbury Road Widford Ind. Estate Chelmsford Essex CM12 3AE Unit 14 Capitol Park Capitol Way Colindale London NW9 0EQ 194 Court Road Mottingham Eltham London SE9 4EW 284 Alma Road Enfield London EN3 7BB Unit B4 Imperial Business Estate West Mill Gravesend Kent DA11 0DL Unit 6C Elton Park Business Centre Hadleigh Road Ipswich IP2 0DD 16-17 Woodside Ind. Park Works Road Letchworth Herts SG6 1LA 2 - 4 Royal Lane Yiewsley West Drayton Middlesex UB7 8DL Reform Road Maidenhead Berkshire SL6 8BY 10 Island Farm Avenue West Molesey Surrey KT8 2UZ 9 Pipers Court Berkshire Drive Thatcham Berkshire RG19 4ER 2b Trafalgar Street Norwich NR1 3HN Unit 1a The Summit Hanworth Road Sunbury on Thames TW16 5DB ASHFORD BOURNE BRIDGNORTH CHELMSFORD Unit 2 Bridge Road Business Centre Bridge Road Ashford Kent TN23 1BB Unit 1 Redfields Ind.



[You're reading an excerpt. Click here to read official TRICITY WDR1030 user guide](#)

Estate Church Crookham Fleet Hampshire GU13 0RD 21-25 Bridge Road Haywards Heath Sussex RH16 1UA Unit 30 Deacon Trading Estate Morley Road Tonbridge TN9 1RA FLEET COLINDALE GLOUCESTER HEREFORD HAYWARDS HEATH ELTHAM TONBRIDGE ENFIELD HIGHAM FERRERS 30 High Street GRAVESEND SOUTH WEST BARNSTAPLE ILKESTON LEICESTER IPSWICH Main Road Fremington Barnstaple North Devon EX31 2NT Bournemouth Dorset BH1 4PW BOURNEMOUTH 63-65 Curzon Road LINCOLN LETCHWORTH BRIDGEWATER 6 Herswell Business Park Salmon Parade Bridgwater Somerset TA6 5PY 11 Eldon Way Eldonwall Trading Estate Bristol BS4 3QQ 266 Main Road Southbourne Emsworth PO10 8JL Unit 8 Enterprise Court Ryde Business Park Ryde Isle of Wight PO33 1DB Zealley Ind.

Estate Kingsteignton Newton Abbot TQ12 3TD Unit 7D Pool Ind. Estate Druids Road Redruth Cornwall TR15 3RH NEWCASTLE UNDER LYME LONDON BRISTOL MAIDENHEAD EMSWORTH REDDITCH MOLESEY ISLE OF WIGHT TAMWORTH NEWBURY NEWTON ABBOT Unit 2 WORCESTER NORWICH REDRUTH SUNBURY 25 Installation Instructions @@Care must be taken to ensure that the appliance does not stand on the electrical supply cable. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Should the appliance power supply cable need to be replaced, this should be carried out by our Service Force Centre. Technical Specifications DIMENSIONS Height Width Depth 85 cm 60 cm 58 cm 240 V/50 Hz 2050 W (10A) Minimum (hot) Minimum Maximum Washing Cotton, linen Synthetics Delicate fabrics Wool Drying Cotton, linen Synthetics Maximum Energy Water Time 0.35 bar (3.5 N/cm²) 0.48 bar (4.8 N/cm²) 7.

6 bar (76 N/cm²) 4.5 kg 2 kg 2 kg 1 kg 2.25 kg 2 kg 1000 rpm 1.05 kWh 60 litres 135 mins POWER SUPPLY VOLTAGE TOTAL POWER ABSORBED WATER PRESSURE MAX LOAD CAPACITY SPIN SPEED CONSUMPTION DATA FOR WASHING 4.5 KG NORMALLY SOILED COTTON ITEMS AT 60°C (PROGR.3) WITH COLD AND HOT WATER FILLING This appliance complies with the following E.E.C. Directives: - 73/23 EEC of 19.2. 73 (Low Voltage Directive) and subsequent modifications; - 89/336 EEC of 3.5.89 (Electromagnetic Compatibility Directive) and subsequent modifications. 26 Unpacking All transit bolts and packing must be removed before using the appliance. You are advised to keep all the packaging for re-use in case the machine is to be transported again.

Using a spanner unscrew and remove the rear right bolt. Lay the machine gently on its back, making sure that the hoses are not squashed. Positioning Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units.

Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. Your new washer-dryer has been designed to be permanently plumbed in to your home's water supply and drainage system. However, if this is not possible, it may be connected to suitable existing taps with the drain hose discharging into a sink. The appliance has two inlet hoses, hot and cold, with female 3/4" BSP thread connectors. If this connection is not compatible with the plumbing of the existing installation, a variety of connectors are available from good hardware stores and plumbers merchants to suit most domestic plumbing. Any alteration to your existing plumbing must be carried out by a competent person, or qualified plumber. P0255 Remove the polystyrene block from the bottom of the machine. Carefully slide out the right polythene bag (1). Repeat the operation for the left polythene bag (2). Installation on a Suspended Floor Suspended wooden floors are particularly susceptible to vibration.

To help prevent vibration we recommend you place a waterproof wood panel, at least 15 mm thick under the appliance, secured to at least 2 floor beams with screws. If possible install the appliance in one of the corners of the room, where the floor is more stable. 2 P1068 P1066 1 Water inlet The inlets on the back of the appliance are colour coded, blue for cold and red for hot. Connect the hoses to a tap with a 3/4" thread. Remove the polystyrene base. Set the machine upright and remove the two remaining bolts from the back. Pull out the three plastic spacers from the holes into which the bolts were fitted. Plug all the holes with the plugs which you can find in the envelope containing the instruction booklet. P1088 P0256 P0020 27 If only a cold water supply is available, connect the two hoses to a cold water outlet by means of a «Y» connection piece. Installation should comply with local water authority and building regulations' requirements.

The appliance must be given a separate cold water supply and not be connected to a mixer tap, a single outlet water heater or a booster pump. A minimum water pressure of 0.48 bar is required for safe operation of the appliance. If you cannot make the cold water connection direct from the rising mains, you may be able to operate the appliance from your cold water storage system. There should be a minimum distance of 5.

02m (16.5 ft) between the appliance's inlet and the bottom of the water storage tank. There will be sufficient pressure for the hot water supply, providing there is a minimum height of 2.74 metres (9 ft) between the bottom of the cold water storage tank and the bottom of the hot water cylinder. Set the hoses correctly by loosening the ring nuts.

@@@An additional drain hose and joining piece is available from your local Service Force Centre. The joining piece must have an internal diameter of 18mm. If you intend the drain hose to empty into a sink, make sure that the sink is empty and the plug hole is not blocked. Use the plastic "U-Piece" supplied. P0021 P0022 Water drainage This appliance is designed to be permanently plumbed into your home's water supply and drainage system. The appliance drain hose should hook into a standpipe, the hook in the drain hose is formed using the plastic "U-Piece" supplied. @30 cm.(12") 28 Min.60 cm. @@@@If you require any further advice please contact your local water authority.

P1051 Any necessary adjustment can be made with a spanner. Accurate levelling prevents vibration, noise and displacement of the machine during operation. Some vibration is inevitable, especially if mounted on a wooden floor. Sprung wooden floors are particularly susceptible to vibration. For advice, consult a builder. If possible, always place the machine on a solid floor. SHOWER SINK BATH TOILET BIDET Special conditions If the floor is carpeted or covered with crumbly or soft material, insert a rigid support base under the feet to prevent noise, vibration or displacement.



[You're reading an excerpt. Click here to read official TRICITY](#)

[WDR1030 user guide](#)

<http://yourpdfguides.com/dref/946959>

The base should protrude a few centimetres beyond the edges of the machine. *Warning* The machine should NOT be placed on deep pile carpeting. Note Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown.

WASHING MACHINE RAINWATER 'RUN-OFF' DISHWASHER FOUL DRAIN SURFACE WATER DRAINS & SEWERS FOUL SEWERS SEWAGE TREATMENT WORKS TREATED DISCHARGE RIVER RIVER UNTREATED DISCHARGE P0987 29 Electrical connection Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. **WARNING: THIS APPLIANCE MUST BE EARTHED.** The manufacturer declines any liability should this safety measure not be observed. Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate. The rating plate is located at the top of the rim of the open door.

Mod.

..... Prod. No. ..

..... Ser.

No.

.....

The wire coloured brown must be connected to the terminal marked «L» or coloured red. Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath. **WARNING:** A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely. Should the appliance power supply cable need to be replaced, this should be carried out by our Service Force Centre. Note When the appliance is installed the power supply cable must be accessible. Mod. ...

..... Prod. No. .

.....

.....

P0042 Permanent connection In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations. The switch must not break the yellow and green earth cable at any point. Ser. No.

... The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS1363A) fuse must be used. Should the plug need to be replaced for any reason, proceed as described below. The wires in the mains lead are coloured in accordance with the following code: Green and Yellow - Earth Blue - Neutral Brown - Live GREEN & YELLOW E 13 A N L BROWN BLUE P1041 CORD CLAMP The wire coloured green and yellow must be connected to the terminal marked with the letter «E» or by the earth symbol or coloured green and yellow. The wire coloured blue must be connected to the terminal marked «N» or coloured black. 30 Tricity Bendix, 55-77High Street, Slough, Berkshire SL1 1DZ Consumer care telephone number 08705 950950 © Electrolux Household Appliances Limited 2001 .



[You're reading an excerpt. Click here to read official TRICITY](#)

[WDR1030 user guide](#)

<http://yourpdfguides.com/dref/946959>