




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY WDR1040W. You'll find the answers to all your questions on the TRICITY WDR1040W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY WDR1040W
User guide TRICITY WDR1040W
Operating instructions TRICITY WDR1040W
Instructions for use TRICITY WDR1040W
Instruction manual TRICITY WDR1040W

TRICITY BENDIX

OPERATING & INSTALLATION
INSTRUCTIONS

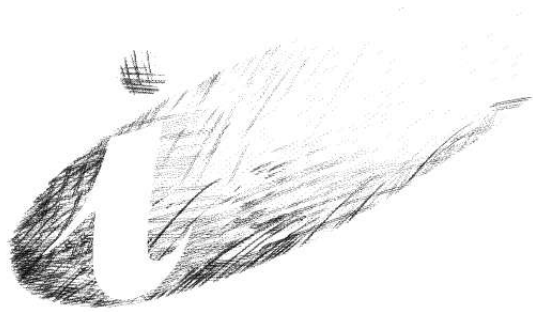

WASHER-DRYER

WDR 1040 W

WDR 1240 W

132993190



[You're reading an excerpt. Click here to read official TRICITY WDR1040W user guide](http://yourpdfguides.com/dref/946960)
<http://yourpdfguides.com/dref/946960>

Manual abstract:

@@Care should be taken when moving it. @@All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in instructions. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Care must be taken to ensure that the appliance does not stand on the electrical supply cable. @@@@Pets and children have been known to climb into washer-dryers. Please check your drum before use. The glass door becomes very hot during the washing and drying cycle.

@@Keep all packaging well away from children. @@Do not overload the appliance. See relevant section in the instruction book. Only wash and dry fabrics which are designed to be machine washed and dried. If in doubt, consult the care label on the clothes.

Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing 2 frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed. Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine. Garments which have been in contact with volatile petroleum products should not be machine washed.

If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum. Only use the advised quantities of fabric softener. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities. As some duvets and eiderdowns should be washed/dried in large commercial machines because of their bulk, please check with the manufacturer of the item before washing in a domestic machine. The users should always check that they have not left their gas lighters (disposable or otherwise) in their clothing. Never tumble dry items that have had contact with chemicals such as dry cleaning fluid. These are of a volatile nature and could cause an explosion. Only tumble dry items which have been washed in water or require airing.

Plastic detergent dispensers should not remain in the drum during the drying cycle, as the plastic used is not designed to withstand the heat. If you wish to wash-through-to-dry you should use the conventional detergent dispenser drawer. Leave the porthole door slightly ajar between washes to preserve the door seal. Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Tricity Bendix Service Force Centre. Always insist on genuine Tricity Bendix spare parts. Contents For the User Important Safety Information Your New Washer-Dryer Description of the Appliance The Control Panel Operating sequence Washing 4.5 kg of white cotton at 95°C Load the laundry Measure out the detergent Measure out the fabric softener Select the required programme Start the machine At the end of the programme Washing 2 kg of mixed fabrics at 50°C Load the laundry Measure out the detergent Measure out the fabric softener Select the programme Start the machine At the end of the programme Drying 2.25 kg of cotton Load the laundry Select the programme Select the required time Start the machine At the end of the programme Autodrying 1 kg of mixed fabrics Load the laundry Add the washing powder and additive Select the programme Select the required time Start the machine At the end of the programme Which detergent to use?.

... And in which form? Fabric Conditioners 2 4 5 5 6 7-11 7 7 7 7 7 8 9 9 9 9 9 10 10 10 10 10 10 11 11 11 11 11 11 11 11 12 13 13 13 Detergent dispenser drawer Descaling After each wash Maintenance wash External cleaning Cleaning the dispenser drawer Cleaning the drawer recess Cleaning the filter The dangers of freezing Wash Care Symbols Washing Programmes Drying Programmes Maintenance and Cleaning 14 15-16 17 18-19 18 18 18 18 18 18-19 19 20-21 21 22 Something Not Working Service and Spare Parts Guarantee Conditions For the Installer Installation Instructions Technical Specifications Unpacking Positioning Water inlet Water drainage Levelling Special conditions In the interest of the environment Electrical connection 23 23 24 24 25 25-26 26 26 26 27 Washing and Drying Hints Guide to use the Instruction Book The following symbols will be found in the text to guide you throughout the instructions: Safety instructions Hints and tips Environmental information 3 Your New Washer-Dryer Your new washer-dryer meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption. It is gentle with your laundry, simple to use and easy to care for. The special wool programme with its new delicate wash system treats your woollens with extreme care. The anti-unbalance device ensures that the machine remains stable when spinning. Automatic cooling of the wash water to 60°C before draining, with the 95°C programme. This reduces thermal shock to fabrics, helping to prevent creasing. The two drying programmes will give your wash that soft, relaxed feel whatever the weather.

In the interest of the environment Ecological hints To save water and energy and help protect the environment, we recommend that you follow these hints: Adjust the quantity of detergent according to the hardness of your water supply, the amount of laundry and the degree of soiling. A programme without prewash is sufficient for normally soiled laundry. Try to load the maximum washing and drying capacity of the machine as small loads are uneconomical. Always load well spun laundry. The higher the spin speed, the lower the electricity consumption and the shorter the drying times. Materials marked with the symbol are recyclable. Check with your local Council or Environmental Health Office to see if there are facilities in your area for re-cycling this appliance. When the appliance is to be scrapped, cut off the power supply cable and make the door lock device unusable to prevent young children from being trapped inside. Help to keep your country tidy - use authorised disposal sites for your old appliance. How do we help to protect the environment? We use recycled paper! Important Your machine is fitted with a balance control device, which ensures the machine is stable during the spin.

If the wash load appears not to have been spun sufficiently at the end of the wash cycle, because it is not evenly distributed in the drum, the balance control device may have operated. It will therefore be necessary to redistribute the wash load manually and select a spin programme.



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/946960)

[WDR1040W user guide](http://yourpdfguides.com/dref/946960)

<http://yourpdfguides.com/dref/946960>

For more detailed information see the section headed "Something Not Working". 4 Description of the Appliance 1 Detergent dispenser drawer 2 Programme guide 3 Drying indicator Light 4 Drying Time Selector Dial 5 ON/OFF Button 6 Half Load Button 7 "Mains-on" Light 8 Programme Selector Dial 9 Door opening handle 10 Filter 11 Adjustable feet 1 34 6 5 78 1000 rpm COTTONS - LINENS WHITES with PREWASH WHITES FAST COLOURS NON FAST COLOURS 95° 1 95° 2 60° 3 40° 4 SYNTHETICS MIXED FABRICS QUICK AND COOL Rinses Conditioner rinse Short spin 50° 7 30° 8 DELICATE FABRICS WOOL 40° DELICATES 40° Rinses Drain PROGRAMME DRYING TIME 13 14 15 16 HALF LOAD MAINS ON Long spin FULL HEAT DRYING 5 6 HALF HEAT DRYING 9 10 11 12 WASHER DRYER REVERSE ACTION WDR 1040 W 2 9 10 11 Detergent dispenser drawer Prewash Main wash Fabric softener C0026 5 The Control Panel 1000 rpm COTTONS - LINENS WHITES with PREWASH WHITES FAST COLOURS NON FAST COLOURS 95° 95° 60° 40° PROGRAMME SYNTHETICS MIXED FABRICS QUICK AND COOL Rinses Conditioner rinse Short spin DELICATE FABRICS WOOL 40° DELICATES 40° Rinses Drain DRYING TIME 13 14 15 16 HALF LOAD MAINS ON Long spin FULL HEAT DRYING 1 2 3 4 5 6 50° 7 30° 8 HALF HEAT DRYING 9 10 11 12 WASHER DRYER REVERSE ACTION WDR 1040 W 1 2 3 4 5 6 7 1 Programme guide 2 Drying indicator Light This light illuminates when the machine is drying. 5 HALF LOAD Button Select this button to reduce water consumption on the rinse cycle when washing a smaller load of cottons or linens (maximum load size = 2.25 kg). 3 Drying time Selector Dial Graduated up to 120 mins for cottons (black section) and synthetics (red section), this dial allows you to select the desired drying time according to the type and quantity of laundry and the required degree of dryness. Turn the dial clockwise only. 6 MAINS-ON Light This light illuminates when the machine starts working and goes out when the ON/OFF button is released. 7 Programme Selector Dial Turn the dial clockwise to select the required wash and drying programme.

Before setting the dial to any position the machine must be switched off by depressing the ON/OFF button again. Cooling phase To allow the laundry to cool down, a cooling phase starts automatically 10 minutes before the end of drying and this phase must in no circumstances be reduced or interrupted. 4 On/Off Button By depressing this button the machine starts operating. When depressed again, the machine stops. 6 Operating Sequence Before the first wash, we recommend that you run a cotton cycle at 60°C, without any laundry in the machine, to remove any manufacturing residue from the drum and tub.

Pour 1/2 a measure of detergent into the main wash compartment of the dispenser drawer and start the machine. WASHING 4.5 KG OF WHITE COTTON AT 95°C Suppose you have 4.5 kg of normally soiled laundry to wash. It is white cotton and is suitable for high temperature washing.

3. Measure out the fabric softener If required, pour fabric softener into the compartment marked (the amount used must not exceed the "MAX" mark in the drawer). Close the drawer gently. 1. Load the laundry Open the door by pulling the door handle outwards. Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door. C0024 4. Select the required programme Turn the programme selector dial clockwise to the programme 2 or 1 (if you wish to perform a prewash). 2 P0004 P1006S 2.

Measure out the detergent Pull out the dispenser drawer until it stops. Measure out the amount of detergent required and pour it into the main wash compartment. If you wish to carry out the prewash, pour detergent into the compartment marked. 5. Start the machine Before starting up the machine check that: the appliance is plugged in the water supply tap is turned on the drain hose is correctly and securely positioned the door and the detergent dispenser drawer are closed. Depress the ON/OFF button: the mains-on light will illuminate and the machine starts operating. C0025 T0003 7 6. At the end of the programme The machine stops automatically. The door is controlled by a safety device which releases 2 minutes after the end of the programme. Switch the machine off bundry is still too damp, select a further brief drying time, bearing in mind that during the last 10 minutes the appliance carries out a cooling and anticrease phase.

Remove the laundry. When the programme has finished you are advised to unplug the appliance and turn off the water tap. Do not use a dosing device when carrying out a NON-STOP programme. 3. Select the programme Turn the programme selector dial clockwise to programme 7.

7 P1006d 4. Select the required time Following indications given in the programme chart on page 17, turn the time selector dial clockwise to the 60 mins setting (red section). 60 80 M003IS 5. Start the machine Depress the ON/OFF button: the mains-on light comes on and make them last longer you should use different types of detergent for different washes, whether for whites, colours or delicates. And in which form? Not only are there different types of detergent, but they are also available in different forms.

Whether you chose a powder or liquid in traditional or compact form is your own personal choice. TRADITIONAL POWDERS Pour the powder directly into the dispenser drawer. Do not sprinkle powder onto clothes in the machine drum. WHITES We recommend the Ariel product range which is biological and designed to provide excellent cleaning and stain removal even at low temperatures. TRADITIONAL LIQUIDS Liquid can be placed in the main wash compartment of the detergent drawer marked with the symbol, start the machine immediately upon placing the detergent in the dispenser drawer.

Alternatively the detergent is measured into the specially designed dosing device* which should be placed on top of the laundry, and at the back of the machine drum. NON BIOLOGICAL If you prefer to use a non biological detergent, which does not contain enzymes we recommend Fairy. Fairy provides good cleaning and stain removal. COMPACT POWDERS AND LIQUIDS Compact detergents (or concentrates as they are also known) are available in liquid or powder form, and generally require a smaller dosage. Follow the manufacturer's instructions to ensure the most economical usage.

Pour the detergent directly into the dispenser drawer, or alternatively measure the detergent into the specially designed dosing device* which should be placed on top of the laundry, and at the back of the machine drum. * If you use a dosing device in a washer dryer, please ensure the dosing device/ball is removed before carrying out a drying programme. COLOURED For coloured items you should use a detergent which is designed to clean while maintaining the original colour.



[You're reading an excerpt. Click here to read official TRICITY
WDR1040W user guide
http://yourpdfguides.com/dref/946960](http://yourpdfguides.com/dref/946960)

Ariel Color does not contain bleach and therefore helps to preserve colours. **DELICATE ITEMS** When washing delicates such as woollens, you should use a product which is specially designed to care for fine fabrics. Drefl Automatic is suitable for woollens and other delicates. **FABRIC CONDITIONERS** These are ideal for improving 'softness', and also reduce static cling on synthetics and make ironing easier. They are available in two types: For example Lenor liquid fabric softener, for use in the washing machine/washer dryer. The liquid fabric softener should be poured into the compartment marked with the symbol .

Follow the manufacturer's dosage instructions and never exceed the MAX level.

Bounce conditioning sheets for use in a tumble dryer. We recommend the conditioning sheets are pinned (using a safety pin) to an article of laundry and placed in the tumble dryer. **13 LAUNDRY BLEACH** For additional stain removal you may wish to use a product such as Ace Gentle Bleach which is used in addition to your chosen detergent. Ace is suitable for all washable fabrics including silks, woollens and coloureds. Wash Care Symbols Wash care labels inside garments recommend how to launder your clothes with the best results.

@@@ Cotton, Linen or Viscose Colourfast at 40°C but not 60°C. Acrylics, Acetate, Triacetate, Wool mixes, Polyester/wool blends. @@@@ Once the dispenser has been filled, close it by pushing it in gently. @@@@ Fast coloured cotton or linen fabrics, shirts, underwear, towels.

@@@ Important! @@ This is quite normal and not a fault of the machine.

@@E.g. Programme 2 is selected, there is a short drain. @@@@ To drain the water select programme "11" or "16".

@@ Important! @@ This is quite normal and not a fault of the machine. @@@@ 16 Drying Programmes Degree of drying Type of fabric Max.

@@@ We recommend that a maintenance wash be performed on a regular basis. To run a maintenance wash: The drum should be empty of laundry. Select the hottest cotton wash programme. Use a normal measure of detergent, must be a powder (such as Ariel Futur).

P0038 Cleaning the filter The water drain filter A clean filter is important for the correct operating of the machine, and should therefore be cleaned after every washing programme. Open the filter door and place a container underneath to catch any spillage. If the filter is blocked and the machine is unable to drain you will need to drain the water manually from the machine at this stage. To do this, unhook the drain hose from the standpipe or sink and hold the end of the hose over a bowl on the floor. The water should drain by gravity into the bowl. When the bowl is full, hook the hose back up and empty the bowl. Repeat the procedure until water stops flowing out. **External cleaning** Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly.

Cleaning the dispenser drawer The washing powder and additive dispenser drawer should be cleaned regularly. Remove the drawer by pressing the catch downwards and by pulling it out.

Flush it out under a tap, to remove any traces of accumulated powder. To aid cleaning, the top part of the additive compartment should be removed. **P0011 P0132 18** Unscrew and remove the filter. Clean carefully under a fast running tap. The dangers of freezing If the machine is exposed to temperatures below 0°C, certain precautions should be taken.

Turn off the water tap. Unscrew the inlet hose. Unhook the drain hose from the rear support and position the end of this hose and that of the inlet hose in a bowl. Run the draining programme. Disconnect the appliance.

Screw the inlet hose and reposition the drain hose. When you intend to start the machine up again, make sure that the room temperature is above 0°C. **P0133 P0040 Warning** When the appliance is in use and depending on the programme selected there can be hot water in the filter. Never remove the filter during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the filter, ensure it is securely retightened so as to stop leaks and young children being able to remove it. **The water inlet filter** If your water is very hard or contains traces of lime deposit, the water inlet filters may become clogged. It is therefore a good idea to clean them from time to time. Turn off the water tap. Unscrew the water inlet hose. Clean the filter using a hard bristle brush.

Tighten up the inlet hose. P1090 19 Something Not Working Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below. **IMPORTANT:** if you call out an engineer to a fault listed below, or to repair a fault caused by incorrect use or installation, a charge will be made even if the appliance is under guarantee. **Symptom** The machine does not start **Possible causes** The door has not been closed. The plug is not properly inserted in the power socket. There is no supply at the socket The main fuse or the fuse in the plug has blown. The selector dial is not correctly positioned. The ON/OFF button has not been depressed.

Ensure the water tap is open.

The filters in the inlet hose is blocked. The inlet hose may be squashed or kinked. The door has not been closed. The end of the drain hose is too low. The end of the drain hose is submerged in water.

There is no vent in the end of the drain hose. The drain hose may be squashed or kinked. A programme which ends with water in tub has been selected. The drain filter may be blocked. The drain hose extension, if fitted, is not correct.

Follow the instructions for connecting to the waste. The drainage system pipes are blocked. The wash load is unbalanced: redistribute the clothes inside the drum to allow the machine to spin. Too much detergent or unsuitable detergent has been used (creates too much foam). Check whether there are any leaks from one of the inlet hose fitting. It is not always easy to see this as the water runs down the hose; check to see if it is damp. The drain hose may be damaged or not securely positioned. The detergent dispenser drawer or recess is clogged. The drainage system pipes are blocked. Too little detergent or unsuitable detergent has been used.

An insufficient amount of detergent leaves the laundry looking grey and causes lime scale to form. Stubborn stains have not been treated prior to washing The correct wash programme has not been selected. Too much laundry has been placed in the drum. The internal packing has not been removed. The machine is in contact with the wall or furniture. The machine is not stable and level (check diagonally). The washing load is badly distributed in the drum. Maybe there is very little laundry in the drum. **20 The machine does not fill** The machine fills then empties immediately The machine does not empty and/or does not spin There is water on the floor **Unsatisfactory washing results** The machine vibrates when spinning **Symptom** The door will not open **Possible causes** The programme is still running.



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/946960)

[WDR1040W user guide](http://yourpdfguides.com/dref/946960)

<http://yourpdfguides.com/dref/946960>

The door lock has not yet released.

@@@The laundry is redistributed by reverse rotation of the drum. @@@@The drying time has not been selected. The water tap are not turned on. The drain filter is clogged. The machine is overloaded.

@@.....

..... Prod. No. ...

..... Ser. No.

@@@Before calling out an engineer, please ensure you have read the details under the heading "Something Not Working". When you contact the Service Force Centre you will need to give the following details: 1. Your name, address and post code 2. Your telephone number 3. Clear and concise details of fault 4.

The model and serial number of the appliance (found on the rating plate - see picture). 5. The purchase date P0042 Mod. ..

..... Prod. No.

.....

. Ser. No. ..

.....

.. Customer Care For general enquiries concerning your Tricity Bendix appliance or for further information on Tricity Bendix products, please contact our Customer Care Department by letter or telephone as follows: Customer Care Department Tricity Bendix 55-77 High Street Slough Berkshire SL1 1DZ Tel 08705 950950* * calls to this number may be recorded for training purposes. 21 Guarantee Conditions Standard guarantee conditions We, Tricity Bendix undertake that if, within 12 months of the date of the purchase, this Tricity Bendix appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option, repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that: The appliance has been correctly installed and used only on the electricity supply stated on the rating plate. The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions. The appliance has not been serviced, maintained, repaired, taken apart or tampered with, by any person not authorised by us. All service work under this guarantee must be undertaken by a Tricity Bendix Service Force Centre. Any appliance or defective part replaced shall become the Company's property. This guarantee is in addition to your statutory and other legal rights. Home visits are made between 8.

30am and 5.30pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged. Exclusions This guarantee does not cover: Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic. Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom. Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements. Products of Tricity Bendix manufacture which are NOT marketed by Tricity Bendix. European guarantee If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications: The guarantee starts from the date you first purchased your product. The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products. The guarantee relates to you and cannot be transferred to another user.

Your new home is within the European Community (EC) or European Free Trade Area. The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household. The product is installed taking into account regulations in your new country.

Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances. France Senlis +33 (0)344 62 20 13 Germany Nurnberg +49 (0)800 234 7378 Italy Pordenone +39 (0)800 11 75 11 Sweden Stockholm +46 (0)20 78 77 50 UK Slough +44 (0)1753 219898 22 Installation Instructions

@@Care must be taken to ensure that the appliance does not stand on the electrical supply cable. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person.

Should the appliance power supply cable need to be replaced, this should be carried out by our Service Force Centre. Technical Specifications DIMENSIONS Height Width Depth 85 cm 60 cm 57 cm 230 - 240 V/50 Hz 2050 W (10A) Minimum Maximum Washing Cotton, linen Synthetics Delicate fabrics Wool Drying Cotton, linen Synthetics Maximum Energy Water Time 50 kPa 800 kPa 4.5 kg 2 kg 2 kg 1 kg 2.25 kg 1.5 kg 1000 rpm (WDR 1040W) 1200 rpm (WDR 1240W) 1.05 kWh 60 litres 140 mins POWER SUPPLY VOLTAGE TOTAL POWER ABSORBED WATER PRESSURE MAX LOAD CAPACITY SPIN SPEED CONSUMPTION DATA FOR WASHING 4.5 KG NORMALLY SOILED COTTON ITEMS AT 60°C (PROGR. 3) This appliance complies with the following E.E.C.

Directives: - 73/23 EEC of 19.2.73 (Low Voltage Directive) and subsequent modifications; - 89/336 EEC of 3.5.89 (Electromagnetic Compatibility Directive) and subsequent modifications. 23 Unpacking All transit bolts and packing must be removed before using the appliance. You are advised to keep all the packaging for re-use in case the machine is to be transported again. Using a spanner unscrew and remove the two rear bottom screws. Slide out the two plastic pins. Lay the machine gently on its back, making sure that the hoses are not squashed.

Fill all the holes with the plastic plugs supplied with the instruction booklet. P1128 P0002 Important ! You are advised to keep all the packaging for re-use in case the machine is to be transported again. In case of moving out the same precautions as per paragraph "The dangers of freezing" must be taken i.e. the residual water in the hoses must be pumped out.

P1129 P0001 Positioning Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units. Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. Your new washer-dryer has been designed to be permanently plumbed in to your home's water supply and drainage system. However, if this is not possible, it may be connected to suitable existing taps with the drain hose discharging into a sink. The appliance has two inlet hoses, hot and cold, with female 3/4" BSP thread connectors. If this connection is not compatible with the plumbing of the existing installation, a variety of connectors are available from good hardware stores and plumbers merchants to suit most domestic plumbing. Any alteration to your existing plumbing must be carried out by a competent person, or qualified plumber. Remove the polystyrene block from the bottom of the machine and release the two plastic bags.

[You're reading an excerpt. Click here to read official TRICITY WDR1040W user guide](#)



<http://yourpdfguides.com/dref/946960>

Very carefully slide out the left polythene bag, removing it towards the right and then downwards. 1 2 3 P1124 P1126 Repeat the operation for the right polythene bag, removing it towards the left and then upwards. Installation on a Suspended Floor P1127 Remove the polystyrene base. Set the machine upright and unscrew the remaining rear screw. Slide out the relevant pin.

Suspended wooden floors are particularly susceptible to vibration. To help prevent vibration we recommend you place a waterproof wood panel, at least 15 mm thick under the appliance, secured to at least 2 floor beams with screws. If possible install the appliance in one of the corners of the room, where the floor is more stable. 24 Water inlet Connect the hose to a tap with a 3/4" thread. Do not use previously used hoses for water connection. Water drainage This appliance is designed to be permanently plumbed into your home's water supply and drainage system. The appliance drain hose should hook into a standpipe, the hook in the drain hose is formed using the plastic "U-Piece" supplied. P1088 Installation should comply with local water authority and building regulations' requirements. The appliance must be connected to a cold water supply. @@@@Set the hose correctly by loosening the ring nut. @@The upright standpipe should have a minimum length of 30cm (12") from the bottom of the elbow to the top of the pipe (see diagram). Min. 30 cm.(12") P0021 3 pin Max. 90 cm.

(35.4") P1130 Make sure that it is designed in such a way, that the end of the drain hose cannot be covered with water. The drain hose may be extended to a maximum of 4 metres. An additional drain hose and joining piece is available from your local Service Force Centre. The joining piece must have an internal diameter of 18mm.

25 Min.60 cm. @@@@The feet may be tight to adjust as they incorporate a self locking nut, but the machine MUST be level and stable. Note Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown. In the interest of the environment Washer-dryers and dishwashers should be connected to the FOUL drainage system, the water will then be taken to a sewage works for treatment before being discharged safely into a river. It is essential that these appliances are not connected to the surface water drainage system as this water is discharged directly into a river or stream and may cause pollution. If you require any further advice please contact your local water authority. P1051 Any necessary adjustment can be made with a spanner. Accurate levelling prevents vibration, noise and displacement of the machine during operation. Some vibration is inevitable, especially if mounted on a wooden floor.

Sprung wooden floors are particularly susceptible to vibration. For advice, consult a builder. If possible, always place the machine on a solid floor. SHOWER SINK BATH TOILET BIDET WASHING MACHINE RAINWATER 'RUN-OFF' DISHWASHER FOUL DRAIN SURFACE WATER DRAINS & SEWERS FOUL SEWERS SEWAGE TREATMENT WORKS TREATED DISCHARGE RIVER RIVER UNTREATED DISCHARGE P0987 26 Electrical connection Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. WARNING: THIS APPLIANCE MUST BE EARTHED. The manufacturer declines any liability should this safety measure not be observed. Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate. The rating plate is located at the top of the rim of the open door. Mod. .

.....
.... Prod.
No.

.. Ser. No.

... The wire coloured blue must be connected to the terminal marked «N» or coloured black. The wire coloured brown must be connected to the terminal marked «L» or coloured red.

Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath. WARNING: A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely. Should the appliance power supply cable need to be replaced, this should be carried out by our Service Force Centre. Note When the appliance is installed the power supply cable must be accessible. Mod.

. Prod. No.
.... P0042 Ser.
No.

..... Permanent connection In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations. The switch must not break the yellow and green earth cable at any point. The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS1363) fuse must be used. Should the plug need to be replaced for any reason, proceed as described below.

The wires in the mains lead are coloured in accordance with the following code: Green and Yellow - Earth Blue - Neutral Brown - Live GREEN & YELLOW E 13 A N L BROWN BLUE P1041 CORD CLAMP The wire coloured green and yellow must be connected to the terminal marked with the letter «E» or by the earth symbol or coloured green and yellow. 27 Tricity Bendix, 55-77High Street, Slough, Berkshire SL1 1DZ Consumer care telephone number 08705 950950 © Electrolux plc 2002 .



[You're reading an excerpt. Click here to read official TRICITY](#)

[WDR1040W user guide](#)

<http://yourpdfguides.com/dref/946960>