



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for TRICITY WDR1242W. You'll find the answers to all your questions on the TRICITY WDR1242W in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual TRICITY WDR1242W
User guide TRICITY WDR1242W
Operating instructions TRICITY WDR1242W
Instructions for use TRICITY WDR1242W
Instruction manual TRICITY WDR1242W

TRICITY BENDIX

User manual			
	Washer-dryer		



WDR 1242 W



[You're reading an excerpt. Click here to read official TRICITY WDR1242W user guide](http://yourpdfguides.com/dref/946964)
<http://yourpdfguides.com/dref/946964>

Manual abstract:

To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety. Always unplug the appliance and turn off the water supply after use, cleaning and maintenance. Under no circumstances should you attempt to repair the machine yourself. @@Contact your local Service Centre. @@@@Do not touch it! Make sure that small pets do not climb into the drum. To avoid this, please check the drum before using. @@Only use the advised quantities of fabric softener and detergent. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities.

Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum. Do not use your washer-dryer to wash articles with whalebones, material without hems or torn material. This appliance is heavy. Care should be taken when moving it. When unpacking the appliance, check that it is not damaged.

If in doubt, do not use it and contact the Service Centre. All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual. After having installed the appliance, check that it is not standing on the inlet and drain hose and the worktop is not pressing the electrical supply cable.

If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely. Always be sure, that there is no water leakage from hoses and their connections after the installation. If the appliance is installed in a location subject to frost, please read the «dangers of freezing» chapter. Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person. Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person. 3 Use This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed. Only wash and dry fabrics which are designed to be machine washed and dried. Follow the instructions on each garment label. Do not overload the appliance.

See the relevant section in the user manual. Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed. Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine. As some duvets and eiderdowns should be washed/dried in large commercial machines because of their bulk, please check with the manufacturer of the item before washing in a domestic machine. The users should always check that they have not left their gas lighters (disposable or otherwise) in their clothing. Never dry items that have had contact with chemicals such as dry cleaning fluid. These are of a volatile nature and could cause an explosion.

Only tumble dry items which have been washed in water or require airing. Plastic detergent dispensers should not remain in the drum during the drying cycle, as the plastic used is not designed to withstand the heat. If you wish to washthrough-to-dry you should use the conventional detergent dispenser drawer. Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself. Never use the washer-dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the washer-dryer is accessible.

Child safety This appliance is not intended for use by person (including children) with reduced physical sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Young children should be supervised to ensure that they do not play with the appliance. The packaging components (e.g. plastic film, polystyrene) can be dangerous to children danger of suffocation! Keep them out of children's reach Keep all detergents in a safe place out of children's reach.

Make sure that children or pets do not climb into the drum. To avoid this the machine incorporates a special feature. To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal. If necessary use a coin. To disable this device and restore the possibility of closing the door, rotate the button anti-clockwise until the groove is vertical. 4 Description of the appliance 1 2 3 4 5 Detergent dispenser drawer Control panel Door opening handle Drain pump Adjustable feet 1 2 3 4 5 Detergent dispenser drawer Prewash Wash Fabric Softener 5 Control panel 1 Control Panel key symbols: = White/Coloured cottons, = «Rinse Hold» option, 2 3 4 5 6 7 8 9 10 = Drying sector = Child safety lock = Synthetics, = Rinses, = Drain, = Delicates, = Spin, Information The control panel is illustrated above. It shows the programme selector dial as well as the different buttons, the pilot lights and the display. These are represented by relevant numbers which are explained in the table below. 1 Programme selector dial and On/Off switch The programme selector dial allows you to select a programme and/or to switch the machine on/off. It can be turned either clockwise or anticlockwise.

The light of button 8 starts to flash. Press this button repeatedly to change the spin speed, if you want your laundry to be spun at a speed different from the one proposed by the washer-dryer or to select the «Rinse Hold» function. The relevant light will light up. By pressing this button you can choose the required degree of drying for cottons and synthetics between: Cupboard dry (cottons and synthetics) and Iron dry (cottons).The corresponding pilot light illuminates. 2 Spin reduction button 3 Autodry button 6 4 Drying Time button By pressing this button you can select a timed drying for cotton or synthetics; the relevant light illuminates. By pressing this button, the appliance performs a short cycle for lightly soiled items or for laundry which needs only freshening up; the relevant light illuminates. We recommend that you reduce the load. pressing this button, the machine performs some additional rinses; the relevant light illuminates 5 Super quick button 6 Extra rinse button By 7 Display The display shows the following information: duration of the selected programme, selected drying time, incorrect option selection, alarm codes, delay start, safety lock and the end of the programme.



[You're reading an excerpt. Click here to read official TRICITY](#)

[WDR1242W user guide](#)

<http://yourpdfguides.com/dref/946964>

8 Start/Pause button This button allows you to start the selected programme; the corresponding green pilot light stops flashing.

It also interrupts a programme which is running, the corresponding green pilot light starts to flash. 9 Door pilot light This light illuminates when the appliance is working (after having pressed button 8 and indicates that the door is locked. With this function, the wash programme can be delayed up to 20 hours to a more convenient time for you. The relevant light illuminates. 10 Delay start button Display The display (7) shows the following information:

Duration of the selected programme play (e.

g. 2.00). During the programme, the time remaining is updated every minute. After having pressed button 8, the light 9 illuminates and stays on.

Drying time 2.00 After selecting a programme the duration of the selected programme appears on the display (7). After selecting a drying programme, the drying time is displayed in minutes or in hours and minutes (max 130 mins= 2.10). After the programme has started the time remaining is updated every minute. Delayed start Alarm codes E20 In the event of operating problems, some alarm codes can be displayed, (see paragraph «What to do if...»). End of programme The Delayed start (up to 20 hours maximum) appears on the display for a few seconds, then the duration of the previously selected programme is displayed. The delay time value decreases by one unit every hour and then, when 1 hour remains, every minute.

Incorrect option selection 0 The End of programme is indicated by a flashing zero «0». The light 9 goes off and the door can be opened. Child safety lock The incorrect option selection is indicated by the message Err displayed for a few seconds and by flashing of the red light button 8. 2.05 This device permits you to leave the appliance unattended during its functioning. 8 Functions Rinse hold (Button 2) By selecting this function, the machine will not drain the water of the last rinse to prevent the fabrics from creasing. When the programme has finished, the light of the button 8 goes off, the display shows a flashing zero «0»

but the light 9 is still on and the door still locked to indicate that the water must be emptied out. To empty out the water see chapter «At the end of the programme». Extra Rinse (Button 6) The machine performs some additional rinses during the washing cycle. This option is recommended for people who are allergic to detergents, and in areas where the water is very soft.

Door pilot light (9) After having pressed the button 8, this light illuminates and stays on. This light indicates when the door can be opened: light 9 on: the door is locked and cannot be opened. The appliance is working. light 9 off: the door can be opened. The washing programme has finished.

Autodry (Button 3) By pressing this button you can choose the required degree of drying for cottons and synthetics between: Cupboard dry (no creasing. In this way ironing is easier. Furthermore the machine will perform additional rinses. This programme is suitable for washing heavily soiled sport items. The machine will automatically add a prewash phase before the main wash to eliminate mud stains.

We recommend that you do NOT put the detergent into the compartment of the detergent drawer. With this programme it is possible to wash free time items as pants, shirts or jackets and also jerseys made of hi-tech materials. The machine will perform some extra rinses. With this programme it is possible to rinse and spin cotton garments which have been washed by hand. The machine performs 3 rinses, followed by a final spin at maximum speed. The spin speed can be reduced by pressing button 2. For emptying out the water of the last rinse in programmes with the Rinse Hold option. Firstly, turn the programme selector dial to «O», then select programme Drain and press button 8. Separate spin for hand washed garments and after programmes with Rinse Hold option. Before selecting this programme the selector dial must be turned to «O».

You can choose the speed by means of the relevant button to adapt it to the fabrics to be spun. To reset a programme and to switch off the machine turn the selector dial to «O». A new programme can now be selected. (Wool) Handwash Easy Iron Sport Intensive Jeans Rinses Drain Spin O = Cancelling/Off 12 Washing and drying heach (whites and fast coloureds only). Ball point pen and glue: moisten with acetone (*), lay the garment on a soft cloth and dab the stain. Lipstick: moisten with acetone as above, then treat stains with methylated spirits. Remove any residual marks from white fabrics with bleach. Red wine: soak in water and detergent, rinse and treat with acetic or citric acid, then rinse. Treat any residual marks with bleach. Ink: depending on the type of ink, moisten the fabric first with acetone (*), then with acetic acid; treat any residual marks on white fabrics with bleach and then rinse thoroughly.

Tar stains: first treat with stain remover, methylated spirits or benzine, then rub with detergent paste. (*) do not use acetone on artificial silk. Detergents and additives Removing stains Stubborn stains may not be removed by just water and detergent. It is therefore advisable to treat them prior to washing. Blood: treat fresh stains with cold water.

For dried stains, soak overnight in water with a special detergent then rub in the soap and water. 14 Good washing results also depend on the choice of detergent and use of the correct quantities to avoid waste and protect the environment. Although biodegradable, detergents contain substances which, in large quantities, can upset the delicate balance of nature. The choice of detergent will depend on the type of fabric (delicates, woollens, cottons, etc.), the colour, washing temperature and degree of soiling.

All commonly available washer-dryer detergents may be used in this appliance: powder detergents for all types of fabric, powder detergents for delicate fabrics (60°C max) and woollens, liquid detergents, preferably for low temperature wash programmes (60°C max) for all types of fabric, or special for woollens only. The detergent and any additives must be placed in the appropriate compartments of the dispenser drawer before starting the wash programme.

If using concentrated powder or liquid detergents, a programme without prewash must be selected. Pour liquid detergent into the dispenser drawer compartment marked just before starting the programme. Any fabric softener or starching additives must be poured into the compartment marked before starting the wash programme. Follow the product manufacturer's recommendations on quantities to use and do not exceed the «MAX» mark in the detergent dispenser drawer. Follow the product manufacturers' instructions on quantities to use. Degrees of water hardness Follow the product manufacturers' instructions on quantities to use.



[You're reading an excerpt. Click here to read official TRICITY
WDR1242W user guide
http://yourpdfguides.com/dref/946964](http://yourpdfguides.com/dref/946964)

Use less detergent if: you are washing a small load, the laundry is lightly soiled, large amounts of foam form during washing. Degrees Level 1 2 3 4
Characteristic soft medium hard very hard German °dH 0-7 8-14 15-21 > 21 French °T.

H. 0-15 16-25 26-37 > 37 Quantity of detergent to be used The type and quantity of detergent will depend on the type of fabric, load size, degree of soiling and hardness of the water used. Water hardness is classified in so-called «degrees» of hardness. Information on hardness of the water in your area can be obtained from the relevant water supply company. 15 Before the first use **WARNING!** Ensure that the electrical and water connections comply with the installation instructions. **IMPORTANT!** Remove the polystyrene block and any material from the drum. **IMPORTANT!** Pour 2 litres of water into the main wash compartment of the detergent drawer in order to activate the ECO valve. Then run a cotton cycle at 95° or 90°C, without any laundry in the machine, to remove any manufacturing residue from the drum and tub. Pour 1/2 a measure of detergent into the main compartment of the dispenser drawer and start the machine. Child safety lock This device permits you to leave the appliance unattended without having the worry that children might be injured by or cause damage to the appliance.

This function remains enabled also when the washer-dryer is not working. There are two different ways to set this option: before pressing button 8 : it will be impossible to start the machine. after pressing button 8 it will be impossible to change any other programme or option. To enable (disable) this option press buttons 2 and 3 simultaneously for about 6 seconds until the icon appears (disappears) on (from) the display. Acoustic signals The machine is provided with an acoustic device, which sounds in the following cases: at the end of the cycle in the event of operating problems By pressing the 4 and 5 buttons simultaneously for about 6 seconds, the acoustic signal is deactivated (except in the events of operating problems).

By pressing the same buttons again, the the acoustic signal is reactivated. Operating sequence - Washing 1. Load the laundry Open the door by carefully pulling the door handle outwards. Place the laundry in the drum, one item at a time, shaking them out as much as 2. Measure out the detergent and the fabric softener possible.

Close the door. 16 Pull out the dispenser drawer until it stops. Measure out the amount of detergent required, pour it into the main wash compartment and, if you wish to carry out a programme with the prewash phase, pour it into the compartment marked . If required, pour fabric softener into the compartment marked (the amount used must not exceed the «MAX» mark in the drawer). Close the drawer gently. Select the required programme by turning the programme selector dial (1) Turn the programme selector dial to the required programme. The green light of button 8 starts to flash. It can be turned either clockwise or anticlockwise. On position «O» the programme is reset and the machine is switched OFF. At the end of the programme the selector dial must be turned to position «O», to switch the machine off.

IMPORTANT! If you turn the programme selector dial to another programme when the machine is working, the red light of the button 8 flashes 3 times and the message Err is displayed on the display to indicate a wrong selection. The machine will NOT perform the new selected programme. @@@@The relevant light illuminates. @@Every time you press this button the time increases by 5 mins. @@@@On the display will appear the symbol «O». @@@@The door will be locked throughout the delay time. @@After you have closed the door, press the same button again. Note! @@@@The appliance starts operating and the door is locked. @@@@**IMPORTANT!** @@@@Start the new programme by pressing button 8 again. The washing water in the tub will not empty out.

@@Press this button again to restart the programme. @@You can now select a new programme. @@If the light 9 goes off, the door can be opened.

@@@@@At the end of the programme The washer-dryer stops automatically. @@The button 8 light and the light 9 go off.

@@turn the programme selector dial to «O» 2. select the Drain» or «Spin» programme 3. reduce the spin speed, if needed, by pressing button 2 4. press button 8 5. at the end of the programme, the display shows «O», the light 9 goes off.

It will be possible now to open the door. Turn the programme selector dial to «O» to switch the machine off. Remove the laundry from the drum and carefully check that the drum is empty. If you do not intend to carry out another wash, close the water tap. Leave the door open to prevent the formation of mildew and unpleasant smells. Operating sequence - Drying only The max load to dry in your washer -dryer is 3 kg for cotton and 2 kg for synthetics. The water tap must be open and the drain hose must be positioned in the sink or connected to the drain pipe. 1. Load the laundry. 2.

Turn the selector dial to «Cottons» or «Synthetics» programme in the «Drying» section. 3. If you wish to select the automatic drying (Cupboard dry or Iron dry), press button 3 until the light corresponding to the desired dryness degree for synthetics or cotton illuminates. 4. If you wish to select a timed drying, press button 4 until the time you want appears on the display (see the drying programmes). Note! The drying time will automatically increase by up to 2 minutes. This is quite normal. 5. Press button 8 to start the programme. After the programme has started, the time remaining is updated every minute.

6. At the end of the programme, the buzzer sounds. A flashing zero «0» appears on the display. The last 10 minutes of the drying cycle correspond to an anti-crease phase. @@Note! If you wish to open the door before or during the anti-crease phase or to interrupt it, press any button or turn the programme selector dial to any programme position (except «O»), the door can be immediately opened.

7. @@Remove the laundry. 19 Autodrying (NON-STOP programme) Warning! For NON-STOP programmes, it is essential not to exceed the maximum load sizes of 3 kg for cotton and 2 kg for synthetics. Do not use a dosing device/ball when carrying out a washing & drying programme. 1.

Load the laundry. 2. Add detergent and fabric softener. 3. Switch the machine on by turning the selector dial to the selected wash programme/fabric. 4. Select the required options by pressing the relevant buttons. Warning! If possible, do not select a spin speed lower than that proposed by the appliance to avoid a too long drying time so saving energy. In any case the reduction of the spin speed is only possible after selecting drying. The lowest value with automatic drying for cottons and synthetics is 900 r.



[You're reading an excerpt. Click here to read official TRICITY](#)

[WDR1242W user guide](#)

<http://yourpdfguides.com/dref/946964>

p.m. · The lowest value with timed drying you can select for synthetics is 700 r.p.m. 5. Select the drying time or a dryness degree by pressing buttons 3 or 4 (see the drying programmes). 6. Start the programme by pressing button 8.

At the end of the drying cycle, the buzzer sounds. A flashing zero «0» appears on the display. 7. 8. Descaling The water we use normally contains lime.

This will help to prevent the formation of lime deposits. We recommend that a maintenance wash be performed on a regular basis. To run a maintenance wash: The drum should be empty of laundry. Select the hottest cotton wash programme. Use a normal measure of detergent, must be a powder with biological properties.

External cleaning Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly. Cleaning the dispenser drawer The washing powder and additive dispenser drawer should be cleaned regularly. To aid cleaning, the top part of the additive compartment should be removed. Remove the drawer by pressing the catch downwards and by pulling it out. Flush it out under a tap, to remove any traces of accumulated powder. Cleaning the drawer recess Having removed the drawer, use a small brush to clean the recess, ensuring that all washing powder residue is removed from the upper and lower part of the recess. Replace the drawer and run the rinse programme without any clothes in the drum. Cleaning the pump The pump should be inspected if the machine does not empty and/or spin · the machine makes an unusual noise during draining due to objects such as safety pins, coins etc. blocking the pump.

Proceed as follows: · disconnect the appliance.

· if the appliance is operating, wait, if necessary, until the water has cooled down. · open the pump door levering on the groove with a coin. · place a bowl with a small edge close to the pump to collect any spillage 1 2 22 · pull out the emergency emptying cap from the filter cover, using a pliers. · when no more water comes out, unscrew the pump cover, using a pliers, and remove the filter. Always keep a rag nearby to dry up spillage of water when removing the cover. **IMPORTANT!** When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely retightened so as to stop leaks and young children being able to remove it. Cleaning the water inlet filter If your water is very hard or contains traces of lime deposit, the water inlet filter may become clogged. It is therefore a good idea to clean it from time to time.

Turn off the water tap. Unscrew the water inlet hose. Clean the filter using a hard bristle brush. Tighten up the inlet hose. 2 1 · Remove any objects from the pump impeller by rotating it.

· replace the emergency emptying cap into the filter cover and fix it firmly. The dangers of freezing If the machine is exposed to temperatures below 0°C, certain precautions should be taken: · pull out the plug from the power socket; · Close the pump door. 23 · turn off the water tap. · unscrew the inlet hose. · place a bowl with a small edge close to the pump to collect any spillage from the emergency emptying hose.

Place the end of the inlet hose in a bowl placed on the floor and let water drain out. · screw the water inlet hose back on and reposition the emergency emptying cap on again into the filter cover. · when you intend to start the machine up again, make sure that the room temperature is above 0°C.

IMPORTANT! Every time you drain the water through the emergency emptying hose you must pour 2 litres of water into the main wash compartment of the detergent drawer and then run the drain programme. This will activate the ECO VALVE device avoiding that part of the detergent remains unused at next washing. Emergency emptying out If the water is not discharged, proceed as follows to empty out the machine: · pull out the plug from the power socket; · close the water tap; · if necessary, wait until the water has cooled down; · open the pump door using the suitable tool; · place a bowl with a small edge close to the pump to collect any spillage. Remove the emergency emptying cap from the filter cover. The water should drain by gravity into the bowl. When the bowl is full, put the cap back on filter cover. Empty the bowl.

Repeat the procedure until water stops flowing out; · clean the pump if necessary as previously described; · replace the filter into the pump and screw it firmly as previously described; · replace the emergency emptying cap into the filter cover and close the pump door. 24 What to do if... **IMPORTANT!** Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below. During machine operation it is possible that the red pilot light of the button 8 flashes, the buzzer sounds and one of the following alarm codes appears on the display to indicate that the machine is not working. E10: problem with the water supply E20: problem with water draining E40: door open. Once the problem has been eliminated, press button 8 to restart the programme. If after all checks, the problem persists, contact your local Service Centre.

Malfunction Possible Cause / Solution The door has not been closed. E40 · Close the door firmly. The plug is not properly inserted in the power socket. · Insert the plug into the power socket. There is no power at the socket.

· Please check your domestic electrical installation. The main fuse or the fuse in the plug has blown. · Replace the fuse. The selector dial is not correctly positioned and the button 8 has not been pressed. · Please turn the selector dial and press button 8 again.

The «Child Safety Lock» or the «Delay start» function option has been selected. · Disable these functions. The water tap is closed. E10 · Open the water tap. The machine does not fill: The inlet hose is squashed or kinked. E10 · Check the inlet hose connection. The filter in the inlet hose is blocked. E10 · Clean the water inlet hose filter. The door is not properly closed. E40 · Close the door firmly.

25 The washer-dryer does not start: Malfunction The machine fills then empties immediately: Possible Cause / Solution The end of the drain hose is too low. · Refer to relevant paragraph in «water drainage» section. The drain hose is squashed or kinked. E20 · Check the drain hose connection. The machine does not empty and/or does not spin: The drain pump is clogged. E20 · Clean the drain pump.



[You're reading an excerpt. Click here to read official TRICITY](http://yourpdfguides.com/dref/946964)

[WDR1242W user guide](http://yourpdfguides.com/dref/946964)

<http://yourpdfguides.com/dref/946964>

The Rinse Hold option has been selected. · Select the Drain or Spin programme. The laundry is not evenly distributed in the drum. · Redistribute the laundry. Too much detergent or unsuitable detergent (creates too much foam) has been used. · Reduce the detergent quantity or use another one. Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. · Check the water inlet hose connection.

The inlet hose is damaged. · Replace it with a new one. The emergency emptying cap has not been replaced into the cover filter after cleaning. · Put the emergency emptying cap back into the cover filter. Too little detergent or unsuitable detergent has been used.

· Increase the detergent quantity or use another one. Stubborn stains have not been treated prior to washing. · Use commercial products to treat the stubborn stains. The correct temperature was not selected. · Check if you have selected the correct temperature. Excessive laundry load. · Reduce the amount of laundry. There is water on the floor: Unsatisfactory washing results: 26 Malfunction Possible Cause / Solution The programme is still running. · Wait until the end of washing cycle. The door will not open: The door lock has not been released.

· Wait until the light 9 has gone off. There is water in the drum. · Select drain or spin programme to empty out the water. The transit bolts and packaging have not been removed. · Check the correct installation of the appliance. The machine vibrates or is noisy: The support feet have not been adjusted. · Check the correct levelling of the appliance. The laundry is not evenly distributed in the drum. · Redistribute the laundry. Maybe there is very little laundry in the drum.

· Load more laundry. The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after 10 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin.

In this case, redistribute the load manually and select the spin programme. Redistribute the laundry. Spinning starts late or the machine does not spin: The machine is fitted with a type of motor which makes a different noise compared with other traditional motors. This new motor ensures a softer The machine makes an unusual noise start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine. 27

Malfunction The machine does not dry or does not dry properly Possible Cause / Solution The drying time/degree of dryness has not been selected.

· Select the drying time or degree. The water tap is not turned on (E10) · Open the water tap. The drain filter is clogged (E20) · Clean the drain filter. The machine is overloaded. · Reduce the amount of laundry. The selected drying programme or time/degree was not suitable for the laundry. · Select the suitable drying programme or time/degree for the laundry. No water is visible in the drum Machines based on modern technology operate very economically using very little water without affecting performance. If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information.

Mod.

Prod. No. ...

... ..

. Ser. No.

.. 28 Mod. Prod No. ..

... ..

... ..

.. Ser. No.

... Technical data Dimensions Width Height Depth (including the porthole) Electrical connection Voltage Overall power - Fuse 60 cm 85 cm 63 cm Information on the electrical connection is given on the rating plate on the inner edge of the appliance door Water supply pressure Minimum Maximum 0,05 MPa 0,8 MPa 6.0 kg Maximum Washing Load Cotton Cotton Synthetics Maximum Maximum Drying Load 3. 0 kg 2 kg 1200 rpm Spin Speed 29 Consumption values Programme Programme duration (in minutes) For the duration of the programmes, please refer to the display on the control panel Energy consumption (in kWh) 2.0 1.02 1.3 0.7 1.

45 0.85 1.0 0.55 0.4 Water consumption (in litres) 61 54 58 58 68 68 54 60 53 Cottons 90°C Cottons 60° Eco (*) Cottons 60°C Cottons 40° Cottons 60° + Prewash Cottons 40°C + Prewash Synthetics 60°C Delicates 40°C Handwash 40°C Information The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature.

(*)The "Cottons 60° Economy" is the reference programme with a load of 6 kg for the data entered in the energy label, in compliance with EEC 92/75 standards. 30 Installation instruction Unpacking All transit bolts and packing must be removed before using the appliance. You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again. 5. Remove the bracket D, refit the six smaller bolts C and slide out the relevant plastic spacer E.

6. Open the porthole, take out the inlet hose from the drum and remove the polystyrene block fitted with on the door seal. 1. After removing all the packaging, carefully lay machine on it's back to remove the polystyrene base from the bottom. 2. Remove the power supply cable and the draining hose from the hose holders on the rear of the appliance. Attention! 7. For safety reasons, fill the smaller upper hole and the two large ones with the corresponding plastic plug caps supplied in the bag containing the instruction booklet. Positioning Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc.

Check that the machine does not touch the wall or other kitchen units. Levelling Level the washer-dryer by raising or lowering the feet. The feet may be tight to adjust as they incorporate a self locking nut, but the machine MUST be level and stable. Any necessary adjustment can be made with a spanner. Accurate levelling prevents vibration, noise and displacement of the machine during operation. A C B C B 3. With a suitable spanner unscrew and remove the central rear bolt A. 4. Unscrew and remove the two large rear bolts B and the six smaller bolts C. E C C D 31 If necessary, check the setting with a spirit level. Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. Some vibration is inevitable, especially if mounted on a wooden floor. Sprung wooden floors are particularly susceptible to vibration. For advice, consult a builder. If possible, always place the machine on a solid floor.



[You're reading an excerpt. Click here to read official TRICITY WDR1242W user guide](#)

Special conditions If the floor is carpeted or covered with crumbly or soft material, insert a rigid support base under the feet to prevent noise, vibration or displacement. The base should protrude a few centimetres beyond the edges of the machine. **WARNING!** The machine should NOT be placed on deep pile carpeting. **NOTE** Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown. Water inlet An inlet hose is supplied and can be found inside the machine drum.

Do not use the hose from your previous machine to connect to the water supply. 1. Open the porthole and extract the inlet hose. 2. Connect the hose with the angled connection to the machine. Do not place the inlet hose downwards. Angle the hose to the left or right depending on the position of your water tap. 3. Set the hose correctly by loosening the ring nut. After positioning the inlet hose, be sure to tighten the ring nut again to prevent leaks.

4. Connect the hose to a tap with a 3/4" thread. Always use the hose supplied with the appliance. The inlet hose must not be lengthened. If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type of use. **NOTE** Installation should comply with local water authority and building regulations' requirements. The appliance must be connected to a cold water supply. A minimum vertical water pressure of 0.05 MPa (0.5 bar) is required for safe operation of the appliance.

If you cannot make the cold water connection direct from the rising mains, you may be able to operate the appliance from your cold water storage system. @@@@1. @@ Just push the hose firmly into the standpipe. 2. Onto a sink outlet spigot.

@@ Important! Before connecting the machine to new pipework or to pipework that has not been used for some time, run off a reasonable amount of water to flush out any debris that may have collected in the pipes. In the interest of the environment Washer-dryers should be connected to the FOUL drainage system, the water will then be taken to a sewage works for treatment before being discharged safely into a river. It is essential that these appliances are not connected to the surface water drainage system as this water is discharged directly into a river or stream and may cause pollution. If you require any further advice please see 33 The drain hose may be extended to a maximum of 4 metres. @@ The joining piece must have an internal diameter of 18mm.

Min. 60 cm (23.6) Max. @@@@ Attention! Connect the machine to an earthed socket. The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precaution. The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS1363/A) fuse must be used. Should the plug need to be replaced for any reason, proceed as described below. The wires in the mains lead are coloured in accordance with the following code: Green and Yellow ..

.....

.....

.....

..... - Earth 34 The wire coloured brown must be connected to the terminal marked «L» or coloured red. Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath Attention! A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard.

Ensure that the cut off plug is disposed of safely. Attention! Should the appliance power supply cable need to be replaced, this MUST be carried out by our Service Centre. **NOTE** Please ensure that when the appliance is installed it is easily accessible for the engineer in the event of a breakdown. Fitting under a counter **WARNING!** Before any work to the appliance, you must disconnect the plug from the power socket. Important! For safety reasons, it is dangerous to fit the appliance under a counter without the steel plate, which you can order in your nearest Service Force Centre. Please note that it is only necessary to remove the top of the appliance if the counter is not high enough to accommodate it. If the counter is too low and it becomes necessary to remove the top lid of the washerdryer, a steel plate, known as a height reduction kit, must be used. 600 820 820 600 595 600 The top must be fixed to the cabinet as follows:

Unscrew the screws from the back panel of the appliance. Push the worktop to the back and raise it to remove (see the picture above). Environmental concerns Packaging materials The materials marked with the symbol are recyclable.

>PE<=polyethylene >PS<=polystyrene >PP<=polypropylene This means that they can be recycled by disposing of them properly in appropriate collection containers. Old machine Use authorised disposal sites for your old appliance. Help to keep your country tidy! The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product. Ecological hints To save water, energy and to help protect the environment, we recommend that you follow these tips: Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!). The machine works more economically if it is fully loaded. With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature. Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed.

35 www.electrolux.com www.tricity-bendix.co.uk 132966550 Subject to change without notice .



[You're reading an excerpt. Click here to read official TRICITY WDR1242W user guide](http://yourpdfguides.com/dref/946964)
<http://yourpdfguides.com/dref/946964>