



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for VTECH 2-IN-1 BABY ACTIVITY WALKER WINNIE THE POOH. You'll find the answers to all your questions on the VTECH 2-IN-1 BABY ACTIVITY WALKER WINNIE THE POOH in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual VTECH 2-IN-1 BABY ACTIVITY WALKER WINNIE THE POOH
User guide VTECH 2-IN-1 BABY ACTIVITY WALKER WINNIE THE POOH
Operating instructions VTECH 2-IN-1 BABY ACTIVITY WALKER WINNIE THE POOH
Instructions for use VTECH 2-IN-1 BABY ACTIVITY WALKER WINNIE THE POOH
Instruction manual VTECH 2-IN-1 BABY ACTIVITY WALKER WINNIE THE POOH

User's Manual

Winnie the Pooh

2-in-1 Baby Activity Walker

6-36 Months

vtech

© Disney Based on the "Winnie the Pooh" works by A.A. Milne and E.H. Shephard.
Visit the Disney website at www.disney.com
© 2010 Vtech Printed in China



[You're reading an excerpt. Click here to read official VTECH 2-IN-1 BABY ACTIVITY WALKER WINNIE THE POOH user guide](http://yourpdfguides.com/dref/3253375)
<http://yourpdfguides.com/dref/3253375>

Manual abstract:

A. Milne and E.H. Shepard. Visit the Disney website at www.disney.com © 2010 VTech Printed in China INTRODUCTION Thank you for purchasing the VTech® 2-in-1 Baby Activity Walker! The 2-in-1 Baby Activity Walker will entertain your little one from sitting to walking. Easy grip handle, textured wheels and durable design help encourage those precious first steps. The detachable activity panel is perfect for sitting play with features to press, spin, push and turn to hear fun phrases, sounds, sing-along songs and cheerful music. With a motion sensor inside the activity panel, little ones will be rewarded as they walk along while hearing fun songs, phrases and cheerful music. Handle Play/Music mode selector Bee button On/Off/Volume control switch Light-up button Roller ball Sliding caterpillar Sliding ladybug Flipping book page Introduction Spinning flower mirror INCLUDED IN THIS PACKAGE One Electronic Activity Panel One Main Walker Body Two Legs with Wheels One Walker Handle One User's Manual WARNING: All packing materials, such as tape, plastic sheets, packing locks, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep user's manual as it contains important information. BATTERY INSTALLATION 1. Make sure the unit is turned OFF. 2. Locate the battery cover on the back of the unit.

Use a coin or a screwdriver to loosen the screw. 3. Install 2 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.) 4.

Replace the battery cover and tighten the screw to secure. BATTERY NOTICE · · The use of new alkaline batteries is recommended for maximum performance. @@@@The activity panel can be used detached from the walker for sit-down play or while attached to the walker. The activity panel has a convenient handle for on-the-go learning fun. ASSEMBLY INSTRUCTIONS 1. Push in and unscrew the two fasteners at the top of the walker. Battery Notice

Rechargeable batteries are to be removed from the toy before being charged (if removable). Rechargeable batteries are only to be charged under adult supervision (if removable). Do not mix old and new batteries. Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).

Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited. The toy is not to be connected to more than the recommended number of power supplies. Do not dispose of batteries in fire. 2. Insert the legs into the slots with the wheels facing outward, as shown in the diagram. 3. Gently pull the legs back until they click into place.

Please ensure the legs are fully inserted into the slots. 4. Stand the walker upright and insert the handle into the slots on the top to secure the legs. 5. Push and screw in the fasteners at the top of the walker to secure the handle and legs.

Attaching/Removing the Activity Panel 1. To attach the activity panel, align the bottom of the activity panel to the bottom of the walker. Then push it back until you hear it click into place. Please ensure the activity panel is attached securely to the walker. Assembly Instructions 2.

@@@@@2. @@The unit can be turned on again by pressing any button. Pushing the walker will not turn on the activity panel. 3. @@@@Slide the ON/OFF/VOLUME CONTROL SWITCH to turn the unit ON. You will hear a song, fun sounds and a phrase. The light will flash with the sounds. 2. @@The light will flash with the sounds. 3.

@@@The light will flash with the sounds. 4. @@The light will flash with sounds. 5. @@@@The light will flash with the sounds. Activities 6. @@The light will flash with the sounds. 7. @@The light will flash with the sounds. 9.

@@Activate the MOTION SENSOR to jam in fun sounds and phrases. Turn the FLIPPING BOOK PAGE to interrupt the melody. 10. @@After another 10 seconds of no input, you will hear a song. @@@@Push the walker with the activity panel attached and turned on to activate the MOTION SENSOR.

You will hear fun phrases, songs, a short tune and melodies. The light will flash with the sounds. The MOTION SENSOR is located inside the activity panel. CARE & MAINTENANCE 1. Keep the unit clean by wiping it with a slightly damp cloth.

2. Keep the unit out of direct sunlight and away from any direct heat source. 3. Remove the batteries when the unit will not be in use for an extended period of time. 4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water. TROUBLESHOOTING If for some reason the program/activity stops working or malfunctions, please follow these steps: 1. Please turn the unit off. 2. Interrupt the power supply by removing the batteries.

3. Let the unit stand for a few minutes, then replace the batteries. 4. Turn the unit on. The unit should now be ready to play again. 5. If the product still does not work, replace with a new set of batteries. If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

Care & Maintenance/Troubleshooting IMPORTANT NOTE: Creating and developing Infant Learning products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S.

@@@A service representative will be happy to help you. @@@@This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: · · · Reorient or relocate the receiving antenna Increase the separation between the equipment and receiver Connect the equipment into an outlet on a circuit different from that to which the receiver is connected Consult the dealer or an experienced radio/TV technician for help Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Other Info 10 This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



[You're reading an excerpt. Click here to read official VTECH 2-IN-1 BABY ACTIVITY WALKER WINNIE THE POOH user guide](http://yourpdfguides.com/dref/3253375)
<http://yourpdfguides.com/dref/3253375>

This Class B digital apparatus complies with Canadian ices-003. Cet appareil numérique de la classe b est conforme à la norme nmb003 du Canada. P/N: 91-002480-001-000 Other Info 11 .



[You're reading an excerpt. Click here to read official VTECH 2-IN-1
BABY ACTIVITY WALKER WINNIE THE POOH user guide
http://yourpdfguides.com/dref/3253375](http://yourpdfguides.com/dref/3253375)