



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for VTECH 3-IN-1 MUSICAL BAND. You'll find the answers to all your questions on the VTECH 3-IN-1 MUSICAL BAND in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual VTECH 3-IN-1 MUSICAL BAND  
User guide VTECH 3-IN-1 MUSICAL BAND  
Operating instructions VTECH 3-IN-1 MUSICAL BAND  
Instructions for use VTECH 3-IN-1 MUSICAL BAND  
Instruction manual VTECH 3-IN-1 MUSICAL BAND



## 3-in-1 Musical Band™



© 2010 Vtech  
Printed in China  
91-002483-000



[You're reading an excerpt. Click here to read official VTECH 3-IN-1 MUSICAL BAND user guide](http://yourpdfguides.com/dref/3253377)  
<http://yourpdfguides.com/dref/3253377>

**Manual abstract:**

To help prepare preschoolers for this important event, VTech® has developed the Preschool Learning™ series interactive toys. Preschool Learning™ features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With Preschool Learning™, learning is fun on day one! At VTech®, we know that a child has the ability to do great things. That's why all our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow! Sincerely, Your friends at VTech® To learn more about Preschool Learning™ series and other VTech® toys, visit [www.vtechkids.com](http://www.vtechkids.com) **INTRODUCTION** Thank you for purchasing the VTech® 3-in-1 Musical Band™! The 3-in-1 Musical Band™ is an interactive musical instrument that lets you record your very own songs. @@@@Make sure the unit is OFF. 2.

Locate the battery cover on the bottom of the unit. 3. @@@@Replace the battery cover. **BATTERY NOTICE** . . . . . The use of new alkaline batteries is recommended for maximum performance. Non-rechargeable batteries are not to be recharged.

Rechargeable batteries are to be removed from the toy before being charged (if removable). Rechargeable batteries are only to be charged under adult supervision (if removable). Do not mix old and new batteries. Do not mix batteries of different types: alkaline, standard (carbon/zinc) or rechargeable (nickel-cadmium). Only batteries of the same or equivalent type as recommended are to be used.

Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited. The toy is not to be connected to more than the recommended number of power supplies. Do not dispose of batteries in fire. **GETTING STARTED 3 WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES. REMOVE DEMO TAG** The demo tag should be removed immediately when the product is taken out of the packaging. If the demo tag is still in position when you begin play, please remove it from the bottom of the unit to activate normal play mode. **GUITAR STRAP INSTALLATION** Insert the guitar strap at the back of the guitar A. To fasten one end of the strap on the right side: B.

To fasten the other end of the strap on the left side: **GUITAR STRAP INSTALLATION 4 PRODUCT FEATURES** Power Button Press the Power button to turn the unit on. Press it again to turn the unit off. Mode Buttons Style Selector Slide the Style Selector to change the musical style of the songs and music. There are 3 styles to choose from: Rock, Hip Hop and Jazz. Sensor Move your hand over the Sensor to add drum sounds, rhythm or other musical sounds in different modes. Swing Button Slide the Swing Button to add sound effects or rhythm to your music in different modes. **PRODUCT FEATURES 5** Press the Mode buttons to enter "Song", "Jam" or "Concert" modes. Keyboard Press a key on the Keyboard to hear music notes or sound effects in different modes. Turn the Keyboard to change between Guitar and Piano modes. Volume Control Stop Button Press the Stop Button to stop recording, stop a song or music, or stop the playback of a recorded track.

Play Button Press the Play Button to play your recorded song. @@If you run out of recording space, you will be notified. @@@@When it is a piano, the Sensor works as a drum. @@@@Keep strumming the Sensor to add bass guitar to the drum rhythm. Press and hold a Keyboard key to add more sounds to the drum rhythm.

Slide the Swing Button to add sound effects to the music. @@@@Slide the Swing Button to add a piano slide sound effect to the music. Move your hand over the Sensor to add drum sounds to the song. The drum and bass rhythm and all Keyboard key sound effects are in the current musical style. (Choose the musical style by sliding the Style Selector.

) **CARE & MAINTENANCE 1.** Keep the unit clean by wiping it with a slightly damp cloth. 2. Keep the unit out of direct sunlight and away from any direct heat source. 3. Remove the batteries when the unit is not in use for an extended period of time. 4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water. **CARE & MAINTENANCE / TROUBLESHOOTING 9** Move your hand over the Sensor to add drum sounds to the song.

**TROUBLESHOOTING** If for some reason the program/activity stops working, then please follow these steps: 1.

Turn the unit OFF. 2. Interrupt the power supply by removing the batteries. 3. Let the unit stand for a few minutes, then replace the batteries. 4. Turn the unit back ON. The unit will now be ready to play again. 5. If the unit still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you. **IMPORTANT NOTE:** Creating and developing Preschool Learning™ products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products.

However, errors sometimes can occur. @@@@This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. **OTHER INFO 10** If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: · Reorient or relocate the receiving antenna. · Increase the separation between the equipment and receiver.

· Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. · Consult the dealer or an experienced radio/TV technician for help. Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. .



[You're reading an excerpt. Click here to read official VTECH 3-IN-1](http://yourpdfguides.com/dref/3253377)

[MUSICAL BAND user guide](http://yourpdfguides.com/dref/3253377)

<http://yourpdfguides.com/dref/3253377>