




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for VTECH 9113. You'll find the answers to all your questions on the VTECH 9113 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

## User manual VTECH 9113 User guide VTECH 9113 Operating instructions VTECH 9113 Instructions for use VTECH 9113 Instruction manual VTECH 9113

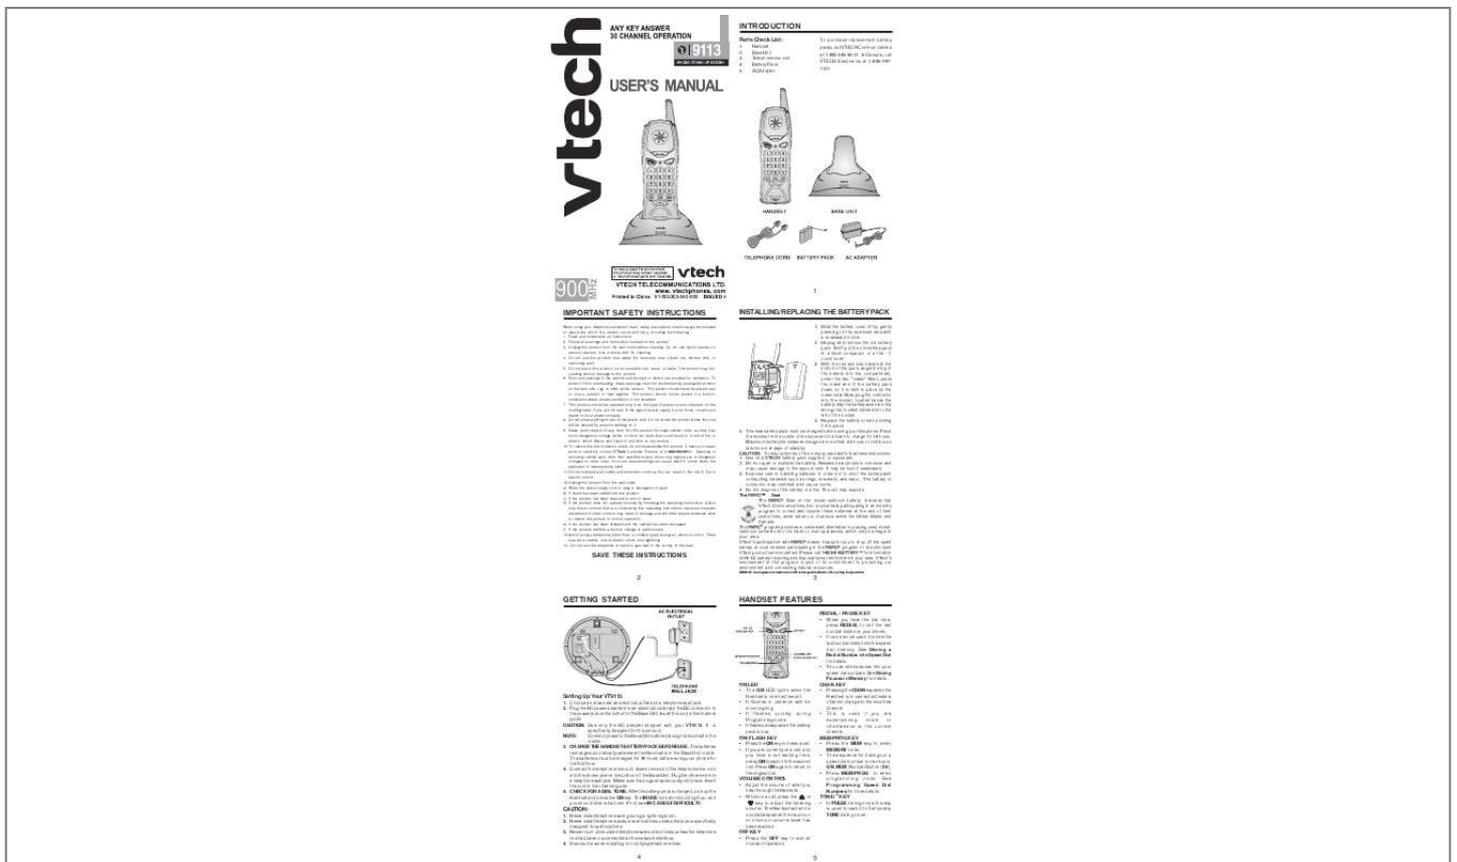

[You're reading an excerpt. Click here to read official VTECH 9113 user guide](http://yourpdfguides.com/dref/2374523)  
<http://yourpdfguides.com/dref/2374523>

**Manual abstract:**

2. 3. 4. 5. @@@@Read and understand all instructions. 2. Follow all warnings and instructions marked on the product. 3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.

Use a damp cloth for cleaning. 4. @@5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.

6. @@To protect it from overheating, these openings must not be blocked by placing the product on the bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation where proper ventilation is not provided. 7.

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company. 8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by persons walking on it. 9. Never push objects of any kind into this product through cabinet slots, as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product. 10. To reduce the risk of electric shock, do not disassemble this product.

If service or repair work is required, contact VTech Customer Service at 1-800-595-9511. Opening or removing cabinet parts other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the appliance is subsequently used. 11. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock. 12. Unplug this product from the wall outlet: a) When the power supply cord or plug is damaged or frayed. b) If liquid has been spilled into the product. c) If the product has been exposed to rain or water. d) If the product does not operate normally by following the operating instructions.

Adjust only those controls that are covered by the operating instructions, because improper adjustment of other controls may result in damage and will often require extensive work to restore the product to normal operation. e) If the product has been dropped and the cabinet has been damaged. f) If the product exhibits a distinct change in performance. 13. Avoid using a telephone (other than a cordless type) during an electrical storm.

There may be a remote risk of electric shock from lightning. 14. Do not use the telephone to report a gas leak in the vicinity of the leak.

**INSTALLING/REPLACING THE BATTERY PACK** 1. Slide the battery cover off by gently pressing on the recessed area with a downward motion.

2. Unplug and remove the old battery pack. Don't put the old battery pack in a trash compactor or a fire - it could burst. 3. With the red and black wires at the bottom of the pack, angle the top of the battery into the compartment, under the two "claws". Next, press the lower end of the battery pack down, so it is held in place by the lower claw. Now, plug the connector into the socket, located below the battery. Slip the battery wires into the wire guide, located below and to the left of the socket. 4. Replace the battery cover by sliding it into place.

5. The new battery pack must be charged before using your telephone. Place the handset in the cradle of the base unit to allow it to charge for 16 hours. Maximum battery life between charges is more than 4.5 hours of continuous talk time or 6 days of standby. CAUTION: To reduce the risk of fire or injury, read and follow these instructions: 1. Use only VTECH battery pack supplied, or equivalent.. 2. Do not open or mutilate the battery.

Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed. 3. Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.

4. Do not dispose of the battery in a fire. The cell may explode. The RBRC™ Seal The RBRC® Seal on the nickel-cadmium battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada.

The RBRC® program provides a convenient alternative to placing used nickelcadmium batteries into the trash or municipal waste, which may be illegal in your area. VTech's participation with RBRC® makes it easy for you to drop off the spent battery at local retailers participating in the RBRC® program or at authorized VTech product service centers. Please call 1-800-8-BATTERY™ for information on Ni-Cd battery recycling and disposal bans / restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources. RBRC® is a registered trademark of Rechargeable Battery Recycling Corporation. **SAVE THESE INSTRUCTIONS** 2 3 **GETTING STARTED HANDSET FEATURES** **REDIAL / PAUSE KEY** · When you hear the dial tone, press REDIAL to call the last number dialed on your phone. It can also be used to store the last number dialed into the speed dial memory. See Storing a Redial Number into Speed Dial for details. You can store pauses into your speed dial numbers. See Storing Pauses in Memory for details.

Pressing the CHAN key when the Handset is in use will activate a channel change to the next free channel. This is used if you are experiencing noise or interference on the current channel. Press the MEM key to enter MEMORY mode. The sequence for dialing out a speed dial number in memory is: ON, MEM, Number Button (0-9). Press MEM/PROG to enter programming mode. See Programming Speed Dial Numbers for more details. In PULSE dialing mode, this key is used to switch to Temporary TONE dialing mode. · · ON LED · CHAN KEY · Setting Up Your VT9113 1. Choose an area near an electrical outlet and a telephone wall jack. 2.

Plug the AC power adapter into an electrical outlet and the DC connector to the power jack on the bottom of the Base Unit. Insert the cord in the channel guide. CAUTION: Use only the AC adapter shipped with your VT9113. It is specifically designed for this product. NOTE: Connect power to the Base Unit before placing the handset in the cradle.

3. **CHARGE THE HANDSET BATTERY PACK BEFORE USE.** The batteries recharge automatically whenever the Handset is in the Base Unit cradle. The batteries must be charged for 16 hours before using your phone for the first time. 4.

Connect the telephone line cord. Insert one end of the telephone line cord into the phone jack on the bottom of the Base Unit. Plug the other end into a telephone wall jack. Make sure the plugs snap securely into place. Insert the cord in the channel guide. 5. **CHECK FOR A DIAL TONE.** After the battery pack is charged, pick up the Handset and press the ON key.



[You're reading an excerpt. Click here to read official VTECH 9113 user guide](http://yourpdfguides.com/dref/2374523)  
<http://yourpdfguides.com/dref/2374523>

The IN USE indicator should light up, and you should hear a dial tone. If not, see IN CASE OF DIFFICULTY.

· · · The ON LED lights when the Handset is on an active call. It flashes in cadence with an incoming ring. It flashes quickly during Programming mode. It flashes slowly when the battery pack is low. Press the ON key to make a call. If you are currently on a call, and you hear a call waiting tone, press ON to switch to the second call. Press ON again to return to the original call. Adjust the volume of what you hear through the Handset. While on a call, press the key to adjust the listening volume. The Handset will emit a double beep when the maximum or minimum volume level has been reached.

Press the OFF key to exit all modes of operation. · ON/ FLASH KEY · · MEM/PROG KEY · · · VOLUME CONTROL · · TONE/ \* KEY · CAUTION: 1. Never install telephone wiring during a lightning storm. 2. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.

3. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface. 4. Use caution when installing or modifying telephone lines. OFF KEY · 4 5 BASE UNIT FEATURES IN USE/CHARGING LED · The LED illuminates steadily when the Handset is in the Base cradle to indicate that the Handset battery is being charged.

· The LED illuminates whenever the Handset is being used. · This LED also flashes with the cadence of the incoming ring. OPERATING INSTRUCTIONS PAGE KEY · · Press the PAGE key to page the Handset. Press it second time to cancel a page. The Base will ring the Handset for 1 minute before ending the page automatically. The Handset can also cancel the page by pressing the OFF key. · Making Calls Pick up the Handset and press ON. When you hear a dial tone, dial the number. The ON LED will illuminate while the Handset is in use. If you make a mistake when dialing, press OFF to hang up, then press ON to get the dial tone again.

You must always press ON before you can dial a call on the Handset. OFF). This is very useful in a dark environment; you do not have to fumble around looking for the ON key to answer the call. Disconnecting To end a call, either place the Handset back in the Base, or press OFF on the Handset. Answering

Calls When an incoming call is ringing, the IN USE LED on the Base and ON LED on the Handset will flash. To make sure your phone rings when the Handset is away from the Base, please keep the Base antenna in the upright position. To answer a call when the Handset is in the Base, just pick up the Handset. To answer a call when the Handset is away from the Base, just press any key on the Handset (except Changing Channels If you notice interference when using your Handset, press CHAN to switch to a clear channel. This function is only available when you are on a call. · TONE/PULSE Setting If you have touch tone service on phone line.

Press MEM/PROG, \*, \*, MEM to switch to TONE dialing. If you have rotary service, press MEM/ PROG, \*, #, MEM to switch to PULSE. NOTE: Your VT9113 is preset at the factory for TONE dialing. 6 7 OPERATING INSTRUCTIONS Temporary Tone If you have a rotary (dial-pulse) telephone service, (TONE/PULSE setting is set to PULSE), this feature allows you to enter special codes and tones to operate answering machines, use electronic banking services, calling cards, or other special services. First, dial the call normally.

Then activate the Temporary Tone feature by pressing TONE (the \* key). You can then press the numbers or symbols you need, and your phone will send the proper signals. To end the call, press OFF or place the Handset back in the Base. The phone will automatically go back to rotary (dial-pulse) service. · Press MEM/PROG.

· Press the # key · Press 5 to turn off the ringer · Press the MEM key to confirm · To turn the ringer on again, see Programming the Ringer Type. OPERATING INSTRUCTIONS Speed Number Dialing 1. Press ON to get a dial tone. 2. Press MEM and the memory location number key (0-9). For example, to dial the number you assigned to key '8', you would press ON, MEM, 8. Using REDIAL To redial the last number you called, press ON then press REDIAL. The phone will automatically dial the number. Storing a Redial Number into Speed Dial To store the last number you dialed as a Speed Dial number, press MEM/ PROG, a location number (0-9), REDIAL, MEM. The Page Feature From the Base Unit, press PAGE to signal the person at the Handset.

To end the page at the base, press PAGE again. To end the page at the Handset, press OFF. If the Handset is in use (off-hook) when PAGE is pressed on the Base Unit, the Handset will emit one page alert. If the Handset is not in use (on hook), the page alert will continue for approximately 60 seconds. This feature is useful in locating a misplaced Handset. Checking The R is plugged firmly into the Base Unit and the telephone jack. Make sure the power cord is plugged in. · You may be too far from the Base Unit. · You may have too many extension phones on your telephone line to allow all of them to ring. Try unplugging some of the other phones.

YOUR CALLER FADES IN AND OUT. You may be nearly out of range. Move closer, or relocate the Base. IN CASE OF DIFFICULTY YOU HEAR OTHER CALLS WHILE USING YOUR PHONE. · Replace the Handset in the Base cradle, wait a few moments and try again.

· Disconnect your Base Unit from the telephone jack, and plug in a regular telephone. If you still hear other calls, the problem is probably in your wiring or local service. Call your local telephone company. YOU HEAR NOISE IN THE HANDSET, AND NONE OF THE KEYS OR BUTTONS WORK. · Make sure the power cord is plugged in.

· Your Base Unit and Handset may not be operating on the same channel or security code. @@@@ or equipment. @@@@ or equipment. 2. Disconnect the Handset battery pack. 3. 4. 5. 6. Wait a few minutes. Connect power to the Base.

Reconnect the Handset battery. Place the Handset in the Base Unit cradle. @@@@ or equipment. @@@@ or equipment. Product returned without valid proof of purchase (see 2 below); or 8. @@@@ or equipment. Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion; or 2. Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTECH; or 3. Product to the extent that the problem experienced is caused by signal conditions, network reliability or cable or antenna systems; or How do you get warranty service? · To obtain warranty service in the United States of America, call 1 800-595-9511 for instructions regarding where to return the Product.



[You're reading an excerpt. Click here to read official VTECH 9113 user guide](http://yourpdfguides.com/dref/2374523)  
<http://yourpdfguides.com/dref/2374523>

Before calling for service, please check the user's manual. A check of the Product controls and features may save you a service call. · Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of Product(s) to the service location.

Other Limitations · This warranty is the complete and exclusive agreement between you and VTECH. It supersedes all other written or oral 12 13 WARRANTY STATEMENT communications related to this Product. VTECH provides no other warranties for this product. The warranty exclusively describes all of VTECH's responsibilities regarding the product. There are no other express warranties.

No one is authorized to make modifications to this limited warranty and you should not rely on any such modification. State Law Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the product is fit for ordinary use) are limited to one year from date of purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. · In no event shall VTECH be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the product, or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this product.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

MAINTENANCE Your VT 9113 cordless telephone contains sophisticated electronic parts so it must be treated with care. TECHNICAL SPECIFICATIONS

FREQUENCY CONTROL Crystal Controlled Dual PLL Synthesizer Avoid rough treatment Place the handset down gently. Save the original packing materials to protect your telephone if you ever need to ship it. TRANSMIT FREQUENCY Handset: 923.10 MHz to 927.75 MHz Base: 902.3 MHz to 906.65 MHz RECEIVE FREQUENCY Handset: 902.3 MHz to 906.

65 MHz Base: 923.10 MHz to 927.75 MHz Avoid Water Your telephone can be damaged if it gets wet. Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install your base unit near a sink, bathtub or shower. Remember that electrical appliances can cause serious injury if used when you are wet or standing in water. If your base unit should fall into water, DO NOT RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD AND TELEPHONE LINE CORDS FROM THE WALL. Then pull the unit out by the unplugged cords. NOMINAL RANGE EFFECTIVE Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the time of use.

SIZE Handset: 17.5cm x 5.5cm x 3.9cm (L x W x T) maximum (antenna excluded) Base: 19.3cm x 14.

8cm x 5.4cm (L x W x T) maximum (antenna excluded) Electrical Storms Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, use caution when using electric appliances during storms. WEIGHT Handset: Base: 146 grams 283 grams POWER

REQUIREMENTS Handset: Self-contained nickelcadmium rechargeable battery supply, 3.6V nominal, 300mAh capacity.

Power Adapter: 9V DC @ 200mA Cleaning your telephone Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a soft cloth slightly dampened with water or a mild soap. Do not use excess water or cleaning solvents of any kind. SPECIFICATIONS ARE

TYPICAL AND MAY CHANGE WITHOUT NOTICE. 14 15 FCC, ACTA and IC REGULATIONS This equipment complies with Parts 15 of the Federal

Communications Commission (FCC) rules for the United States. It also complies with regulations RSS210 and CS-03 of Industry and Science Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. A label is located on the underside of the Base Unit containing either the FCC registration number and Ringer Equivalence Number (REN) or the IC registration number and Load Number. You must, upon request, provide this information to your

local telephone company. This equipment is compatible with inductively coupled hearing aids.

Should you experience trouble with this telephone equipment, please contact: FCC, ACTA and IC REGULATIONS · Consult the dealer or an experienced radio/TV technician for help. seventh characters following the colon. For example, the product identifier US:AAAEQ03T123XYZ would indicate an REN of 0.3. The REN is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. In most, but not all areas, the sum of all RENs should be five (5.0) or less. You may want to contact your local telephone company for more information. FCC Part 15 Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The equipment has been tested and found to comply with part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures: · · · Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.

Connect the equipment into an outlet or on a circuit different from that to which the receiver is connected. FCC Part 68 and ACTA If this equipment was approved for connection to the telephone network prior to July 23, 2001, it complies with Part 68 of the Federal Communications Commission (FCC) rules. If

the equipment was approved after that date, it complies with the Part 68 rules and with Technical Requirements for Connection of Equipment to the Telephone Network adopted by the Administrative Council for Terminal Attachments (ACTA). We are required to provide you with the following information.

2.

Connection and use with the nationwide telephone network The plug and jack used to connect this equipment to the premises wiring and the telephone network must comply with the applicable Part 68 rules and technical requirements adopted by ACTA.



[You're reading an excerpt. Click here to read official VTECH 9113 user guide](http://yourpdfguides.com/dref/2374523)

<http://yourpdfguides.com/dref/2374523>

A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See Installation Instructions in the user's manual. This equipment may not be used with Coin Telephone Lines or with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of 1. Product identifier and REN information The label on the back or bottom of this equipment contains, among other things, an identifier indicating product approval and the Ringer Equivalence Number (REN). This information must be provided to your local telephone company upon request. For equipment approved prior to July 23, 2001, the product identifier is preceded by the phrase "FCC Reg No.

" and the REN is listed separately. For equipment approved after that date, the product identifier is preceded by "US" and a colon (:), and the REN is encoded in the product identifier without a decimal point as the sixth and VTech Communications Inc CUSTOMER SERVICE at 1-800595-9511. In Canada, call VTech Electronics Ltd. at 1-800-267-7377. For repair/warranty information. The telephone company may ask you to disconnect this equipment from the line network until the problem has been corrected. 16 17 FCC, ACTA and IC REGULATIONS this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer. FCC, ACTA and IC REGULATIONS IC (Industry Canada) This telephone is registered for use in Canada. Notice : The REN assigned to this device denotes the number of devices you may connect to the telephone loop which is used by the device to prevent overloading The termination on a loop may consist of any combination of devices subjected only to the requirement that the sum of the REN does not exceed five (5).

0) Notice : The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements. The Department does not guarantee the equipment will operate to the user's satisfaction. Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection.

@@@ This precaution may be particularly important in rural areas. Caution : Users should not attempt to make such connections themselves, but should contact the appropriate electrical inspection authority, or electrician, as appropriate. Your VT9113 is designed to operate at the maximum power allowed by the FCC and IC. This means your Handset and Base Unit can communicate only over a certain distance - which will depend on the location of the Base Unit and Handset, weather, and the construction and layout of your home or office. 5.

Hearing aid compatibility If this product is equipped with a corded or cordless handset, it is hearing aid compatible. 3. Repair instructions If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under the Limited Warranty. 6. Programming/testing emergency numbers of a 4. Rights of the telephone company If this equipment is causing harm to the telephone network, the telephone company may temporarily discontinue your telephone service. The telephone company is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible.

You will be given the opportunity to correct the problem and the telephone company is required to inform you of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone company is required to notify you if such changes are planned. b c If this product has memory dialing locations, you may choose to store police, fire department and emergency medical service telephone numbers in these locations. If you do, please keep three things in mind: We recommend that you also write the telephone number on the directory card, so that you can still dial the emergency number manually if the memory dialing feature doesn't work. This feature is provided only as a convenience, and the manufacturer assumes no responsibility for customer reliance upon the memory feature. Testing the emergency telephone numbers you have stored is not recommended. However, if you do make a call to an emergency number: · You must remain on the line and briefly explain the reason for the call before hanging up. · Programming/testing of emergency numbers should be performed during offpeak hours, such as in the early morning or late evening, when the emergency services tend to be less busy. 18 19 REPLACEMENT BATTERY ORDER FORM For VT 9113 Cordless Telephone Name: City: Daytime Phone Number: ( State: )Adress: Zip: 1 1 1 ORDER INFORMATION For Model VT 9113 (QTY.

) Batteries @\$14.95 each ....

.....

.....

.....

..\$ Shipping/Handling @\$ 4.95 per battery ..

.....

.....

.....

.....

.\$ 1 1 METHOD OF PAYMENT: DO NOT SEND CASH CHECK/M.O. VISA MASTERCARD DISCOVER AMERICAN EXPRESS Credit Card# CARD HOLDER'S SIGNATURE EXP. DATE 1 1 PLACE ORDER FORM AND PAYMENT IN ENVELOPE AND SEND TO: VTECH ADVANCED AMERICAN TELEPHONES P.

O. BOX 167 HAZELWOOD, MO 63042 YOU MAY ALSO ORDER BY PHONE. CALL 1-800-595-9511 .



[You're reading an excerpt. Click here to read official VTECH 9113 user guide](http://yourpdfguides.com/dref/2374523)  
<http://yourpdfguides.com/dref/2374523>