



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for VTECH 914 ADLI. You'll find the answers to all your questions on the VTECH 914 ADLI in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual VTECH 914 ADLI
User guide VTECH 914 ADLI
Operating instructions VTECH 914 ADLI
Instructions for use VTECH 914 ADLI
Instruction manual VTECH 914 ADLI

Table of Contents

INTRODUCTION	3
Parts Check List	4
IMPORTANT SAFETY INSTRUCTIONS	5
REPLACING THE HANDSET BATTERIES	7
GETTING STARTED	9
Setting Up Your VTECH 914 ADLI	9
WALL MOUNTING	11
HANDSET FEATURES	13
IN USE LED	13
LOW BATTERY LED	13
PHONE KEY / FLASH FUNCTION	13
CHANNEL KEY	13
OFF KEY	13
MEMO KEY	13
PROG KEY	13
REDIAL KEY	13
TONER *KEY	13
VOLUME CONTROL	13
BASE UNIT FEATURES	14
POWER LED	14
CHARGE LED	14
IN USE LED	14
SPARE BATTERY LED	14
PAGE KEY	14
TONER/PULSE SWITCH	14
OPERATING INSTRUCTIONS	15
Making Calls	15
Answering Calls	15
Disconnecting	15
Changing Channels	15
Temporary Tone	16
Programming The Ringer Type	16
Turning Off The Ringer	16
Checking The Ringer	17
Memory Dialing	17
Programming Speed Dial Numbers	17
Speed Number Dialing	17
To Change or Replace a Speed Dial Number	17
Storing Special Codes	17
Using Redial	18
Storing a Redial Number into Speed Dial	18
The Page Feature	19
ITAD BASE LEDS	20
MAILBOX LED's	20
ON LED	20
FULL LED	20
ITAD BASE KEYPAD FUNCTIONS	21
ANSWER ON KEY	21
MAILBOX KEY	21
RECORD/MEMO KEY	21
MENU KEY	22
SELECT KEY	22



[You're reading an excerpt. Click here to read official VTECH 914 ADLI user guide](http://yourpdfguides.com/dref/1304947)
<http://yourpdfguides.com/dref/1304947>

Manual abstract:

.....
.....
.....
.....

.....
.....
.....

..... 5 REPLACING THE HANDSET BATTERIES .

.....
.....
.....
.....

.....
.....
.....

.. @@@@9 WALL MOUNTING

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... 11 HANDSET FEATURES

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... 13 IN USE LED ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

. 13 LOW BATTERY LED

.....
.....
.....
.....

.....
.....
.....
.....

.....
. 13 PHONE KEY / FLASH FUNCTION

.....
.....

.....
.....
.....
.....

..... *13 CHANNEL KEY .*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... *13 OFF KEY ...*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

13 MEM KEY

.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
. 13 PROG KEY

.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
..... 13 REDIAL KEY

.....
.....
.....
.....
.....
.....
.....
.....

.....
..... 13 TONE/ KEY ...

.....
.....
.....
.....
.....
.....
.....

.....
..... 13 VOLUME CONTROL ..

.....
.....
.....
.....
.....
.....
.....

.....
.. 13 BASE UNIT FEATURES ...

.....
.....
.....
.....
.....

.....
.....
.....
.....

.....
14 POWER LED

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
. 14 CHARGE LED

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
. 14 IN USE LED

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
... 14 SPARE BATTERY LED .

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

14 PAGE KEY

.....
.. 15 Disconnecting

.....
.....

.....
.....
.....

.....
.....
.....

.. 15 Changing Channels

.....
.....

.....
.....
.....

.....
.....

... 15 Temporary Tone

.....
.....
.....

.....
.....
.....

.....
.....

16 Programming The Ringer Type

.....
.....
.....

.....
.....

.... 16 Turning Off The Ringer

.....
.....
.....

.....
.....
.....

.....
16 Checking The Ringer

.....
.....

.....
.....
.....
.....

.....
.....
.....

..... *17 Memory Dialing .*

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... *17 Programming Speed Dial Numbers ...*

.....
.....
.....

.....
.....
.....

.... *17 Speed Number Dialing*

.....
.....
.....

.....
.....
.....

. *17 To Change or Replace a Speed Dial Number*

.....
.....

.....
.....
.....

... *17 Storing Special Codes*

.....
.....
.....

.....
.....

.....
.....

.....
17 Using Redial

.....
.....

.....
.....
.....

.....
.....
.....

.....
... 18 Storing a Redial Number into Speed Dial ..

.....
.....

.....
.....
.....

. 18 The Page Feature

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 19 ITAD BASE LEDS

.....
.....
.....

.....
.....
.....

.....
.....
.....

..... 20 MAILBOX LED's ...

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....
... 20 ON LED

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 20 FULL LED

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 20 ITAD BASE KEYPAD FUNCTIONS .

.....
.....
.....

.....
.....
.....
.....

... 21 ANSWER ON KEY .

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 21 MAILBOX KEY ...

.....
.....
.....
.....

.....
.....
.....

.....
.....
.....
.....

..... 21 RECORD/MEMO KEY

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... 21 MENU KEY

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 22 SELECT KEY ...

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 22 1 Table of Contents SET/CLOCK KEY ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 22 PLAY KEY

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

..... 22 ERASE KEY ..

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

. 23 REPEAT KEY

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 23 STOP KEY

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 23 SCAN KEY ...

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
.. 24 VOLUME UP KEY ...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 24 VOLUME DOWN KEY

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... 24 SCREEN KEY

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

... 24 ITAD OPERATION

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....

.....
..... 25 Default ITAD Settings

.....
.....
.....
.....
.....
.....
.....
.....
.....

.....
.... 25 ITAD Programming Overview .

.....
.....
.....
.....
.....
.....
.....
.....
.....

25 Selecting Announcement (OGM1 & OGM2)

.....
.....
.....
.....

.... 25 Recording / Playing / Deleting the OGM's

.....
.....
.....

.....
.... 25 Set Security Code .

.....
.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 26 Set Audible Message Alert ..

.....
.....
.....
.....
.....
.....
.....

.... 26 Day and Time Setup .

.....

.....
.....
.....
.....
.....
.....
.....

..... 27 Set Incoming Message Length .

.....
.....
.....
.....
.....
.....

... 27 Set Number of Rings ..

.....
.....
.....
.....
.....
.....
.....
.....
.....

... 28 Leaving a Message

.....
.....
.....
.....
.....
.....
.....
.....
.....

..... 28 Recording a Memo

.....
.....
.....
.....
.....
.....
.....
.....
.....

... 28 Listening to Messages / Memos ..

.....
.....

.....
.....
.....

29 Saving Messages

.....
.....
.....
.....

.....
.....
.....

.....
.....

29 Deleting Messages

.....
.....
.....
.....

.....
.....
.....

..... 29 Scan Playing Messages ...

.....
.....
.....

.....
.....
.....

.....
.....
.....

.. 30 Turning the ITAD ON/OFF

.....
.....
.....
.....

.....
.....
.....

... 30 Call Screening

.....
.....
.....

.....
.....
.....

.....
.....
.....
.....
.....

... 31 Audible Current Day and Time

.....
.....
.....

.....
.....
.....
.....

..... 31 Changing Speaker Volume ..

.....
.....
.....

.....
.....
.....
.....

.....
.....

... 31 Changing Playback Speed ..

.....

.....
.....
.....
.....

.....
.....
.....

..... 31 Auto Disconnect for Extension Phone Pick-up.

.....
.....
.....
.....

..... 32 Memory Full .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.. 32 Power Failure ...

.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

.....
... 32 REMOTE OPERATION OF ITAD ..

.....
.....

.....
.....
.....
.....

.....
.....
.....

.. 33 To Activate Remote Operation From a Different Telephone Line

..... 33 Playing Messages Remotely

.....
.....
.....

.....
.....
.....
.....

.....
... 33 Scan Playing Messages Remotely ..

.....
.....

.....
.....
.....
.....

.....
. 33 Repeat Messages During Playback

.....
.....

.....
.....
.....
.....

..... 33 Skip Messages During Playback ..

.....
.....
.....

.....
.....
.....
.....

..... 33 Stop Message Playback .

.....

.....
.....

.....
.....
.....

.....
.....
.....

... 33 Deleting Messages

.....
.....
.....

.....
.....
.....

.....
.....

33 Memo Recording

.....

.....
.....
.....

.....
.....
.....

.....

. 34 Change OGM1 Remotely

.....
.....

.....
.....
.....

.....
.....
.....

.... 34 Check OGM1 Remotely

.....
.....
.....

.....
.....
.....

..... 34 Turning ITAD On or OFF .

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....
.....
... 34 Room Monitoring

.....
.....
.....
.....

.....
.....
.....
.....

.....
.....
.... 34 Voice Menu for Remote Operation .
.....

.....
.....
.....
.....

.....
.....
.....
.....

... 34 Exiting Remote Operation ..

.....
.....
.....
.....

.....
.....
.....
.....

35 MAINTENANCE

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....
.....

..... 36 IN CASE OF DIFFICULTY

.....
.....
.....
.....

..... 37 WARRANTY STATEMENT

..... 39 FCC REGULATIONS

... 40 TECHNICAL SPECIFICATIONS ..

... 42 2 INTRODUCTION Congratulations! You have purchased one of the best performing cordless telephones on the market! The VTECH 914 ADLi is a single line 900 MHz cordless phone. The VTECH 914 ADLi has automatic security code reset. This means that one of more than 65 thousand possible digital security codes is randomly selected every time the handset is placed in the base unit. The handset and base unit will recognize each other based on this security code which minimizes the chances of another cordless phone using your telephone line. The base unit stores the current security code and channel in memory even if the unit is unplugged. The VTECH 914 ADLi base unit includes an Integrated Telephone Answering Device (ITAD). The ITAD uses digital memory to record messages, eliminating the need for cassette tapes.

You can access your messages from the base unit, or from a remote location. All programming and remote operation functions are guided by a voice menu system. Other special features are: · 10 Number Speed Dial Memory · 10 Channels of operation · Automatic Search for Available Channel · Manual Channel Change on Handset · PAGE from Base to Handset · REDIAL feature · Programmable Ringer Types · Low Battery Detect and Warning indicator · Hearing Aid Compatible Receiver · Easy answer - when the phone rings simply press any key on the · · · handset to answer (except OFF). Removable battery pack Extra Battery Charger in the base unit Touch Tone and Pulse Dialing Temporary Tone Mode ITAD Features: · Up to 12 minutes recording time. · Voice menu for local or remote operation. · Day and time stamp for incoming messages. · Auto disconnect stops ITAD from answering call when an extension is picked up. · Variable speed message playback. · Selective message delete allows you to keep important messages. · Message length control; stops recording after 7 seconds of silence.

· Messages and ITAD settings will be retained even after power failure. · Ring pick-up selection; unit can be set to pick-up after 2 rings, 4 rings, 6 rings or Toll-saver. &nt of other controls may result in damage and will often require extensive work to restore the product to normal operation. E. If the product has been dropped and the cabinet has been damaged.

F. If the product exhibits a distinct change in performance. 13. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.

14. Do not use the telephone to report a gas leak in the vicinity of the leak. SAVE THESE INSTRUCTIONS 6 REPLACING THE HANDSET BATTERIES 1. Remove the battery case by pressing on the ridged lines and sliding downward. 4. The new battery pack must be charged before using your telephone. Place the handset in the cradle of the base unit to allow it to charge for 24 hours. Maximum battery life between charges is 7 hours of continuous talk time or 6 days of standby. PRESS and SLIDE DOWNWARD CAUTION: To reduce the Risk of Fire or Injury to Persons, Read and Follow these Instructions: 1. 2.

Use only VTECH battery. Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed. Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns. Do not dispose of the battery in a fire. The cell may explode. 2. Discard the old battery pack.

Don't put the old battery pack in a trash compactor or a fire - it could burst. 3. IMPORTANT: Do not dispose of this battery in household garbage. For information on recycling or proper disposal, consult your local solid waste collection or disposal organization. 3.

Place the new battery pack in the battery compartment. Make sure the metal contacts on the underside of the battery are aligned with charging contacts in battery compartment. Replace battery case cover. 4. NS PLACE THE NEW BATTERY PACK INTO THE BATTERY COMPARTMENT PLEASE NOTE THE CORRECT POSITION OF THE BATTERY PACK WHEN CHANGING BATTERY IF THE BATTERY PACK DOESN'T RECHARGE The battery pack can be recharged many times; but if you get a low-battery signal, or the handset seems completely dead, even after 24 hours of charging, the battery pack should be replaced.

To purchase replacement battery packs, use the enclosed order form, or call Vtech Communications at 1-800624-5688. CAUTIO
USEONLYVTECHBATTERY80-4032-00-00 7 REPLACING THE HANDSET BATTERIES SPARE BATTERY CHARGER Your VTech 914 ADLi is equipped
with a spare battery charger built-in to the base unit.



[You're reading an excerpt. Click here to read official VTECH 914](#)

[ADLI user guide](#)

<http://yourpdfguides.com/dref/1304947>

The spare battery charger allows you to always have a charged battery available, should your handset battery discharge during normal use. Contact your local VTECH dealer, or call VTECH Customer Service to purchase a spare battery pack. To install the Spare Battery Pack: 1. Open the base unit battery compartment. 2. Place the spare battery pack in the battery compartment. Make sure the metal contacts on the underside of the battery are aligned with charging contacts in battery compartment. Replace the battery compartment cover.

When the battery is installed properly, the spare battery LED on the base unit will be illuminated. The spare battery will be fully charged after 24 hrs. Please note that the spare battery LED will always be illuminated when a spare battery is installed. 3. 4. 5. 8 GETTING STARTED Setting Up Your VTECH 914 ADLi 1. Choose an area near an electrical outlet and a telephone wall jack. TONE PULSE SELECTION TO NE 9V DC TEL.LINE SETTING UP YOUR VTECH 914ADLi AC ELECTRICAL OUTLET TELEPHONE WALL JACK 5.

2. Connect the telephone line cord. Insert one end of the telephone line cord into the jack at the rear of the base unit. Plug the other end into a telephone wall jack. Make sure the plugs snap securely into place.

Plug the AC power adapter into an electrical outlet and the DC connector to the back of the base unit. Set the TONE/PULSE switch on the base unit. If you have touch tone service on your phone line, set the switch to TONE. If you have rotary service, set the switch to PULSE. CHARGE THE HANDSET BATTERIES BEFORE USE.

The batteries recharge automatically whenever the handset is in the base unit cradle. The batteries must be charged for 24 hours before using your phone for the first time. After the initial charge, a maintenance charge of 8 hours is sufficient to return a low battery to full condition. CHECK FOR A DIAL TONE. After the batteries are charged, pick up the handset and press the PHONE key. The PHONE indicator should light up, and you should hear a dial tone. If not, see IN CASE OF DIFFICULTY. 6. 3. CAUTION: Use only the AC adapter shipped with your 914 ADLi.

This is a Class 2 AC adapter, specifically designed for use with the 914 ADLi. NOTE: Connect power to the base unit before placing the handset in the cradle. 4. The FULL and ON LED will flash to indicate the ITAD needs to be initialized. After a while, only the MEM FULL/SET CLOCK LED flashes, indicating that the day and time must be set. 7. 9 PULSE GETTING STARTED CAUTION: 1. Never install telephone wiring during a lightning storm. 2. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.

Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface. Use caution when installing or modifying telephone lines. 3. 4. 10 WALL MOUNTING 1.

Choose a spot near an electrical outlet and a telephone jack. Your phone requires a modular telephone jack and a standard electrical outlet (120v AC). The power cord is six feet long; make sure there is an electrical outlet within reach of the base. The outlet should not be controlled by a wall switch. If the switch is ever turned off, the phone will not operate.

3. Mount the base on the wall. Position the base so the mounting studs will fit into the holes on the bottom of the base. Position the power cord to extend down the wall the phone is to be mounted on. Slide the base down on the mounting studs until it locks into place. PUSH IN and SLIDE DOWN 900 1 FULL MHz CORDLESS 914ADLi 2 3 PUBLIC MAILBOX DIGITAL ANSWERING POWER DEVICE IN USE ERASE CHARGE SPARE BATT VOL ON REPEAT STOP PLAY SKIP PAGE WHEN WALL MOUNTING, AC OUTLET CHOOSE A SPOT NEAR THE ELECTRICAL OUTLET AND TELEPHONE JACK. 4. TELEPHONE JACK 2. Position the wall mount adapter on the base. Line up the tabs on the wall mount adapter with the holes on the bottom of the base.

Snap the wall mount adapter firmly in place. Connect the telephone cord. The telephone line cord has a snap-in plug at each end. Insert one of the plugs into the jack on the bottom of the base. Insert the other end of the plug into the wall jack. 9VDC TEL.LINE wo od en st TONE PULSE u INSERT WALL MOUNT INTO THE BASE UNIT AC ELECTRICAL OUTLET TELEPHONE WALL JACK SNAP IN FIRMLY 11 WALL MOUNTING 5. Plug the AC adapter on the power cord into an electrical outlet. Set the dial mode switch on the base unit. If you have touch tone service on your phone line, set the switch to TONE.

If you have rotary service, set the switch to PULSE. 6. TONE PULSE SELECTION TO NE PULSE 12 HANDSET FEATURES OFF KEY · Press the OFF key to exit all modes of operation. MEM KEY · Press the MEM key to enter MEMORY mode. · The sequence for dialing out a speed dial number in memory is: PHONE, MEM, Number Button (0-9).

PROG KEY · Press PROG key to enter PROGRAM mode. See Programming Speed Dial Numbers for more details. REDIAL KEY · When you hear the dial tone, pressing the REDIAL key will dial out the last number that was called on your phone. · It can also be used to store the last number dialed into the speed dial memory. See Storing a Redial Number into Speed Dial for details.

TONE / KEY · In PULSE dialing mode, this key is used to switch to Temporary TONE dialing mode. VOLUME CONTROL · Set Volume switch on the side of the Handset to high (H) or low (L), depending on your preference. 900MHz IN USE PHONE CORDLESS LOW BATT CHAN OFF 1 4GHI 7P R S 2ABC 5J K L ST U V 3D E F 6MNO 9W X Y * TONE 0OPER PROG MEM # REDIAL IN USE LED · The IN USE LED lights when the phone line is being used by the handset. · It flashes in cadence with an incoming ring. · It flashes quickly during PROGRAM mode. LOW BATTERY LED · The LOW BATT LED will flash when the handset battery is getting low and needs to be recharged. PHONE KEY / FLASH FUNCTION · Press the PHONE key to make a call. · If you are currently on a call pressing PHONE flashes the line. This would be used with a feature like call waiting to answer your second call. CHANNEL KEY · Pressing the CHAN key when the handset is in use will activate a channel change to the next free channel.

· This is used if you are experiencing noise or interference on the current channel. 13 BASE UNIT FEATURES · The SPARE BATT LED illuminates steadily when a battery is placed in the base unit charge cradle. 900 1 FULL MHz CORDLESS 914ADLi 2 3 PUBLIC DIGITAL ANSWERING POWER DEVICE INUSE ERASE CHARGE SPARE BATT VOL ON REPEAT STOP PLAY SKIP PAGE POWER LED · The POWER LED illuminates when the base power adapter is plugged in and power is applied to the base unit. CHARGE LED · The CHARGE LED illuminates steadily when the handset is in the base cradle to indicate that the handset battery is being charged.



[You're reading an excerpt. Click here to read official VTECH 914](http://yourpdfguides.com/dref/1304947)

[ADLi user guide](http://yourpdfguides.com/dref/1304947)

<http://yourpdfguides.com/dref/1304947>

IN USE LED · Immediately after placing the handset in the base cradle, the **IN USE LED** flashes to indicated that the initialization (assigning a new security code and channel) is in progress · The **IN USE LED** will stop flashing and stay on when the initialization is complete. · The **IN USE LED** illuminates whenever the handset is being used. · The **LED** also flashes with the cadence of the incoming ring. **SPARE BATTERY LED TONE MAILBOX PAGE KEY** · Press the **PAGE** key to page the handset. · Press it a second time to cancel a page. · The base will ring the handset 4 times before ending the page automatically. · The handset can also cancel the page by pressing the **OFF** key. **TONE/PULSE SWITCH** · This switch will switch the phone between **TONE** dialing and **PULSE** dialing. **PULSE 14 OPERATING INSTRUCTIONS IMPORTANT:** Whenever the handset batteries are removed, the handset must be reinitialized on the base unit cradle after the batteries are replaced. The **IN USE LED** on the base unit will flash during the initialization. Making Calls Pick up the handset and press **PHONE**.

When you hear a dial tone, dial the number. The indicator for **IN USE** (on the base unit and handset) will light. away from the base, just press any key on the handset (except **OFF**). This is very useful in a dark environment; you do not have to fumble around looking for the **PHONE** key to answer the call.

Disconnecting To end a call, either place the handset back in the base, or press **OFF** on the handset.

900 MHz CORDLESS IN USE TO END THE CALL LOW BATT PHONE 900 IN USE MHz CORDLESS LOW BATT MAKING CALL and ANSWERING CALL
CHAN OFF 1 2 GHI ABC 3 DEF 4 7 5 8 JKL 6 9 MNO PHONE CHAN OFF PRS TUV WXY 1 4 GHI 7 PRS 2 ABC 5 JKL 8 TUV 3D E F 6 MNO * TONE
0OPER # PROG MEM REDIAL 9 WXY * TONE 0 OPER # PROG MEM REDIAL If you make a mistake when dialing, press **OFF** to hang up, then press **PHONE** to get the dial tone again. You must always press **PHONE** before you can dial a call on the handset. Answering Calls When an incoming call is ringing, the **IN USE LED** in the base and the **IN USE LED** in the handset will flash. To make sure your phone rings when the handset is away from the base, please keep the base antenna in the upright position. To answer a call when the handset is in the base, just pick up the handset. To answer a call when the handset is Changing Channels If you notice interference when using your handset, press **CHAN** to switch to a clear channel. This function is only available when you are on a call. **900 MHz IN USE CORDLESS LOW BATT CHANGING CHANNELS PHONE CHAN OFF 1 4GHI 7 PRS 2ABC 5 JKL 8 TUV 0OPER 3 DEF 6MNO 9 WXY # * TONE PROG MEM REDIAL 15 OPERATING INSTRUCTIONS Temporary Tone** If you have a rotary (dial-pulse) telephone service, (**TONE/PULSE** switch is set to **PULSE**), this feature allows you to enter special codes and tones to operate answering machines, use electronic banking services, calling cards, or other special services. **900MHz CORDLESS IN USE LOW BATT PHONE** To select a different ringer type do the following: · Press **PROG** · Press the # key. · Press a key 1.

.4 to select a ringer type. · Press the **OFF** key to exit. **900MHz CORDLESS CHAN OFF TEMPORARY TONE 1.Dial Your Call Number 2.Press IN USE LOW BATT PROGRAMMING THE RINGER TYPE 1.Press PROG 2.Press # Key PHONE CHAN OFF 1 4 GHI 2ABC 5 JKL 3DEF 6MNO 9 WXY # 1 4 GHI 2 ABC 5 JKL 3 DEF 6 MNO 7P R S 8T U V 0OPER * Key 7 PRS 8 TUV 0OPER 9 WXY * 3.Press The Numbers or Symbols TONE * 3.Press A Number Key # TONE 1, 2, 3, 4 4.**

Press **OFF** **PROG MEM REDIAL** **PROG MEM REDIAL** First, dial the call normally. Then activate the Temporary Tone feature by pressing **TONE** (the key). You can then press the numbers or symbols you need, and your phone will send the proper signals. To end the call, press **OFF** or place the handset back in the base. The phone will automatically go back to rotary (dial-pulse) service.

If you have touch-tone service, (**TONE/PULSE** switch set to **TONE**), just enter the codes normally. This feature is only for rotary service telephone lines. Programming The Ringer Type The handset ringer is capable of four different types of ringing tones. The following sections detail how to change the different tones and to turn off a ringer on the handset. To program, the handset must be **OFF**.

Turning Off The Ringer To turn off the ringer on the handset, do the following: · Press **PROG** · Press the # key · Press 5 to turn off the ringer · Press the **OFF** key to exit · To turn ringer on again, see Programming the Ringer Type. **900 MHz CORDLESS IN USE LOW BATT PHONE CHAN TURNING OFF THE RINGER 1.Press PROG 2.Press # Key 3.Press 5 4.Press OFF OFF 1 4GHI 7PRS 2ABC 5 JKL 8 TUV 0OPER MEM 3 DEF 6MNO 9 WXY # REDIAL * TONE PROG 16 OPERATING INSTRUCTIONS Checking The Ringer** To check the ringer which is currently programmed, do the following: · Press **PROG** · Press the # key · Press 0 · Press the **OFF** key to exit 2. Press the number of the memory location you wish to store the number in (0-9). Using the dial pad, dial the number you want to store. The number can be up to 16 digits long. The number can be entered manually or by using **REDIAL**.

Press **MEM** to store the phone number to the key you selected. 3. **900MHz CORDLESS IN USE LOW BATT PHONE CHECKING THE RINGER 1.Press PROG 2.Press # Key 3.Press 0 4.Press OFF 4. CHAN OFF 1 4GHI 7PRS 2ABC 5 JKL 8 TUV 3 DEF 6 MNO 9 WXY** The phone now exits **PROG** mode and emits a tone. Speed Number Dialing * **TONE 0OPER # REDIAL PROG MEM 900MHz CORDLESS IN USE LOW BATT SPEED DIALING 1.Press PHONE Memory Dialing The VTECH 914 ADLi can store up to 10 different phone numbers that you can dial just by pressing MEM and one of the number keys (0-9).**

Programming Speed Dial Numbers The handset must be **OFF**. 1. **900MHz CORDLESS INUSE LOW BATT PHONE PHONE CHAN OFF 1 4 GHI 7 PRS 2ABC 5JKL 8 TUV 0OPER 3 DEF 6MNO 9 WXY # 2.Press MEM 3.Press A Number Key 0 9 * TONE PROG MEM REDIAL** Press **PHONE** to get a dial tone.

Press **MEM** and the memory location number key (0-9). **PROGRAMMING SPEED DIAL NUMBERS 1.Press PROG 2. CHAN OFF 1 4 GHI 7 PRS 2 ABC 5 JKL 8 TUV 0OPER 3 DEF 2.Press A Number Key 6 MNO 9 WX # 0 9 3.**

Dial Your Phone Number 4.Press **MEM** For example, to dial the number you assigned to key '8', you would press **PHONE**, **MEM**, 8. To Change or Replace a Speed Dial Number To change or replace a stored number in speed dial simply enter the new number and store it in the memory location you wish to change. * **TONE PROG MEM REDIAL 1.**



[You're reading an excerpt. Click here to read official VTECH 914](http://yourpdfguides.com/dref/1304947)

[ADLi user guide](http://yourpdfguides.com/dref/1304947)

<http://yourpdfguides.com/dref/1304947>

Press PROG. The IN USE LED will blink to indicate that you are in the programming mode. 17 OPERATING INSTRUCTIONS For example, to change the number stored in memory position 7 to 5551111, you would press PROG, 7, 5551111, MEM. Storing Special Codes To insert a pause in a phone number, press and hold the number before the position where the pause is to be inserted. Hold the number key down until it beeps twice. The pause is 2 seconds in length.

For longer pauses, press and hold the key until it beeps for three or four times. Each additional beep indicates an additional 2 second pause. If your phone is connected to a PBX you can store the PBX access number and a pause before the phone number. For example, to store 9-PAUSE-5551234 in memory location 8, do the following: Using Redial To REDIAL the last number you called, press PHONE then press REDIAL. The phone will automatically dial the number.

900MHz IN USE PHON E CORDLESS LOW BATT TO REDIAL LAST NUMBER 1.Press PHONE 2.Press REDIAL CHAN OFF 1 4GHI 7PRS 2ABC 3 DEF 5J K L 6MNO 8TUV 0OPER MEM 9 WXY # REDIAL * TONE PROG Storing a Redial Number into Speed Dial To store the last number you dialed as a regular Speed Dial number, press PROG, a number key (0-9), REDIAL, MEM. 900MHz INUSE PHONE CORDLESS LOW BATT STORING PAUSE e.g. To store 9-pause-555-1234 in momery location 8, 900MHz IN USE PHONE CORDLESS LOW BATT CHAN OFF 1 2ABC 3 DEF 1.Press PROG 2.Press 8 3.Press 9 4.Dial 555-1234 5.Press MEM TO STORE REDIAL NO. @@@@2. 3. 4.

@@@@To end the page at the base, press PAGE again. To end the page at the handset, press OFF. This feature is also useful if you have misplaced the handset. To locate the handset press PAGE at the base. This starts a paging tone at the handset. @@@@@@Otherwise the MAILBOX LED remains off when no messages are present. @@@@@@When the ITAD is ON, the ON LED is on. @@@@@@Record your memo. · Stop recording by pressing the STOP key again. @@@@@@ (See ITAD Setup) SELECT KEY · After you enter Program Mode, pressing SELECT will announce the current setting of the selected menu function.

SET/CLOCK SELECT RECORD/ MEMO Press SET/CLOCK ANSWER ON SCREEN ON REPEAT STOP PLAY SKIP PAGE · The SET/CLOCK key is used to check the date and time. In normal operation, the day and time are announced when SET/CLOCK key is pressed. · The SET/CLOCK key is used to set the current selection in program mode. It is used with the MENU and SELECT keys. (See ITAD Setup) PLAY KEY · The PLAY key is used to begin playback of all messages/memos (new and old) in the current mailbox selection (the default mailbox selection is Public).

22 ITAD BASE KEYPAD FUNCTIONS · The PLAY key is also used to play only the new messages by pressing and holding the key for more than 1 second. REPEAT KEY 1 FULL 2 3 PUBLIC MAILBOX DIGITAL ANSWERING POWER DEVICE REPEAT TO REPEAT MESSAGES, Press IN USE 900 1 FULL MHz CORDLESS 914ADLi CHARGE ERASE 2 3 SPARE BATT ON VOL PUBLIC PLAY KEY TO PLAY MESSAGES, Press REPEAT STOP PLAY SKIP MAILBOX DIGITAL ANSWERING POWER DEVICE PAGE IN USE ERASE CHARGE SPARE BATT ON VOL REPEAT STOP PLAY SKIP PAGE ERASE KEY 900 1 FULL MHz CORDLESS 914ADLi · The key is used to return to the beginning of a message during message playback. · The previous message will also begin if is pressed twice quickly during message playback. STOP KEY 1 2 2 3 PUBLIC MAILBOX 3 PUBLIC DIGITAL ANSWERING POWER DEVICE ERASE TO ERASE MESSAGE, Press ERASE FULL MAILBOX IN USE CHARGE ERASE DIGITAL ANSWERING POWER DEVICE SPARE BATT STOP TO EXIT THE CURRENT MODE OF OPERATION, Press ON VOL IN USE CHARGE ERASE SPARE BATT ON VOL REPEAT STOP PLAY SKIP PAGE REPEAT STOP PLAY SKIP PAGE · The ERASE key is used to delete old messages (previously reviewed) from the ITAD. · Pressing ERASE during message playback deletes that message.

· If the ERASE key is pressed and held for more than 1 second, all old (previously reviewed) messages in the current mailbox selection will be deleted (this feature works only when the answering machine is idle; it does not work during message playback). · To prevent accidental deletion of new messages, you can only delete previously reviewed message. · Use to pause message playback.Press to resume playing from the beginning of the message. · Note: During message playback, press once to pause,press twice to stop. If no key is pressed for 60 seconds the ITAD will automatically default to normal operation. · Press to stop memo or announcement recording, or exit the program mode. 23 ITAD BASE KEYPAD FUNCTIONS SKIP KEY FULL MAILBOX · During message playback, press and hold while pressing key to increase message playback speed. VOLUME DOWN KEY SKIP TO ADVANCE TO THE BEGINING OF THE NEXT MESSAGE, Press 1 FULL DIGITAL ANSWERING POWER DEVICE IN USE CHARGE ERASE SPARE BATT ON VOL 900 2 MHz CORDLESS 914ADLi 3 VOLUMN DOWN PUBLIC REPEAT STOP PLAY SKIP MAILBOX PAGE TO DECREASE THE VOLUMN LEVEL OF BASE UNIT SPEAKER, Press TO DECREASE THE PALYBACK SPEED, Press and Hold and Press DIGITAL ANSWERING POWER DEVICE IN USE CHARGE ERASE SPARE BATT ON VOL · The key advances to the beginning of the next message during playback. · is also used to Scan Play all messages with the first 5 seconds playback each, in the current mailbox.

To Scan Play only the new messages, press and hold for 1 second. · Note: Day and time stamp will not be announced during Scan Play. VOLUME UP KEY 900 1 FULL MHz CORDLESS 914ADLi REPEAT STOP PLAY SKIP PAGE · The key is used to decrease the volume level of the base unit speaker. · During message playback, press and hold key while pressing key, to decrease message playback speed. SCREEN KEY 900 2 3 PUBLIC VOLUMN UP TO INCREASE THE VOLUMN LEVEL OF BASE UNIT SPEAKER, Press TO INCREASE THE PALYBACK SPEED, Press and Hold MHz CORDLESS 914ADLi SCREEN KEY MAILBOX MAILBOX DIGITAL ANSWERING POWER DEVICE SET/CLOCK RECORD/ MEMO SELECT MENU IN USE CHARGE ERASE ANSWER ON SCREEN SPARE BATT ON VO ON REPEAT STOP PLAY SKIP and Press REPEAT STOP PLAY SKIP PAGE · The key is used to increase the volume level of the base unit speaker. · The SCREEN key is used to turn Call Screening ON or OFF. 24 ITAD OPERATION Default ITAD Settings The ITAD is preset to have the following default settings: · security Code: 19 · Audible Message Alert: OFF · Date & Time: Mon 12:00am · Incoming Message Length: 60 Seconds · Rings to answer: 4 ITAD Programming Overview Setup order for the ITAD is: 1.



[You're reading an excerpt. Click here to read official VTECH 914](#)

[ADLI user guide](#)

<http://yourpdfguides.com/dref/1304947>

Outgoing Message 1 (OGM1). 2. Outgoing Message 2 (OGM2).

3. Set Security Code 4. Set Audible Message Alert 5. Set Day and Time 6. Set Incoming Message Length 7.

Set Number of Rings Lift the setup control access door on the base unit to program ITAD settings. During ITAD setup, the ON LED will flash. If no key is pressed for 15 seconds, the ITAD will beep and exit PROGRAM mode. You can also exit PROGRAM mode at any time by pressing . Selecting Announcement (OGM1 & OGM2) There are 2 choices of announcements: Outgoing Message 1 (OGM1) & Outgoing Message 2 (OGM2).

Incoming Message Length Setting will determine which OGM will be used. (See Set Incoming Message Length). Outgoing Message 1 You can record your own personal announcement and the caller is able to leave a message. If you do not record your own announcement the default greeting is: "Please leave your message after the beep." (See Recording OGM's) Outgoing Message 2 You can record your own announcement, but the caller is not able to leave a message. If you do not record your own announcement, the factory default greeting is: "I'm sorry, I'm not available. Please call again." (See Recording OGM's) Example for OGM's: Example for OGM1 with Public mailbox only (acts as standard answering machine): "Hello. You have reached 555-1234. I can't answer the phone right now.

Please leave a message after the beep. Thank you." Example for OGM1 (for multi - user application): "Hi! We can't come to the phone right now. If you have a message for John press 1, for Jane press 2, for Jack press 3. If you have a message for any one of us, just stay on the line and record after the beep. Thank you." Example for OGM2 (announce only): "Hi! You have reached Jack and Jill. We will be back after 1 p.m. Please call back then.

Thank you." Recording / Playing / Deleting the OGM's 1. Press MENU key until the desired item (OGM1 or OGM2) is announced. 2. Press SELECT to select the desired OGM.

3. Press RECORD/MEMO. "Now recording", is announced, followed 25 ITAD OPERATION by a beep. Speak in the direction of the ITAD. You can record an OGM up to 90 seconds in length.

Press to stop recording. After finishing the recording, the OGM replays automatically. At the end of the OGM playback, you will hear a beep. To review a recorded announcement, press the MENU key until the desired item (OGM1 or OGM2) is announced. Press SELECT. Press . The current greeting is played. To delete a recorded announcement, press ERASE during the playback of the OGM. SET/CLOCK 2. 4.

5. 3. 6. 4. Press SELECT. You will hear an announcement of the current security code. Press SELECT briefly to increase the security code by 1. Or, hold the SELECT continuously to increase the code by multiples of 10. Press SET/CLOCK to confirm your choice and you will hear the announcement of the security code. 7.

900 MHz CORDLESS 914ADLi MAILBOX SET SECURITY CODE 1.Press MEMU 3 Times MEN SELEC 2.Press 3.Press 4.Press SELECT SELECT SET/CLOCK RECORD/ MEMO ANSWER ON SCREEN ON 900 MHz CORDLESS 914ADLi MAILBOX RECORDING/ PLAYING/ DELETE THE OGM'S 1.

Press MEMU 1 Time 2.Press SELECT 3.Press RECORD/ MEMO TO STOP RECORDING, Press TO EARSE, Press REPEAT STOP PLAY SKIP PAGE SET/CLOCK RECORD/ MEMO ANSWER ON SCREEN SELECT MENU ON REPEAT STOP PLAY SKIP TO PLAY, Press PAGE Set Audible Message Alert If you want your ITAD to beep once every 30 seconds to notify you when new messages have been received, set the Audible Message Alert to ON. Otherwise, it is preset to OFF. Note: If your recording time is less than 2 second, your OGM will not be recorded, and the default greeting will be used.

Set Security Code The security code programmed into the ITAD is used to gain access to functions from remote locations. The security code default setting is 19. To change the security code: 1. Press MENU until you hear "Set security code." 900 MHz CORDLESS 914ADLi SET AUDIBLE MAILBOX MESSAGE ALERT MENU SET/CLOCK SELECT RECORD/ MEMO 1.Press 2.Press 3.Press MEMU 4 Times SELECT SET/CLOCK ANSWER ON SCREEN ON REPEAT STOP PLAY SKIP PAGE 26 ITAD OPERATION 1. 2. Press MENU until you hear "Set audible message alert.

" Press SELECT until the desired setting, (ON or OFF) is announced. Press SET/CLOCK to confirm your choice. The voice prompt of "Audible Message Alert On" or "Audible Message Alert Off" will be produced. 6. Press SELECT until the desired minute is announced. Holding the SELECT key continuously will increase the minute in 10 minute steps. Press SET/CLOCK to confirm your choice. You will hear a beep, followed by an announcement of the day and time. 3. 7.

Day and Time Setup During initial setup, or after a power failure, the day and time default is set to Monday 12:00am. The FULL LED will flash to indicate day and time need to be set. Set Incoming Message Length The incoming message length can be programmed to 30, 60, or 90 seconds. Also, the ITAD can be set to Announce Only; i.e.

it does not allow the caller to leave any messages. To set the Incoming Message Length: 1. Press MENU until, "Set incoming message length" is announced. 2. Press SELECT until the desired setting - "30 seconds", "60 seconds", "90 seconds", or "announce only" is announced.

3. Press SET/CLOCK to confirm the setting. The selected choice will then be announced. 4. If the incoming message is set to 30, 60, or 90 seconds, the ITAD will use OGM1 only. 5. If the incoming message length is set to "announce only", the ITAD will use OGM2 only. 900 MHz CORDLESS 914ADLi DAY AND TIME SETUP 1.Press MAILBOX MEMU SELECT 5 Times 2.Press SET/CLOCK RECORD/ MEMO ANSWER ON SCREEN SELECT MENU 3.

Press 4.Press 5.Press 6.Press 7.Press SET/CLOCK SELECT SET/CLOCK SELECT SET/CLOCK ON REPEAT STOP PLAY SKIP PAGE 1. 2. 3. 4. 5. Press MENU until you hear, "Set day and time.

" Press SELECT until the desired day is announced. Press SET/CLOCK to confirm your choice. You will hear a beep followed by an announcement of the current hour setting. Press SELECT until the desired hour is announced. Press SET/CLOCK to confirm your choice.

You will hear a beep followed by an announcement of the current minute setting. 900 MHz CORDLESS 914ADLi SET INCOMING MAILBOX MESSAGE LENGTH OR ANNOUNCE ONLY MENU SET/CLOCK SELECT RECORD/ MEMO ANSWER ON SCREEN 1.Press 2.Press 3.Press MEMU SELECT 6 Times ON SET/CLOCK EPEAT STOP PLAY SKIP PAGE 27 ITAD OPERATION Set Number of Rings The ITAD has 4 ring type settings: 2 rings The incoming call is answered after 2 rings.

4 rings The incoming call is answered after 4 rings. The incoming call is answered after 6 rings. The incoming call is answered after 2 rings only if there are new messages / memos present in the Public mailbox.



[You're reading an excerpt. Click here to read official VTECH 914](#)

[ADLi user guide](#)

<http://yourpdfguides.com/dref/1304947>

Otherwise, the ITAD will answer calls after 4 rings. Thus, if Toll Saver is active and your ITAD rings 3 times when you call, you can hang-up to avoid any long distance charges. 3. Press SET/CLOCK to confirm your choice. The selected setting is then announced. 6 rings Toll Saver Leaving a Message(Incoming Message) The ITAD will answer a call (according to the current ring selection), play the OGM followed by a beep to signal the start of recording. · Messages can be a maximum of 90 seconds in length.

(See Setting the Incoming Message Length) The ITAD will automatically stop recording if there is more than 7 seconds of silence. · To select a specific destination mailbox for a message, the caller should press the number corresponding to the desired mailbox. For example "1" for mailbox one. · For the Public mailbox simply stay on the line and record after the beep. Recording a Memo 900 MHz CORDLESS 914ADLi Note: Toll Saver does not function for mailboxes 1, 2, or 3. 900 MHz CORDLESS 914ADLi MAILBOX RECORDING A MEMO 1.Press MAILBOX MENU MAILBOX SET NUMBER OF RINGS MENU SET/CLOCK SELECT RECORD/ MEMO ANSWER ON SCREEN 2.Press and Hold RECORD/ MEMO 3.Recording 4.Press To Stop SET/CLOCK RECORD/ MEMO SELECT ON 1.

Press MEMU 7 Times ANSWER ON SCREEN ON 2.Press SELECT REPEAT STOP PLAY SKIP 3.Press SET/CLOCK REPEAT STOP PLAY SKIP PAGE 1. 1. 2.

Press MENU until you hear "Set number of rings." Press SELECT until you hear the desired ring type, "2", "4", "6", or "Toll Saver" announced. 2. Press the MAILBOX key to select the mailbox where you want to record the memo. Within 4 seconds, press and hold the RECORD/MEMO key until you hear the announcement, "Now recording", followed by a beep.

28 ITAD OPERATION 3. Speak in the direction of the base to record a memo of up to 60 seconds in length. Press the key to stop recording. If time expires or more than 7s silence or memory is full, the ITAD will stop recording automatically. If memory is full, you will hear four beeps and "Memory full" will be announced when you press RECORD/MEMO. · Press at any time during message playback to pause. Pressing will playback the paused message from the beginning. To stop message playback, and return to normal operation mode,press again. Note that if the ITAD is left in pause mode for more than 60 seconds, it will automatically go back to normal operation mode, and announce, "End of messages." · The day and time stamp is announced after each message is played.

· After all messages and memos have been played, the final voice prompt will be, "End of messages", and the ITAD will exit playback mode. · Pressing twice can also exit the playback status. Saving Messages · The ITAD will automatically save your messages if you do not delete them. The messages will be retained even after power failure. · The system can record up to 12 minutes of messages. Deleting Messages · Press MAILBOX to select the desired Mailbox. · Press within 4 seconds to playback all the messages. Note that the ITAD will return to the Public Mailbox if is not pressed within 4 seconds. If you want to play the new messages only, press and hold for 1 second. · The ITAD will announce the total number of messages/new messages present in the selected mailbox, depending on how long the key is pressed.

· The and keys can be used to skip forward and backward during message playback. 900 1 FULL MHz CORDLESS 914ADLi 4. 5. 6. Listening to Messages / Memos When new messages and/or new memos are in the ITAD, the corresponding Mailbox LED's will flash.

900 1 FULL MHz CORDLESS 914ADLi 2 3 PUBLIC LISTENING TO MESAGES/MEMOS 1.Press MAILBOX 2.Press 3.Press or MAILBOX DIGITAL ANSWERING POWER DEVICE IN USE CHARGE ERASE SPARE BATT ON VOL To Skip Forward or Backwards 4.Press To Pause Twice To Stop. REPEAT STOP PLAY SKIP 5.Press PAGE 2 3 PUBLIC MAILBOX DIGITAL ANSWERING POWER DEVICE DELETING MESSAGES Press IN USE CHARGE ERASE SPARE BATT ON VOL REPEAT STOP PLAY SKIP PAGE · Press ERASE key at any time during message playback or during the corresponding day and time stamp to delete the current message. 29 ITAD OPERATION · All reviewed messages for a particular mailbox, can be deleted by pressing and holding the ERASE key until you hear, "All old messages deleted." Note: The ERASE function will only delete old or reviewed messages. New messages CANNOT be deleted until they are reviewed. Scan Playing Messages Scan Playing provides a 5 second preview of each message recorded in a particular mailbox. · Press MAILBOX until the desired mailbox is announced. 900 1 FULL MHz CORDLESS 914ADLi · The day and time stamp will not be announced after each message is played, while in Scan Play mode. · Playback speed cannot be adjusted while in Scan Play mode. · After all messages and memos have been scanned, the final voice prompt will be, "End of messages", and the ITAD will return to normal operation.

Turning the ITAD ON/OFF 900 MHz CORDLESS 914ADLi MAILBOX TURNING THE ITAD ON/OFF MENU SET/CLOCK SELECT Press ANSWER ON 2 3 PUBLIC SCAN PLAYING MESSAGES RECORD/ MEMO ANSWER ON SCREEN MAILBOX ON DIGITAL ANSWERING POWER DEVICE 1.Press MAILBOX 2.Press 3.Press or REPEAT STOP PLAY SKIP IN USE CHARGE ERASE SPARE BATT ON VOL REPEAT STOP PLAY SKIP PAGE · Press within 4 seconds to Scan Play all the messages. Note that the ITAD will return to the Public mailbox if is not pressed within 4 seconds. If you want to Scan Play the new messages only, press and hold for 1 second. · The ITAD will announce the total number of messages / new messages present in the selected mailbox. · Press at any time during Scan Play to exit the scanning mode. Pressing during Scan Play will playback the current message from the beginning. The ITAD will return to normal playback mode.

· If you want the ITAD to answer calls, press ANSWER ON key. The ON LED will then be turned on and "Answering machine on" will be announced. · If you don't want the ITAD to answer calls, press ANSWER ON key. The ON LED will then be turned off and "Answering machine off" will be announced. · Even if the ITAD is set to OFF, it will still answer calls after 10 rings.

An announcement, "Please enter your security code" is given, and you can enter your security code to use remote operation. (See Remote Operation of ITAD) Note: The ITAD will default to ON after power up. 30 ITAD OPERATION Call Screening 900 MHz CORDLESS 914ADLi You can check the current day and time by pressing SET/CLOCK.



[You're reading an excerpt. Click here to read official VTECH 914](http://yourpdfguides.com/dref/1304947)

[ADLI user guide](http://yourpdfguides.com/dref/1304947)

<http://yourpdfguides.com/dref/1304947>

After the announcement the ITAD will generate a double beep. CALL-SCREENING TO CHANGE MAILBOX Changing Speaker Volume 900 1 FULL MHz CORDLESS 914ADLi SET/CLOCK RECORD/MEMO SELECT MENU ANSWER ON SCREEN CALL-SCREENING VOLUME Press & ON 2 3 PUBLIC MAILBOX REPEAT STOP PLAY SKIP POWER DIGITAL ANSWERING DEVICE CHANGEING SPEAKER VOLUME TO CHANGE SPEAKER VOLUME YOU WANT.

Just Press or IN USE PAGE CHARGE ERASE SPARE BATT ON VOL Call screening allows you to listen to incoming messages through the base unit as they are being recorded. When the ITAD answers a call, the speaker will monitor the voice on the line. If you want to answer the call at once, just pick-up the handset, or an extension, and the ITAD will automatically stop recording. The Call Screening volume is controlled by the and keys. Call Screening can be enabled or disabled by pressing the SCREEN key at any time, even when the ITAD is answering a call. Note: Default setting for Call Screening is ON. Audible Current Day and Time 900 MHz CORDLESS 914ADLi REPEAT STOP PLAY SKIP PAGE Press the and keys to reach the desired volume level. There are 4 digital volume levels. In idle mode, pressing the volume keys will generate a beep. Four rapid warning beeps will indicate the MAX.

or MIN. volume level has been achieved. Changing Playback Speed 900 1 FULL MHz CORDLESS 914ADLi 2 3 PUBLIC CHANGING MAILBOX PLAYBACK SPEED TO CHANGE PALYBACK SPEED DIGITAL ANSWERING POWER DEVICE MAILBOX AUDIBLE CURRENT DAY AND TIME MENU IN USE CHARGE ERASE Hold ON VOL SPARE BATT SET/CLOCK RECORD/MEMO SELECT TO CHECK THE CURRENT DAY AND TIME Press SET/CLOCK REPEAT and Press VOL STOP PLAY SKIP ANSWER ON SCREEN ON PAGE REPEAT STOP PLAY SKIP During playback, you can change the playback speed by simply holding PAGE 31 ITAD OPERATION down while pressing desired speed. or to the announced. You may enter remote operation mode by entering the security code. · If memory is full, any attempt to record memos or OGM's will be inhibited. Power Failure Auto Disconnect for Extension Phone Pick-up The ITAD will auto-disconnect the telephone line if an extension phone or the cordless handset accesses the line. Note: If the ITAD continues to record after an extension phone or the cordless handset accesses the line, either press on the base or press on the extension phone or cordless handset.

There are 7 playback speeds. The default speed is normal.

Playback speed will return to normal once you exit the playback mode. 900 1 FULL MHz CORDLESS 914ADLi 2 3 PUBLIC POWER FAILURE THE LED WILL FLASH AFTER POWER FAILURE OR CONNECTING THE ADAPTOR. MAILBOX DIGITAL ANSWERING POWER DEVICE IN USE ERASE CHARGE SPARE BATT ON VOL REPEAT STOP PLAY SKIP Memory Full 900 1 FULL MHz CORDLESS 914ADLi 2 3 PUBLIC MEMORY FULL THE LED WILL BE ON MAILBOX WHILE THE SYSTEM REMAINS LESS THAN 30 SECONDS RECORDING TIME DIGITAL ANSWERING POWER DEVICE IN USE CHARGE ERASE SPARE BATT ON VOL · After a power failure, the FULL LED will flash to notify you to set the day and time. · All the messages, OGM's and menu settings (other than day and time) will be retained. · The ITAD will default to ANSWER ON and Call Screening ON.

· Note that after power up, the ITAD will have an initialization period, during which, the ON and FULL LEDS will flash. During this period, you can still use the cordless phone. REPEAT STOP PLAY SKIP · When the ITAD has less than 30 seconds recording time remaining, the FULL LED will be illuminated. · If the ITAD memory is full, it will automatically default to ANSWER OFF mode. The ITAD will answer a call after 10 rings and "Memory full, Please enter your security code" is 32 REMOTE OPERATION OF ITAD Remote operation allows you to control the functions of the ITAD when you are away from the base, and call from an outside telephone line.

The ITAD cannot be accessed from another telephone on the same line. You can access many of the ITAD functions from a remote location such as listening to messages, changing recorded announcements, and recording memos. Remote operation can only be accessed from a touch tone telephone. If the remote phone is set to pulse dialing, switch it tone. If tone dialing is not available you will not be able to access the ITAD. To Activate Remote Operation From a

Different Telephone Line 1. If the ITAD is off, you can dial your telephone number and wait for the ITAD to answer your call after 10 rings. An announcement, " Please enter your security code" is given, and you can enter your security code to use remote operations. 2. If the ITAD is on, it will answer your call and begin playing the currently selected announcement (as with any incoming call).

3. Enter # followed by your 2 digit security code during the announcement. The default security code is 19. 4. Once the security code is received, a double confirmation beep will be given and you are in Remote Operation mode. You can then control the ITAD functions using the telephone keypad. If no command is received for 4 seconds, the ITAD will playback the new messages in the Public mailbox. Playing Messages Remotely · For the Public mailbox, press "5" on the touch tone keypad to play your messages. To play new messages only, press "5" twice. · If you want to play messages in other mailboxes, press 8 until the desired mailbox number ("Mailbox 1", "Mailbox 2",

..etc.) is announced. Then press "5" or "5" twice (for new messages only) to playback the messages in the selected mailbox.

Scan Playing Messages Remotely 1. Select the mailbox by pressing "8", then press "6" on the touch tone keypad to Scan Play your messages. To Scan Play new messages only, press "6" twice. 2. Pressing "5" during a message will enter the normal playback mode and the current message will be played again, from the beginning of the message.

Repeat Messages During Playback 1. Press "4" once during message playback to repeat the current message. 2. Press "4" twice within 1 second to skip to the previous message. Skip Messages During Playback 1. Press "6" once to skip forward to the next message Stop Message Playback 1. Pressing "0" during message playback will stop playback. The ITAD will accept other remote commands. Deleting Messages 1. Press "3" once during message playback to delete the current message.

33 REMOTE OPERATION OF ITAD 2. To delete all the old messages in a mailbox, while in idle mode, select the desired mailbox first by pressing "8". Then press "3" twice on the touch tone keypad.



[You're reading an excerpt. Click here to read official VTECH 914](http://yourpdfguides.com/dref/1304947)

[ADLi user guide](http://yourpdfguides.com/dref/1304947)

<http://yourpdfguides.com/dref/1304947>

You will hear the announcement, "All messages deleted", followed by a double beep to confirm your action. Turning ITAD On or OFF Pressing "7" toggles the ITAD ON/OFF. "Answer machine on", or "Answer machine off" will be announced, followed by a double beep. Room Monitoring Room monitoring allows you to hear what is happening inside the room, while you are away. To perform Room monitoring: 1. Press "9", the microphone on the ITAD will be activated for 20 seconds for room monitoring. 2.

After 20 seconds has gone by, or when you press "0", the ITAD will exit room monitoring operation. Voice Menu for Remote Operation The system provides two pre-recorded voice menus to help you during remote operation. Press "#", and you will hear the simple voice menu. Press "#" again and you will hear the advanced functions menu. The simple voice menu is as follows: · Press "5" to play all messages · Press "4" to repeat the message · Press "6" to skip or scan the message · Press "3" to delete the message · Press "8" to select a mailbox · Press "#" for other functions NOTE: Pressing "3" twice while playing messages may result in the deletion of a previously unplayed message.

Memo Recording 1. Press "8" to select the desired mailbox. 2. Enter "2" twice on the touch tone keypad to record a memo. You will hear, "Now recording", followed by a beep to signal start of recording.

3. Enter "0" to stop recording when you have finished. · Change OGM1 Remotely 1. Enter "1" then "2" to record a new OGM1. You will hear, "Now recording", followed by a beep to signal start of recording. 2. Press "0" to stop recording. Your new OGM1 will playback automatically, followed by a double beep. Check OGM1 Remotely Enter "1" twice to review OGM1.

You will hear playback of OGM1 followed by a double beep. 34 REMOTE OPERATION OF ITAD The advanced functions voice menu is as follows: · Press "1" twice to review outgoing message 1 · Press "1" then "2" to record outgoing message 1 · Press "2" twice to record memo · Press "3" twice to delete all old messages · Press "4" twice to repeat previous message · Press "5" twice to play all new messages · Press "7" to turn the system ON or OFF · Press "9" to start room monitoring Pressing any function code will stop the voice menu, and perform the corresponding functions. Exiting Remote Operation 1. Enter " " on the touch tone keypad to exit remote operation mode. The ITAD confirms your action with four beeps and then disconnects. 2. The ITAD also automatically disconnects if no key is pressed within 15 seconds during remote operation. 35 MAINTENANCE T A K I N G C A R E O F Y O U R TELEPHONE. · Your VTECH 914 ADLi cordless telephone contains sophisticated electronic parts so it must be treated with care. Avoid rough treatment Place the handset down gently.

Save the original packing materials to protect your telephone if you ever need to ship it. Avoid water Your telephone can be damaged if it gets wet. Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install your base unit near a sink, bathtub or shower. Remember that electrical appliances can cause serious injury if used when you are wet or standing in water.

If your base unit should fall into water, DO NOT RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD AND TELEPHONE LINE CORDS FROM THE WALL. Then pull the unit out by the unplugged cords. Electrical storms Electrical storms can sometimes cause power surges harmful to electronic equipment.

For your own safety, use caution when using electric appliances during storms. Cleaning your telephone Your telephone has a durable plastic casing that should retain its luster for many years.

Clean it only with a soft cloth slightly dampened with water or a mild soap. Do not use excess water or cleaning solvents of any kind. 36 IN CASE OF DIFFICULTY If you have difficulty operating your phone, the suggestions below should solve the problem. If you still have difficulty after trying these suggestions, In the US call: VTECH Communications at 1-800-624-5688. THE PHONE DOESN'T WORK AT ALL. · Make sure the power cord is plugged in. · Make sure the telephone line cord is plugged firmly into the base unit and the telephone wall jack. · Make sure the batteries are properly charged. If the LOW BATT indicator is on, the battery needs charging. If the IN USE indicators do not light when you press PHONE, you must charge the batteries.

· If you recently installed a new battery pack, make sure it is installed correctly. NO DIAL TONE. · First check all the suggestions above. · If you still don't hear a dial tone, disconnect the base unit from the telephone jack and connect a different phone. If there is no dial tone on that phone either, the problem is in your wiring or local service. Call your local telephone company. YOU GET NOISE, STATIC, OR A WEAK SIGNAL EVEN WHEN YOU'RE NEAR THE BASE UNIT. · Place the handset in the base momentarily to re-set the security code. Then press PHONE to get a line. Household appliances plugged into the same circuit as the base unit can sometimes cause interference.

Try moving the appliance or the base unit to another outlet. YOU GET NOISE, STATIC, OR A WEAK SIGNAL WHEN YOU'RE AWAY FROM THE BASE UNIT. · You may be out of range. Either move close to the base, or relocate the base unit. · The layout of your home may be limiting the range. Try moving the base unit to the second or third floor, or to some other location. THE HANDSET DOES NOT RING WHEN YOU RECEIVE A CALL. · Ensure that the ringer is turned on. · Make sure the telephone line cord is plugged firmly into the base unit and the telephone jack. Make sure the power cord is plugged in.

· You may be too far from the base unit. · You may have too many extension phones on your telephone line to allow all of them to ring. Try unplugging some of the other phones. YOUR CALLER FADES IN AND OUT. You may be nearly out of range. Move closer, or relocate the base. YOU HEAR OTHER CALLS WHILE USING YOUR PHONE. · Replace the handset in the base cradle, wait a few moments and try again. · Disconnect your base unit from the telephone jack, and plug in a regular telephone. If you still hear other calls, the problem is probably in your wiring or local service.

Call your local telephone company. 37 IN CASE OF DIFFICULTY YOU HEAR NOISE IN THE HANDSET, AND NONE OF THE KEYS OR BUTTONS WORK. · Make sure the power cord is plugged in. · Your base unit and handset may not be operating on the same channel or security code.



[You're reading an excerpt. Click here to read official VTECH 914](http://yourpdfguides.com/dref/1304947)

[ADLi user guide](http://yourpdfguides.com/dref/1304947)

<http://yourpdfguides.com/dref/1304947>

Place the handset in the cradle for a few moments to reload the security code and reset the channel. COMMON CURE FOR ELECTRONIC EQUIPMENT Electronics, like people, can sometimes get confused. If the unit does not seem to be responding normally, then try putting the handset in the cradle to reinitialize the unit. If it still does not seem to respond, perform the following steps (in the order listed): 1. 2. 3.

4. 5. 6. Disconnect the power to the base. Disconnect the handset battery.

Wait a few minutes. Connect power to the base. Connect the handset battery. Put the handset in the base to reinitialize. 38 WARRANTY STATEMENT WHAT DOES OUR WARRANTY COVER? · Any defect in material or workmanship.

FOR HOW LONG AFTER THE ORIGINAL PURCHASE? · One Year. WHAT WILL VTECH DO? · At our option, repair or replace your unit. HOW DO I SEND MY UNIT, IN OR OUT OF WARRANTY? · Call VTECH Communications customer service for Return Authorization at: 1-800-624-5688 · Properly pack your unit. Include any cables & accessories which were originally provided with the product. We recommend using the original carton and packing materials. · Include in the package a copy of the sales receipt or other evidence of date of original purchase (if the unit was purchased within the last twelve months). · Print your name and address, along with a description of the defect, and include this in the package. · Include payment for any service or repair not covered by warranty, as determined by VTECH Communications. · In the US, ship the unit via UPS Insured, or equivalent to: VTECH COMMUNICATIONS 8770 SW NIMBUS AVENUE BEAVERTON, OREGON 97008 VTECH Communications assumes no responsibility for units sent without prior Return Authorization. WHAT DOES OUR WARRANTY NOT COVER? · Batteries · Damage from misuse, neglect, or acts of nature (lightning, floods, power surges, etc.

) · Products which may have been modified or incorporated into other products · Products purchased outside the USA · Products serviced by the owner or a service facility not expressly authorized by VTECH Communications · Products purchased more than 12 months from current date HOW DOES STATE LAW

RELATE TO THIS WARRANTY? · This warranty gives you specific rights. You may also have other rights which vary from state to state. 39 FCC REGULATIONS This equipment complies with Parts 15 and 68 of the Federal Communications Commission (FCC) rules for the United States. A label is located on the underside of the base unit containing either the FCC registration number and Ringer Equivalence Number (REN) or the IC registration number and Load Number. You must, upon request, provide this information to your local telephone company. This equipment is compatible with inductively coupled hearing aids. Should you experience trouble with this telephone equipment, please contact: In the United States: VTECH COMMUNICATIONS 1-800-624-5688 for repair/warranty information. @@@@The equipment has been tested and found to comply with part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet or on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

- 40 FCC REGULATIONS FCC Part 68 The FCC requires that you connect your cordless telephone to the nationwide telephone network through a modular telephone jack (USOC RJ11C or RJ11W). You r t e l e p h o n e c o m p a n y m a y discontinue your service if your equipment causes harm to the telephone network. They will notify you in advance of disconnection, if possible. During notification, you will be informed of your right to file a complaint with the FCC.

Occasionally, your telephone company may make changes in its facilities, equipment, operation, or procedures that could affect the operation of your equipment.

If so, you will be given advance notice of the change to give you an opportunity to maintain uninterrupted service. The base unit contains no user serviceable parts. The handset contains a user replaceable battery pack. If it is determined that your telephone equipment is malfunctioning, the FCC requires that it not be used and that it be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents or by others who may be authorized by the FCC. For repair procedures, follow the instructions outlined under the VTECH Limited Warranty. This equipment may not be used on coin service provided by the phone company or Party Lines. The REN is useful in determining the number of devices you may connect to your telephone line and still enable the devices to ring when you receive a call. The general rule is that the REN value should not exceed 5.0 total; however, contact your local telephone company for the specific number in your area.

41 TECHNICAL SPECIFICATIONS FREQUENCY CONTROL Crystal Controlled Dual PLL Synthesizer TRANSMIT FREQUENCY Handset: 925.05 MHz to 927.75 MHz (All ten channels within this range) Base: 902.3 MHz to 905.0 MHz (All ten channels within this range) SIZE Handset: 18.2cm x 6.2cm x 3.8cm (L x W x T) maximum (antenna excluded) 21.0cm x 14.8cm x 5.

5cm (L x W x T) maximum (antenna excluded) 250 grams 600 grams Base: WEIGHT Handset: Base: RECEIVE FREQUENCY Handset: 902.3 MHz to 905.0 MHz (All ten channels within this range) Base: 925.05 MHz to 927.75 MHz (All ten channels within this range) POWER REQUIREMENTS Handset: Self-contained nickelcadmium rechargeable battery supply, 3.

6V nominal, 600mAh capacity. Power Adapter: 9V DC@500mA NOMINAL EFFECTIVE RANGE Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the time of use. SPECIFICATIONS ARE TYPICAL AND MAY CHANGE WITHOUT NOTICE. 42 VTECH COMMUNICATIONS LTD.

Distributed in the U.S.A. by VTECH Communications, 8770 SW Nimbus Avenue / Beaverton, Oregon, 97008 Distributed in Canada by VTECH Electronics Canada Ltd., 200-7671 Alderbridge Way, Richmond, B.C., V6X1Z9 Copyright 1996 for VTECH COMMUNICATIONS LTD. 91-4027-15-00 ISSUE 0 43 .



[You're reading an excerpt. Click here to read official VTECH 914](#)

[ADLI user guide](#)

<http://yourpdfguides.com/dref/1304947>