



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for VTECH ABC TEXT AND GO. You'll find the answers to all your questions on the VTECH ABC TEXT AND GO in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual VTECH ABC TEXT AND GO  
User guide VTECH ABC TEXT AND GO  
Operating instructions VTECH ABC TEXT AND GO  
Instructions for use VTECH ABC TEXT AND GO  
Instruction manual VTECH ABC TEXT AND GO



## ABC Text & Go™



© 2010 VTech  
Printed in China  
91-002463-000-000



[You're reading an excerpt. Click here to read official VTECH ABC TEXT AND GO user guide](http://yourpdfguides.com/dref/2832069)  
<http://yourpdfguides.com/dref/2832069>

**Manual abstract:**

Featuring a QWERTY keyboard and eight great activities, your child will learn letters, words, typing skills, numbers, counting and more as they play with the ABC Text & GoTM! Make sure the unit is turned OFF. 2. Locate the battery cover on the bottom of the unit. 3. Install 3 new "AA" (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.) 4. Replace the battery cover. BATTERY NOTICE The use of new alkaline batteries is recommended for maximum performance. Non-rechargeable batteries are not to be recharged.

3 Getting Started Rechargeable batteries are to be removed from the toy before being charged (if removable). Rechargeable batteries are only to be charged under adult supervision (if removable). Do not mix old and new batteries. Do not mix batteries of different types: alkaline, standard (carbon/zinc) or rechargeable (nickel-cadmium). Only batteries of the same or equivalent type as recommended are to be used.

Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited. The toy is not to be connected to more than the recommended number of power supplies. Do not dispose of batteries in fire.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES. PRODUCT FEATURES 1. ON/OFF BUTTON Press the On/Off Button to turn the unit on. Press it again to turn the unit off. 2. VOLUME SWITCH Switch the Volume Switch between low, medium and high volumes. 4 Product Features 3. Watch closely, because the clouds will move across the screen. Use the Direction Cursors and the Enter Button to create your pal. Keep the unit clean by wiping it with a slightly damp cloth.

2. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water. Activities / Care & Maintenance 7

TROUBLESHOOTING If for some reason the program/activity stops working or malfunctions, please follow these steps: 1. Please turn the unit OFF. 2. Interrupt the power supply by removing the batteries. 3. Let the unit stand for a few minutes, then replace the batteries.

5. If the product still does not work, replace with a new set of batteries. If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. 8 Troubleshooting / Note 4.

Turn the unit ON. The unit should now be ready to play again. Caution : Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. THIS DEVICE COMPLIES WITH PART 15 OF THE FCC

RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

However, errors sometimes can occur. At 1-877-3528697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you. Note 9 CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DUCANADA. .



[You're reading an excerpt. Click here to read official VTECH ABC TEXT AND GO user guide](http://yourpdfguides.com/dref/2832069)

<http://yourpdfguides.com/dref/2832069>