




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for VTECH DORA TV ADVENTURE GLOBE. You'll find the answers to all your questions on the VTECH DORA TV ADVENTURE GLOBE in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual VTECH DORA TV ADVENTURE GLOBE
User guide VTECH DORA TV ADVENTURE GLOBE
Operating instructions VTECH DORA TV ADVENTURE GLOBE
Instructions for use VTECH DORA TV ADVENTURE GLOBE
Instruction manual VTECH DORA TV ADVENTURE GLOBE

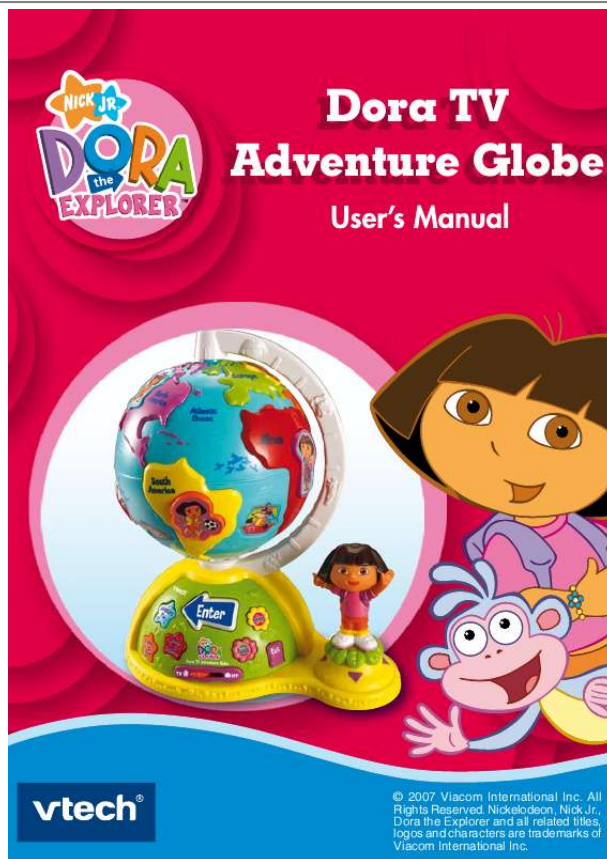

[You're reading an excerpt. Click here to read official VTECH DORA TV ADVENTURE GLOBE user guide](http://yourpdfguides.com/dref/1305023)
<http://yourpdfguides.com/dref/1305023>

Manual abstract:

All Rights Reserved. Nickelodeon, Nick Jr., Dora the Explorer and all related titles, logos and characters are trademarks of Viacom International Inc. Dear Parent, At VTech®, we know that a child's imagination is a truly wonderful thing and needs to be developed and nurtured. That's why we created the Dora the Explorer electronic learning series - interactive learning toys to stimulate children's imaginations, while also teaching vital preschool concepts such as the alphabet, numbers, shapes, colors and objects. Through the use of unique technology and engaging child-directed role-play scenarios, Dora the Explorer friends come to life to guide children through learning activities. These engaging characters foster children's critical reasoning skills, enhance their fine motor skills and engage them in exciting role-play activities for endless hours of learning adventure. At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow! Sincerely, Your Friends at VTech® To learn more about the Dora the Explorer electronic learning series - and other VTech® toys, visit www.vtechkids.com

Table of Contents 1 Introduction Introduction to the Unit Included in the Package Set-Up Getting Started Connecting the Dora TV Adventure Globe to your TV Features Touch Panel and Buttons 3 4 5 6 7 How to Play Troubleshooting Technical Support Other Information Table Of COntenTS Care and Maintenance 1. Introduction Thank you for purchasing the VTech® Dora TV Adventure Globe™! The Dora TV Adventure Globe is an interactive TV-connectable learning toy. @@@@Will you help? ¡Vámonos! Let's go! @@Locate the battery cover on the bottom of the main unit. Remove the battery cover. Insert 4 "AA" size batteries as illustrated. @@Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision. Do not mix different types of batteries. Do not mix new and used batteries.

Only use batteries of the recommended or equivalent type. Always insert batteries properly matching the plus (+) and minus (-) signs. Batteries that have run out of energy must be removed from the toy. Do not short-circuit the supply terminals. Do not use more batteries than recommended. Remove batteries from the toy if it will not be used for an extended period of time. **WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.** Notice: When the Dora TV Adventure Globe is running on batteries, you may see this icon appear on the TV screen. This indicates that battery power is low. Please replace the batteries as soon as possible.

SeT-UP 4 aC adaptor · Use a standard 9V 300mA AC/DC adaptor. We recommend the use of a VTech® 9V AC/DC adaptor. Make sure the unit is turned OFF. Plug the power jack into the 9V DC socket at the back of the unit. Plug the AC adaptor into a wall socket. . . . NOTE: The use of an adaptor will override the batteries. When the toy is not going to be in use for an extended period of time, unplug the adaptor. Standard Guidelines for Adaptor Toys This toy is not intended to be used by children under 3 years old. Only use the recommended adaptor with the toy. The transformer is not a toy.

Never clean a plugged-in toy with liquid. Never use more than one adaptor. Do not leave the toy plugged in for extended periods of time. SeT-UP · Connecting the Dora TV adventure Globe to your TV Connecting to a Television Connect the Dora TV Adventure Globe to your TV or monitor by plugging the colored cables on the unit into the matching color video and audio input jacks on your TV set. for TVs with stereo audio inputs: - Connect the yellow plug on the Dora TV Adventure Globe cable to the yellow video input terminal on your TV.

- Connect the white plug on the Dora TV Adventure Globe cable to the white audio input terminal on your TV. 5 for TVs with a mono audio input: - Connect the yellow plug on the Dora TV Adventure Globe cable to the yellow video input terminal on your TV. - Connect the white plug on the Dora TV Adventure Globe cable to the white audio input terminal on your TV. Connecting to a VCR If there is no video IN and audio IN terminal on your TV set, you can connect the Dora TV Adventure Globe to a VCR. - Connect the yellow plug on the Dora TV Adventure Globe cable to the yellow video input terminal on your VCR. - Connect the white plug on the Dora TV Adventure Globe cable to the white audio input terminal on your VCR. features On/Off Switch Turn on your Dora TV Adventure Globe by turning the main selector switch to the TV (left) position. Turn off the unit at any time by turning the switch to the OFF (right) position. SeT-UP 6 auto Power Off If there is no input to the Dora TV Adventure Globe for about 20 minutes, the unit will switch off to save power.

@@@@@@@@@@@@@@@@@@@@How to Play How to Play for the first Time 1. @@2. You will see an opening story, and enter the Adventure Play mode. 3. @@@@2. @@Begin your game.

@@@@@2. @@on the touch panel to go 3. @@@@@@@@@@@@@@@@@@Kilimanjaro in Tanzania. Listen closely and move the joystick to help Dora choose the right path based on animal hints. Australia Uluru To take a picture of Uluru Rock in Australia, help Dora and Boots follow the kangaroo leader. Watch the dancing kangaroos; the one who does his move first is the leader. Help Dora and Boots find him to figure out their way to Uluru. Move your joystick and press Enter to choose the kangaroo leader. Antarctica Penguin Feeding Grounds Help Dora and Boots get across the icy water in Antarctica to take a picture of the Penguin Feeding Grounds. Follow the numbers in order.

Move the joystick to help Dora and Boots choose where to go. 11 Asia the Great Wall The way to the Great Wall of China is very dark! Help Dora and Boots collect papers, candles and frames to make lanterns, so they can find their way through the dark tower and take a picture of the Great Wall. Move the joystick to an object and press Enter to pick it up. leaRn & eXPIORe MODE LEARN & EXPLORE Ready to explore the world? You can press the Learn & Explore button on the touch panel to go to the Learn & Explore mode directly. Use the joystick and press Enter to choose a continent.

(You can also simply press a continent button on the globe.) Help Dora discover something new about that location. eXPIORe & fInD MODe EXPLORE & FIND Help Dora and Boots find the places all over the world. You can press the Explore & Find button on the touch panel to go to the Explore & Find mode directly. Move the joystick and press Enter to answer the questions.



[You're reading an excerpt. Click here to read official VTECH DORA TV ADVENTURE GLOBE user guide](http://yourpdfguides.com/dref/1305023)
<http://yourpdfguides.com/dref/1305023>

(You can also simply press a continent button on the globe.) 4. Care and Maintenance 1. Keep your Dora TV Adventure Globe clean by wiping it with a slightly damp cloth. Never use solvents or abrasives. 2. Keep it out of direct sunlight and away from direct sources of heat. 3. Remove the batteries when not using it for an extended period of time. 4.

Avoid dropping it. NEVER try to dismantle it. 5. Always keep the Dora TV Adventure Globe away from water. 6. The AC adaptor should be regularly examined for damage to the cord, plug, enclosure and other parts. @@While the Dora TV Adventure Globe does not contribute to any additional risks, we do recommend that parents not occur in a particular installation. @@Increase the separation between the equipment and receiver. @@@@We make every effort to ensure the accuracy of the information that forms the value of our products. However, errors sometimes can occur.

It is important for you to know that we stand behind our products and encourage you to call our Consumer Services any problems and/or suggestions that you might have. A service representative will be happy to help you. Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION. THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES003. CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA. 2007 © VTech Printed in China 15 91-002259-002 .



[You're reading an excerpt. Click here to read official VTECH DORA TV ADVENTURE GLOBE user guide](http://yourpdfguides.com/dref/1305023)
<http://yourpdfguides.com/dref/1305023>