



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for VTECH DS6111-2. You'll find the answers to all your questions on the VTECH DS6111-2 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual VTECH DS6111-2  
User guide VTECH DS6111-2  
Operating instructions VTECH DS6111-2  
Instructions for use VTECH DS6111-2  
Instruction manual VTECH DS6111-2

**vtech**<sup>®</sup>  
Innovation Beyond Technology<sup>™</sup>



User's manual  
[www.vtechphones.com](http://www.vtechphones.com)

Models:  
DS6111-2/  
DS6111-3/  
DS6111-4

**DECT 6.0**



[You're reading an excerpt. Click here to read official VTECH DS6111-2 user guide](http://yourpdfguides.com/dref/1305030)  
<http://yourpdfguides.com/dref/1305030>



.....	Conference call .	.....
.....	Transfer an external call . . . . .	.....
.....	Switch between external and intercom calls . Answer an incoming call during an intercom call . Directory . .	.....
.....	Store a directory entry . . .	.....
.....	Character chart .	.....
.....	Search the directory . . . . .	.....
.....	Dial a directory entry . .	.....
.....	Edit a directory entry . . . . .	.....
.....	Delete from the directory . . . . .	.....
.....	About caller ID . . . . .	.....
.....	Call log . . . . .	.....
.....	.....	.....
13 13 13 14 14 15 16 17 19 20 21 22 23 24 24 25 26 27 28	<a href="http://www.vtechphones.com">www.vtechphones.com</a> Table of contents Missed calls indicator . . . . .	.....
.....	Review the call log . . . . .	.....
.....	Make a call log entry ready to dial .	.....
.....	Dial a call log entry . .	.....
.....	Save a call log entry to the directory . .	.....
.....	Delete from the call log . . . . . Call log display screen messages .	.....
.....	Redial list . . .	.....
.....	Dial a redial entry . .	.....
.....	Delete from redial . . . . .	.....
.....	Appendix . . . . .	.....
.....	Handset display screen messages . .	.....
.....	Handset and telephone base indicators Battery . . . . .	.....
.....	Important safety instructions . .	.....
.....	Troubleshooting . . . . .	.....
.....	Operating range . . .	.....
.....	Maintenance .	.....
.....	About cordless telephones . .	.....
.....	.....	.....
.....	.....	.....
.....	.....	.....
.....	.....	.....
.....	.....	.....

. 50 51 53 55 56 [www.vtechphones.com](http://www.vtechphones.com) ii Getting started Getting started Parts checklist Your telephone contains the following items. Save your sales receipt and original packaging in the event warranty service is necessary. · To purchase replacement batteries or power adapters, visit our website at [www.vtechphones.com](http://www.vtechphones.com) or call 1 (800) 267-7377. In Canada, go to [www.vtechcanada.com](http://www.vtechcanada.com) or call 1 (800) 267-7377. Basic operation 1. Handsets (2 for DS6111-2, 3 for DS6111-3, 4 for DS6111-4) 2. Battery compartment covers (2 for DS6111-2, 3 for DS6111-3, 4 for DS6111-4) 3. Batteries (2 for DS6111-2, 3 for DS6111-3, 4 for DS6111-4) 4. Telephone line cord 5. Telephone base power adapter 7. Chargers and charger adapters 6. Telephone base with mounting bracket (1 for DS6111-2, 2 for DS6111-3, 3 for DS6111-4) 8. User's manual [www.vtechphones.com](http://www.vtechphones.com)

1 Getting started Telephone base and charger installation · Use only the power adapters supplied with this product. To order a replacement, visit our website at [www.vtechphones.com](http://www.vtechphones.com) or call 1 (800) 595-9511. In Canada, go to [www.vtechcanada.com](http://www.vtechcanada.com) or call 1 (800) 267-7377. · The telephone base power adapter and the charger adapter(s) are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling or an under-the-table/ cabinet outlet.

Install the telephone base and charger as shown below. Make sure that the electrical outlet is not controlled by a wall switch. If you subscribe to Digital Subscriber Line (DSL) high-speed Internet service through your telephone line, you must have a DSL filter between the telephone base and the telephone wall jack. The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters. Telephone wall jack DSL filter (not included) required if you have DSL high-speed Internet service Telephone base power adapter Electrical outlet not controlled by a wall switch Charger adapter Telephone line cord Charger Telephone base 2 [www.vtechphones.com](http://www.vtechphones.com) Getting started Getting started Battery installation and charging Install the battery as shown below. The battery may have enough charge for short calls. For best performance, charge the handset for at least 16 hours.

When the battery power is low, the handset will beep, display LOW BATTERY and will flash on the handset screen. Place the handset in the telephone base or charger to charge the battery when not in use. When fully charged, the handset battery provides approximately nine hours of talk time or five days of standby time. 1. Insert the plug of the battery as indicated.

Make sure it is plugged securely and matches the color-coded label inside the battery compartment. 2. Place the battery with the label THIS SIDE UP facing up and the wires inside the battery compartment. 3. Align the cover flat against the battery compartment, then slide it upwards until it clicks into place.

4. Charge the handset by placing it in the telephone base or the charger. The handset charge light will be on when charging. Charge light · If the handset will not be used for a long time, disconnect and remove the battery to prevent possible leakage. · To purchase replacement batteries, visit our website at [www.vtechphones.com](http://www.vtechphones.com) or call 1 (800) 595-9511. In Canada, go to [www.vtechcanada.com](http://www.vtechcanada.com) or call 1 (800) 267-7377.

Basic operation 1 2 3 4 [www.vtechphones.com](http://www.vtechphones.com) 3 Getting started Mounting bracket installation Your telephone base comes with the mounting bracket installed for desktop use. If you prefer to mount your telephone on the wall (optional), it is designed to mount on a standard telephone wall plate. Wall mounting bracket installation: 1. Slide the bracket down and away from the telephone base. 2. Tilt the top of the bracket down so that it rests on the base. Align the grooves on the bracket with the tabs on the base. See image 2 below.

3. Slide the bracket down until it clicks into place. See image 3 below. 4. Align the holes on the telephone base with the standard wall plate and slide down until the telephone is secure.

1 2 3 4 Tabs 4 [www.vtechphones.com](http://www.vtechphones.com) Getting started Getting started Mounting bracket installation (continued) Desktop/tabletop bracket installation: Your telephone comes ready for desktop use. If you have repositioned the bracket for wall mounting and now want to return to desktop use, follow the following steps: 1. Remove the bracket from wall mount orientation by sliding it up towards the top of the base.

2. Tilt the top of the bracket up so that the lower portion of the bracket rests on the base.



**[You're reading an excerpt. Click here to read official VTECH DS6111-2 user guide](http://yourpdfguides.com/dref/1305030)**  
<http://yourpdfguides.com/dref/1305030>

See image 2. 3. Slide the bracket up, onto the tabs towards the center of the telephone base until it clicks into place. 1 2 3 Basic operation Tabs  
www.vtechphones.com 5 Getting started Handset layout CHARGE light · On when the handset is charging in the telephone base or charger. INT (intercom) ·  
Press to initiate an intercom conversation or transfer a call. /FLASH · Press to make or answer a call.

· During a call, press to receive an incoming call when you receive a call waiting alert. /CID · When the handset is not in use, press to review the call log. ·  
While in the menu, press to scroll down. /SPEAKER · Press to activate the handset speakerphone. · Press again to resume normal handset use.  
REDIAL/PAUSE · Press to review the redial list. · While dialing or entering numbers into the directory, press and hold to insert a dialing pause.  
MUTE/REMOVE · While on a call, press to mute microphone. · While reviewing the call log, press to delete an individual entry, or press and hold to delete  
the entire call log. · Press to delete digits when predialing (preview numbers before dialing).  
/ (Directory) · Press to enter the directory when the handset is not in use. · While in the menu, press to scroll up. MENU/SELECT · Press to display the menu.  
When in the menu, press to select an item, or save an entry or setting. OFF/CLEAR · During a call, press to hang up.  
· While the handset is ringing, press to silence the ringer. · Press and hold when the handset is not in use to erase the MISSED CALLS display. · During  
programming, press to exit without making changes. # · Press repeatedly to display other dialing options when reviewing a call log entry (page 30). 6 www.  
vtechphones.com Getting started Getting started Telephone base layout Basic operation FIND HANDSET · Press to page the system handsets. VOICEMAIL  
light · Flashes when you have new voicemail. Voicemail is offered by your telephone service provider. IN USE light · Flashes when there is an incoming call  
or another telephone sharing the same line is in use. · On when a system handset is in use. www.vtechphones.com 7 Telephone settings Ringer volume  
(handset) · The ringer will be off if the volume is set to zero, and a ringer off icon will be displayed. You can change the ringer volume to a comfortable level.

The ringer can also be turned off so the telephone does not ring when there are incoming calls. To adjust the ringer volume: 1. Press VOL or VOL to select  
the desired ringer volume when the handset is not in use. 2. When you stop pressing the volume buttons, the setting will be saved. -ORI. Press  
MENU/SELECT to display the menu when the handset is not in use. 2. Press or to select >RINGER VOLUME, then press MENU/SELECT. 3.  
Press or to adjust the volume. A sample of each ringer volume will be played when scrolling through the choices. 4. Press MENU/SELECT to confirm your  
selection. You will hear a confirmation tone.  
>RINGER VOLUME RINGER TONE RINGER VOLUME 8 www.vtechphones.com Telephone settings Ringer tone This menu allows you to choose from  
different ringer tones. To choose a ringer tone: 1. Press MENU/SELECT to display the menu when the handset is not in use.  
2. Press or to select >RINGER TONE, then press MENU/SELECT. 3. Press or to select the desired ringer tone. A sample of each ringer tone will be played  
when scrolling through the choices. 4. Press MENU/SELECT to confirm your selection. You will hear a confirmation tone. >RINGER TONE KEY TONE  
Basic operation Telephone settings RINGER TONE 1 · If the ringer is turned off while scrolling through the options in the RINGER TONE menu, the sample  
of the ringer will not be heard. www.

vtechphones.com 9 Telephone settings Key tone The handset will beep when you press any handset key. You may turn the key tone on or off. To change the  
setting: 1. Press MENU/SELECT to display the menu when the handset is not in use. 2. Press or to select > KEY TONE, then press MENU/SELECT. 3. Press  
or to choose ON or OFF. 4.  
Press MENU/SELECT to confirm your selection. You will hear a confirmatiain dialing · Chain dialing can be useful if you wish to access numbers other than  
phone numbers (such as bank account information or access codes) from the directory, call log or redial list. This feature allows you to initiate a dialing  
sequence from numbers stored in the directory, call log or redial list while you are on a call. To access a number in the directory: 1. Press MENU/SELECT  
twice to enter the directory menu.  
2. Scroll by pressing or to find the desired entry. 3. Press MENU/SELECT to dial the desired number when it is displayed. To access a number in the call log:  
1.  
Press MENU/SELECT and then press to select >CALL LOG. 2. Press MENU/SELECT to confirm. 3. Scroll by pressing or to find the desired entry. 4. Press  
MENU/SELECT to dial the desired number when it is displayed. To access the last number in the redial list: · Press REDIAL/PAUSE to dial. · Press  
REDIAL/PAUSE again within two seconds to cancel the chain dialing. Find handset This feature allows the telephone base to page all the handsets.

1. Press FIND HANDSET on the telephone base. All the handsets will ring and the screens display \*\* PAGING \*\*. 2. Press /FLASH, /SPEAKER or any  
dialing key (0-9, #, \*) on the handset; or press FIND HANDSET on the telephone base to end paging. 14 www.vtechphones.com \*\* PAGING \*\* Telephone  
operation Intercom The intercom feature allows conversation between two registered handsets of the same system. Model DS6111-2 1. Press INT on the  
originating handset when the handset is not in use and its screen displays CALLING OTHER HANDSET.  
2. The destination handset rings and its screen displays OTHER HANDSET IS CALLING. 3. To answer the intercom call, press /FLASH, /SPEAKER, INT or  
any dialing key (0-9,#,\*) on the destination handset. 4.  
To end an intercom call, press INT, OFF/CLEAR or place the handset back in the telephone base or charger. Models DS6111-3/DS6111-4 1. Press INT on the  
originating handset when the handset is not in use. The screen displays INTERCOM TO: 2. Use the dialing keys to select the destination handset.  
The originating handset screen displays CALLING HANDSET X. 3. The destination handset rings and its screen displays HANDSET X IS CALLING. 4. To  
answer the intercom call, press /FLASH, /SPEAKER, INT or any dialing key (0-9,#,\*) on the destination handset. 5. To end an intercom call, press INT,  
OFF/CLEAR or place the handset back in the telephone base or charger. · If the destination handset does not answer the intercom call within 100 seconds, is  
in the directory, is in the call log, is on a call, or out of range, the originating handset screen will display UNABLE TO CALL TRY AGAIN and return to idle  
mode. CALLING OTHER HANDSET Basic operation Telephone operation OTHER HANDSET IS CALLING INTERCOM TO: CALLING HANDSET X  
HANDSET X IS CALLING www.



[You're reading an excerpt. Click here to read official VTECH DS6111-2 user guide](http://yourpdfguides.com/dref/1305030)  
<http://yourpdfguides.com/dref/1305030>

vtechphones.

com 15 Telephone operation Conference call You can have a conference call with an external line and two registered handsets. When one handset is on the line, · Press /FLASH or /SPEAKER on another handset to join the call. -OR Model DS6111-2 1. Press INT to initiate an intercom call and its screen displays CALLING OTHER HANDSET. The destination handset rings and its screen displays OTHER HANDSET IS CALLING. 2. After the destination handset has been answered, press and hold INT on the originating handset to let the destination handset join the call. Models DS6111-3/DS6111-4 1. Press INT to initiate an intercom call. The screen displays TRANSFER TO: 2.

Use the dialing keys to select the destination handset. The originating handset screen displays CALLING HANDSET X. 3. The destination handset rings and its screen displays HANDSET X IS CALLING. 4.

After the destination handset has been answered, press and hold INT on the originating handset to let the destination handset join the call. 16 www.vtechphones.com Telephone operation Transfer an external call You can transfer an external call from one handset to any other handset. Model DS6111-2 1.

During a call, press INT to put the call on hold at the CALLING originating handset. Its screen displays CALLING OTHER HANDSET OTHER HANDSET. 2. The destination handset rings and its screen displays OTHER HANDSET IS CALLING. OTHER HANDSET IS CALLING 3. To answer the call at the destination handset, press /FLASH, /SPEAKER, INT or any dialing key (0-9, #, \*) on the destination handset. \* 4. Now the party at the originating handset can have a INTERCOM conversation with the party at the destination handset. Both screens display INTERCOM. 5.

Press OFF/CLEAR on the originating handset, or place it back in the telephone base or charger to transfer the external call to the destination handset. The originating handset displays CALL TRANSFERED. If you wish to cancel call transfer during intercom mode and reconnect to the external call: · Press /FLASH on the originating handset. -OR· Press OFF/CLEAR or INT on the destination handset, or place it back in the telephone base or charger.

www.vtechphones.com · If the destination handset does not pick up the intercom call, the originating handset can return to the external call by pressing /FLASH, or OFF/CLEAR or INT. · If a call remains on hold for about 100 seconds, or if the destination handset is in the directory, in the call log, or out of range, the screen of the originating handset shows UNABLE TO CALL TRY AGAIN and reconnects to the external call automatically. Basic operation Telephone operation 17 Telephone operation Models DS6111-3/DS6111-4 1. During a call, press INT to put the call on hold at the TRANSFER TO:

originating handset.

The screen displays TRANSFER TO: 2. Use the dialing keys to enter the destination handset number. The originating handset screen displays CALLING CALLING HANDSET X. HANDSET X 3. The destination handset rings and its screen displays HANDSET X IS CALLING.

HANDSET X 4. To answer the call at the destination handset, press IS CALLING /FLASH, /SPEAKER, INT or any dialing key (0-9, #, \*) on the destination handset. 5. Now the party at the originating handset can have a INTERCOM conversation with the party at the destination handset. Both screens display INTERCOM.

6. Press OFF/CLEAR on the originating handset, or place it back in the telephone base or charger to transfer the external call to the destination handset. The originating handset displays CALL TRANSFERED. If you wish to cancel call transfer during intercom mode and reconnect to the external call: · Press /FLASH on the originating handset. -OR· Press OFF/CLEAR or INT on the destination handset, or place it back in the telephone base or charger. 18 www.vtechphones.com Telephone operation Switch between external and intercom calls If you are on an external call and you wish to intercom another handset without disconnecting the external call: Model DS6111-2 1. During a call, press INT to put the call on hold at the originating handset. Its screen displays CALLING OTHER HANDSET.

2. The destination handset will ring and its screen will display OTHER HANDSET IS CALLING. 3. To answer the call at the destination handset, press /FLASH, /SPEAKER, INT or any dialing key (0-9, #, \*) on the destination handset. 4. Now the party at the originating handset can have a conversation with the party at the destination handset. Both screens display INTERCOM. 5. Press INT on the originating handset to alternate between the external call (outside call) and the intercom call. Basic operation Telephone operation www.

vtechphones.com 19 Telephone operation Models DS6111-3/DS6111-4 1. During a call, press INT to put the call on hold at the originating handset. The screen displays TRANSFER TO: 2. Use the dialing keys to enter the destination handset number.

The originating handset screen displays CALLING HANDSET X. 3. The destination handset will ring and its screen will display HANDSET X IS CALLING. 4. To answer the call at the destination handset, press /FLASH, /SPEAKER, INT or any dialing key (0-9, #, \*) on the destination handset.

5. Now the party at the originating handset can have a conversation with the party at the destination handset. Both screens display INTERCOM. 6. Press INT on the originating handset to alternate between the external call (outside call) and the intercom call. Answer an incoming call during an intercom call During an intercom call, there will be an alert tone signaling an incoming call. · To answer the incoming call, press /FLASH and the intercom call will end automatically. · To terminate the intercom call without answering the incoming call, press OFF/CLEAR on the handset. 20 www.vtechphones.

com Telephone operation Directory The directory can store up to 50 entries. Each entry may have up to 30 digits for the phone number and 15 characters for the name. · The directory can be accessed when the handset is not in use by pressing once or MENU/SELECT three times. · The screen will display DIRECTORY EMPTY if there are no records in the directory. · When the directory is full and you attempt to save an entry, the screen will display LIST FULL. · If you attempt to save a number already stored in the directory, the screen will display ALREADY SAVED. · Since the directory is shared by all the handsets, only one handset can review the directory at a time. If a handset attempts to enter the directory while another handset is already in the directory, NOT AVAILABLE AT THIS TIME will be displayed. · If the telephone number in the directory exceeds 15 digits, <\* will be displayed in front of the telephone number. Press \* to move to the right of the telephone number or press # to move to the left of the telephone number.

www.vtechphones.com DIRECTORY EMPTY Basic operation Telephone operation LIST FULL ALREADY SAVED 21 Telephone operation Store a directory entry · Saving or deleting a number on one handset will automatically update the other handset.



[You're reading an excerpt. Click here to read official VTECH DS6111-2 user guide](http://yourpdfguides.com/dref/1305030)  
<http://yourpdfguides.com/dref/1305030>

1. Press MENU/SELECT twice when the handset is not in use.

>DIRECTORY 2. Press or to select >STORE, then press MENU/SELECT. CALL LOG The screen displays ENTER NUMBER. 3. Use the dialing keys to enter the number.

· Press MUTE /REMOVE to backspace and erase >STORE REVIEW a digit. · Press and hold MUTE/REMOVE to erase the entire entry. · Press to move the cursor to the left or to the right. · Press and hold REDIAL/PAUSE to insert a dialing pause ENTER NUMBER \_ (p will be displayed). - OR · Copy a number from the redial list by pressing REDIAL/PAUSE and then , or REDIAL/PAUSE to scroll to the desired ENTER NAME number. Press MENU/SELECT to copy the number. \_ 4. Press MENU/SELECT to move on to the name. The screen displays ENTER NAME. 5.

Use the dialing keys (see the Character chart on page 23) to enter the name. · Press MUTE/REMOVE to backspace and erase a character. · Press and hold MUTE/REMOVE to erase the entire entry. · Press to move the cursor to the left or to the right. · Press # to insert a space. 6. Press MENU/SELECT to confirm. You will hear a confirmation tone. www.vtechphones.

com 22 Telephone operation Character chart Use the dial pad and the chart below to enter a name (up to 15 characters). Each press of a particular key causes the characters to be displayed in the following order: Number key 1 2 3 4 5 6 7 8 9 0 \* # Characters by number of key presses 1 1 A D G J M P T W 0 \* space ? ! / ( ) @ 2 # B E H K N Q U X 3 , C F I L O R V Y 4 , 2 3 4 5 6 S 8 Z 5 a d g j m 7 t 9 6 . b e h k n p u w 7 & c f i l o q v x y z r s 8 9 · When entering a name in the directory, the first letter of each word will be capitalized automatically. Basic operation Telephone operation · Press MUTE/REMOVE to backspace and erase when entering characters. · Press and hold MUTE/REMOVE to delete the entire entry.

www.vtechphones.com 23 Telephone operation Search the directory Entries are sorted alphabetically. To search the directory: 1. Press once or MENU/SELECT three times to enter the directory.

2. Press or to scroll through the directory. STORE To start an alphabetical search: 1. Press once or MENU/SELECT three times to enter the directory. VTECH 2. Use the dialing keys to enter the first letter associated 800-595-9511 with the name. For example, press 5 (JKL) once to find Jenny, twice to find Kristen, or three times to find Linda. If there is no name entry matching your search, the next closest matching entry in alphabetical order will be displayed. If necessary, press or to find the desired entry. >REVIEW Dial a directory entry 1.

Press 2. Press find it. 3. Press once or MENU/SELECT three times to enter the directory. or to scroll to the desired entry, or use the alphabetical search to /SPEAKER to dial the entry. /FLASH or 24 www.vtechphones.com Telephone operation Edit a directory entry 1. Press once or MENU/SELECT three times to enter the directory. 2.

Press or to scroll to the desired entry, or use the alphabetical search to find it. 3. Press MENU/SELECT to confirm your selection. The EDIT NUMBER screen displays EDIT NUMBER. 595-9511\_ 4.

Use the dialing keys to edit the number. · Press MUTE/REMOVE to backspace and erase a digit. · Press and hold MUTE/REMOVE to erase the entire entry. · Press to move the cursor to the left or to the right. · Press and hold REDIAL/PAUSE to insert a dialing pause (p will be displayed).

· Copy a number from the redial list by pressing REDIAL/PAUSE and then , or REDIAL/PAUSE to scroll to the desired number. Press MENU/SELECT to copy the number. 5. Press MENU/SELECT to move on to the name. The screen EDIT NAME VTECH\_ displays EDIT NAME. 6. Use the dialing keys (see the Character chart on page 23) to edit the name. · Press MUTE/REMOVE to backspace and erase a character. · Press and hold MUTE/REMOVE to erase the entire entry. · Press to move the cursor to the left or to the right.

· Press # to insert a space. 7. Press MENU/SELECT to save. You will hear a confirmation tone. www.vtechphones.com 25 Basic operation Telephone operation Telephone operation Delete from the directory 1. Press once or MENU/SELECT three times to enter the directory. 2. Press or to scroll to the desired entry, or use the alphabetical search to find it.

3. Press MUTE/REMOVE to remove the desired entry. You will hear a confirmation tone. 26 www.vtechphones.

com Telephone operation About caller ID The caller ID with call waiting feature in this telephone lets you see the name and telephone number of the caller before answering the call, even when you're on a call. These features require services provided by your local telephone company. Contact your telephone company if: · you have both caller ID and call waiting, but as separate services (you may need combined service); · you have only caller ID service, or only call waiting service; or · you do not subscribe to any caller ID or call waiting services, but wish to order them. You can use this telephone with regular caller ID service, and you can use its other features without subscribing to either caller ID or combined caller ID with call waiting service. There may be fees for these services, and these services may not be available in all areas.

The caller ID features will work only if both you and the caller are in areas offering caller ID service, and if both telephone companies use compatible equipment. Basic operation Telephone operation www.vtechphones.com 27 Telephone operation Call log · Due to regional service differences, the caller ID information may not be available for every incoming call. In addition, the callers may intentionally block their names and/or telephone numbers. · For call log entries with numbers between 16 and 23 digits, in order to view the entire number you must save the entry to the directory. For information on saving call log entries to the directory, see page 31. If you subscribe to caller ID service, information about each caller will be displayed after the first or second ring. ·

The call log can store up to 50 entries. Each entry may have up to 24 digits for the phone number and 15 characters for the name.

If the phone number has more than 24 digits, it will not be saved or displayed in the call log. If the phone number has more than 15 but fewer than 24 digits, only the last 15 digits will be shown. If the name is longer than 15 characters, only the first 15 characters will be shown and HANDSET X XX MISSED CALLS saved in the call log. · You can review, redial, and copy an entry into the directory. · Entries are displayed in reverse chronological order, i.e. from the most recent entry to the earliest entry. CALL LOG EMPTY · When the call log is full, the earliest entry is deleted to make room for new incoming call information. · XX MISSED CALL(S) will be displayed if there are new call log entries (including missed and unreviewed calls).



[You're reading an excerpt. Click here to read official VTECH](#)

[DS6111-2 user guide](#)

<http://yourpdfguides.com/dref/1305030>

· CALL LOG EMPTY will be displayed if there are no records in the call log.

· Since the call log is shared by all the handsets, only one handset can review the call log at a time. If a handset attempts to enter the call log while another handset is already in it, NOT AVAILABLE AT THIS TIME will be displayed. www.vtechphones.com 28 Telephone operation Missed calls indicator When the handset is not in use and there are unreviewed calls in the call log, its screen will display XX MISSED CALL(S).

Each time a call log entry marked NEW is reviewed, the number of missed calls decreases by one. When all the missed calls have been reviewed, the missed calls indicator will no longer display. If you do not want to review the missed calls one by one, press and hold OFF/CLEAR to erase the missed calls indicator. All the entries will be considered old and kept in the call log. HANDBET X XX MISSED CALLS VTECH 595-9511 3:45 AM Basic operation Telephone operation 1/02 NEW Review the call log 1.

Press CID when the handset is not in use. 2. Press or to browse through the call log. -OR1. Press MENU/SELECT when the handset is not in use. 2. Press or to select >CALL LOG. 3. Press MENU/SELECT. 4.

Press or to browse through the call log. · The name (if available), telephone number, date and time of all incoming calls are displayed on the screen. · There will be an error tone when the list reaches the beginning or end of the call log. VTECH 595-9511 AM 3:45 1/02 >CALL LOG RINGER VOLUME www.vtechphones.com 29 Telephone operation Make a call log entry ready to dial Although the call log entries received have 10 digits (the area code plus the seven-digit number), in some areas, you may need to dial only the seven digits, or a 1 plus the seven digits, or a 1 plus the area code plus the seven digits.

You can change the number of digits that you dial from or store in the call log. While reviewing the call log, press # repeatedly to display different dialing options for local and long distance numbers before dialing or saving the telephone number in the directory. See the example on the right. You may also press 1 repeatedly to add or remove a 1 in front of the telephone number before dialing or saving it in the directory.

See the examples on the right. When the number displayed is in the correct format for dialing, press /FLASH or /SPEAKER to call the number. 800-595-9511 1-800-595-9511 595-9511 1-595-9511 595-9511 1-595-9511 800-595-9511 1-800-595-9511 Dial a call log entry 1. When in the call log, press or to scroll to the desired entry. 2.

Press /FLASH or /SPEAKER to dial the entry. 30 www.vtechphones.com Telephone operation Save a call log entry to the directory 1. When in the call log, press or to scroll to the desired entry.

2. Press MENU/SELECT. · You can edit the phone number, if necessary. Make sure the number is in the correct dialing format for your area. Press MENU/SELECT when done. · Edit the name, if necessary. Press MENU/SELECT when done. 3. Successful programming is indicated by SAVED on the handset display along with a confirmation tone. · If the entry is already saved in the directory before, the screen will display ALREADY SAVED.

· If there is no caller ID information, the screen will display UNABLE TO SAVE. · Saving or deleting a number on one handset will automatically update the other handset. SAVED Basic operation Telephone operation ALREADY SAVED UNABLE TO SAVE www.vtechphones.com 31 Telephone operation Delete from the call log To delete one entry: 1. When in the call log, press or to scroll to the desired entry. 2. Press MUTE/REMOVE to delete the selected entry. You will hear a confirmation tone. To delete all entries: 1.

When in the call log, press and hold MUTE/REMOVE to delete the entire call log. The screen displays DELETE ALL CALLS? 2. Press MENU/SELECT to confirm. You will hear a confirmation tone. If you change your mind, press OFF/CLEAR to cancel the deletion and return to the call log.

DELETE ALL CALLS? 32 www.vtechphones.com Telephone operation Call log display screen messages Displays: PRIVATE NAME PRIVATE NUMBER PRIVATE CALLER UNKNOWN NAME UNKNOWN NUMBER UNKNOWN CALLER When: The caller is blocking the name information. The caller is blocking the telephone number information. The caller is blocking the name and number information.

This caller's name is unavailable. This caller's number is unavailable. No information is available about this caller. Basic operation Telephone operation www.vtechphones.com 33 Telephone operation Redial list The telephone stores the five most recently dialed numbers on the redial list. · When there are already five entries on the redial list, the earliest entry will be deleted to make room for the latest entry. · Entries are displayed in reverse chronological order, i.e. from the latest entry to the earliest entry.

The redial list can be accessed by pressing REDIAL when in idle mode. Dial a redial entry 2. Press /FLASH or 1. Press REDIAL, then press , or REDIAL to scroll to the desired number. You will hear an error tone when you reach the beginning or end of the redial list. /SPEAKER to dial the number. Delete from redial 1. Press REDIAL, then press , or REDIAL to scroll to the desired number. 2. Press MUTE/REMOVE to delete the selected entry.

You will hear a confirmation tone. 34 www.vtechphones.com Handset display screen messages ALREADY SAVED CALL LOG EMPTY CALLING HANDBET X (for DS6111-3/DS6111-4) CALLING OTHER HANDBET (for DS6111-2) CONNECTING..

· CHARGING DIRECTORY EMPTY ENDED HANDBET X IS CALLING (for DS6111-3/DS6111-4) OTHER HANDBET IS CALLING (for DS6111-2) INTERCOM INCOMING CALL INTERCOM ENDED LINE IN USE LIST FULL LOW BATTERY The telephone number you have entered is already stored in the directory. There are no call log entries. Calling another handset. The cordless handset is searching for the telephone base.

A handset with low battery has been placed in the telephone base or charger to recharge. There are no directory entries. You have just ended a call. Another system handset is calling. The handset is on an intercom call. There is an incoming call. The handset is terminating an intercom call. A handset or another telephone on the same line is in use. The directory is full. The battery needs to be recharged.

www.vtechphones.com 35 Appendix Handset display screen messages MICROPHONE ON MUTED NEW VOICE MAIL NO LINE NO SIGNAL, CALL ENDED NOT AVAILABLE AT THIS TIME OUTSIDE CALL \*\*PAGING\*\* PHONE PLACE IN CHARGER RINGER MUTE SAVED SPEAKER UNABLE TO CALL TRY AGAIN UNABLE TO SAVE MUTE has been turned off and the person on the other end can hear you. The microphone is muted temporarily during a conversation. There are new voicemail messages from the local telephone company. There is no telephone line connected. Communication between handset and telephone base is lost during a call. One handset is already viewing the call log or directory and another handset attempts to review it.



[You're reading an excerpt. Click here to read official VTECH](#)

[DS6111-2 user guide](#)

<http://yourpdfguides.com/dref/1305030>



Connected to the external call during call transfer. The cordless handset locator has been activated.

The handset is in use. The battery is very low. The handset should be placed in the telephone base or charger. The ringer is muted temporarily during incoming call. Your operation has been saved.

The handset speakerphone is in use. You have attempted to make an intercom call, but the handset you are calling is out of range or on an external call. You are attempting to save caller ID entry with no name or number. www.vtechphones.com

com 36 Handset display screen messages WARNING CHECK BATTERY! XX MISSED CALLS The battery is not installed or not installed properly in the handset. -OR The battery needs to be replaced. -OR An incorrect battery has been installed. Use only the supplied VTech battery or equivalent. There are unreviewed calls in your call log. Handset and telephone base indicators Handset lights · On when the handset speakerphone is in use. CHARGE · On when the handset is in the telephone base or charger and is charging. Telephone base lights IN USE · Flashes when there is an incoming call or another telephone sharing the same line is in use. · On when a system handset is in use. · Flashes when you have new voicemail.

Voicemail is offered by your telephone service provider. www.vtechphones.com 37 Appendix VOICEMAIL Handset and telephone base indicators Handset icons MUTE NEW NEW VOICE MAIL SPEAKER · Microphone is muted. · Ringer off. · New call log entries. · New voicemail received from the local telephone company. · In speakerphone mode. · Cycles (low, medium, and full) when the handset battery is charging. · Flashes when the battery is low and needs charging.

· Displays solid when the battery is fully charged. Battery indicator 38 www.vtechphones.com Battery It takes up to 16 hours for the battery to be fully charged. When it is fully charged, you can expect the following performance: Operation While in handset use (talking\*) While in speakerphone mode (talking\*) While not in use (standby\*\*) \*\*Handset is off the telephone base but not in use.

Operating time Nine hours One and a half hours Five days \*Operating times are approximate. Your results may vary. The battery needs charging when: · A new battery is installed in the handset. · The handset beeps. · LOW BATTERY is displayed and the battery indicator on the handset screen is flashing.

CAUTION: To reduce the risk of fire or injury, read and follow these instructions: · Use only the battery(ies) provided or equivalent. To order a replacement, visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377. · Do not dispose of the battery(ies) in a fire. They may explode. Check with local waste management codes for special disposal instructions.

· Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed. · Exercise care in handling batteries in order not to create a short circuit with conductive materials such as rings, bracelets, and keys. The battery and/or conductor may overheat and cause burns. · Charge the battery(ies) provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual. WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO WATER OR ANY TYPE OF MOISTURE. Appendix www.vtechphones.com 39 Important safety instructions When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following: 1.

Read and understand all instructions. 2. Follow all warnings and instructions marked on the product. 3. Unplug this product from the wall outlet before cleaning.

Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning. 4. Do not use this product near water (for example, near a bathtub, kitchen sink, or swimming pool). 5.

@@6. @@7. @@8. Do not allow anything to rest on the power cord. Do not install this product where the cord may be walked on. 9. @@Never spill liquid of any kind on the product. 10. @@11. Do not overload wall outlets and extension cords.

12. @@When the power supply cord or plug is damaged or frayed. B. If liquid has been spilled onto the product. C. If the product has been exposed to rain or water. D. @@E. @@F. If the product exhibits a distinct change in performance.

13. @@There is a remote risk of electric shock from lightning. 14. @@15. @@16.

@@@@@Problem My telephone does not work at all. Suggestion · Make sure the battery is installed and charged correctly (page 3). For optimum daily performance, return the handset to the telephone base or charger after use. · Make sure the power adapter is securely plugged into an outlet not controlled by a wall switch. · Make sure the telephone line cord is plugged firmly into the telephone base and the telephone wall jack.

· Unplug the electrical power to the telephone base. Wait for approximately 15 seconds, then plug it back in. Allow up to one minute for the cordless handset and telephone base to synchronize. · Charge the battery in the handset for up to 16 hours. · Remove and re-insert the battery. If that still does not work, it may be necessary to purchase a new battery. · Disconnect the telephone base from the telephone wall jack and plug in a working telephone. If the other telephone does not work, the problem is probably in the wiring or the local service. Call the local telephone company. L O W B A T T E R Y i s · Place the handset in the telephone base or charger for recharging.

displayed on screen. · Remove and re-install the battery and use it normally until fully discharged, then recharge the handset on the telephone base or charger for up to 16 hours. · If the above measures do not correct the problem, the battery may need to be replaced. Appendix www.vtechphones.com 41

Troubleshooting Problem The battery does not charge in the handset or the handset battery does not accept charge. Suggestion · Make sure the handset is placed in the telephone base or charger correctly. The CHARGE light on the handset should be on. · Remove and reinstall the battery, then charge for up to 16 hours. · If the handset is in the charger or in the telephone base but the CHARGE light on the handset is not on, refer to The CHARGE light is off in this section.

· It may be necessary to purchase a new battery. Please refer to the Battery section (page 39) of this user's manual. · Clean the charging contacts on the handset(s) and telephone base each month using a pencil eraser or a dry non-abrasive fabric. · Make sure the power adapter and telephone line cords are plugged in correctly and securely.



[You're reading an excerpt. Click here to read official VTECH](#)

[DS6111-2 user guide](#)

<http://yourpdfguides.com/dref/1305030>

· Unplug the power adapter.

Wait for 15 seconds before plugging it back in. Allow up to one minute for the handset and telephone base to reset. . . . First, try all the above suggestions.

Move the handset closer to the telephone base. It might be out of range.

The telephone line cord might be malfunctioning. Try installing a new telephone line cord. Disconnect the telephone base from the telephone wall jack and connect a different telephone. If there is no dial tone on this telephone either, the problem is in your wiring or local service. Contact your local telephone company. The CHARGE light is off. There is no dial tone. 42 [www.vtechphones.com](http://www.vtechphones.com) Troubleshooting Problem The telephone does not ring when there is an incoming call.

Suggestion . . . . . Make sure the ringer volume is not set to zero (page 8). Make sure the telephone line cord and power adapter are plugged in properly (page 2). The handset may be too far from the telephone base. Move it closer to the telephone base. There may be too many extension phones on the telephone line to allow all of them to ring simultaneously. Try unplugging some of them. If the other telephones in your home are having the same problem, the problem is in the wiring or local service. Contact the local telephone company (charges may apply). Other electronic products can cause interference to your cordless telephone. Try installing your telephone as far away as possible from the following electronic devices: wireless routers, radios, radio towers, pager towers, cellular telephones, digital telephones, intercoms, room monitors, televisions, VCRs, personal computers, kitchen appliances, and other cordless telephones. Test a working telephone at the telephone wall jack. If another telephone has the same problem, the problem is in the telephone wall jack. Contact your local telephone company (charges may apply). The telephone line cord might be malfunctioning. Try installing a new telephone line cord.

Re-install the battery and place the handset in the telephone base. Wait for the handset to synchronize with the telephone base. Allow up to one minute for this to take place. . . . Appendix [www.vtechphones.com](http://www.vtechphones.com)

com 43 Troubleshooting Problem I cannot dial out. Suggestion · First, try all the above suggestions. · Make sure there is a dial tone before dialing. It is normal if the handset takes a second or two to synchronize with the telephone before producing a dial tone. Wait an extra second before dialing. · If the other telephones in your home are having the same problem, the problem is in the wiring or local service. Contact your local telephone company (charges may apply). · Eliminate any background noise. Noise from a television, radio, or other appliances may cause the telephone not to dial out properly. If you cannot eliminate the background noise, first try muting the cordless handset before dialing, or dialing from another room in your home with less background noise.

· Make sure the power cord is securely plugged into the telephone base. Plug the telephone base into a different working electrical outlet not controlled by a wall switch. · Move the handset closer to the telephone base. It may be out of range. · Reset the telephone base by unplugging the electrical power to the base.

Wait for 15 seconds and plug it back in again. Allow up to one minute for the cordless handset and the telephone base to synchronize. · Other electronic products can cause interference to your cordless telephone. Try installing your telephone as far away from these electronic devices as possible: wireless routers, radios, radio towers, pager towers, cellular telephones, intercoms, room monitors, televisions, personal computers, kitchen appliances and other cordless telephones. My handset beeps and is not performing normally.

44 [www.vtechphones.com](http://www.vtechphones.com) Troubleshooting Problem There is interference during a telephone conversation. My calls fade out when I am using the cordless handset. Suggestion · The handset may be out of range.

Move it closer to the telephone base. · Do you have DSL service? If yes, you need to have a DSL filter installed at every telephone wall jack that has a telephone connected to it (page 2). Contact your DSL service provider for filter information. · Appliances or other cordless telephones plugged into the same circuit as the telephone base can cause interference. Try moving the appliance or telephone base to another outlet.

· Other electronic products can cause interference to your cordless telephone. Try installing your telephone as far away as possible from the following electronic devices: wireless routers, radios, radio towers, pager towers, cellular telephones, digital telephones, intercoms, room monitors, televisions, VCRs, personal computers, kitchen appliances, and other cordless telephones. · If your telephone is plugged in with a modem or a surge protector, plug the telephone (or modem/surge protector) into a different location. If this doesn't solve the problem, re-locate your telephone or modem farther apart from each other, or use a different surge protector. · The location of your telephone base can impact the performance of your cordless phone. For better reception, install the telephone base in a centralized location within your home or office, away from walls or other obstructions. In many environments, elevating the telephone base will improve overall performance. · Disconnect the telephone base from the telephone wall jack and plug in a corded telephone. If calls are still not clear, the problem is probably in the wiring or local service. Contact your local service company (charges may apply).

· If the other telephones in your home are having the same problem, the problem is in the wiring or local service. Contact the local telephone company (charges may apply). Appendix [www.vtechphones.com](http://www.vtechphones.com) 45 Troubleshooting Problem I hear other calls when using the telephone. Suggestion · Disconnect the telephone base from the telephone wall jack. Plug in a different telephone. If you still hear other calls, the problem is probably in the wiring or local service.

Call your local telephone company. I hear noise on the · Make sure the telephone line cord is plugged in securely.

cordless handset, and none of the keys or buttons works. My caller ID features are not working properly. · Caller ID is a subscription service. You must subscribe to this service from your local telephone company for this feature to work on your telephone. · The caller may not be calling from an area which supports caller ID.

· Both you and the caller's telephone companies must use equipment which are compatible with the caller ID service. · The caller ID information will be displayed after the first or second ring.



[You're reading an excerpt. Click here to read official VTECH](#)

[DS6111-2 user guide](#)

<http://yourpdfguides.com/dref/1305030>

· If you subscribe to DSL service, install a DSL filter to the telephone line between the telephone base and the telephone line jack. Contact your DSL service provider for filter information. The system does not · Make sure you subscribe to caller ID with call waiting features provided by the local telephone receive caller ID or company.

the system does not · The caller may not be calling from an area which supports caller ID. display caller ID during · Both you and the caller's telephone companies must use equipment which are compatible call waiting. with caller ID service. · If you subscribe to DSL service, install a DSL filter to the telephone line between the telephone base and the telephone line jack. Contact your DSL service provider for filter information. 46 www.vtechphones.com Troubleshooting Problem Suggestion Caller ID entries do not · Although the call log entries you receive have 10 digits, (the area code plus the seven-digit number,) in some areas, you may need to dial only the seven digits, or a 1 plus the seven digits, match the numbers 1 or a 1 plus the area code plus the seven digits. You can change the number of digits that you need to dial. dial from or store in the call log.

· While reviewing the call log, press # repeatedly to display these dialing options for local and long distance numbers before dialing or saving the telephone number. CONNECTING... is · The handset may be out of range. Move it closer to the telephone base. shown in the handset · Make sure the power cord is securely plugged into the telephone base. Use a working electrical display window. Why outlet that is not controlled by a wall switch. don't I get a dial tone · Reset your telephone by unplugging the power adapter from the telephone base.

Disconnect when I try to use this the battery from the cordless handset. Wait for 15 seconds, then plug in the power adapter and telephone? re-install the battery. Place the handset in the telephone base and allow up to one minute for the handset and telephone base to synchronize. · Other electronic products may prevent your handset and telephone base from communicating with each other. Try installing your telephone base as far away from these electronic devices as possible: wireless routers, radios, radio towers, pager towers, cellular telephones, intercoms, room monitors, televisions, personal computers, kitchen appliances and other cordless telephones.

Appendix www.vtechphones.com 47 Troubleshooting Problem Common cure for electronic equipment. Suggestion · If the telephone is not responding normally, try putting the cordless handset in the telephone base or the charger. If it does not respond, try the following (in the order listed): · Disconnect the power to the telephone base.

· Disconnect the battery on the cordless handset. · Wait a few minutes before connecting power to the telephone base. · Re-install the battery and place the cordless handset in the telephone base or charger. · Wait for the cordless handset to synchronize its connection with the telephone base. Allow up to one minute for this to take place. 48 www.vtechphones.com Operating range This cordless telephone operates with the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and telephone base can communicate over only a certain distance - which can vary with the locations of the telephone base and handset, the weather, and the layout of your home or office. When the handset is out of range, the handset will display CONNECTING.

· If there is a call while the handset is out of range, it might not ring, or if it does ring, the call might not connect well when you press /FLASH. Move closer to the telephone base, then press /FLASH to answer the call. If the handset moves out of range during a telephone conversation, there might be interference. To improve reception, move closer to the telephone base. Maintenance Taking care of your telephone Your cordless telephone contains sophisticated electronic parts, so it must be treated with care. Avoid rough treatment Place the handset down gently. Save the original packing materials to protect your telephone if you ever need to ship it. Avoid water Your telephone can be damaged if it gets wet.

Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower. Electrical storms Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electrical appliances during storms. Cleaning your telephone Your telephone has a durable plastic casing that should retain its luster for many years.

Clean it only with a soft cloth slightly dampened with water or a mild soap. Do not use excess water or cleaning solvents of any kind. Appendix Remember that electrical appliances can cause serious injury if used when you are wet or standing in the water. If the telephone base should fall into the water, DO NOT RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD AND TELEPHONE LINE CORDS FROM THE WALL. Then pull the unit out by the unplugged cords.

www.vtechphones.com 49 About cordless telephones · Privacy: The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephone base and the cordless handset by radio waves, so there is a possibility that the cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone conversations as being as private as those on corded telephones. · Electrical power: The telephone base of this cordless telephone must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. Calls cannot be made from the cordless handset if the telephone base is unplugged or switched off, or if the electrical power is interrupted. · Potential TV interference: Some cordless telephones operate at frequencies that may cause interference to televisions and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on top of a TV or VCR.

If interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference. · Rechargeable batteries: This product contains either Nickel-cadmium or Nickel-metal hydride rechargeable batteries. Exercise care in handling batteries in order not to create a short circuit with conducting material such as rings, bracelets, and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger. · Nickel-metal hydride rechargeable batteries: Dispose of these batteries in a safe manner.



[You're reading an excerpt. Click here to read official VTECH](http://yourpdfguides.com/dref/1305030)

[DS6111-2 user guide](http://yourpdfguides.com/dref/1305030)

<http://yourpdfguides.com/dref/1305030>

Do not burn or puncture the battery. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury. The RBRC® seal The RBRC® seal on the nickel-metal-hydrate battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada.

The RBRC® program provides a convenient alternative to placing used nickel-metal-hydrate batteries into the trash or municipal waste, which may be illegal in your area. VTech's participation in RBRC® makes it easy for you to drop off the spent battery at local retailers participating in the RBRC® program or at authorized VTech product service centers. Please call 1-800-8-BATTERY™ for information on Ni-MH battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.

RBRC® is a registered trademark of Rechargeable Battery Recycling Corporation.

50 www.vtechphones.com Warranty What does this limited warranty cover? The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada. What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")? During the limited warranty period, VTech's authorized service representative will repair or replace at VTech's option, without charge, a Materially Defective Product.

If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement to take approximately 30 days. How long is the limited warranty period? The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever is longer. What is not covered by this limited warranty? This limited warranty does not cover: 1. Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion; or 2.

Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTech; or 3. Product to the extent that the problem experienced is caused by signal conditions, network reliability, or cable or antenna systems; or 4. Product to the extent that the problem is caused by use with non-VTech accessories; or 5. Product whose warranty/quality stickers, product serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or 6. Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or 7. Product returned without a valid proof of purchase (see item 2 below); or Appendix www.vtechphones.com 51 Warranty 8. Charges for installation or set up, adjustment of customer controls, and installation or repair of systems outside the unit. How do you get warranty service? To obtain warranty service in the United States of America, please call 1 (800) 595-9511.

In Canada, please call 1 (800) 267-7377. NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may save you a service call. Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid.

VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by this limited warranty. What must you return with the Product to get warranty service? 1. Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunction or difficulty; and 2.

Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and 3. Provide your name, complete and correct mailing address, and telephone number. Other Limitations This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communications related to this Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification. State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province. Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase.

Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the Product or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product.



[You're reading an excerpt. Click here to read official VTECH DS6111-2 user guide](http://yourpdfguides.com/dref/1305030)  
<http://yourpdfguides.com/dref/1305030>