



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for VTECH DS6321-3. You'll find the answers to all your questions on the VTECH DS6321-3 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual VTECH DS6321-3
User guide VTECH DS6321-3
Operating instructions VTECH DS6321-3
Instructions for use VTECH DS6321-3
Instruction manual VTECH DS6321-3

vtech
Innovation Beyond Technology™

User's manual
www.vtechphones.com



Models:
DS6321-2/DS6321-3/
DS6321-4/DS6322-3/
DS6322-4

Bluetooth
DECT 6.0



[You're reading an excerpt. Click here to read official VTECH DS6321-3 user guide](http://yourpdfguides.com/dref/2374589)
<http://yourpdfguides.com/dref/2374589>

Manual abstract:

v t e c h p h o n e s . @ @ @ @ @ @ @ @ For support, shopping, and everything new at VTech, visit our website at www.vtechphones.com. In Canada, please visit www.vtechcanada.com. The ENERGY STAR® program (www.energystar.gov) recognizes and encourages the use of products that save energy and help protect our environment.

We are proud to mark this product with the ENERGY STAR® label indicating it meets the latest energy efficiency guidelines. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by VTech Holdings Limited is under license. VTech Holdings Limited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

Table of contents Getting started

.....

.....

1 Parts checklist

.....

.....

.....1 Installation ..

.....

.....

.....

.....

..2 Telephone base and charger installation ...

.....

.....

.....

...3 Battery installation ..

.....

.....

....4 Battery charging

.....

.....

.....5 Installation options .

.....

.....

.....

6 Tabletop to wall-mount installation

.....

.....

.....

6 Wall-mount to tabletop installation

.....

.....

.....

.7 Handset layout

.....

.....

...8 Telephone base layout ..

.....

...10 Handset main menu

.....

.....

..11 BlueTooTh®.....

.....

.....

....12 Introducing Bluetooth .

.....

.....12 Glossary of terms

.....	
.....	
.....13 Bluetooth setup ..	
.....	
.....	
.....	
...14 Pair a cell phone.....	
.....	
.....	
....14 Auto connection .	
.....	
.....	
....15 Pair a headset .	
.....	
.....	
..16 Auto connection ...	
.....	
.....	
.....17 Paired devices ...	
.....	
.....	
.....	
.....18 Rename a paired device	
.....	
..18 Remove a paired device ...	
.....19 Active devices .	
.....	
.....	
.....	
.....20 Review the active devices list ...	
..20 Connect/Disconnect an active device	
.....	
.....	
.....20 Replace an active device ..	
.....	
.....21 Add an active device .	
.....	
.....	
.....22 Remove an active device ...	
.....	
.....23 Change PIN ..	
.....	
.....	
.....	
23 Download directory	
.....	
.....	
24 Interruption to directory download.....	
.....	
.....	
.....	
...26 View the directory download information	
.....	
.....	

.....
...26 Telephone settings

.....
.....
.27 Ringers (handset)

.....
....27 i Ringer volume (handset) .

.....
.....27 Ringer tone

.....
.....
.....
.....28 Settings .

.....
.....
.....
.....
.....29 LCD language ...

.....
.....
.....
.....29 Clear voicemail

.....
.....
.....
.....30 Key tone

.....
.....
.....
.....31 Set date/time .

.....
.....
.....
.....31 Dial mode .

.....
.....
.....
.....32 Home area code .

.....
.....
.....
.....32 Cell area code .

.....
.....
.....
.....33 Answering system settings ...

.34 Answer ON/OFF
.....
.....

.....34 Announcement
.....
.....
.....

...35 Play your announcement
.....35 Record your own announcement .

.....
.....

.....35 Delete your announcement ..

.....

.36 Answering system setup

.....37 Call screening ..

.....

.....

.....

.....37 Number of rings

.....

.....

.....

..37 Remote access code

.....38 Message alert tone.

.....

.....

.....

38 Telephone operation

.....

.39 Make, answer or end a home call

.....

.....

.....

...39 Call waiting on the home line ..

...40 Make, answer or end a cell call

.....

.....

.....

.....40 Call waiting on the cell line ..

.....40 Answer a cell call while on a home call...

.....

.....

.....

41 Cell phone voicemail

.....

.....41 Answer a home call while on a cell call ..

.....

.....

.....

.....

.41 Conference home and cell calls

.....

.....

.....

.....42 Using the home and cell lines together

.....

.....

.....

.....

42 Handset speakerphone

.....
.....
50 Hold a call and intercom.....
.....50 Directory ..

.....
.....
.....
.....
.....51 Create a new entry in the home directory

.....52 Character chart .
.....
.....
.....

.....53 Review the directory.....
.....
.....

.....54 3-character alphabetical search

.....54 Dial a directory entry

.....55 Edit a directory entry .
.....

.....55 Edit the type of a directory entry ...
.....
.....

.....56 Delete a directory entry

.....56 Remove a downloaded directory
.....

.....56 About caller ID

.....57 Caller ID history..
.....

.....58 Missed calls indicator .
.....
.....

.....58 Memory match

.....59 Review the call log
.....

.....
..59 Make a call log entry ready to dial
.....
.....
.....
.....
.....60 Dial a call log entry

.....
....60 Save a call log entry to the directory .
.....
.....
.....
.....61 Delete from the call log ...

.....62 Call log display screen messages....
.....
.....
.....
.....62 Answering system operation ..

63 Answering system and voicemail

.....
.....
.....
.....
...63 Message capacity

.....63 New message indication

.....64 Call intercept ...
.....
.....
.....

.....64 Telephone base ringer volume ...
64 Message playback

.....
.....
.....
.....65 Delete all old messages

....66 Record and play memos .
.....
.....66 Message window displays...

.....67 Remote access
.....
.....
.....

..68 Appendix

.....
.....
.....
.....69 Screen display messages ...

.....
..69 Handset and telephone base indicators ...
.....
.....
.....
.....72 Battery .

If you subscribe to digital subscriber line (DSL) high-speed Internet service through your telephone line, you must install a DSL filter between the telephone line cord and the telephone wall jack. The filter prevents noise and caller ID problems caused by DSL interference. Contact your DSL service provider for more information about DSL filters. Electrical outlet not controlled by a wall switch Telephone base power adapter Telephone wall jack Telephone line cord DSL filter (not included) is required if you have DSL high speed Internet service Power adapter Charger Telephone base · Use only the power adapters supplied with this product.



[You're reading an excerpt. Click here to read official VTECH](#)

[DS6321-3 user guide](#)

<http://yourpdfguides.com/dref/2374589>

To order a replacement, visit our website at www.vtechphones.com.

· www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com or dial 1 (800) 267-7377. · The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet. 3 Getting started Battery installation Install the battery as shown below. 1. If the battery compartment cover is on the handset, press the indentation and slide the cover to remove.

2. Plug the battery connector securely into the socket inside the handset battery compartment, matching the color-coded label. 3. Place the battery with the label **THIS SIDE UP** facing up and the wires inside the battery compartment. 4. Align the cover flat against the battery compartment, then slide it towards the center of the handset until it clicks into place. 5. Charge the handset by placing it in the telephone base or charger. The **ChARGE** light is on when the handset charges. 1 2 3 4 5 **ChARGE** light · If the handset will not be used for a long time, disconnect and remove the battery to prevent possible leakage.

· To purchase a replacement battery, visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com or dial 1 (800) 267-7377. 4 Getting started Battery charging Once you have installed the battery, the screen indicates the battery status (see the table below). If necessary, place the handset in the telephone base or charger to charge the battery. For best performance, keep the handset in the telephone base or charger when not in use. The battery is fully charged after 16 hours of continuous charging.

See the table on page 74 for battery operating times. If the screen is blank, you need to charge the handset without interruption for at least 10 minutes to give the handset enough charge to use the telephone for a short time. When the battery is low, the handset beeps and shows low battery and a flashing . If you are on a call in low battery mode, the handset beeps every minute. The following table summarizes the battery charge indicators and actions to take. Battery indicators The screen is blank. Battery status Battery has no charge and hold to return to idle mode. While entering or editing a directory entry, press to erase a digit or character. /Cell Press to make or answer a cell call (page 40). During a cell call, press to answer an incoming call when you hear a call waiting alert (page 40).

Flashes quickly when there is an incoming cell call. Flashes slowly when a cell call is on hold. Vol/CID/ While in a menu, press to scroll down. During a call, press to decrease the listening volume (page 43). When the handset is not in use, press to review the call log (page 59). # While reviewing a call log entry or a directory entry, press repeatedly to show other dialing options (page 60 and page 54 respectively). MuTe/ReMoVe While on a call, press to mute the microphone (page 43). While reviewing the call log, directory or redial list, press to delete an individual entry (page 62, page 56 and page 47 respectively). Press to delete digits when predialing (page 39). 9 Getting started Telephone base layout X/DeleTe Press to delete the message currently playing (page 65). When the phone is not in use, press twice to delete all previously reviewed messages (page 66). /SKIP Press to skip to the next message (page 65). Vol Press to adjust the volume during playback (page 65). When the phone is not in use, press to adjust the telephone base ringer volume (page 64). /FIND hANDSeT Press to page all system handsets (page 44).

/RePeAT Press to repeat a message or press twice to play the previous message (page 65). /ANS oN/oFF Press to turn the answering system on or off (page 34). /PLAY/SToP Press to play messages (page 65). Press to stop message playback (page 65). DeVICe1/DeVICe2 lights On when the telephone base is paired and connected with a Bluetooth device.

Flash while pairing a Bluetooth device. IN uSe light Flashes when there is an incoming call, or another telephone sharing the same line is in use. On when the handset is in use. Message window Shows the number of messages and other answering system information (page 67). 10 Getting started handset main menu To enter the main menu: 1. Press MeNu/SeleCT when the handset is not in use. 2. Press or to select a handset feature menu, then press MeNu/SeleCT to enter that menu. To return to the previous menu, press oFF/CleAR. To return to idle mode, press and hold oFF/CleAR.

Ans. system - play messages, record memos and change your answering system settings. Ans. system Directory Cal log l Intercom Bluetooth Directory - store and search for names and numbers. Ans. system Directory Cal log l Intercom Bluetooth Call log - review the caller ID history or delete all call log entries. Intercom - intercom call with a system handset. Ans. system Directory Cal log l Intercom Bluetooth Ans. system Directory Cal log l Intercom Bluetooth Bluetooth - set up and manage your Bluetooth enabled devices.

Ringers - set up ringers for the home and cell lines. Ans. system Directory Cal log l Intercom Bluetooth Directory Cal log l Intercom Bluetooth Ringers Settings - change your telephone settings. Cal log l Intercom Bluetooth Ringers Settings I l Bluetooth Introducing Bluetooth Your new DS6321/6322 telephone system with Bluetooth wireless technology has the following features: · Pair up to four Bluetooth enabled cell phones with the telephone base. · Connect a maximum of two cell phones to make and receive cell calls.

Only one cell phone can be active on a call at a time. · Connect a Bluetooth enabled headset for making and receiving home calls. · Conference cell and home calls. · Make and receive calls using your cell phone plan while utilizing the ease and comfort of your home telephone system. **IMPORTANT INFORMATION** · · After plugging in the telephone base, wait at least 20 seconds before connecting a Bluetooth device.

The screen shows Bluetooth system busy if you try to connect too soon. Refer to the user's manual of your Bluetooth enabled cell phone or headset for more information about how that device uses Bluetooth connectivity. Bluetooth wireless technology operates within a short range (about 1 to 30 feet) from the telephone base. Keep connected cell phones and headset within this range. If your cell phone has poor reception in your home, the DS6321/6322 cannot improve the reception. However, if you have a location in your house with better reception, you can leave your cell phone in that location while you use the DS6321/6322 cell line. In order for this to work, the telephone base must be within 30 feet of the cell phone. Charge your cell phone while it is connected to the telephone base. Your cell phone's battery will discharge faster while it is connected to the telephone base via Bluetooth wireless technology.



[You're reading an excerpt. Click here to read official VTECH](http://yourpdfguides.com/dref/2374589)

[DS6321-3 user guide](http://yourpdfguides.com/dref/2374589)

<http://yourpdfguides.com/dref/2374589>

Monitor your cell phone's usage because minutes are deducted from your cellular plan for the duration of all cell calls.

· · Refer to the Bluetooth setup section (page 14) to learn how to set up and manage your Bluetooth enabled device(s). Refer to the Telephone operation section (page 39) on how to operate your Bluetooth devices with your new DS6321/6322 telephone system with Bluetooth wireless technology. Refer to the Troubleshooting section (page 77) if you experience difficulty using the telephone system. The Bluetooth ® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by VTech Holdings Limited is under license. VTech Holdings Limited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners. 12 Bluetooth Glossary of terms Below are some terms used in this user's manual to help you become familiar with using your Bluetooth enabled devices and your new DS6321/6322 telephone system. Active devices - a maximum of two paired devices (two cell phones, or one cell phone and one headset) on the active devices list can be connected to the telephone base, but only one cell phone or headset can be on a call at a time. Bluetooth cell phone - refers to a Bluetooth enabled cellular telephone.

Cell line - the telephone line associated with your cell phone service. On your DS6321/6322 handset, press /Cell to use the cell line. Connected - a Bluetooth enabled device (cell phone or headset) can only be used when it is connected to the telephone base. When a Bluetooth enabled device is connected to the telephone base and active on the active devices list, it will be ready for use. Disconnected - a diagonal line appears across devices 1 and/or 2 when the corresponding Bluetooth enabled device is disconnected from the telephone base.

Discoverable mode - before a Bluetooth enabled device can be paired, it must be set to this mode. When pairing your cell phone, the telephone base will be set to this mode. When pairing a headset, the headset must be set to this mode. Depending on the manufacturer, this mode is sometimes referred to as Find Me or Visibility. home line - your conventional telephone land line.

On your DS6321/6322 handset, press /hoMe/FLASH to use the home line. Paired devices - once Bluetooth enabled devices have been paired with the telephone base, they will appear on the paired devices list. A maximum of four devices can be paired with the telephone base, but only two can be on the active devices list. Pairing - this refers to the process of Bluetooth enabled devices registering device information with each other. The telephone base must be paired with a Bluetooth enabled cell phone or headset before the Bluetooth device can be used. Depending on the manufacturer, this is also referred to as Bonding. PIN - by default, the PIN is 0000 for the telephone base and for most Bluetooth devices. PIN information must be exchanged between Bluetooth devices before they can be used. This is also known as a Passkey or Passcode. 13 Bluetooth Bluetooth setup To use a Bluetooth enabled cell phone or headset with your DS6321/6322, you must first pair and connect your Bluetooth device(s) with the telephone base.

All DS6321/6322 handsets can be used to make or answer on the cell phone line. Bluetooth wireless technology operates within a short range. When you pair a Bluetooth cell phone or Bluetooth headset to the telephone base, move closer to the telephone base to maintain sufficient signal strength. Pair a cell phone Before you begin, make sure that you have cellular coverage and your Bluetooth enabled cell phone is not connected to any other Bluetooth device. Refer to your cell phone user's manual to learn how to search for or add new Bluetooth devices. To pair and connect a cell phone: 1. Press MeNu/SeleCT on the handset when it is not in use. 2. Press or to highlight Bluetooth, then press MeNu/SeleCT. 3.

Press 4. 5. 6. 7. to highlight Add cellular, then press The screen displays ADD Cellular Place cell phone next to base.

Press SeleCT. · If there are already four paired devices on the paired devices list, the screen will show Maximum of 4 devices can be paired and prompt you to replace an existing paired device (page 21). Press MeNu/SeleCT. The screen displays Please set your cell phone to search for devices, then press SeleCT. · If a device is already connected to the telephone base, the screen displays Connected device will be temporarily disconnected.

Press SeleCT. Press MeNu/SeleCT to temporarily disconnect the device and continue the pairing process. Turn on the Bluetooth feature of your cell phone and search for or add new devices. Press MeNu/SeleCT to set the telephone base to discoverable mode. Once your cell phone finds VTech DS6321/VTech DS6322, press MeNu/SeleCT. or MeNu/SeleCT. Ans. system Directory Cal log l Intercom Bluetooth BLUETOOTH Download dir Add cel lular Add headset Active devices ADD Place phone base. Press CELLULAR cel l next to SELECT Please set your cel phone to l search for devices, then press SELECT 14 Bluetooth Pair a cell phone (continued) 8. Enter the PIN of the telephone base (the default PIN is 0000) into your cell phone to continue the pairing process.

9. When a device is successfully connected, the handset displays Paired with cellular and then Cellular setup completed Device connected. The corresponding status icon (1 or 2) displays. The corresponding device light on the telephone base (DeVICe1 or DeVICe2) turns on. · When you already have two devices on the active devices list, the handset shows Maximum of 2 devices can be connected. You are prompted to replace an existing device on the active devices list (page 21). Base name: VTech DS6321 PIN:0000 Cel lular setup completed Device connected · The pairing process may take up to one minute. If the pairing process fails, try again. · If you put the handset back in the telephone base or charger while pairing, the process discontinues and the handset returns to idle mode. Auto connection When a device is successfully paired with the telephone base but not connected, the handset displays Cellular setup completed Device not connected and then Autoconnect function enabled Press SeleCT.

Cel lular setup You can press MeNu/SeleCT to exit. You can connect a completed device manually (page 20). Device not connected Auto-connect function enabled Press SELECT 15 Bluetooth Pair a headset Before you begin, make sure that your Bluetooth enabled headset is not connected to any other Bluetooth device. Refer to your headset user's manual to learn how to search for or add new Bluetooth devices. To pair and connect a headset: 1.

Press MeNu/SeleCT on the handset when it is not in use. 2. Press or to highlight Bluetooth, then press MeNu/SeleCT. Ans. system Directory Cal log l Intercom Bluetooth 3.

Press 4. 5. 6. 7. to highlight Add headset, then press The screen displays ADD heADSeT Place Bluetooth headset next to base.



[You're reading an excerpt. Click here to read official VTECH](http://yourpdfguides.com/dref/2374589)

[DS6321-3 user guide](http://yourpdfguides.com/dref/2374589)

<http://yourpdfguides.com/dref/2374589>

Press **SeleCT**. · If there are already four paired devices on the paired devices list, the screen will show Maximum of 4 devices can be paired and prompt you to replace an existing paired device (page 21). Press **MeNu/SeleCT**. The screen displays Please set your headset to discoverable mode, then press **SeleCT**. · If a device is already connected to the telephone base, the screen displays Connected device will be temporarily disconnected.

Press **SeleCT**. Press **MeNu/SeleCT** to temporarily disconnect the device and continue the pairing process. Set your headset to discoverable mode. Press **MeNu/SeleCT** to set your telephone base to discoverable mode and search for your headset. Once the telephone base finds your headset, press or **MeNu/SeleCT**. **MeNu/SeleCT**. **BLUETOOTH** Download dir Add cel lular Add headset Active devices **ADD HEADSET** Place Bluetooth headset next to base. Press **SELeCT** Please set your headset to discoverable mode, then press **SELeCT** Searching for Bluetooth headsets...

8. Enter the PIN of your headset (the PIN for most Bluetooth devices is 0000), then press **MeNu/SeleCT**. **FOUND DEVICES** Headset A Headset B **ADD HEADSET** Enter PIN: ---- 16 Bluetooth Pair a headset (continued) 9. When the handset displays headset A paired to base. Connect now? Press **SeleCT**, then press **MeNu/SeleCT** on the handset.

· When you already have two devices on the active devices list, the handset shows Maximum of 2 devices can be connected. You are prompted to replace an existing device on the active devices list (page 21). · When you already have one headset on the active devices list, the handset shows only 1 headset can be connected. You are prompted to replace an existing device on the active devices list (page 21). 10.

When a device is successfully connected, the handset displays headset setup completed Device connected and the corresponding status icon (1 or 2). The corresponding light on the telephone base (**DeVICe1** or **DeVICe2**) turns on. Headset A paired to base. Connect now? Press **SELeCT** Headset setup completed Device connected · The pairing process may take up to one minute. If the pairing process fails, try again. · If you put the handset back in the telephone base or charger while pairing, the process discontinues and the handset returns to idle mode. Auto connection When a device is successfully paired with the telephone base but not connected, the handset displays headset setup completed Device not connected and then Auto-connect function enabled Press **SeleCT**. You can press **MeNu/SeleCT** to exit. You can connect a device manually (page 20). Headset setup completed Device not connected Auto-connect function enabled Press **SELeCT** 17 Bluetooth Paired devices All paired devices are stored on the paired devices list.

Up to four devices (one headset only) can be paired with the telephone base. To use a paired device, it must be connected and on the active devices list (page 20). Once you have paired a device with the telephone base, you do not need to repeat the pairing procedure again unless you delete the device from the paired devices list. Only the first 15 characters of the device name are shown on the paired devices list. Rename a paired device You can change the name of a paired device on the paired devices list. 1. Press **MeNu/SeleCT** on the handset when it is not in use. 2. Press or to highlight Bluetooth, then press

MeNu/SeleCT. Ans.

system Directory Cal log l Intercom Bluetooth 3. Press or **MeNu/SeleCT**. to highlight Paired devices, then press 4. Press or to highlight a selected device when necessary, then press **MeNu/SeleCT**. 5.

Press or to highlight Rename, then press **MeNu/SeleCT**. The screen displays eNTeR NeW NAME. 6. Use the dialing keys to edit the name (page 53). · Press **MuTe/ReMoVe** to erase a character.

· Press and hold **MuTe/ReMoVe** to erase all characters. · Press to move the cursor to the right or to the left. 7. Press **MeNu/SeleCT** to confirm. The handset displays Device renamed. **BLUETOOTH** Add cel lular Add headset Active devices Paired devices **SELeCT DEVICE** Headset A Cel Phone AC l Connect Rename Remove paired **ENTER NEW NAME** Headset A _ 18 Bluetooth Remove a paired device If you already have the maximum of four paired devices on the paired devices list when you want to add another device, you must first delete a paired device from the paired devices list. 1. Press **MeNu/SeleCT** on the handset when it is not in use. 2. Press or to highlight Bluetooth, then press **MeNu/SeleCT**.

Ans. system Directory Cal log l Intercom Bluetooth 3. Press or **MeNu/SeleCT**. to highlight Paired devices, then press 4. Press or to highlight a selected device when necessary, then press **MeNu/SeleCT**. 5. Press or to highlight Remove paired, then press **MeNu/SeleCT**. The handset displays Remove device from paired list? Press **SeleCT**. 6. Press **MeNu/SeleCT** to confirm.

The handset displays Device removed from paired list. **BLUETOOTH** Add cel lular Add headset Active devices Paired devices **SELeCT DEVICE** Headset A Cel Phone AC l Connect Rename Remove paired Remove device from paired list? Press **SELeCT** Device removed from paired list 19 Bluetooth Active devices Only devices on the active devices list can establish a Bluetooth connection with the telephone base. Although two paired devices can be connected to the telephone base, only one Bluetooth cell phone or a headset can be on a call at a time. When adding, removing, or replacing a Bluetooth device on the active devices list, all connected devices will be temporarily disconnected until the procedure is complete. It may take up to two minutes to reconnect.

Review the active devices list 1. Press **MeNu/SeleCT** on the handset when it is not in use. 2. Press or to highlight Bluetooth, then press **MeNu/SeleCT**. Ans. system Directory Cal log l Intercom Bluetooth 3. Press or **MeNu/SeleCT**. to highlight Active devices, then press Connect/Disconnect an active device While in the active devices menu, you may connect or disconnect your active device. 1. Press **MeNu/SeleCT** on the handset when it is not in use. 2. Press or to highlight Bluetooth, then press **MeNu/SeleCT**. **BLUETOOTH** Download dir Add cel lular Add headset Active devices **SELeCT DEVICE** 1 Headset A 2 Cel Phone AC l 3. Press or **MeNu/SeleCT**. to highlight Active devices, then press 4.

Press or to highlight a device when necessary, then press **MeNu/SeleCT**. 5. Press or to highlight Connect/Disconnect (whichever is applicable), then press **MeNu/SeleCT** to confirm. The handset displays Device connected/Device disconnected. Disconnect Remove active When your active device is connected, you will be prompted to select Disconnect. When your active device is disconnected, you will be prompted to select Connect. 20 Bluetooth Replace an active device When you already have two devices on the active devices list, you can replace an active device with a device on the paired devices list. To replace an active device: 1.



You're reading an excerpt. Click here to read official VTECH
[DS6321-3 user guide](http://yourpdfguides.com/dref/2374589)
<http://yourpdfguides.com/dref/2374589>

Press MeNu/SeleCT on the handset when it is not in use. 2.

Press or to highlight Bluetooth, then press MeNu/SeleCT. Ans. system Directory Cal log l Intercom Bluetooth 3. Press 4. Press 5.

Press or or MeNu/SeleCT. MeNu/SeleCT. to highlight Paired devices, then press to highlight a device, then press BLUETOOTH Add cel lular Add headset Active devices Paired devices to highlight Connect, then press The handset displays Maximum of 2 devices can be connected and then Replace an existing active device with cellular? Press SeleCT. 6. Press MeNu/SeleCT.

You are prompted to select a device on the paired devices list. 7. Press or to highlight the device to be replaced, then press MeNu/SeleCT. The handset displays Device removed from active list and then Connecting Cell Phone B to the base... 8. Depending on your cell phone settings, you may need to press a key on your cell phone to confirm the connection. When you successfully replace and connect an active device with a paired device, the handset displays Device connected. MeNu/SeleCT.

SELECT DEVICE 1 Headset A 2 Cel Phone AC l Connect Rename Remove paired Replace an existing active device with cel lular? Press SELECT REPLACE DEVICE 1 Cel Phone A l 2 Cel Phone BC l 21 Bluetooth Add an active device You can have a maximum of two devices on the active devices list. To add an active device: 1. Press MeNu/SeleCT on the handset when it is not in use. 2. Press or to highlight Bluetooth, then press MeNu/SeleCT. Ans. system Directory Cal log l Intercom Bluetooth 3. Press 4. Press or or MeNu/SeleCT. MeNu/SeleCT.

to highlight Active devices, then press to highlight an empty position, then press BLUETOOTH Dowload dir Add cel lular Add headset Active devices 5. When Add displays, press MeNu/SeleCT. You are prompted to select a device from the paired devices list. 6. Press or to select one paired device, then press MeNu/SeleCT.

The handset displays Device added to active list and then Connecting Cell Phone B to the base... 7. Depending on your cell phone settings, you may need to press a key on your cell phone to confirm the connection.

When you successfully add and connect an active device, the handset displays Device connected. SELECT DEVICE 1 Cel Phone A l 2 Empty Add SELECT DEVICE 1 Cel Phone B l 2 Cel Phone CC l 22 Bluetooth Remove an active device You can remove an active device from the active devices list. To remove an active device: 1. Press MeNu/SeleCT on the handset when it is not in use. 2. Press or to highlight Bluetooth, then press MeNu/SeleCT. Ans. system Directory Cal log l Intercom Bluetooth 3. Press 4. Press 5.

Press or or MeNu/SeleCT. MeNu/SeleCT. to highlight Active devices, then press BLUETOOTH Download dir Add cel lular Add headset Active devices to highlight the desired device, then press to highlight Remove active, then press The handset displays Device removed from active list. MeNu/SeleCT. Even though the active device is removed from the active devices list, it is still on the paired devices list. SELECT DEVICE 1 Cel Phone B l 2 Cel Phone CC l Change PIN You are required to enter a PIN when establishing a Bluetooth connection. The default PIN of your telephone base is 0000. To change the PIN: 1. Press MeNu/SeleCT on the handset when it is not in use. 2.

Press or to highlight Bluetooth, then press MeNu/SeleCT. Disconnect Remove active 3. Press or to highlight Change PIN, then press MeNu/SeleCT. The handset displays eNtER NeW PIN and the existing PIN. 4.

Use the dialing keys to enter a new four-digit code. · Press MuTe/ReMoVe to erase a digit. · Press and hold MuTe/ReMoVe to erase all digits. · Press to move the cursor to the right or to the left. 5.

Press MeNu/SeleCT to save. Device removed from active list BLUETOOTH Add headset Active devices Paired devices Change PIN ENTER NEW PIN 0000 23 Bluetooth Download directory You can download up to four cell phone directories (phonebooks) to your DS6321/6322 telephone system via Bluetooth wireless technology. Each downloaded directory can store up to 1,500 entries with up to 30 digits for each phone number and 15 characters for each name. Before downloading the directory, make sure the cell phone is paired to your DS6321/6322 and on the active devices list. Make sure the handset battery is charged for at least 10 minutes. Place your cell phone next to the telephone base when you download a cell phone directory to your DS6321/6322. To download a cell phone directory: 1. Press MeNu/SeleCT on the handset when it is not in use. 2. Press or to highlight Bluetooth, then press MeNu/SeleCT.

3. Press MeNu/SeleCT to choose Download dir. · If there is no cell phone paired to the system, the handset displays No cellular device paired. Press SeleCT to add cellular. 4. Press or to select a desired device, then press MeNu/SeleCT. Ans. system Directory Cal log l Intercom Bluetooth · · · · If the selected device is on the paired devices list but not on the active devices list, the handset displays No cellular on active devices list. SELECT DEVICE Press SeleCT to add. Cel Phone A l Cel Phone BC l If the selected device is on the active devices list but disconnected, the handset displays Not connected.

To connect cell place it next to the base. Press SeleCT. If the selected device's directory has already been downloaded to DS6321/6322 before, the handset displays Directory Cell Phone A will be erased. To download press SeleCT. If you press MeNu/SeleCT to continue the download process, the directory stored on the DS6321/6322 for that cell phone will be erased and replaced with the current cell phone directory.

If you have edited the downloaded entries (page 55), those changes will be lost. If you already have four downloaded directories, the handset displays Memory is full. Replace current directory? Press SeleCT when you try to download another cell phone directory. Press MeNu/SeleCT and the system prompts you to replace an existing directory. 24 BLUETOOTH Download dir Add cel lular Add headset Active devices Bluetooth Download directory (continued) 5.

Press or to highlight one of the following options: · Phone memory - download all contacts stored in your phone memory. · SIM card only - download all contacts stored in your SIM card. · Phone and SIM - download all contacts stored in both your phone memory and SIM card. Press MeNu/SeleCT. During the download, the handset will display the progress. All system handsets will display Cell line in use. 6. When the downloading process is complete, the handset displays Download ended Total #XXXX entries saved. Press SeleCT. Press MeNu/SeleCT or oFF/CleAR to return to the download directory menu.

DOWNLOAD FROM Phone memory SIM card only Phone and SIMs Cel phone A l Downloading entry #XXXX... · Certain cell phones do not support SIM card download. entries saved. If this is the case, try transferring the contacts from your SIM card to your cell phone memory first, then Press SELECT download from your cell phone memory.



[You're reading an excerpt. Click here to read official VTECH](http://yourpdfguides.com/dref/2374589)

[DS6321-3 user guide](http://yourpdfguides.com/dref/2374589)

<http://yourpdfguides.com/dref/2374589>

For more information on how to transfer contacts from your SIM card to your cell phone memory, see the user's manual of your cell phone. · When downloading the directory from your Bluetooth enabled cell phone, some data may not transfer. For example, if you have home, mobile and work numbers for a particular contact, the three categories may not transfer to your DS6321/6322. · For certain cell phones, you may need to press a key on your cell phone to confirm the directory download.

Download ended Total #XXXX 25 Bluetooth Interruption to directory download If you are downloading a directory from a cell phone and the cell phone receives a call, the download process stops and all handsets display Download dir aborted. When you try to view the downloaded directory, the handset displays last download aborted: MM/DD/YY Press SeleCT. You need to download the directory again (see page 24). If you are downloading a directory from a cell phone and the telephone base loses power, the download process stops. When you try to view the directory, the handset displays No entries found. Try downloading from SIM or Phone only Press SeleCT. You need to download the directory again (see page 24). 1 HANDSET X Download dir aborted 12:30pm 12/25 The download progress screen may be replaced with Cell line in use. To go back to the downloading progress screen, do steps one through four on page 24. The download process continues even if any of the following occur: · · · You receive or make calls on the home line. You place the handset in the telephone base or charger. You access your cell phone menu features. The handset battery becomes depleted or the handset loses connection with the telephone base. During the download process, do not attempt to make changes to your cell phone directory. View the directory download information 1. Press MeNu/SeleCT on the handset when it is not in use. 2. Press or to highlight Directory, then press MeNu/SeleCT. Cel Phone A l Last update: 12/25/09 Total #XXXX entries saved. 3.

Press or to choose the desired downloaded directory, then press MeNu/SeleCT. 4. Press or to highlight last update, then press MeNu/SeleCT. 26 Telephone settings Ringers (handset) In the ringers menu, you can select the ringer tones and adjust the ringer volume for incoming calls to the home and cell lines. Ringer volume (handset) You can adjust the ringer volume for the incoming home and cell calls. To adjust the handset ringer volume: 1. Press MeNu/SeleCT on the handset when it is not in use. 2. Press or to highlight Ringers, then press MeNu/SeleCT. RINGERS Ringer volume Ringer tone 3. Press MeNu/SeleCT to choose Ringer volume. 4. Press or to select home, Cellular 1, Cellular 2 or All home & cell, then press MeNu/SeleCT to confirm. 5. Press or to adjust the ringer volume.

A sample of each ringer volume plays as you scroll through the choices. 6. Press MeNu/SeleCT to confirm. RINGER Home Cel lular Cel lular Al home l VOLUME 1 2 & cel l RINGER VOLUME · When the ringer volume for all are set to off, a ringer off icon appears steady. When only one or two of the ringer volume is set to off, a ringer off icon flashes.

· See page 64 to set the telephone base ringer. 27 Telephone settings Ringer tone You can select the ringer tones for the incoming home and cell calls. To select a ringer tone: 1. Press MeNu/SeleCT on the handset when it is not in use. RINGERS 2. Press or to highlight Ringers, then press Ringer volume MeNu/SeleCT. Ringer tone 3. Press or MeNu/SeleCT. to highlight Ringer tone, then press 4. Press or to select home, Cellular 1 or Cellular 2, then press MeNu/SeleCT to confirm.

5. Press or to select a ringer tone. A sample of each ringer tone plays as you scroll through the choices. 6. Press MeNu/SeleCT to confirm. When you turn off the ringer volume, you will not hear ringer tone samples. RINGER TONE Home Cel lular 1 Cel lular 2 RINGER TONE Tone 1 Tone 2 Tone 3 Tone 3 28 Telephone settings Settings In the settings menu, you can change and edit the settings for LCD language, voicemail indicator, key tone, date and time and dial mode. ICD language You can select english, Français or español to be used in all screen displays. To select a language: 1. Press MeNu/SeleCT on the handset when it is not in use.

2. Press or to highlight Settings, then press MeNu/SeleCT. LCD Clr Key Set SETTINGS language voicemail tone date/time 3. Press MeNu/SeleCT to choose ICD language. 4.

Press or to choose from english, Français or español, then press MeNu/SeleCT to confirm. LCD LANGUAGE English Fran c ais , Espanol 29 Telephone settings Clear voicemail If you subscribe to voicemail service offered by your 1 telephone service provider, New voicemail and appear HANDSET X on the handsets when you have new voicemail messages. Contact your telephone service provider for more New voicemail information and assistance about using your voicemail service. This feature only works on the voicemail associated 12:30pm 12/25 with your home line, not the cell line. After you have listened to all new voicemail messages, the indicators on the handsets turn off automatically.

Use the clear voicemail feature when the telephone indicates that there is new voicemail but there is none (for example, when you have accessed your voicemail while away from home). Clearing the voicemail waiting indicator only turns off the indicators; it does not delete your voicemail messages. As long as you have new voicemail messages, your telephone service provider continues to send the signal that turns on the indicators. To manually turn off these indicators: 1. Press MeNu/SeleCT on the handset when it is not in use. 2. Press or to highlight Settings, then press MeNu/SeleCT. SETTINGS language voicemail tone date/time LCD Clr Key Set to highlight Clr voicemail, then press The handset displays Turn off indicator? Press SELECT to confirm. 4. Press MeNu/SeleCT to confirm.

3. Press or MeNu/SeleCT. Turn off indicator? Press SELECT · Your telephone service provider may alert you to new to confirm messages with a stutter (broken) dial tone. Contact your service provider for details. · Voicemail is different from answering system messages recorded in your answering system. For more information about the difference, see page 63. 30 Telephone settings Key tone You can turn the key tone feature on or off. To change the setting: 1. Press MeNu/SeleCT on the handset when it is not in use. 2.

Press or to highlight Settings, then press MeNu/SeleCT. LCD Clr Key Set SETTINGS language voicemail tone date/time 3. Press 4. Press or MeNu/SeleCT. MeNu/SeleCT to highlight Key tone, then press to choose on or off, then press to confirm.

KEY TONE On Off Set date/time The answering system announces the day and time of each message prior to playing it. If you subscribe to caller ID service, the day, month and time are set automatically with each incoming call.



[You're reading an excerpt. Click here to read official VTECH](http://yourpdfguides.com/dref/2374589)

[DS6321-3 user guide](http://yourpdfguides.com/dref/2374589)

<http://yourpdfguides.com/dref/2374589>

However, the year must be correct so that the day of the week can be calculated from the caller ID information. Before using the answering system, set the date and time as follows. To change the setting: 1.

Press MeNu/SeleCT on the handset when it is not in use. 2. Press or to highlight Settings, then press MeNu/SeleCT. 3. Press or MeNu/SeleCT. to highlight Set date/time, then press LCD Clr Key Set SETTINGS language voicemail tone date/time 4. Use the dialing keys (0-9) to enter the month, date and year. To enter a single digit number, you must add a zero before that number. For example, if the month is February, you must enter 02. Press the MeNu/SeleCT to continue to set the time.

5. Use the dialing keys (0-9) to enter the hour and minute. To enter a single digit number, you must add a zero before that number. For example, if the time is 6:08, you must enter 0608. 6. Press or to choose AM or PM, then press MeNu/SeleCT. SET DATE 01/01/09 MM/DD/YY SET TIME 06:08 PM · You can use or to select the desired value for the month, date, year, hour and minute. Every time a desired value is selected, press MeNu/SeleCT to advance until the date and time are set. · If the date and time are not set, the system announces, "Time and day not set," before each message plays. 31 Telephone settings Dial mode The dial mode is preset to tone dialing.

If you have pulse (rotary) service, you must change the dial mode to pulse dialing before using the telephone. To change the setting: 1. Press MeNu/SeleCT on the handset when it is not in use. 2. Press or to highlight Settings, then press MeNu/SeleCT.

SETTINGS Clr voicemail Key tone Set date/time Dial mode 3. Press 4. Press or or MeNu/SeleCT. MeNu/SeleCT to highlight Dial mode, then press to choose Tone or Pulse, then press to confirm. DIAL MODE Tone Pulse home area code If you dial local calls using only seven digits (area code not required), you can program your home area code so that when you receive a call within your local area, the telephone number is automatically stored without the area code in the call log.

800-595-9511 When you review any directory, you can press # repeatedly to show different dialing options before dialing. 1-800-595-9511 595-9511 1-595-9511 To change the setting: 1. Press MeNu/SeleCT on the handset when it is not in use. 2. Press or to highlight Directory, then press MeNu/SeleCT. 3. Press MeNu/SeleCT to choose home. 4. Press or to highlight home area code, then press MeNu/SeleCT. 5.

Use the dialing keys to enter the desired home area code. · Press MuTe/ReMoVe to erase a digit. · Press and hold MuTe/ReMoVe to erase all digits. · Press to move the cursor to the right or to the left. 6. Press MeNu/SeleCT to confirm. If, in the future, your telephone service provider requires you to dial the area code when making a local call, delete the home area code you have already programmed. After you have deleted the programmed home area code, ___ appears. 32 Telephone settings Cell area code Most cell phone entries are stored in a 10-digit format. If all of your cell phone entries are stored this way, you do not need to program your cell area code.

If your cell phone stores entries in a 7-digit format, we recommend that you program your cell area code so that your 7-digit directory entries can be dialed correctly using your home line. While reviewing an entry in the call log or directory, you can press # repeatedly to see different dialing options before you dial or store the number. To change the setting: 1. Press MeNu/SeleCT on the handset when it is not in use. 2.

Press or to highlight Directory, then press MeNu/SeleCT. 3. Press or to highlight a desired downloaded directory, then press MeNu/SeleCT. 800-595-9511 1-800-595-9511 595-9511 1-595-9511 4. Press or to highlight Cell area code, then press MeNu/SeleCT.

5. Use the dialing keys to enter the desired cell area code. · Press MuTe/ReMoVe to erase a digit. · Press and hold MuTe/ReMoVe to erase all digits. · Press to move the cursor to the right or to the left. 6. Press MeNu/SeleCT to confirm. 33 Answering system settings Answer oN/oFF If you turn the answering system on, it answers calls and records messages only on the home line. If your paired cell phone has voicemail, callers will leave messages with that voicemail service. When the answering system is turned on, the /ANS oN/oFF light on the telephone base is on and the handsets display ANS oN.

To turn the answering system on or off: using the telephone base: · Press /ANS oN/oFF to turn the answering system on or off. When the answering system is turned on, it announces, "Calls will be answered." When the answering system is turned off, it announces, "Calls will not be answered." using a handset: 1. Press MeNu/SeleCT on the handset when it is not in use. 2. Press MeNu/SeleCT to choose Ans. system. 3. Press or to highlight Answer oN/oFF, then press MeNu/SeleCT.

4. Press or MeNu/SeleCT to choose on or off, then press to confirm. Ans. system Directory Cal log l Intercom Bluetooth ANS. SYSTEM Announcement Delete al old l Record memo Answer ON/OFF ANSWER ON/OFF On Off 34 Answering system settings Announcement The telephone is preset with a greeting that answers calls with "Hello, please leave a message after the tone.

" You can use this preset announcement, or replace it with your own. Play your announcement 1. Press MeNu/SeleCT on the handset when it is not in use. 2. Press MeNu/SeleCT to choose Ans.

system. 3. Press or to highlight Announcement, then press MeNu/SeleCT. ANS. SYSTEM Play messages Announcement Delete al old l Record memo 4. The handset announces, "To play, press 2. To record, press 7." Press 2 to play. Record your own announcement 1. Press MeNu/SeleCT on the handset when it is not in use.

2. Press MeNu/SeleCT to choose Ans. system. 3. Press or to highlight Announcement, then press MeNu/SeleCT. ANNOUNCEMENT 2-Play 3-Delete 5-Stop 7-Record 4. The handset announces, "To play, press 2. To record, press 7." Press 7 to record. 5.

The handset announces, "Record after the tone. Press 5 when you are done." After the tone, speak towards the microphone of the handset. 6. Press 5 when you finish recording.

7. The handset automatically plays back the newly recorded announcement. Press 5 to stop the playback at any time; 2 to replay the recorded announcement; or 7 to record again if desired. Recording announcement..

· 5-Stop Announcement playback · Your announcement can be up to 90 seconds in length. · Announcements shorter than two seconds will not be recorded. 35 Answering system settings Delete your announcement 1. Press MeNu/SeleCT on the handset when it is not in use. 2. Press MeNu/SeleCT to choose Ans.

system. 3. Press or to highlight Announcement, then press MeNu/SeleCT.

ANS. SYSTEM Play messages Announcement Delete al old l Record memo 4. The handset announces, "To play, press 2.



[You're reading an excerpt. Click here to read official VTECH](#)

[DS6321-3 user guide](#)

<http://yourpdfguides.com/dref/2374589>

To record, press 7." Press 3 to delete your own recorded announcement. The handset announces, "Announcement deleted." When your announcement is deleted, calls are answered with the preset announcement. ANNOUNCEMENT 2-Play 3-Delete 5-Stop 7-Record 36 Answering system settings Answering system setup In the answering system setup menu, you can change the settings for call screening, number of rings, remote access code and message alert tone. Call screening The call screening feature lets you listen at the telephone base to a caller leaving a message. You can turn this feature on or off with a system handset.

To change the setting: 1. Press MeNu/SeleCT on the handset when it is not in use. 2. Press or to highlight Ans. system, then press MeNu/SeleCT. ANS. SYSTEM Delete al old l Record memo Answer ON/OFF Ans sys setup 3. Press or MeNu/SeleCT. to highlight Ans sys setup, then press 4. Press MeNu/SeleCT to choose Call screening.

5. Press or to choose on or off, then press MeNu/SeleCT to confirm. ANS SYS SETUP Cal screening l # of rings Remote code Msg alert tone Number of rings When the answering system is turned on, it answers all incoming home calls after the number of rings set. You can choose from two, four, or six rings; or toll saver. With toll saver selected, the answering system answers after two rings when you have new messages, and after four rings when you have no new messages. This enables you to check for new messages and avoid paying unnecessary long distance charges if you are calling from out of your local area. To change the setting: 1. Press MeNu/SeleCT on the handset when it is not in use. 2. Press or to highlight Ans.

system, then press MeNu/SeleCT. CALL SCREENING On Off ANS SYS SETUP Cal screening l # of rings Remote code Msg alert tone 3. Press 4. Press or or MeNu/SeleCT. MeNu/SeleCT. to highlight Ans sys setup, then press to highlight # of rings, then press # OF RINGS 2 4 6 Tol saver l 5. Press or to choose from 2, 4, 6 or Toll saver, then press MeNu/SeleCT to confirm. 37 Answering system settings Remote access code A two-digit security code is required to access the answering system remotely from any touch tone telephone. The preset code is 19. You can change the code to any number from 10 to 99.

To change the setting: 1. Press MeNu/SeleCT on the handset when it is not in use. 2. Press or to highlight Ans. system, then press MeNu/SeleCT. ANS SYS SETUP Cal screening l # of rings Remote code Msg alert tone 3. Press 4. Press or or MeNu/SeleCT. MeNu/SeleCT. to highlight Ans sys setup, then press to highlight Remote code, then press REMOTE CODE 5.

Use the dialing keys (0-9) to enter a two-digit number from 10-99, then press MeNu/SeleCT to confirm. · Press MuTe/ReMoVe to erase a digit. · Press and hold MuTe/ReMoVe to erase all digits. · Press to move the cursor to the right or to the left. 19 Message alert tone When the answering system is turned on, the telephone beeps every 10 seconds to alert you of new messages. The tone stops when all new messages have been reviewed. The message alert tone is preset to off. To change the setting: 1. Press MeNu/SeleCT on the handset when it is not in use. 2.

Press or to highlight Ans. system, then press MeNu/SeleCT. ANS SYS SETUP Cal screening l # of rings Remote code Msg alert tone 3. Press 4. Press 5. Press or or MeNu/SeleCT. MeNu/SeleCT. MeNu/SeleCT to highlight Ans sys setup, then press to highlight Msg alert tone, then press to choose from on or off, then press to confirm. MSG ALERT TONE On Off The answering system must be turned on for the message alert tone to function. 38 Telephone operation Make, answer or end a home call using a handset: To make a home call: · Press /hoMe/FlASH or , then enter the telephone number.

/hoMe/FlASH or . To predial a home call: · Enter the telephone number, then press To answer a home call: · Press /hoMe/FlASH or . · The screen shows the elapsed time as you talk (in hours, minutes and seconds). · When predialing (preview numbers before dialing), press MuTe/ReMoVe or oFF/CleAR to backspace and delete; press and hold ReDIAL/PAuSe to insert a dialing pause (a p appears). · You cannot answer a home call using your connected cell phone.

To end a home call: · Press oFF/CleAR or put the handset in the telephone base or charger. using a Bluetooth headset: You can use a Bluetooth headset on home calls. However, you will need to stay within 30 feet from the telephone base to maintain the Bluetooth signal. To answer a home call using a Bluetooth headset: · Press the call key on your headset. To end a home call you answered from a Bluetooth headset: · Press the call key on your headset.

If you make or answer a home call on a handset, you can transfer the call to your headset. The handset remains active, but the handset earpiece and microphone are muted. If you hang up the handset, the call will end. To transfer a call from a handset to a Bluetooth headset: · Press MeNu/SeleCT twice to select use headset. To transfer a call from the headset back to the handset: · Press MeNu/SeleCT twice to select use handset. To end a call that started at the handset: · Press oFF/CleAR or put the handset in the telephone base or charger. · If you answer a call using a headset, and you lose the Bluetooth connection or the battery is depleted, the call will be lost. · If you are using a headset for a call which is transferred from a DS6321/6322 handset, and you lose the Bluetooth connection or the battery of the headset is depleted, the call will be transferred back to the originating handset. 39 Telephone operation Call waiting on the home line If you subscribe to call waiting service with your telephone service provider, you hear a beep if someone calls while you are already on a call. · Press /hoMe/FlASH on the handset to put your current call on hold and take the new call.

· Press /hoMe/FlASH on the handset at any time to switch back and forth between calls. Make, answer or end a cell call You can connect a maximum of two Bluetooth enabled cell phones to the telephone base, but only one cell phone can be used on a cell call at a time. All DS6321/6322 handsets can be used to make or answer calls on the cell phone line. To make a cell call: · Enter the telephone number, then press /Cell. If you have only one cell phone connected to the telephone base, it is automatically selected to make cell calls. If you have two cell phones connected to the telephone base, the telephone system prompts you to select a cell phone before you make a cell call. To answer a cell call: · Press /Cell. You can also use your cell phone to answer the call. If you answer with your cell phone, it will disconnect from the telephone base. To end a cell call: · Press oFF/CleAR or put the handset in the telephone base or charger.



[You're reading an excerpt. Click here to read official VTECH](#)

[DS6321-3 user guide](#)

<http://yourpdfguides.com/dref/2374589>

Call waiting on the cell line If you subscribe to call waiting service with your cell phone service provider, you hear a beep if someone calls while you are already on a call. · Press /Cell on the handset to put your current call on hold and take the new call. · Press /Cell on the handset at any time to switch back and forth between calls. · oR · Press MeNu/SeleCT twice to select SWAP to switch back and forth between calls. 40 Telephone operation Answer a cell call while on a home call If you are on a home call and you receive an incoming cell call, you will hear a beep and 1 or 2 displays on the handset you are using. The telephone base and all other handsets will ring. To answer the incoming cell call: · Press /Cell on the handset. The home call is automatically placed on hold and all other handsets display home call on hold and Cell line in use alternatively. To end the cell call: · Press oFF/CleAR on the handset. The home line is still on hold.

All handsets display home call on hold. To resume the home call on hold: · Press /hoMe/FlASh on the handset. Cell phone voicemail If you have voicemail service active on your cell phone, and you do not answer the incoming cell call, the call will be answered by your cell phone's voicemail. Contact your cell phone service provider for more information about voicemail service. Answer a home call while on a cell call If you are on a cell call and you receive an incoming home call, you will hear a beep and displays on the handset you are using. The telephone base and all other handsets will ring. To answer the incoming home call: · Press /hoMe/FlASh on the handset. The cell call is automatically placed on hold and all other handsets display Cell call on hold and home line in use. To end the home call: · Press oFF/CleAR on the handset. The cell line is still on hold.

All handsets display Cell call on hold. To resume the cell call on hold: · Press /Cell on the handset. If you have turned on your answering system and you do not answer the incoming home call, the call will be answered by your answering system. 41 Telephone operation Conference home and cell calls When you have calls established on the home and cell lines, you can create a 3-way conference. To conference both home and cell calls: 1. Press MeNu/SeleCT. 2. Press or to highlight Conf. with home/Conf. with cell (whichever is applicable). 3. Press MeNu/SeleCT. To select an option while on a conference call: 1. Press MeNu/SeleCT. 2.

Press or to select one of the following options: · end home call · end cell call 3. Press MeNu/SeleCT. To end a conference call: · Press oFF/CleAR or put the handset back in the telephone base or charger. using the home and cell lines together · · You can be on two different calls using the cell line and home line at the same time using two handsets. You cannot be on a call using the cell line and a Bluetooth headset via the home line at the same time.

These are both Bluetooth devices and only one can be used at a time. If you are on a call using the cell line, you cannot join the call using your paired cell phone. However, you can join the call using another DS6321/6322 handset. Your cell phone is being used for the phone call so only features that are normally available during a call can be used. 42 Telephone operation handset speakerphone During a call, press handset use. to switch between speakerphone and normal Volume control During a call, press /Vol or /Vol to adjust the listening volume. If this is a cell call and the volume is too loud or quiet, try changing the volume on your cell phone. On some cell phones, changing the volume on the cell phone effects your cell call volume on the DS6321/6322 handset. Silence the ringer When the telephone is ringing, you can temporarily silence the ringer of the handset without disconnecting the call. The next call rings normally at the preset volume.

To silence the ringer: · Press oFF/CleAR or MuTe/ReMoVe on the handset and Ringer mute appears. Mute The mute function turns off the microphone. You can hear the caller, but the caller cannot hear you. To mute a call: · Press MuTe/ReMoVe to turn off the microphone. The screen shows Muted for a few seconds and MuTe appears until the mute function is turned off. To un-mute a call: · Press MuTe/ReMoVe again to resume the conversation. The screen temporarily shows Microphone oN. Temporary tone dialing If you have pulse (rotary) service only, you can switch from pulse to touch tone dialing temporarily during a call. This is useful if you need to send touch tone signals to access your telephone banking or long distance services. During a call: 1. Press ToNe . 2. Use the dialing keys to enter the relevant number. The telephone sends touch tone signals. 3.

The telephone automatically returns to pulse dialing mode after you end the call. 43 Telephone operation hold You can place a home or cell call on hold. You will hear an alert tone if you have not taken the call off of hold after 14 minutes. You will hear another alert tone 30 seconds later. At 15 minutes on hold, the call on hold automatically disconnects.

To place a home call on hold: · Press hold. home call on hold appears and To resume a home call on hold: · Press /hoMe/FlASh. To place a cell call on hold: · Press hold. Cell call on hold appears and To resume a cell call on hold: · Press /Cell. /Cell flashes. /hoMe/FlASh flashes. handset locator This feature helps you find a misplaced handset. To start paging: · Press /FIND hANDSeT on the telephone base when it is not in use. All idle handsets ring and display ** Paging **. To end paging: · Press /FIND hANDSeT on the telephone base.

· oR · Press /hoMe/FlASh, or any dialing keys (0-9, #, ToNe) on the handset. 44 Telephone operation Chain dialing Use this feature to initiate a dialing sequence from numbers stored in the directory, call log or redial while you are on a call. Chain dialing can be useful if you wish to access other numbers (such as bank account numbers or access codes) from the directory, call log or redial list. To access a number in the directory while on a call: 1. Press MeNu/SeleCT. 2. Press or to highlight Directory, then press MeNu/SeleCT. 3. Press MeNu/SeleCT to select home directory. 4. Press or to scroll to the desired entry or perform an alphabetical search (page 54). 5. Press MeNu/SeleCT to dial the displayed number. To access a number in the call log while on a call: 1. Press MeNu/SeleCT.

2. Press or to highlight Call log, then press MeNu/SeleCT. 3. Press or to scroll to the desired entry. 4. Press MeNu/SeleCT to dial the displayed number. To access the redial list while on a call: 1. Press ReDIAL/PAuSe. 2. Press , or ReDIAL/PAuSe until the desired number displays, then press MeNu/SeleCT. If you do not press MeNu/SeleCT within two seconds, the number displayed will be dialed automatically.



[You're reading an excerpt. Click here to read official VTECH](#)

[DS6321-3 user guide](#)

<http://yourpdfguides.com/dref/2374589>