



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for VTECH IS9181. You'll find the answers to all your questions on the VTECH IS9181 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual VTECH IS9181**  
**User guide VTECH IS9181**  
**Operating instructions VTECH IS9181**  
**Instructions for use VTECH IS9181**  
**Instruction manual VTECH IS9181**

**vtech**<sup>®</sup>  
Designed to fit your home. And your life.<sup>SM</sup>

User's manual

[www.vtechphones.com/IS9181](http://www.vtechphones.com/IS9181)



Model: IS9181



[You're reading an excerpt. Click here to read official VTECH IS9181 user guide](#)

<http://yourpdfguides.com/dref/2374619>

**Manual abstract:**

- ..... Parts checklst .....
- .....
- . Getting to know the IS9181 IS9181 layout .....
- ..... Remote control layout ..
- ..... IS9181 status cons. ....
- .... Installation IS9181 nstallaton .
- .....
- ... Standby mode .....
- .... Remote control nstallaton .....
- .... Replace remote control battery .
- . Menu Alarm .....
- .....
- ..... To stop the buzzer ...
- ..... To stop the alarm. ....
- .... To slence the alarm .
- .....
- . To cancel snooze Equalzer setting (only avalable on some models) .....
- .. Screen brghtness .....
- . 1 ....
- .. 1 ...
- ... 2 3 ..... 3 .
- ..... 5 .....
- . 6 7 ....
- .. 7 ...
- ... 9 ..... 10 .
- ..... 10 11 .....
- . 11 .....
- .. 12 ...
- ... 12 ..... 12 13 .
- ..... 13 .....
- . 14 Wreless network .....
- .....
- ..... Clock .....
- .....
- .....
- Weather settings .....
- ..... Product ID .
- .....
- .....
- . Source Internet rado .....
- .....
- .. Play Internet rado staton .....
- My Statons. ....
- .....
- ..... Play added Internet rado staton ... My musc .
- .....
- .....
- .. Computer setup for My Musc - Wndows . Determne the verson of your Wndows operatng system ..
- .....
- . Share a folder on Wndows 2000 Professonal .....
- .....
- . Create a new user account for Wndows 2000 .....
- .....

Share a folder on Windows XP . . . . . Create a new user account for Windows XP . . . . .

. . . . .  
. . . . .

Share a folder on Windows Vista . . . . .

. . . . . 15 . 17 . 19 . 20 21 . 21 .  
21 . 23 . 24 . 25 . 26 .  
. 26 . . 27 . .

28 . . 30 . . 32 . . 36 Table of contents Create new user account n Windows Vista . . . . .

. . . . .

. Computer setup for My Musc - Mac OS 10.4 Create the IS9181 user account and share the folder . . . . .

. . . . .

. . . . . Computer setup for My Musc - Mac OS 10.5 Create the IS9181 user account and share the folder . . . . .

. . . . .

. External USB & Frewre drves . . . . .

. . Access your musc from the IS9181 . . . . .

. . Play musc on your computer . . . . .

FM rado . . . . .

. . . . .

. . . . Play FM rado staton. . . . .

. . . . .

. Aux n . . . . .

. . . . .

. . . . .

. . External audio devce connecton . . . . . Favorites Add to favortes . . . . .

. . . . .

. . . . Play favortes . . . . .

. . . . .

. . . . .

Move favortes . . . . .

. . . . .

. Delete favortes . . . . .

. . . . .

. . Weather (Info) Weather forecast . . . . .

. . . . .

. . . . 38 . 43 .

43 . 49 . 49 . 52 . 53 . 53 . 55 . 55 . 56 . 56 57 .

57 . 58 . 59 . 60 61 . 61 Optional external audio system connection Optional battery installation Troubleshooting Important safety instructions Maintenance  
Warranty FCC Part 15 IC RSS-210 (Canada) Technical specifications 62 63 65 70 71 72 75 77 78 Before you begin The IS9181 enables you to: · Listen to  
thousands of free Internet rado statons from around the world without turning on a computer. · Listen to the dgital musc collecton stored on your computer n any  
room of the house. · Listen to musc from a MP3 player or connect to a home audio system. In addton, the IS9181 provdes weather for your area. Basic  
operation Before you begin Remove both clear plastic protective sheets from the top and from the dsplay of the IS9181. Minimum requirements You must have  
the following to access Internet radio and the music files stored on your computer.  
· Broadband Internet connection (typically cable, fiber optic or DSL). · A wreless router. To access the music files on your computer you will also need:  
Windows 2000, XP (32-bit edition), Vsta (32-bt edton), Mac OSX verson 10.4 or 10.5: English versons only.

1 Before you begin Parts checklist · To purchase a replacement power adapter or remote control, vst our webste at [www.vtechphones.com/IS9181](http://www.vtechphones.com/IS9181) or call 1  
(800) 5959511. Your IS9181 package contans the followng tems. Save your sales receipt and orgnal packagng n the event warranty servce s necessary.  
User's manual 1. Quck start gude 2. User's manual 3. IS9181 4. IS9181 power adapter 5. Auxlary audio cable 6. Remote control 2 Getting to know the IS9181  
IS9181 layout 1. MENU Show settings and options. Top vew Basic operation Getting to know the IS9181 9. STANDBY Press to swtch between standby mode  
and on.

Enterng standby mode exts menus, stops the musc, and the backlight on the VTech logo turns off. The clock appears whle n standby mode. 2. SOURCE Select  
musc source (Internet Rado, My Musc, FM Rado, Aux In). 1 2 3 4 3. FAVORITES Show a lst of saved favorte statons. 4. WEATHER (called INFO on some  
models) Show weather nformaton. 10. 5.

VOL+ / VOLAdjust lstenng volume. My Musc: skp to the previous song. Internet and FM Rado: skp to the previous staton. My Musc: play and pause current  
song. Internet and FM Rado: mute and un-mute audio.

5 7 6 8 11. 6. Rotary dial Rotate clockwise or counterclockwise to navgate through the menu and dsplay tems. 7. SELECT Select the hghlhted tem.  
12. 8. BACK Return to the previous menu. My Musc: skp to the next song. Internet and FM Rado: skp to the next staton. 9 10 11 12 3 Getting to know the  
IS9181 IS9181 layout 1. Remote control receiver Receves the sgnal from the remote control. 5. LINE OUT port Connect to an audio cable (not ncluded) here

to send the audio to an external audio system. Front view 1 2 3 Back view 2.

VTech logo with backlight Blinks while the IS9181 boots up. On when the IS9181 is on. Off when the IS9181 is in standby mode. 6. AUX IN port Connect the supplied audio cable here to listen to an external audio device. 3. High frequency speakers Audio output. 7. Low frequency speaker Audio output. 4 Bottom view 5 6 4.

DC 14V power jack Connect to the IS9181 power adapter. 8. Battery compartment cover Battery installation is optional. Remove the battery compartment cover to install the six AA batteries (not included). 7 8 4 Getting to know the IS9181 Remote control layout The keys on the remote control correspond to the keys on the IS9181, so you can perform all operations using the remote control.

Basic operation Getting to know the IS9181 1. STANDBY Press to switch between standby mode and on. Entering standby mode exits menus, stops the music, and the backlight on the VTech logo turns off. The clock appears while in standby mode. 6.

/ Press to navigate through the menu and display items. These keys operate the same as the rotary dial. 1 2 3 4 5 6 7 8 9 10 11 12 7. SOURCE Select music source (Internet Radio, My Music, FM Radio, Aux In). 2. FAV (FAVORITES) Show a list of saved favorite stations. 3. MENU Show settings and options. 8. WEATHER (called INFO on some models) Show weather information.

4. My Music: skip to the previous song. Internet and FM Radio: skip to the previous station. 9. 11. SELECT Select the highlighted item. My Music: play and pause the current song. 12. BACK Internet and FM Radio: mute and unmute. Return to the previous menu. mute the audio.

5. VOL+ / VOL- Adjust listening volume. 10. My Music: skip to the next song. Internet and FM Radio: skip to the next station.

5 Getting to know the IS9181 IS9181 status icons 1 2 3 4 5 1. Clock (pages 17-18) You can set the clock manually or automatically from the Internet (see pages 17-18). 9:25 AM 7. Favorites 8. Play 12 (page 57) Favorites No.

12 is playing. 2. Internet connection Internet service is connected. The radio or music is playing. Pause 12 3. WiFi connection WiFi is connected.



[You're reading an excerpt. Click here to read official VTECH IS9181 user guide](http://yourpdfguides.com/dref/2374619)

<http://yourpdfguides.com/dref/2374619>

(page 15) 6 7 8 The music is paused. The Internet radio or FM radio is muted. Previous Go to the previous available station or song. No WiFi connection WiFi is disconnected or not configured.

6. Internet radio (page 21) Internet radio is playing. Music on your computer is playing. FM radio is playing. 4. Alarm (page 11) My music FM radio Aux in (page 25) Skip Skip to the next available station or song. The alarm is set. Alarm (on) The alarm is on. (page 55) (page 56) Seek (page 55) Search for the next available FM channel. 5.

Battery 6 (page 63) An external audio source is playing. The batteries are in use. Installation IS9181 installation A wireless network with Internet access is required to complete the setup of your IS9181. For easier setup, write the required information in the table below. Wireless Network Your Network Name (SSID) Your Password (Network Key) Clock Your Time Zone (Newfoundland, Atlantic, Eastern, Central, Mountain, Pacific, Hawaii, Alaska) Weather Settings Your 5-digit zip code (USA) or 6-character postal code (Canada) Avoid placing the IS9181 too close to: Installation Basic operation . . . . . Communication devices such as cordless telephones.

Excessive heat or moisture sources. Microwave ovens, refrigerators, or fluorescent lighting. Excessive dust sources such as a workshop or garage. Mechanical vibration or shock such as on top of the washing machine or workbench. 7 Installation IS9181 installation To install the IS9181: Plug the IS9181 power adapter into the power port labeled DC 14V on the back of the IS9181, and plug the other end into an electrical outlet not controlled by a wall switch.

A progress bar appears on the screen while booting up. It may take up to three minutes to complete this process. Electrical outlet not controlled by a wall switch When the IS9181 is finished booting up for the first time, Press STANDBY to advance to device setup appears on the screen. 1. Press STANDBY and the initial setup screen appears (shown to the right). 2. Press SELECT and follow the setup screen instructions. Press STANDBY to advance to device setup Set up IS9181 system Steps: 1. Connect to a Wireless Network 2. Adjust the Clock 3.

Enter location for Weather Continue Setup ? YES NO Power adapter For instructions on setting the Wireless network, see page 15. For instructions on setting the Clock, see page 17. For instructions on setting the Weather settings, see page 19. 8 Installation Standby mode Every time that you plug in the IS9181 and each time it regains power after an outage, the progress bar appears on the screen. It may take up to three minutes to complete the boot-up process. When the clock appears, the IS9181 is in standby mode. Press STANDBY to turn on and use the IS9181. Alarm on and alarm time 11:00 AM Installation Battery on Clock Basic operation 12:00 AM Press STANDBY again to return the IS9181 to standby mode. When in standby mode, the IS9181 exits menus, stops the music, and the backlight on the VTech logo turns off. The clock appears while in standby mode.

9 Installation Remote control installation The battery is already installed in the remote control. However, you must remove the plastic tab before use (as shown to the right). Pull Replace remote control battery Use a CR2025 lithium cell battery (sold separately) or equivalent to replace the remote control battery. To replace the battery: 1. Push and hold the tab on the battery compartment to the right and pull the compartment out of the remote control.

2. Remove the old battery and insert a new CR2025 lithium cell battery or equivalent into the battery compartment with the positive (+) facing up. 3. Push the battery compartment into the remote control until it clicks into place. Push Back of remote control CR2025 OPEN CR2025 Open 1 Positive side (+) Push 2+3 10 Menu Alarm In this menu, you can set the alarm time and turn it on and off.

To set the alarm: 1. With the IS9181 turned on, press MENU. 2. Rotate the dial to highlight Alarm and press SELECT. 3. To turn the alarm on, rotate the dial to highlight Set to ON and press SELECT. 4. To set the alarm time, rotate the dial to highlight CHANGE and press SELECT. The Alarm Time screen appears. 5.

Rotate the dial to move the cursor between the hour, minute, and AM/PM positions. When the cursor is in the desired position, press SELECT. 6. Rotate the dial up or down to change the time or to change between AM and PM, and press SELECT. 7. Repeat steps 1-5. IS9181 turned on, press MENU. Screen Brightness and press SELECT. The 2. Rotate the dial to highlight current level of brightness appears on the screen. 3.

Rotate the dial to adjust the level of brightness. When you adjust the level, the screen brightness changes accordingly. 4. Press SELECT to confirm. Screen Brightness setting saved appears.

Menu Alarm Screen Brightness Wireless Network Clock Weather Settings Screen Brightness High Medium Low 14 Menu Wireless network In this menu, you can either allow the system to search for a wireless network, or enter the name of a known available network. To connect to your wireless network: 1. With the IS9181 turned on, press MENU. 2. Rotate the dial to highlight Wireless Network and press SELECT.

3. Press SELECT to change. 4. To search for a wireless network automatically, rotate the dial to highlight Search for Network and press SELECT. 5. Any available networks appear on the screen. Rotate the dial to highlight your network and press SELECT. -OR- To enter the name of the network, rotate the dial to highlight Enter Network Name and press SELECT. Rotate the dial to highlight the character of the name of the network and press SELECT to add it to the entry line. Network names are case sensitive.

Repeat this process until the entire name is displayed. Rotate the dial to highlight DONE and then press SELECT. Menu Alarm Screen Brightness Wireless Network Clock Weather Settings Wireless Network Current Settings: Status: Not Connected SSID: None Key: None CHANGE EXIT Connect to Network Search for Network Enter Network Name Enter Name (SSID): abcdefghijklm nopqrstuvwxyz 1234567890 SPACE CAPS DONE SYMBOLS CANCEL DELETE · If at first you do not see your network on the list, press BACK and try searching again. If you still do not see your network after a few tries, you may need to enter the network name manually. · If capital letters or symbols are used, select CAPS or SYMBOLS to show a list of characters. Select SPACE to insert a blank space. · Select DELETE to erase the last character. Menu Basic operation 15 Menu Wireless network · Passwords are case-sensitive. If capital letters or symbols are used, select CAPS or SYMBOLS to show a list of characters. Select SPACE to insert a blank space. · Press BACK to return to the previous screen. Select CANCEL to go to the screen with the current settings for the wireless network. If you enter the network name manually, the next step is to choose your security type. 6. If password protection is not set on your network, move on to step 7.



[You're reading an excerpt. Click here to read official VTECH IS9181 user guide](http://yourpdfguides.com/dref/2374619)  
<http://yourpdfguides.com/dref/2374619>

-OR Rotate the dial to highlight the character of the network password and press SELECT to add it to the entry line. You can select DELETE to erase the last character. Repeat character selection until the entire password is displayed. Rotate the dial to highlight DONE and then press SELECT. 7.  
The IS9181 now attempts to connect to your wireless network (this could take up to 1 minute). Once connected, the menu screen appears and the IS9181 is ready to use. NOTES: · If the IS9181 cannot find the network in one minute, an error message appears. · The password for the wireless network is different than the password for the router configuration utility. Select Security Type: None WEP64 / WEP128 WPA / WPA2 Enter Password (Key): abcdefghijklm nopqrstuvwxyz 1234567890 SPACE DELETE CAPS DONE SYMBOLS CANCEL 16 Menu Clock The clock is set to 12:00 AM by default. You can choose to set the clock manually or to have it automatically set by the Internet. To set the clock to be automatically set by the Internet: 1. With the IS9181 turned on, press MENU. Clock and press SELECT. 2.

Rotate the dial to highlight 3. Press SELECT to change. 4. Rotate the dial to highlight Auto (from Internet) and press SELECT. A list of time zones appears. 5. Rotate the dial to highlight your time zone and press SELECT. 6. If Daylight Saving is currently in effect, rotate the dial to highlight On and press SELECT. -OR If Daylight Saving is currently not in effect, rotate dial to highlight Off and press SELECT.

NOTE: · Daylight saving time adjustments must be changed manually. Menu Alarm Screen Brightness Wireless Network Clock Weather Settings Menu Clock Current Settings: Time: 12:00 AM Mode: Manual CHANGE EXIT Basic operation Clock Auto (from Internet) Manual Daylight Saving: On Off 17 Menu Clock To set the clock manually: 1. With the IS9181 turned on, press MENU. Clock and press SELECT. 2.

Rotate the dial to highlight 3. Press SELECT to change. 4. Rotate the dial to highlight Manual and press SELECT. 5.

Rotate the dial to move the cursor between the hour, minute, and AM/PM positions. When the cursor is in the desired position, press SELECT. 6. Rotate the dial up or down to increase or decrease the time value or to change between AM and PM, and press SELECT. 7. Repeat steps 5 and 6 until the time is correct. Rotate the dial to highlight DONE and press SELECT. Clock set appears. Menu Alarm Screen Brightness Wireless Network Clock Weather Settings Clock Current Settings: Time: 12:00 AM Mode: Manual CHANGE EXIT Clock Press SELECT to adjust setting 07 :49 PM DONE CANCEL Clock Press SELECT when finished 07 :49 PM DONE CANCEL 18 Menu Weather settings In this menu, enter your zip code (in the USA), or your postal code (in Canada). After you have entered your zip or postal code, you can see the five day weather forecast for your area by pressing the WEATHER (called INFO on some models) key.

To program the weather settings for your area: 1. With the IS9181 turned on, press MENU. Weather Settings and press SELECT. 2. Rotate the dial to highlight 3. Press SELECT to change. 4. Rotate the dial to highlight USA or Canada and press SELECT. Depending on which you choose, either the Enter ZIP Code or Enter Postal Code screen appears. 5.

Rotate the dial to highlight the character of the zip code or postal code and press SELECT to add it to the entry line. You can select DELETE to erase the last character. Repeat the character selection until the entire zip code or postal code is displayed. Rotate the dial to highlight DONE and then press SELECT. Weather settings saved appears.

Press BACK to return to the previous screen. Select CANCEL to go to the screen with the current settings for the weather. Menu Alarm Screen Brightness Wireless Network Clock Weather Settings Menu Weather Settings Current Settings: Country: None ZIP or Area Code: None CHANGE EXIT Basic operation Select Country: USA Canada Enter Zip Code: 1234567890 DELETE DONE CANCEL 19 Menu Product ID This screen displays the product information, such as its MAC address, assigned IP address, web code, and firmware version. You need to know the web code of the IS9181 when adding a new radio station to the IS9181 through the VTech website (see page 23). To view the Product ID: 1.

With the IS9181 turned on, press MENU. 2. Rotate the dial to highlight Product ID and press SELECT. 3. To exit the screen, press SELECT. NOTE: · The web code uses zero and one, not the capital letter "O" or "I". Menu Screen Brightness Wireless Network Clock Weather Settings Product ID Product ID MAC Address: 00:11:A0:09:D5:DE IP Address: 192.168.103.100 Web Code: 09D5 DEBD Firmware Version: 1.

0.8 OK 20 Source Internet radio Play Internet radio station The Internet radio stations are organized into different categories. You can search for and play Internet radio stations by browsing through the available categories. You may also search for radio stations using the VTech website (see page 23). To play the Internet radio station: 1. With the IS9181 turned on, press SOURCE. Source 2. Rotate the dial to highlight Internet Radio and press SELECT. Internet Radio 3. Rotate the dial to highlight the desired browsing method and press SELECT.

My Music Repeat this process until you reach a list of radio stations (the icon FM Radio appears to the left of the station name). Aux In · Depending on the list of radio stations available on the Internet, your browsing experience may differ. A typical session may go through several Internet Radio levels of options - for example: Genres Locations Locations Languages Most Popular Stations North America My Stations United States California Alternative NOTES: · To make browsing easier, your country (USA or Canada) will show up on the top of the list of countries. Stations with UK only or USA only at the end of the station name indicate these stations can only be played in that country or region. Basic Source operation 21 Source Internet radio Play Internet radio station 4.

Rotate the dial to highlight the desired radio station and press SELECT. The selected radio station plays. To mute the sound, press . To resume the sound, press again. to play the next Alternative 1.

fm Indie 104 1.fm X Buzz Radio Free Radio Santa Cruz Indie Airplay Press to play the previous station on the list. Press station on the list. Press BACK to return to the previous screen. Press SOURCE to go back to the top source menu. 09:25 am Private Stream for Free Free Radio Santa Cruz Alternative United States If you are playing an Internet radio station and you change to another source, when you select Internet radio again the same station plays. If you have chosen Internet radio as your source and you press MENU, three additional items appear at the top of the menu: · Now Playing - returns you to the Internet radio playing screen. · Add to Favorites - see page 57 for instructions. Sample of Internet radio station playing 22 Source Internet radio My Stations You can search for and add Internet radio stations to the My Stations folder at <http://www.vtechphones.com/IS9181>.



[You're reading an excerpt. Click here to read official VTECH IS9181 user guide](#)

<http://yourpdfguides.com/dref/2374619>

Use this website when you are unable to find a radio station on the IS9181, you want more search options, and when you want the convenience of a computer screen for viewing all the station choices.

If you have not added any stations from the VTech website and you try to access My Stations, you will see the following message: Stations list is empty. To add your own stations, visit [www.vtechphones.com/IS9181](http://www.vtechphones.com/IS9181). Once you create your online account you can:

- Search for Internet radio stations online. \* Search by the station name (Charlie) or call letters (KYCH).
- \* Browse the list of stations by: genre, location, language, and most popular.
- \* Add stations by URL if you know the URL of a specific station.
- When you save an Internet radio station online, it will be saved in the website and in the My Stations folder on your IS9181.

Basic Source operation 23 Source Internet radio My Stations Play added Internet radio station 1. With the IS9181 turned on, press SOURCE. 2. Rotate the dial to highlight Internet Radio and press SELECT. 3. Rotate the dial to highlight My Stations and press SELECT. A list of all added radio stations appear. 4.

Rotate the dial to highlight the desired station and press SELECT. If you create an account on the IS9181 website (see page 23) and add stations, those stations will be saved on the website and in the My Stations folder on your IS9181. The My Stations folder is separate from Favorites. My Stations can only be changed on the website and Favorites can only be changed on the IS9181. You can save the same stations to My Stations and Favorites if you wish.

Source Internet Radio My Music FM Radio Aux In Internet Radio Genres Locations Languages Most Popular Stations My Stations 24 Source My music The IS9181 can play music stored on one or more computers on your wireless network. Your computer must be on for the IS9181 to see and play your music files. The IS9181 only supports the following formats of music files: · MP3 · WMA · Real audio (only RA, RM, and RMVB) · AAC (only MP4 and M4A) If you use a Windows operating system go to the next page. If you use a Mac operating system go to page 43. NOTE: · IS9181 cannot play any protected music files. Basic Source operation 25 Source Computer setup for My Music - Windows Determine the version of your Windows operating system If you do not know what operating system you are using: 1. Click on the Start menu. 2. Right click My Computer and click on Properties. Windows 2000: Windows XP: Windows Vista (All versions): For setup PC setup instructions for Windows 2000 see pages 27-29.

For setup PC setup instructions for Windows XP see pages 30-35. For setup PC setup instructions for Windows Vista see pages 36-42. 26 Source Computer setup for My Music - Windows Share a folder on Windows 2000 Professional For the IS9181 to access the music on your computer, you must share the folder where the music is located. 1. Right click on the folder you wish to share. 2. Click on Sharing. 3. Check Share this folder and click Apply. Basic Source operation 27 Source Computer setup for My Music - Windows Create a new user account for Windows 2000 You must create a new user account in Windows 2000 for the IS9181 to access the music on your computer.

If you would like to access music files on multiple computers you will need to create the same user account with the same password on each computer. 1. Click the Start menu, then click Control Panel. 2. You MUST enter IS9181 (the "IS" must be capitalized) as the User name and Full name then click Next. 3. Click Users and Passwords, then click Add. 28 Source Computer setup for My Music - Windows Create a new user account for Windows 2000 4. Create a password. Enter a password and 5.

Select Other: Administrators as the click Next. account type and click Finish. To ensure the security of your computer we recommend that you create a password for the IS9181 user account. The password should have a minimum of four characters and a maximum of 16 characters. The password cannot include spaces, commas or equal signs. Note: If you are going to create the user account on multiple computers then you must use the same password on each. Basic Source operation 29 Source Computer setup for My Music - Windows Share a folder on Windows XP For the IS9181 to access the music on your computer, you must share the folder where the music is located. 1. Right click on the folder you wish to share. 2.

Click on Sharing and Security. 3. If you see one of the two screens shown below: a. Check the box next to: Share this folder on the network. b. Click Apply. -OR30 Source Computer setup for My Music - Windows Share a folder on Windows XP If you see the screen shown below, click on the phrase: If you understand the security risks but want to share files without running the wizard, click here. 4. When the following message box appears, select Just enable file sharing and click OK. Basic Source operation 31 Source Computer setup for My Music - Windows Create a new user account for Windows XP You must create a new user account in Windows XP for the IS9181 to access the music on your computer.

If you would like to access music files on multiple computers you need to create the same user account with the same password on each computer. When you boot up your computer, you will see the IS9181 user account on the login page. 1. Click the Start menu then click Control Panel. The instructions are given in the Category View (the Windows default) as shown below.

If your Control Panel is in Classic View as shown below, click Switch to Category View. 32 Source Computer setup for My Music - Windows Create a new user account for Windows XP 2. Click User Accounts, then click Create a new account. 4. Select Computer administrator as the account type. Basic Source operation 3. You MUST Enter IS9181 (the "IS" must be capitalized) as the new account name then click Next. Note: If you are going to create the user account on multiple computers, then you must use the same account name. 33 Source Computer setup for My Music - Windows Create a new user account for Windows XP 5. Create a password. Click on the user icon next to the IS9181 user account, then click Create a password. To ensure the security of your computer we recommend that you create a password for the IS9181 user account. The password should have a minimum of four characters and a maximum of 16 characters. The password cannot include spaces, commas or equal signs. Note: If you are going to create the user account on multiple computers then you must use the same password.

34 Source Computer setup for My Music - Windows Create a new user account for Windows XP If you want to switch back to Classic View click on Switch to Classic View. Basic Source operation 35 Source Computer setup for My Music - Windows Share a folder on Windows Vista For the IS9181 to access the music on your computer, you must share the folder where the music is located. 1. Right click on the folder you wish to share. 2. Click on Share. 3. Select user IS9181 and click Add. 4.



[You're reading an excerpt. Click here to read official VTECH IS9181 user guide](http://yourpdfguides.com/dref/2374619)

<http://yourpdfguides.com/dref/2374619>

Click Share.

5. The User Account Control prompts for your permission, click Continue. If the following message pops up, click: No, make the network that I am connected to a private network. 36 Source Computer setup for My Music - Windows Share a folder on Windows Vista 6. The computer may take a few minutes to setup the network access.

When the setup is complete and you see the confirmation screen shown below, click Done. Basic Source operation 37 Source Computer setup for My Music - Windows Create new user account in Windows Vista You must create a new user account in Windows Vista for the IS9181 to access the music on your computer. If you would like to access music files on multiple computers, you must create the same user account with the same password on each computer. When you boot up your computer, you will see the IS9181 user account on the login page. 1.

Click the Start menu then click Control Panel. The instructions are given in the Category View (the Windows default) as shown below. If your Control Panel is in Classic View as shown below, click Switch to Category View. 38 Source Computer setup for My Music - Windows Create new user account in Windows Vista 2. Click User Accounts and Family Safety or User Accounts. 3. Click Add or remove user accounts. Basic Source operation -OR4. The User Account Control prompts for your permission, click Continue. 39 Source Computer setup for My Music - Windows Create new user account in Windows Vista 5.

Click Create a new account. 6. You MUST Enter IS9181 (the "IS" must be capitalized) as the new account name. 7. Select Administrator as the account type. 8. Click Create Account. Note: If you are going to create the IS9181 user account on multiple computers then you must use the same account name. 40 Source Computer setup for My Music - Windows Create new user account in Windows Vista 9. Create a password.

Click on the user icon next to the IS9181 user account. Then click Create a password. To ensure the security of your computer we recommend that you create a password for the IS9181 user account. The password should have a minimum of four characters and a maximum of 16 characters. The password cannot include spaces, commas or equal signs.

Note: If you are going to create the user account on multiple computers, then you must use the same password on each. Basic Source operation 41 Source Computer setup for My Music - Windows Create new user account in Windows Vista If you want to switch back to Classic View click on Switch to Classic View. 42 Source Computer setup for My Music - Mac OS 10.4 Create the IS9181 user account and share the folder 1. Under the Apple menu, select System 3. You must name the account IS9181 and Preferences and choose the Accounts pane.

create a password. This user does not have to administer the computer. 2. Click the "+" symbol to add an account. You may need to click the lock icon on the bottom The password should have a minimum of four characters and a maximum of 16 characters. The password cannot include spaces, commas or equal signs. Basic Source operation 43 Source Computer setup for My Music - Mac OS 10.4 Create the IS9181 user account and share the folder 4. After the account is created, open the 6. After checking the "Windows Sharing" box, Sharing Pane under System Preferences.

click the Accounts... button to enable the IS9181 account. 5. Ensure "Windows Sharing" is checked. You may need to click the lock icon on the bottom left to edit the settings. 44 Source Computer setup for My Music - Mac OS 10.4 Create the IS9181 user account and share the folder 7. After enabling to IS9181 account to allow 8. After setting up sharing, you may now quit windows sharing, choose the Firewall button System Preferences.

of the "Sharing" pane. If your Firewall is on, 9. Now, use Spotlight (the blue magnifying glass ensure that the "Windows Sharing" box is checked), found on the top right corner of checked. (Note: The graphic below shows your desktop, to find the Directory Access the Firewall to be off). Application.

Launch the Directory Access application. Basic Source operation 45 Source Computer setup for My Music - Mac OS 10.4 Create the IS9181 user account and share the folder 10. In Directory Access, ensure SMB/CIFS is checked and selected. 46 Source Computer setup for My Music - Mac OS 10.4 Create the IS9181 user account and share the folder 11. You will need to move your music to the IS9181 account in order for the IS9181 to access the music.

You may make duplicates of the music you wish to play in the IS9181 music folder. -OR You can move your entire music collection to the IS9181 account by following these instructions: 1. While logged into the new IS9181 account, control click the music folder in the user's root directory and select Get Info. 2. At the bottom of the dialog box there is an Ownership & Permission section. 3. Click the arrow for Details to expand this section. 4. Click the Lock next to the Owner drop-down and enter the IS9181 user password when prompted. 5.

Change the Group drop-down box to the original user account name, which will be available in the drop-down list. 6. Change the Access drop-down to Read & Write. 7. Click the Apply to enclosed items button at the bottom of the dialog box. 8. Enter administrator or original password when prompted. 9. Logout of the IS9181 account. 10.

Log into the administrator or original user account. 47 Basic Source operation Source Computer setup for My Music - Mac OS 10.4 Create the IS9181 user account and share the folder 11. Open up two Finder windows each looking at the music directories for both accounts. The IS9181 music folder should no longer be "X" out and inaccessible.

12. Drag the iTunes folder from the original user account music folder to the IS9181 account music folder. This will copy the music. If you do not have the room on your hard drive to copy the music, you can copy the music to an external hard drive. Then delete the music from your computer.

Copy the music back to the computer on in the IS9181 music folder. 13. Open iTunes. 14. Open iTunes Preferences and select the Advanced tab. 15. Ensure that the Copy files to iTunes Music folder when adding to library is selected. 16. Click Change next to iTunes Music folder location. 17.

Create a path to the IS9181 account music folder and iTunes music will point to that folder. Now the IS9181 account houses all of your music. Any new music added in iTunes will show on the IS9181 after you select Update Computer list. You can use iTunes as normal and access all the content through the IS9181.

48 Source Computer setup for My Music - Mac OS 10.5 Create the IS9181 user account and share the folder 1. Under the Apple menu, select System 3. You must name the account IS9181 and Preferences and choose the Accounts pane. create a password. The account can be a standard or admin type. 2.

Click the "+" symbol to add an account. You may need to click the lock icon on the bottom The password should have a minimum of four characters and a maximum of 16 characters.



[You're reading an excerpt. Click here to read official VTECH IS9181 user guide](http://yourpdfguides.com/dref/2374619)

<http://yourpdfguides.com/dref/2374619>

The password cannot include spaces, commas or equal signs. Basic Source operation 49 Source Computer setup for My Music - Mac OS 10.5 Create the IS9181 user account and share the folder 4.

Select the Sharing pane from the System 5. When you press the "Options..." button, you Preferences application.

Ensure File Sharing will be able to select the type of file sharing. box is checked and selected. Click the Ensure the "Share files and folders using Options... button. SMB" box is checked, and check the box for the user IS9181. @@ Click the + button under the "Shared Folder" pane. @@@@ On your IS9181, press SOURCE. 2.

Rotate the dial to My Music and press SELECT. 3. Rotate the dial to Computer Password and press SELECT. 4. Press SELECT to enter password. 5. @@ Repeat this process until the entire password is displayed. Rotate the dial to highlight DONE, and then press SELECT. @@@@ On your IS9181, press SOURCE. 2.

Rotate the dial to highlight My Music and press SELECT. 3. Press SELECT to update computer list. @@ Rotate the dial to highlight the desired computer and press SELECT. All PC1 Shared Music shared folders on the computer appear.

5. Continue to browse the folders until you reach the music files. Only supported music files (see page 25) appear. 6. Rotate the dial to highlight the desired music file and press SELECT.

All supported files in the same folder play sequentially. @@ The IS9181 can only play the files in one folder at a time. @@ You must choose each album to play them. @@@@ Press SOURCE to go back to the top source menu. @@@@ With the IS9181 turned on, press SOURCE. 2. Rotate the dial to highlight FM Radio and press SELECT. 3. @@@@ Rotate the dial clockwise to decrease the FM frequency by one step. To mute the sound, press .

@@ Add to Favorites - see page 57 for instructions. 55 Source Aux in External audio device connection The IS9181 enables you to listen to the audio from any source with a standard headset jack connection. 1. Connect one end of the supplied auxiliary audio cable to the headset jack (audio line out) of your device, and plug the other end of the cable into the AUX IN port on the back of the IS9181. 2. With the IS9181 turned on, press SOURCE. 3. Rotate the dial to select Aux In and press SELECT. Source Internet Radio 4. Aux In appears on the screen.

You can now play the music on your My Music external audio device, and listen to it through the IS9181. Please note that the IS9181 does not provide power or control to your external audio device. You can adjust the listening volume using the VOL+ / VOL- on the IS9181 and/or the volume control of your external audio device. If the sound is distorted, try decreasing the volume on the external audio device. FM Radio Aux In 12:00AM Aux In 56 Favorites Add to favorites When either an Internet radio station or FM radio station is playing, you can add the current station that is playing to your favorites for easy access.

The favorites entries are sorted in numeric order and duplicate entries are allowed. The maximum number of favorites that can be added for each source: Internet Radio: 100 favorites FM Radio: 20 favorites To add an Internet Radio or FM Radio station to your favorites: 1. When you are playing an Internet radio or FM radio station, press MENU. Add to Favorites and press SELECT. The 2.

Rotate the dial to highlight current station that is playing is automatically added to the favorites. Menu Now Playing Add to Favorites Alarm Equalizer Setting Screen Brightness Private Stream for Free Basic operation Favorites 57 Favorites Play favorites If the source is not selected first, No Source selected appears when you press FAVORITES on the IS9181. To play your favorites, you must first select the source. To play your favorites: 1. With the IS9181 turned on, press SOURCE. 2. Rotate the dial to highlight the desired source (Internet Radio, or FM Radio) and press SELECT. 3. Press FAVORITES and a list of saved entries for that source appears. 4.

Rotate the dial to highlight the desired favorite and press SELECT. The favorite plays. 58 Favorites Move favorites You can organize or move the favorites. To move the favorite: 1. With the IS9181 turned on, press SOURCE. 2. Rotate the dial to highlight the desired source (Internet Radio, or FM Radio) and press SELECT. 3. Press FAVORITES and a list of saved favorites for that source appears. 4.

Rotate the dial to highlight the desired favorite to be moved and press MENU. Move Favorite and press 5. Rotate the dial to highlight SELECT. 6. A red line shows on the favorites screen.

Rotate the dial to position the red line where you want to move the favorite (the favorite will be inserted by the red line) and press SELECT. To go back to the screen currently playing, press MENU and select Now Playing. Basic operation Favorites Menu Now Playing Add to Favorites Move Favorite Delete Favorite Delete All Favorites Private Stream for Free Select new location: 1. 87.5 MHz 2.

104.3 MHz 3. 96.5 MHz 87.5 MHz 59 Favorites Delete favorites You can delete one favorite or all favorites. To delete favorites: 1. With the IS9181 turned on, press SOURCE. 2. Rotate the dial to highlight the desired source (Internet Radio, or FM Radio) and press SELECT. 3.

Press FAVORITES and a list of saved favorites for that source appears. 4. Rotate the dial to highlight the desired favorite to be deleted or highlight any favorite if you want to delete all the favorites and press MENU. 5. To delete a favorite, rotate the dial to highlight Delete Favorite and press SELECT. -OR- To delete all favorites, rotate the dial to highlight Delete All Favorites and press SELECT. 6. You are prompted to confirm that you want to delete the favorite or all favorites. To delete the favorite or all favorites, rotate the dial to highlight YES and press SELECT. To cancel the deletion, rotate the dial to highlight NO and press SELECT.

Menu Now Playing Add to Favorites Move Favorite Delete Favorite Delete All Favorites Radio Pooki Menu Now Playing Add to Favorites Move Favorite Delete Favorite Delete All Favorites Radio Pooki 60 Weather (Info) Weather forecast After you have set up the weather feature (see page 19), press WEATHER (called INFO on some models) and rotate the dial to view the 5-day weather forecast. If you do not press a key within one minute, the IS9181 will return to your playing screen. Weather Rotate dial to view 5-day forecast Playing Your Music VANCOUVER, BC Today High: 23 Low: Mostly sunny Basic operation (Info) Weather 61 13 Optional external audio system connection The IS9181 can send music being played to an external audio system for more control over the sound quality. To connect the IS9181 to an external audio system: 1. Connect one end of audio cables (RCA type, not included) to the LINE OUT jacks on the back of the IS9181, matching the cable colors.

2. Connect the other end of the cables to the respective audio input jacks on the external audio system. 3. You can now play music from your IS9181 and listen to it through the external audio system.



[You're reading an excerpt. Click here to read official VTECH IS9181 user guide](http://yourpdfguides.com/dref/2374619)  
<http://yourpdfguides.com/dref/2374619>

62 **Optional battery installation** You can install AA alkaline or rechargeable batteries (sold separately) to use your IS9181 as a portable radio. To install the batteries: 1. Press the tabs on the battery cover on the bottom of the IS9181 and open the battery door. 2. Insert six new AA alkaline or rechargeable batteries, matching the + and - signs engraved inside the battery compartment. 3. Replace the battery cover. It clicks into place when attached correctly. · If you use AA rechargeable batteries, the IS9181 does not recharge the batteries. **Basic operation Optional battery installation** Battery cover When powered by batteries, the IS9181 operates the same as when it's plugged into an AC power outlet with the following exceptions: · A battery icon appears on the status bar at the top of the screen (see page 6). · The maximum speaker volume level is 25.

· When the IS9181 goes into standby mode, the IS9181 automatically shuts down and the screen turns black after one minute to save battery power (power save mode). To wake the IS9181 from power save mode, press STANDBY. 63 **Optional battery installation** · The batteries do not maintain the clock setting. If your clock is set manually and the IS9181 loses power, then the settings are lost. We recommend you have the clock set by the Internet (see page 17), so when the power returns, the clock setting will be automatically set by the Internet. · The alarm clock does not work on battery power. The alarm clock must have AC power to work. 64 **Troubleshooting** If you have difficulty operating your IS9181, please try the suggestions below. For Customer Service, visit our website at [www.vtechphones.com](http://www.vtechphones.com).

[www.vtechphones.com/IS9181](http://www.vtechphones.com/IS9181), or call VTECH Communications at 1 (800) 595-9511. **General** · You cannot access any of the features of the IS9181 when it's in standby (idle) mode. Power up the unit by pressing STANDBY. · **Reset procedure:** Unplug the power cord and remove all batteries (if used) from the IS9181. Wait approximately 30 seconds, then plug the cord back in and re-install the batteries (if used).

· When powered by batteries and the IS9181 goes into standby mode, the IS9181 automatically shuts down and the screen turns black after one minute to save battery power (power save mode). To wake the IS9181 from power save mode, press STANDBY. · After pressing the STANDBY key, you cannot deactivate the IS9181 by immediately pressing the STANDBY key again. Wait at least 3 seconds between key presses. **Networking** · Your wireless network name and password MUST match what you enter in the IS9181.

Check that they are entered exactly the same (including capitalization and special characters). · If the SSID Broadcast is turned OFF on certain brands of wireless routers, the IS9181 will not be able to connect during setup. Refer to your wireless router user's manual for instructions to turn ON the SSID Broadcast during the IS9181 wireless network setup process. Once the IS9181 successfully connects to your wireless router, the SSID Broadcast can be turned OFF again. Appendix

65 **Troubleshooting Networking** · Make sure your wireless router does not restrict connection by particular MAC addresses (MAC filtering). Refer to your wireless router's user manual for details. **Remote control** · Point the remote directly at the IS9181 display. · Check to make sure the remote control's battery is properly installed. · Try replacing the remote control's battery. **Clock/alarm** · If the clock is one hour off when set to Auto (from Internet) mode, check that the daylight saving options are set correctly.

**Internet radio** · Check that your Internet and wireless network are working. · Use your computer to play the Internet radio station stream via the broadcasting website (page 23). If the station plays on your computer, try to reset the IS9181 and reconnect to the station. · If you experience a slow response when browsing the Internet radio directory, buffering, or choppy audio play. Reset the IS9181, WiFi router, and DSL or Cable modem by removing power for 30 seconds. · If an Internet radio station is not available, the station might not be broadcasting at this time, or the station might have reached its maximum number of listeners/subscribers. Often if you try again in a few minutes, you will be connected to the station. 66 **Troubleshooting Internet radio** · A station disappeared from the list or does not work after repeated attempts to listen over several days. When a station stops broadcasting on the Internet, we remove the station from the list. We constantly check the stations to see if they are on the air, when a station restarts broadcasting we put them back in our list of stations.

· If a station has changed their management, name, or the type of music they play, you may need to search for it again. · You cannot find a specific station on our list. Go to [www.vtechphones.com/IS9181](http://www.vtechphones.com/IS9181) and create an account for the IS9181. The online account allows you to search for a station by name or call letters.

You can also add a station by using the station URL.

See page 23 for information. · Your IS9181 can play many stations and streaming formats, but there are always some stations that will not be able to play or choose not to be on our list. **My music** · Check that your computer is turned on and connected to the same network as the IS9181. Make sure your computer is working properly - you may need to reboot/restart your computer. · Make sure that you have created a user account for the IS9181 on your computer and that the folder with your music files is properly shared (see pages 27-52).

· Supported file extension types are: mp3, mp4, m4a, ra, rm, rmvb, and wma. · WAV format music files are not supported. · Follow the instructions on page 53 for entering the Computer Password. The Computer Password and the IS9181 user account password must be the same. The password cannot include spaces, commas or equal signs. 67 **Appendix Troubleshooting My music** · If your IS9181 cannot find the computer with your music files, there may be a firewall program installed which is blocking access. Temporarily disable the firewall, or see the firewall software user's manual to allow ICMP echo requests. Visit [www.vtechphones.com/IS9181](http://www.vtechphones.com/IS9181) for help with many firewall software versions. **FM radio** · If the FM radio reception is poor, try moving the IS9181 to a different part of your home and on a different electrical outlet. · Keep the IS9181 at least two feet away from other electronic devices and appliances to reduce interference.

**AUX IN** · If you have trouble with the volume, you can adjust the volume using the IS9181 and the volume control on your external device. · Make sure the auxiliary cable is properly plugged into the IS9181 and your external device. **Favorites** · There are separate dedicated favorites lists for Internet Radio and FM Radio. You must choose a SOURCE before choosing FAVORITES. · To add an Internet station to the favorites list, the station must be connected and playing.



[You're reading an excerpt. Click here to read official VTECH IS9181 user guide](http://yourpdfguides.com/dref/2374619)  
<http://yourpdfguides.com/dref/2374619>

· You are allowed a maximum of 100 favorites for Internet Radio and 20 for FM Radio. If you reach the maximum you will need to delete other favorites before you can add new ones. 68 Troubleshooting WEATHER (INFO) · While viewing the Weather screen, rotate the dial to view the five day forecast weather display. Reception or interference · If audio playback stops or the IS9181 shows Buffering, move the IS9181 closer to your wireless router. · Make sure the IS9181 is at least two feet away from computer equipment and other communication devices.

· Try changing the channel on your router. Refer to the router user manual for instructions. · Do not install IS9181 near a microwave oven or on the same electrical outlet. You might experience decreased performance while the microwave oven is operating. Appendix 69 Important safety instructions When using your IS9181 equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following: 1. Read and understand all instructions. 2. Follow all warnings and instructions marked on the product. 3. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning. 4. Do not use this product near water (for example, near a bathtub, kitchen sink, or swimming pool). 5. Do not place this product on an unstable table, shelf, stand or other unstable surfaces. 6. Slots and openings on the back or bottom of the unit are provided for ventilation. To protect it from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register.

This product should not be placed in any area where proper ventilation is not provided. 7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company. 8. Do not allow anything to rest on the power cord. Do not install this product where the cord may be walked on. 9. Never push objects of any kind into this product through the slots in the unit because it may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.

10. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the unit other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used. 11.

Do not overload wall outlets and extension cords. 12. Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions: A. When the power supply cord or plug is damaged or frayed. B.

If liquid has been spilled onto the product. C. If the product has been exposed to rain or water. D. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation. E. If the product has been dropped and the unit has been damaged. F.

If the product exhibits a distinct change in performance. 13. The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling or an under-the-table/cabinet outlet. **SAVE THESE INSTRUCTIONS** 70 Maintenance Taking care of your unit Your IS9181 contains sophisticated electronic parts, so it must be treated with care. Avoid rough treatment. Handle the unit gently. Save the original packing materials to protect your IS9181 if you ever need to ship it. Avoid water Your unit can be damaged if it gets wet. Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install the IS9181 near a sink, bathtub or shower.

Electrical storms Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electrical appliances during storms. Cleaning your unit Your unit has a durable plastic casing that should retain its luster for many years. Clean it only with a soft cloth slightly dampened with water or a mild soap. Do not use excess water or cleaning solvents of any kind.

Remember that electrical appliances can cause serious injury if used when you are wet or standing in the water. If the unit should fall into the water, **DO NOT RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD FROM THE WALL.** Appendix 71 Warranty What does this limited warranty cover? The manufacturer of this VTECH Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada. What will VTECH do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")? During the limited warranty period, VTECH's authorized service representative will repair or replace at VTECH's option, without charge, a Materially Defective Product.

If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will retain defective parts, modules, or equipment. Repair or replacement of the Product, at VTECH's option, is your exclusive remedy. VTECH will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement to take approximately 30 days. How long is the limited warranty period? The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTECH repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever is longer. What is not covered by this limited warranty? This limited warranty does not cover: 1. Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion; or 2.

Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTECH; or 3. Product to the extent that the problem experienced is caused by signal conditions, network reliability, or cable or antenna systems; or 4.



[You're reading an excerpt. Click here to read official VTECH IS9181 user guide](http://yourpdfguides.com/dref/2374619)  
<http://yourpdfguides.com/dref/2374619>

Product to the extent that the problem is caused by use with non-VTech accessories; or 5. Product whose warranty/quality stickers, product serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or 6. Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or 7. Product returned without a valid proof of purchase (see item 2 below); or 8. Charges for installation or set up, adjustment of customer controls, and installation or repair of systems outside the unit. Appendix How do you get warranty service? To obtain warranty service in the United States of America, please call 1 (800) 595-9511. In Canada, please call 1 (800) 267-7377. NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may save you a service call.

Except as provided by applicable law, you assume the risk of loss or damage during transport and transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk of damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of repair prior to any further repair activity.

You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by this limited warranty. What must you return with the Product to get warranty service? 1. Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunction or difficulty; and 2. Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and 3. Provide your name, complete and correct mailing address, and telephone number.

73 Warranty Other Limitations This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communications related to this Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification. State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province. Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. ©©©©©© VTech Technologies Canada Ltd.

©© Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void user authority to operate the equipment. CAUTION IEEE 802.11b or 802.11g operation of this product in the U.S.A. is firmware-limited to channels 1 through 11. To comply with FCC RF exposure compliance requirement, separation distance of at least 20 cm must be maintained between the antenna of this product and all persons. This product and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter. 75 FCC Part 15 FCC NOTICE This product has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the FCC Rules.

These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the product OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures: · Reorient or relocate the receiving antenna. · Increase the separation between the equipment and receiver.

· Connect the product into an outlet on a circuit different from that to which the receiver is connected. · Consult the local retailer authorized to distribute this type of product or an experienced radio/TV technician for help. 76 IC RSS-210 (Canada) PRODUCT This product contains IC 1135A-80656900 This product complies with RSS-210 of Industry Canada. Appendix Industry Canada Notice This Class B digital apparatus complies with Canadian ICES-003. CAUTION To reduce potential radio interference to other users, the antenna type and its gains should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that permitted for successful communication. GPL License Information Portions of the software associated with this product are open source, and fall within the scope of the GNU General Public License (GPL). Accordingly, those portions of code are available to the public, consistent with the requirements of the GPL, in either source code format or object code format, depending upon the nature of the code at issue. If you would like to exercise your right to receive the available code, please send a cashier's check, payable to VTech Communications, Inc., in the amount of \$10.00 (U.S.

\$) to: VTech Communications, Inc., 9590 SW Gemn Drive, Suite 120 Beaverton OR 97008 ATTN: Information Technology Group / IS9181 GPL code request, along with a written request for the available code. If your request does not fully comply with the foregoing requirements, VTech reserves the right to reject your request. Further, by requesting and receiving the available code, you release VTech, its affiliates, and its and their officers, directors, employees, and representatives ("VTech Parties") from any liability or responsibility relating to such code, and you acknowledge that the VTech Parties make no representations with respect to the origin, accuracy, usability, or usefulness of such code, and the VTech Parties have no responsibility to you whatsoever concerning the code, including without limitation any responsibility to provide explanation, support, upgrade, or any communication whatsoever. Your review or use of the available code is at your sole risk and responsibility. 77 Technical specifications Size Weight Power requirements Operating temperature 314 mm (w) X 159 mm (d) X 88 mm (h) 1420 grams 14V DC 32°F -- 122°F 0°C -- 50°C IMPORTANT: This product is protected by certain intellectual property rights of Microsoft Corporation.



[You're reading an excerpt. Click here to read official VTECH IS9181 user guide](http://yourpdfguides.com/dref/2374619)  
<http://yourpdfguides.com/dref/2374619>