



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for VTECH LS6245. You'll find the answers to all your questions on the VTECH LS6245 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual VTECH LS6245**  
**User guide VTECH LS6245**  
**Operating instructions VTECH LS6245**  
**Instructions for use VTECH LS6245**  
**Instruction manual VTECH LS6245**

The image shows the cover of the VTECH LS6245 User's manual. At the top left is the VTECH logo with the tagline "Innovation Beyond Technology™". To the right of the logo, it says "User's manual" and "www.vtechphones.com". In the center is a photograph of the VTECH LS6245 cordless phone system, including a charging base and a handset. At the bottom left, it says "Model: LS6245". At the bottom right, it features the Bluetooth logo and the text "Bluetooth® DECT 6.0".



[You're reading an excerpt. Click here to read official VTECH LS6245 user guide](http://yourpdfguides.com/dref/2374639)

<http://yourpdfguides.com/dref/2374639>

**Manual abstract:**

*v t e c h p h o n e s . @ @ @ @ @ @ @ @* For support, shopping, and everything new at VTech, visit our website at [www.vtechphones.com](http://www.vtechphones.com). In Canada, please visit [www.vtechcanada.com](http://www.vtechcanada.com). The ENERGY STAR® program ([www.energystar.gov](http://www.energystar.gov)) recognizes and encourages the use of products that save energy and help protect our environment.

We are proud to mark this product with the ENERGY STAR® label indicating it meets the latest energy efficiency guidelines. The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by VTech Holdings Limited is under license. VTech Holdings Limited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

Table of contents Getting started .....

.....

.....

1 Parts checklist .....

.....

.....

.....1 Important notes ..

.....

.....

.....

.....2 Installation .....

.....

.....

.....

.....2 Cleaning tips for your touch screen telephone ..

.....

.....

.....2 Telephone base installation ..

.....3 Battery installation .....

.....

.....

.....4 Battery charging .....

.....

.....

.....

5 Handset layout .....

.....

.....

...6 Telephone base layout ..

.....

...7 Handset main menu .....

.....

.....

..9 Telephone base main menu .....

.....

.....

.....

.....11 Introducing Bluetooth .....

.....

...11 Glossary of terms ..

.....

.....

.....12 Bluetooth at a glance .....

.....

.....

..13 Bluetooth setup .....

.....



.....  
.....  
...22 Auto keylock .

.....  
.....

.....  
.....  
23 Key tone .....

.....  
.....

.....  
.....  
..23 i Set date/time .....

.....  
.....

..24 Home area code .....

.....  
.....

..25 Ringers ...

.....  
.....

.....  
.....  
.....26 Ringer volume ...

.....  
.....

....26 Ringer tone .....

.....  
.....

.....27 Telephone base settings ...

.....28 Settings ....

.....  
.....

.....  
.....  
....28 Set date/time .

.....  
.....

.....  
.....  
....28 Key tone .

.....  
.....

.....  
.....  
.28 LCD language .....

.....  
.....

....29 Clear voicemail .

.....

.....  
.....  
.30 Home area code ....  
.....

.....  
.31 Ringers ....  
.....  
.....

.....  
.....  
.....  
32 Ringer volume .....

.....  
.....  
...32 Ringer tone ..  
.....

.....  
.....  
.....  
.33 Answering system settings ....34 Answering system setup .....

.....34 Answer ON/OFF ...  
.....  
.....  
.....

..34 Call screening .....

.....  
.....  
.....  
35 Announcement .....

.....36 Play your announcement ...

.....36 Record your own announcement ..

.....37 Delete your announcement .....

.38 Number of rings .....

.....39 Remote access code ...

.....  
....40 Message alert tone.  
.....  
.....

.....41 Telephone operation .....

.....  
.....  
.....  
.42 Make, answer or end a home call .....

.....  
.....  
.....  
...42 Call waiting on the home line ....43 Make, answer or end a cell call ..

.....  
.....

.....  
.....

..44 Call waiting on the cell line .....  
..45 Answer a cell call while on a home call...

.....  
.....

.....  
.....  
45 Answer a home call while on a cell call .....

.....  
.....

.....  
.....  
.....  
.....  
.46 Conference home and cell calls .....

.....  
.....

.....  
.....  
.....  
.....46 Handset speakerphone .....

.....47 Table of contents Volume control .

.....  
.....

.....47 Silence the ringer ...

.....  
.....

.....47 Mute .

.....  
.....

.....  
.....  
.....  
.....  
.....  
.....47 Infrared sensor ...

.....  
.....

.....48 Hold .

.....  
.....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....48 Handset locator .....

.....  
.....

.....48 Chain dialing.

.....  
.....

.....  
.....  
.....  
.....  
.....  
.....  
.....  
.....49 Redial list .....

.....  
.....

.....50 Review the redial list ...

.....	.....
.....50 Dial a redial entry .	.....
.....	.....
.....50 Save a redial entry to the directory ...	.....
.....	.....
.....50 Delete a redial entry .....	.....
.....	.....
.....51 Intercom .....	.....
.....	.....
.....	.....
.....	.....
.52 Answer an incoming call during an intercom call.....	.....
...53 Share an outside call..	.....
.....	.....
.....	.....
.54 Transfer a call .....	.....
.....	.....
.....	.....
.....	.....
54 Directory .....	.....
.....	.....
.....	.....
.....	.....
.....55 Create a new directory entry ...	.....
...55 Character chart ..	.....
.....	.....
.....	.....
.....57 Review the directory.	.....
.....	.....
.....58 Alphabetical search ..	.....
.....	.....
.....	.....
...58 Dial a directory entry ..	.....
.....	.....
.....59 Edit a directory entry ....	.....
.....	.....
.....	.....
....59 Delete a directory entry .....	.....
.....	.....
.....60 About caller ID ..	.....
.....	.....
.....	.....
.....	.....
.....61 Caller ID history....	.....
.....	.....
.....	.....
.....	.....
..62 Missed calls indicator .....	.....

.....  
...62 Memory match ..

.....

.....  
....63 Review the call log .

.....

.....

...63 Make a call log entry ready to dial .....

.....

.....

.....

.....

..64 Dial a call log entry ...

.....

.....

..64 Save a call log entry to the directory .....

.....

.....

.....

65 Delete from the call log .....

....66 Call log display screen messages.

.....

.....

....66 Answering system operation ..67 Answering system and voicemail ....

.....

.....

.....

..67 ii Message capacity .....

.....

.....

....67 New message indication .....

.....67 Call intercept ....

.....

.....

.....

.....67 Message playback ....

.....

.....

.....68 Delete all old messages ...

.....  
69 Record and play memos .....

.....

..70 Remote access .....

.....

.....

...71 Appendix ..

.....

.....

.....

.....

...72 Screen display messages .....

...72 Handset and telephone base indicators.....

.....

.....



*The telephone base is designed for tabletop use only. Make sure that the electrical outlet is not controlled by a wall switch. If you subscribe to digital subscriber line (DSL) high-speed Internet service through your telephone line, you must install a DSL filter between the telephone line cord and the telephone wall jack. The filter prevents noise and caller ID problems caused by DSL interference. Contact your DSL service provider for more information about DSL filters.*

*Electrical outlet not controlled by a wall switch Telephone base power adapter Telephone wall jack DSL filter (not included) is required if you have DSL high speed Internet service Telephone line cord Telephone base · Use only the power adapter supplied with this product.*



[You're reading an excerpt. Click here to read official VTECH LS6245 user guide](#)

<http://yourpdfguides.com/dref/2374639>

To order a replacement, visit our website at [www.vtechphones.com](http://www.vtechphones.com) or call 1 (800) 595-9511. In Canada, go to [www.vtechcanada.com](http://www.vtechcanada.com) or dial 1 (800) 267-7377. · The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet. 3 Getting started Battery installation Install the battery as shown below.

1. If the battery compartment cover is on the handset, press on the triangle and slide the cover to remove. 2. Plug the battery connector securely into the socket inside the handset battery compartment, matching the color-coded label. 3. Place the battery with the label **THIS SIDE UP** facing up and the wires inside the battery compartment. 4. Align the cover flat against the battery compartment, then slide it towards the center of the handset until it clicks into place. 5. Charge the handset by placing it in the telephone base.

The **ChARGE** light is on when the handset charges. 1 2 3 4 5 **ChARGE** light · If the handset will not be used for a long time, disconnect and remove the battery to prevent possible leakage. · To purchase a replacement battery, visit our website at [www.vtechphones.com](http://www.vtechphones.com) or call 1 (800) 595-9511.

In Canada, go to [www.vtechcanada.com](http://www.vtechcanada.com) or dial 1 (800) 267-7377. 4 Getting started Battery charging Once you have installed the battery, the screen indicates the battery status (see the table below). If necessary, place the handset in the telephone base to charge the battery. For best performance, keep the handset in the telephone base when not in use. The battery is fully charged after 16 hours of continuous charging. See the table on page 77 for battery operating times. If the screen is blank, you need to charge the handset without interruption for at least 10 minutes to give the handset enough charge to use the telephone for a short time. The handset beeps and shows **Low battery**. If you are on a call in low battery mode, the handset beeps every minute. The following table summarizes the battery charge indicators and actions to take. Battery indicators The screen is blank. Battery status Battery has no charge and the handset cannot be used. Battery hle the telephone is not in use to erase the missed calls indicator (page 62).

While in a menu, press to exit without making changes or press and hold to return to idle mode. Press to repeat a message or press twice to play the previous message (page 68). 8 Getting started handset main menu To enter the main menu: 1. Press the **MeNu** softkey when the handset is not in use. 2. Press **/VoL+ /** or **CID/VoL- /** to select a handset feature menu, then press the **SeLeCT** softkey to enter that menu. To return to idle mode, press and hold **oFF/CLeAR**. To return to the previous menu, press **oFF/CLeAR**. **ANS. SySTeM** - play messages, record **DIReCToRy** - store and search for memos and change your answering names and numbers.

system settings. **ANS. SYSTEM DIRECTORY BACK SELECT BACK SELECT CALL LoG** - review the caller ID history or delete all call log entries. **INTeRCoM** - intercom call with the telephone base or a system handset. **CALL LOG INTERCOM BACK SELECT BACK SELECT RINGeRS** - set up ringers for the home and cell lines.

**SeTTINGS** - change your handset settings. **RINGERS SETTINGS BACK SELECT BACK SELECT 9** Getting started Telephone base main menu To enter the main menu: 1. Press the **MeNu** softkey when the telephone base is not in use. 2. Press **/VoL+ /** or **VoL- /** to select a feature menu, then press the **SeLeCT** softkey to enter that menu.

To return to idle mode, press and hold **CANCeL /**. To return to the previous menu, press **CANCeL /**. **Ans. system** - play messages, record memos and change your answering system settings. **Ans. system Directory Cal log l SELECT Directory** - store and search for names and numbers. **Ans. system Directory Cal log l SELECT Call log** - review the caller ID history or delete all call log entries. **Ans. system Directory Cal log l SELECT Page all hS** - page the system handset(s).

**Directory Cal log l Page al HS l SELECT Intercom** - intercom call with a system handset. **Cal log l Page al HS l Intercom SELECT Bluetooth** - set up and manage your Bluetooth devices. **Page al HS l Intercom Bluetooth SELECT Ringers** - set up ringers for the home and cell lines. **Intercom Bluetooth Ringers SELECT Settings** - change your telephone base settings. **Bluetooth Ringers Settings SELECT 10 Bluetooth Introducing Bluetooth** Your new LS6245 telephone system with Bluetooth wireless technology has the following features: · Pair up to four Bluetooth enabled cell phones with the telephone base. · Connect a maximum of two cell phones to make and receive cell calls. Only one cell phone can be active on a call at a time. · Connect a Bluetooth enabled headset for making and receiving home calls. · Conference cell and home calls. · Make and receive calls using your cell phone plan while utilizing the ease and comfort of your home telephone system.

**IMPoRTANT INFoRMATIoN** · · · After plugging in the telephone base, wait at least 20 seconds before connecting a Bluetooth device. The screen shows Bluetooth system busy if you try to connect too soon. Refer to the user's manual of your cell phone or headset for more information about its Bluetooth function. Bluetooth wireless technology operates within a short range (about 30 feet). When using a cell phone with the LS6245, it is best to place your cell phone between one and fifteen feet from the telephone base.

When using a Bluetooth headset with the LS6245, you are limited to the range of your headset (see the user's manual of your headset for more information). Make sure that your cell phone has sufficient signal strength. You may need to move the cell phone and telephone base to a location where the cell phone signal strength is stronger. Charge your Bluetooth cell phone while it is connected to the telephone base. Your cell phone's battery discharges faster while it is connected to the telephone base via Bluetooth wireless technology.

Monitor your cell phone's usage because airtime is deducted from your cellular plan for the duration of all cell calls. · · · Refer to the Bluetooth setup section (page 14) to learn how to set up and manage your Bluetooth device(s). Refer to the Telephone operation section (page 42) on how to operate your Bluetooth devices with your new LS6245 telephone system with Bluetooth wireless technology. Refer to the Troubleshooting section (page 80) if you experience difficulty using the telephone system. The Bluetooth ® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by VTech Holdings Limited is under license. VTech Holdings Limited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners. 11

Bluetooth Glossary of terms Below are some terms used in this user's manual to help you become familiar with using your Bluetooth devices and your new LS6245 telephone system.



[You're reading an excerpt. Click here to read official VTECH LS6245 user guide](http://yourpdfguides.com/dref/2374639)  
<http://yourpdfguides.com/dref/2374639>

*Active devices - A maximum of two paired devices (two cell phones, or one cell phone and one headset) on the active devices list can be connected to the telephone base, but only one cell phone or headset can be on a call at a time.*

*Bluetooth cell phone - Refers to a Bluetooth enabled cell telephone. Cell line - The communication service provided through your Bluetooth enabled cell telephone. Connected - A Bluetooth device (cell phone or headset) can only be used when it is connected to the telephone base. When a Bluetooth device is connected to the telephone base and active on the active devices list, it is ready for use. Disconnected - A diagonal line appears across devices 1 and/or 2 when the corresponding Bluetooth device is disconnected from the telephone base. Discoverable mode - Before a Bluetooth device can be paired, it must be set in this mode. When pairing your cell phone, the telephone base is set in this mode. When pairing a headset, the headset must be set in this mode.*

*Depending on the manufacturer, this mode is sometimes referred to as Find Me or Visibility. home line - Your conventional telephone land line.*

*Paired devices - Once Bluetooth devices have been paired with the telephone base, they appear on the paired devices list. A maximum of four devices can be paired with the telephone base, but only two can be on the active devices list. Pairing - This refers to the process of Bluetooth devices registering device information with each other. The telephone base must be paired with a Bluetooth enabled cell phone or headset before the Bluetooth device can be used.*

*Depending on the manufacturer, this is also referred to as Bonding.*

*PIN - By default, the PIN is 0000 for the telephone base and for most Bluetooth devices. PIN information must be exchanged between Bluetooth devices before they can be used. This is also known as a Passkey or Passcode. 12 Bluetooth Bluetooth at a glance The telephone base allows you to pair up to four Bluetooth devices. You can have a maximum of two paired devices connected at any time (two cell phones, or one cell phone and one headset), but only one cell phone or headset can be on a call at a time.*

*Once you have paired a device with the telephone base, the pairing information is stored on the paired devices list (page 16). To use a paired device, it must be connected and on the active devices list (page 18). IMPORTANT INFORMATION · Once you have paired a device with the telephone base, you do not have to repeat the pairing procedure again, unless you delete the device from the paired devices list (page 16). · When adding, removing, or replacing a Bluetooth device on the active devices list, all connected devices are temporarily disconnected until the procedure is complete. It may take up to two minutes to reconnect. 13 Bluetooth Bluetooth setup To use a Bluetooth enabled cell phone or headset with your LS6245, you must first pair and connect your Bluetooth device(s) with the telephone base. Setup cell Before you begin, make sure that your Bluetooth enabled cell phone is not connected to any other Bluetooth device. Refer to your cell phone user's manual to learn how to search for or add new Bluetooth devices. To pair and connect a cell phone: 1. Press the MeNu softkey on the telephone base when it is not in use.*

*2. Press /VoL+ or VoL- / to highlight Bluetooth, then press the SeLeCT softkey. 3. Press /VoL+ or VoL- / to highlight Setup cell, then press the SeLeCT softkey. · If a device is already connected to the telephone base, Connected devs will be temp. disconnected displays. Press the oK softkey to temporarily disconnect the device and continue the pairing process. 4. Press the NeXT softkey to set the telephone base to discoverable mode. 5.*

*Turn on the Bluetooth feature of your cell phone and search for or add new devices. 6. Once your cell phone finds VTech LS6245, select it. 7. Enter the PIN of the telephone base (the default PIN is 0000) into your cell phone to continue the pairing process.*

*8. When a device is successfully connected, Device connected to base, and 1 and/or 2 displays. · When you already have two devices on the active devices list, press the yeS softkey to connect to your paired cell phone. You are prompted to replace an existing device on the active devices list (page 18). Page al HS I Intercom Bluetooth SELECT Setup cel l Setup headset Active devices SELECT Pls set your cel to search l for devices NEXT LS6245 discoverable PIN:0000 Pairing complete Device connected to base The pairing process may take up to one minute.*

*If the pairing process fails, try again. 14 Bluetooth Setup headset Before you begin, make sure that your Bluetooth enabled headset is not connected to any other Bluetooth device. Refer to your headset user's manual to learn how to search for or add new Bluetooth devices. To pair and connect a headset: 1. Press the MeNu softkey on the telephone base when it is not in use. 2. Press /VoL+ or VoL- / to highlight Bluetooth, then press the SeLeCT softkey. 3. Press /VoL+ or VoL- / to highlight Setup headset, then press the SeLeCT softkey. · If a device is already connected to the telephone base, Connected devs will be temp.*

*disconnected displays. Press the oK softkey to temporarily disconnect the device and continue the pairing process. 4. Set your headset to discoverable mode.*

*5. Press the NeXT softkey on the telephone base to search for your headset. 6. Once the telephone base finds your headset, press the SeLeCT softkey. 7. Enter the PIN of your headset (the PIN for most Bluetooth devices is 0000), then press the NeXT softkey.*

*The screen displays headset setup complete and then Connect headset to base? 8. Press the yeS softkey. When a device is successfully connected, Device connected to base, and 1 and/or 2 displays. · When you already have two devices on the active devices list, press the yeS softkey to connect to your paired headset. You are prompted to replace an existing device on the active devices list (page 18).*

*The pairing process may take up to one minute. If the pairing process fails, try again. Page al HS I Intercom Bluetooth SELECT Setup cel l Setup headset Active devices SELECT Pls set headset to discoverable mode NEXT Searching for headset SELECT HEADSET Mary's Headset SELECT ENTER PIN ---NEXT Headset setup complete Connect headset to base? yES NO Device connected to base 15 Bluetooth Paired devices All paired devices are stored on the paired devices list. Up to four devices (one headset only) can be paired with the telephone base. To use a paired device, it must be connected and on the active devices list (page 18).*

*Only the first 15 characters of the device name are shown on the paired devices list. Rename a paired device You can change the name of a paired device on the paired devices list. 1. Press the MeNu softkey on the telephone base when it is not in use. 2. Press /VoL+ or VoL- / to highlight Bluetooth, then press the SeLeCT softkey.*



[You're reading an excerpt. Click here to read official VTECH LS6245 user guide](http://yourpdfguides.com/dref/2374639)

<http://yourpdfguides.com/dref/2374639>

3. Press /VoL+ or VoL- / to highlight Paired devices, then press the SeLeCT softkey. 4. Press /VoL+ or VoL- / to highlight a selected item, then press the oPTIoN softkey.

5. Press /VoL+ or VoL- / to highlight Rename, then press the SeLeCT softkey. The screen displays eNTER NeW NAME. 6. Use the dialing keys to edit the name (see step 6 of edit a directory entry on page 60). 7. Press the SAve softkey to confirm. 8. Press and hold CANCeL/ to return to the idle display. Page al HS l Intercom Bluetooth SELECT Setup headset Active devices Paired devices SELECT PAIRED DEVICES Mary's Cel l John's Headset INFO OPTION Disconnect Rename Remove paired SELECT ENTER NEW NAME Elizabeth SAVE 16 Bluetooth Remove a paired device If you already have the maximum of four paired devices on the paired devices list and you want to add another device, you must first delete a paired device from the paired devices list.

1. Press the MeNu softkey on the telephone base when it is not in use. 2. Press /VoL+ or VoL- / to highlight Bluetooth, then press the SeLeCT softkey. 3. Press /VoL+ or VoL- / to highlight Paired devices, then press the SeLeCT softkey. 4. Press /VoL+ or VoL- / to highlight a selected item, then press the oPTIoN softkey. 5. Press /VoL+ or VoL- / to highlight Remove paired, then press the SeLeCT softkey.

6. The screen displays Remove device from paired list? Press the yeS softkey to confirm or the No softkey to exit. Page al HS l Intercom Bluetooth SELECT Setup headset Active devices Paired devices SELECT PAIRED DEVICES Mary's Cel l John's Headset INFO OPTION View information of a paired device 1. Press the MeNu softkey on the telephone base when it is not in use. 2. Press /VoL+ or VoL- / to highlight Bluetooth, then press the SeLeCT softkey. 3. Press /VoL+ or VoL- / to highlight Paired devices, then press the SeLeCT softkey. 4. Press /VoL+ or VoL- / to highlight a selected item, then press the INFO softkey to view the information.

5. Press the oK softkey to return to the Paired devices list. Disconnect Rename Remove paired SELECT Remove device from paired list? yeS NO 17 Bluetooth Active devices Only devices on the active devices list can establish a Bluetooth connection with the telephone base. Although two paired devices can be connected to the telephone base, only one Bluetooth cell phone or a headset can be on a call at a time. Review the active devices list 1. Press the MeNu softkey on the telephone base when it is not in use. 2. Press /VoL+ or VoL- / to highlight Bluetooth, then press the SeLeCT softkey. 3. Press /VoL+ or VoL- / to highlight Active devices, then press the SeLeCT softkey.

Page al HS l Intercom Bluetooth SELECT Connect/disconnect an active device While in the active devices menu, you can connect or disconnect your active device. 1. Press the MeNu softkey on the telephone base when it is not in use. 2. Press /VoL+ or VoL- / to highlight Bluetooth, then press the SeLeCT softkey. 3. Press /VoL+ or VoL- / to highlight Active devices, then press the SeLeCT softkey. 4. Press /VoL+ or VoL- / to highlight a selected item. 5. Press the oPTIoN softkey, then highlight Connect/Disconnect. 6. Press the SeLeCT softkey to confirm. Setup cel l Setup Headset Active devices SELECT ACTIVE DEVICES Mary's Cel l John's Headset INFO OPTION Disconnect Remove active SELECT When your active device is connected, you are prompted to select Disconnect. When your active device is disconnected, you are prompted to select Connect. 18 Bluetooth Replace an active device When you already have two devices on the active devices list, you can replace an active device with a device on the paired devices list. To replace an active device: 1. Press the MeNu softkey on the telephone base when it is not in use. 2. Press /VoL+ or VoL- / to highlight Bluetooth, then press the SeLeCT softkey.

3. Press /VoL+ or VoL- / to highlight Paired devices, then press the SeLeCT softkey. 4. Press /VoL+ or VoL- / to highlight a selected device, then press the oPTIoN softkey. 5. When Replace active is highlighted, press the SeLeCT softkey. 6. Press /VoL+ or VoL- / to select the device to be replaced, then press the SeLeCT softkey. 7. When Device added to active list Connect now? appears, press the yeS softkey to confirm or the No softkey to exit.

Page al HS l Intercom Bluetooth SELECT Setup headset Active devices Paired devices SELECT PAIRED DEVICES Mary's Cel l John's Headset INFO OPTION Add an active device You can have a maximum of two devices on the active devices list. To add an active device: 1. Press the MeNu softkey on the telephone base when it is not in use. 2. Press /VoL+ or VoL- / to highlight Bluetooth, then press the SeLeCT softkey.

3. Press /VoL+ or VoL- / to highlight Active devices, then press the SeLeCT softkey. 4. Select an empty position and then press the ADD softkey. You are prompted to select a device from the paired devices list.

5. Press /VoL+ or VoL- / to select one paired device, then press the ADD softkey. 6. When Device added to active list Connect now? appears, press the yeS softkey to confirm or the No softkey to exit. Replace active Rename Remove paired SELECT Setup cel l Setup headset Active devices SELECT ACTIVE DEVICES 1 Mary's Cel 2 2 1 2 Empty ADD PAIRED DEVICES Mary's Cel l John's Headset INFO ADD 19 Bluetooth Remove an active device You can remove an active device from the active devices list. To remove an active device: 1. Press the MeNu softkey on the telephone base when it is not in use. 2. Press /VoL+ or VoL- / to highlight Bluetooth, then press the SeLeCT softkey. 3.

Press /VoL+ or VoL- / to highlight Active devices, then press the SeLeCT softkey. 4. Press /VoL+ or VoL- / to highlight a selected device, then press the oPTIoN softkey. 5. Press /VoL+ or VoL- / to highlight Remove active, then press the SeLeCT softkey. The telephone base displays Device removed from active device list. Page al HS l Intercom Bluetooth SELECT Setup cel l Setup headset Active devices SELECT View information of an active device ACTIVE DEVICES 1 Mary's Cel l 2 Elizabeth Jones INFO OPTION To view the information of an active device: 1. Press the MeNu softkey on the telephone base when Connect Remove active it is not in use. 2. Press /VoL+ or VoL- / to highlight Bluetooth, then SELECT press the SeLeCT softkey.

3. Press /VoL+ or VoL- / to highlight Active devices, then press the SeLeCT softkey. 4. Press /VoL+ or VoL- / to highlight a selected device, then press the INFO softkey to view the information. 5.

Press the oK softkey to return to the Active devices list. Change PIN You are required to enter a PIN when establishing a Bluetooth connection. The default PIN of your telephone base is 0000. Active devices Paired devices Change PIN SELECT To change the PIN: 1. Press the MeNu softkey on the telephone base when it is not in use.

ENTER NEW PIN 2. Press /VoL+ or VoL- / to highlight Bluetooth, then ---press the SeLeCT softkey. SAVE 3. Press /VoL+ or VoL- / to highlight Change PIN, then press the SeLeCT softkey.



[You're reading an excerpt. Click here to read official VTECH LS6245 user guide](http://yourpdfguides.com/dref/2374639)

<http://yourpdfguides.com/dref/2374639>

The screen displays eNTER NeW PIN. 4. Use the dialing keys to enter a new four-digit code. 5. Press the SAVE softkey to confirm. 20 handset settings Settings In the settings menu, you can change and edit the handset settings for language, voicemail indicator, keylock, key tone, date and time and home area code.

**LCD language** You can select english, Français or español to be used in all screen displays. To select a language: 1. Press the MeNu softkey when the handset is not in use. 2. Press /VoL+ / or CID/VoL- / to highlight SeTTINGS, then press the SeLeCT softkey. 3. Press /VoL+ / or CID/VoL- / to highlight LCD language, then press the SeLeCT softkey. 4. Press /VoL+ / or CID/VoL- / to choose from english, Français or español, then press the SeT softkey to save or press the BACK softkey to exit to the previous menu. SETTINGs LCD language Clr voicemail Auto keylock Key tone BACK SELECT LCD LANGUAgE English Fran c ais , Espanol BACK SET 21 handset settings Clear voicemail If you subscribe to voicemail service offered by your telephone service provider, New voicemail and appear on the handset and telephone base when you have new voicemail messages.

Contact your telephone service provider for more information and assistance about using your voicemail service. After you have listened to all new voicemail messages, the indicators on the handset and telephone base turn off automatically. Use the clear voicemail feature when the telephone indicates that there is new voicemail but there is none (for example, when you have accessed your voicemail while away from home). The clear voicemail feature only turns off the indicators; it does not delete your voicemail messages. As long as you have new voicemail messages, your telephone service provider continues to send the signal that turns on the indicators.

**SETTINGs LCD language Clr voicemail Auto keylock Key tone BACK SELECT Turn off indicator?** yES NO To manually turn off these indicators: 1. Press the MeNu softkey when the handset is not in use. 2. Press /VoL+ / or CID/VoL- / to highlight SeTTINGS, then press the SeLeCT softkey. 3.

Press /VoL+ / or CID/VoL- / to highlight Clr voicemail, then press the SeLeCT softkey. The screen displays Turn off indicator? 4. Press the yES softkey to confirm or press the No softkey to exit to the previous menu. · Your telephone service provider may alert you to new messages with a stutter (broken) dial tone. Contact your service provider for details. · Voicemail is different from answering system messages recorded in your answering system. For more information about the difference, see page 67. 22 handset settings Auto keylock The auto lock feature is on by default to prevent accidental presses of the handset keys. If no key has been pressed for 10 seconds, the keys will lock. To change the setting: 1.

Press the MeNu softkey when the handset is not in use. 2. Press /VoL+ / or CID/VoL- / to highlight SeTTINGS, then press the SeLeCT softkey. 3. Press /VoL+ / or CID/VoL- / to highlight Auto keylock, then press the SeLeCT softkey. 4. Press /VoL+ / or CID/VoL- / to choose from 10 seconds, 20 seconds, 30 seconds or Never. Press the SeT softkey to save or press the BACK softkey to exit to the previous menu. SETTINGs LCD language Clr voicemail Auto keylock Key tone BACK SELECT AUTO KEyLOCK 10 seconds 20 seconds 30 seconds Never BACK SET You can turn on or off the keylock manually: · Press the flashing uNLoCK softkey when you want to unlock the keypad. · Press and then the flashing LoCK softkey to lock the keypad.

· When the keypad is locked, you have to unlock it before making calls to emergency numbers 911 and 411. · When you are using the speakerphone and no keys are pressed within five seconds, the keys are automatically locked. Key tone You can turn the key tone feature on or off. To change the setting: 1. Press the MeNu softkey when the handset is not in use.

2. Press /VoL+ / or CID/VoL- / to highlight SeTTINGS, then press the SeLeCT softkey. 3. Press /VoL+ / or CID/VoL- / to highlight Key tone, then press the SeLeCT softkey. 4.

Press /VoL+ / or CID/VoL- / to choose from on or off, then press the SeT softkey to save or press the BACK softkey to exit to the previous menu. SETTINGs LCD language Clr voicemail Auto keylock Key tone BACK SELECT KEy TONES On Off BACK SET 23 handset settings Set date/time The answering system announces the day and time of each message prior to playing it. Before using the answering system, set the date and time as follows. If you subscribe to caller ID service, the day, month and time are set automatically with each incoming call. However, the year must be correct so that the day of the week can be calculated from the caller ID information. To change the setting: 1. Press the MeNu softkey when the handset is not in use. 2. Press /VoL+ / or CID/VoL- / to highlight SeTTINGS, then press the SeLeCT softkey. 3.

Press /VoL+ / or CID/VoL- / to highlight Set date/time, then press the SeLeCT softkey. 4. Use the dialing keys (0-9) to enter a two-digit number or press /VoL+ / or CID/VoL- / until the screen displays the desired number. Press the SeT softkey to advance. 5. Repeat step 4 until the date and time are set. SETTINGs Clr voicemail Auto keylock Key tone Set date/time BACK SELECT SET DATEs --/--/MM/DD/yy BACK SET SET TIME --:-- -- BACK SET · If the date and time are not set, the system announces, "Time and day not set," before each message plays. · The handset displays the date and time while in idle mode if there are no screen display messages. 24 handset settings home area code If you dial your local calls using only seven digits (area code not required), you can program your home area code so that when you receive a call within your local area, the telephone number is automatically stored without the area code in the call log. To change the setting: 1.

Press the MeNu softkey when the handset is not in use. 2. Press /VoL+ / or CID/VoL- / to highlight SeTTINGS, then press the SeLeCT softkey. 3. Press /VoL+ / or CID/VoL- / to highlight home area code, then press the SeLeCT softkey.

The stored home area code appears with the last digit flashing. 4. Use the dialing keys to enter the desired home area code. · Press the BACK softkey or oFF/CLeAR to backspace and erase a digit. 5.

Press the SeT softkey to save. SETTINGs Auto keylock Key tone Set date/time Home area code BACK SELECT HOME AREA CODE 800 BACK SET If, in the future, your telephone service provider requires you to dial the area code when making a local call, delete the home area code you have already programmed. After you have deleted the programmed home area code, \_\_\_ appears. 25 handset settings Ringers In the ringers menu, you can select the ringer tones and adjust the ringer volume for incoming calls to the home and cell lines. RINgERS Ringer volume Ringer tone Ringer volume To adjust the handset ringer volume: 1.



[You're reading an excerpt. Click here to read official VTECH LS6245 user guide](http://yourpdfguides.com/dref/2374639)  
<http://yourpdfguides.com/dref/2374639>

Press the MeNu softkey when the handset is not in use. 2. Press /VoL+ / or CID/VoL- / to highlight RINGeRS, then press the SeLeCT softkey. 3. Press /VoL+ / or CID/VoL- / to highlight Ringer volume, then press the SeLeCT softkey.

4. Press /VoL+ / or CID/VoL- / to highlight home, Cellular 1, Cellular 2 or All home & cell. Press the SeLeCT softkey to confirm. 5. Press /VoL+ / or CID/VoL- / to adjust the ringer volume. A sample of each ringer volume plays as you scroll through the choices. 6. Press the SeT softkey to confirm your setting. BACK SELECT RINGeR VOLUME Home Cel lular 1 Cel lular 2 Al home & cel l l BACK SELECT RINGeR VOLUME OFF SET · When the ringer volume for all are set to off or the lowest level, a ringer off icon appears. When only one or two of the ringer volume is off or set to the lowest level, a ringer off icon flashes.

· See page 32 to set the telephone base ringer. 26 handset settings Ringer tone To select a ringer tone: 1. Press the MeNu softkey when the handset is not in use. 2. Press /VoL+ / or CID/VoL- / to highlight RINGeRS, then press the SeLeCT softkey.

3. Press /VoL+ / or CID/VoL- / to highlight Ringer tone, then press the SeLeCT softkey. 4. Press /VoL+ / or CID/VoL- / to highlight home, Cellular 1, Cellular 2 or All home & cell. Press the SeLeCT softkey to confirm.

5. Press /VoL+ / or CID/VoL- / to select a ringer tone. A sample of each ringer tone plays as you scroll through the choices. 6. Press the SeT softkey to confirm your setting or press the BACK softkey to exit to the previous menu. When you turn off the ringer volume, you do not hear ringer tone samples. RINGeRS Ringer volume Ringer tone BACK SELECT RINGeR TONE Home Cel lular 1 Cel lular 2 Al home & cel l l BACK SELECT RINGeR TONES Melody 3 Melody 4 Melody 5 Melody 6 BACK SET 27 Telephone base settings Settings In the settings menu, you can change and edit the telephone base settings of date and time, key tone, language, voicemail indicator and home area code. Set date/time The answering system announces the day and time of each message prior to playing it. Before using the answering system, set the date and time as follows. If you subscribe to caller ID service, the day, month and time are set automatically with each incoming call.

However, the year must be correct so that the day of the week can be calculated from the caller ID information. To change the setting: 1. Press the MeNu softkey when the telephone base is not in use. 2. Press /VoL+ or VoL- / to highlight Settings, then press the SeLeCT softkey. 3. Press /VoL+ / or CID/VoL- / to highlight Set date/time, then press the SeLeCT softkey. 4. Use the dialing keys (0-9) to enter a two-digit number or press /VoL+ or VoL- / until the screen displays the desired number. Press the SeT softkey to advance.

5. Repeat step 4 until the date and time are set. If the date and time are not set, the system announces, "Time and day not set," before each message plays. Bluetooth Ringers Settings SELECT Set date/time Key tone LCD language SELECT SET DATE --/--MM/DD/yy SET Key tone You can turn the key tone feature on or off. To change the setting: 1.

Press the MeNu softkey when the telephone base is not in use. 2. Press /VoL+ or VoL- / to highlight Settings, then press the SeLeCT softkey. 3. Press /VoL+ or VoL- / to highlight Key tone, then press the SeLeCT softkey.

4. Press /VoL+ or VoL- / to choose from on or off, then press the SeT softkey to save. 28 Bluetooth Ringers Settings SELECT Set date/time Key tone LCD language SELECT KEY TONE On Off SET Telephone base settings LCD language You can select english, Français or español to be used in all screen displays. To select a language: 1. Press the MeNu softkey when the telephone base is not in use. 2. Press /VoL+ or VoL- / to highlight Settings, then press the SeLeCT softkey. 3. Press /VoL+ or VoL- / to highlight LCD language, then press the SeLeCT softkey. 4.

Press /VoL+ or VoL- / to highlight english, Français or español, then press the SeT softkey to save. Bluetooth Ringers Settings SELECT Set date/time Key tone LCD language SELECT LCD LANGUAgE English Francais , SET 29 Telephone base settings Clear voicemail If you subscribe to voicemail service offered by your telephone service provider, New voicemail and appear on the handset and telephone base when you have new voicemail messages. Contact your telephone service provider for more information and assistance about using your voicemail service. After you have listened to all new voicemail messages, the indicators on the handset and telephone base turn off automatically. Use the clear voicemail feature when the telephone indicates that there is new voicemail but there is none (for example, when you have accessed your voicemail while away from home). The clear voicemail feature Bluetooth only turns off the indicators; it does not delete your voicemail messages. As long as you have new voicemail Ringers messages, your telephone service provider continues to Settings SELECT send the signal that turns on the indicators. To manually turn off these indicators: 1. Press the MeNu softkey when the telephone base is not in use. 2.

Press /VoL+ or VoL- / to highlight Settings, then press the SeLeCT softkey. 3. Press /VoL+ or VoL- / to highlight Clr voicemail, then press the SeLeCT softkey. The screen displays Turn off indicator? 4. Press the yeS softkey to confirm or press the No softkey to exit to the previous menu.

Key tone LCD language Clr voicemail SELECT Turn off indicator? yES NO · Your telephone service provider may alert you to new messages with a stutter (broken) dial tone. Contact your service provider for details. · Voicemail is different from answering system messages recorded in your answering system. For more information about the difference, see page 67. 30 Telephone base settings home area code If you dial your local calls using only seven digits (area code not required), you can program your home area code so that when you receive a call within your local area, the telephone number is automatically stored without the area code in the call log.

1. Press the MeNu softkey when the telephone base is not in use. 2. Press /VoL+ or VoL- / to highlight Settings, then press the SeLeCT softkey. 3. Press /VoL+ or VoL- / to highlight home area code, then press the SeLeCT softkey. The stored home area code appears with the last digit flashing. 4. Use the dialing keys to enter the desired home area code. · Press CANCeL/ to backspace and erase a digit.

5. Press the SeT softkey to save. Bluetooth Ringers Settings SELECT LCD language Clr voicemail Home area code SELECT HOME AREA CODE 800 SET If, in the future, your telephone service provider requires you to dial the area code when making a local call, delete the home area code you have already programmed. After you have deleted the programmed home area code, \_\_\_ appears. 31 Telephone base settings Ringers In the ringers menu, you can select the ringer tones and adjust the ringer volume for incoming calls to the home and cell lines.



[You're reading an excerpt. Click here to read official VTECH LS6245 user guide](http://yourpdfguides.com/dref/2374639)  
<http://yourpdfguides.com/dref/2374639>

Intercom Bluetooth Ringers **SELECT** Ringer volume To adjust the handset ringer volume: 1. Press the MeNu softkey when the telephone base is not in use. 2. Press /VoL+ or VoL- / to highlight Ringers, then press the SeLeCT softkey. 3.

Press /VoL+ or VoL- / to highlight Ringer volume, then press the SeLeCT softkey. 4. Press /VoL+ or VoL- / to highlight home, Cellular 1, Cellular 2 or All home & cell. Press the SeLeCT softkey to confirm. 5.

Press /VoL+ or VoL- / to adjust the ringer volume. A sample of each ringer volume plays as you scroll through the choices. 6. Press the SeT softkey to confirm your setting. -oRPress the oFF softkey and then the SeT softkey to turn off the ringer volume.

Ringer volume Ringer tone **SELECT** Home Cel lular 1 Cel lular 2 **SELECT** RINGeR VOLUME OFF SET · When the ringer volume for all are set to off or the lowest level, a ringer off icon appears. When only one or two of the ringer volume is off or set to the lowest level, a ringer off icon flashes. · See page 26 to set the handset ringer volume. 32 Telephone base settings Ringer tone To select a ringer tone: 1. Press the MeNu softkey when the telephone base is not in use. 2. Press /VoL+ or VoL- / to highlight Ringers, then press the SeLeCT softkey. 3. Press /VoL+ or VoL- / to highlight Ringer tone, then press the SeLeCT softkey. 4.

Press /VoL+ or VoL- / to highlight home, Cellular 1, Cellular 2 or All home & cell. Press the SeLeCT softkey to confirm. 5. Press /VoL+ or VoL- / to select a ringer tone. A sample of each ringer tone plays as you scroll through the choices. 6. Press the SeT softkey to confirm your setting. Intercom Bluetooth Ringers

**SELECT** Ringer volume Ringer tone **SELECT** Home Cel lular 1 Cel lular 2 **SELECT** Tone 1 Tone 2 Tone 3 SET 33 Answering system settings Answering system setup You can change the settings of the answering system in the Ans sys setup menu with either your handset or telephone base. Answer oN/oFF If you turn the answering system on, it answers calls and records messages only on the home line. When the answering system is turned on, ANS oN displays on the handset and telephone base.

To turn the answering system on or off: using the telephone base: 1. Press the MeNu softkey when the telephone base is not in use. 2. Press /VoL+ or VoL- / to highlight Ans. system, then press the SeLeCT softkey.

3. Press /VoL+ or VoL- / to highlight Ans sys setup, then press the SeLeCT softkey. 4. Press /VoL+ or VoL- / to highlight Answer oN/oFF, then press the SeLeCT softkey. 5.

Press /VoL+ or VoL- / to choose on or off, then press the SeT softkey to confirm your setting. Ans. system Directory Cal log l **SELECT** Del al old l Record memo Ans sys setup **SELECT** Answer ON/OFF Announcement using the handset: Cal screening l 1. Press the MeNu softkey when the handset is not **SELECT** in use. 2. Press /VoL+ / or CID/VoL- / to highlight ANS. SySTeM, then press the SeLeCT softkey. Answer ON/OFF On 3. Press /VoL+ / or CID/VoL- / to highlight Off Ans sys setup, then press the SeLeCT softkey. SET 4.

Press /VoL+ / or CID/VoL- / to highlight Answer oN/oFF, then press the SeLeCT softkey. 5. Press /VoL+ / or CID/VoL- / to choose on or off, then press the SeT softkey to confirm your setting; or press the BACK softkey to exit to the previous menu without making any changes. 34 Answering system settings Call screening The call screening feature lets you listen to a caller leaving a message at the telephone base. You can turn this feature on or off with either your handset or telephone base. To change the setting: using the telephone base: 1. Press the MeNu softkey when the telephone base is not in use. 2. Press /VoL+ or VoL- / to highlight Ans. system, then press the SeLeCT softkey.

3. Press /VoL+ or VoL- / to highlight Ans sys setup, then press the SeLeCT softkey. 4. Press /VoL+ or VoL- / to highlight Call screening, then press the SeLeCT softkey. 5.

Press /VoL+ or VoL- / to choose on or off, then press the SeT softkey to confirm your setting. Ans. system Directory Cal log l **SELECT** Del al old l Record memo Ans sys setup **SELECT** Answer ON/OFF Announcement using a handset: Cal screening l 1. Press the MeNu softkey when the handset is not **SELECT** in use. + / or CID/VoL- / 2.

Press /VoL to highlight ANS. SySTeM, then press the SeLeCT softkey. CALL SCREENING On 3. Press /VoL+ / or CID/VoL- / to highlight Off Ans sys setup, then press the SeLeCT softkey. SET 4. Press /VoL+ / or CID/VoL- / to highlight Call screening, then press the SeLeCT softkey. 5. Press /VoL+ / or CID/VoL- / to choose on or off, then press the SeT softkey to confirm your setting; or press the BACK softkey to exit to the previous menu without making any changes. 35 Answering system settings Announcement The telephone is preset with a greeting that answers calls with "Hello, please leave a message after the tone." You can use this preset announcement, or replace it with your own.

Play your announcement using the telephone base: 1. Press the MeNu softkey when the telephone base is not in use. 2. Press /VoL+ or VoL- / to highlight Ans. system, then press the SeLeCT softkey. 3. Press /VoL+ or VoL- / to highlight Ans sys setup, then press the SeLeCT softkey. 4. Press /VoL+ or VoL- / to highlight Announcement, then press the SeLeCT softkey. 5.

The telephone base announces, "To play, press 2. To record, press 7." Press 2 to play. using the handset: 1. Press the MeNu softkey when the handset is not in use.

2. Press /VoL+ / or CID/VoL- / to highlight ANS. SySTeM, then press the SeLeCT softkey. 3. Press /VoL+ / or CID/VoL- / to highlight Ans sys setup, then press the SeLeCT softkey.

4. Press /VoL+ / or CID/VoL- / to highlight Announcement, then press the SeLeCT softkey. 5. The handset announces, "To play, press 2. To record, press 7."

Press 2 to play; or press the BACK softkey to exit to the previous menu. Ans. system Directory Cal log l **SELECT** Del al old l Record memo Ans sys setup **SELECT** Answer ON/OFF Announcement Cal screening l **SELECT** Announcement 2-Play 3-Delete 7-Record 36 Answering system settings Record your own announcement using the telephone base: 1. Press the MeNu softkey when the telephone base is not in use. 2.

Press /VoL+ or VoL- / to highlight Ans. system, then press the SeLeCT softkey. 3. Press /VoL+ or VoL- / to highlight Ans sys setup, then press the SeLeCT softkey. 4. Press /VoL+ or VoL- / to highlight Announcement, then press the SeLeCT softkey. 5. The telephone base announces, "To play, press 2. To record, press 7." Press 7 to record.

6. The telephone base announces, "Record after the tone. Press 5 when you are done." After the tone, speak towards the microphone of the telephone base. 7. Press 5 or the SToP softkey when finished. 8. The answering system automatically plays back the newly recorded announcement. Press 5 to stop the playback at any time; press 2 to replay the recorded announcement; or press 7 to record again if desired. Ans.

system Directory Cal log l **SELECT** Del al old l Record memo Ans sys setup **SELECT** Answer ON/OFF Announcement Cal screening l **SELECT** Announcement 2-Play 3-Delete 7-Record using the handset: 1.



[You're reading an excerpt. Click here to read official VTECH LS6245 user guide](#)



Press the MeNu softkey when the handset is not in use. 2. Press /VoL+ / or CID/VoL- / to highlight ANS. SySTeM, then press the SeLeCT softkey. 3. Press /VoL+ / or CID/VoL- / to highlight Ans sys setup, then press the SeLeCT softkey. 4. Press /VoL+ / or CID/VoL- / to highlight Announcement, then press the SeLeCT softkey. 5.

The handset announces, "To play, press 2. To record, press 7." Press 7 to record. 6. The handset announces, "Record after the tone. Press 5 when you are done." After the tone, speak towards the microphone of the handset. 7. Press 5 or the SToP softkey when finished. 8.

The answering system automatically plays back the newly recorded announcement. Press 5 to stop the playback at any time or press the BACK softkey to exit to the previous menu; press 2 to replay the recorded announcement; or press 7 to record again if desired. · Your announcement can be up to 90 seconds in length. · Announcements shorter than two seconds are not recorded. 37 Answering system settings Delete your announcement using the telephone base: 1.

Press the MeNu softkey when the telephone base is not in use. 2. Press /VoL+ or VoL- / to highlight Ans. system, then press the SeLeCT softkey. 3. Press /VoL+ or VoL- / to highlight Ans sys setup, then press the SeLeCT softkey. 4. Press /VoL+ or VoL- / to highlight Announcement, then press the SeLeCT softkey. 5. The telephone base announces, "To play, press 2. To record, press 7." Press 3 to delete your own recorded announcement. using the handset: 1. Press the MeNu softkey when the handset is not in use. 2.

Press /VoL+ / or CID/VoL- / to highlight ANS. SySTeM, then press the SeLeCT softkey. 3. Press /VoL+ / or CID/VoL- / to highlight Ans sys setup, then press the SeLeCT softkey. 4. Press /VoL+ / or CID/VoL- / to highlight Announcement, then press the SeLeCT softkey. 5. The handset announces, "To play, press 2. To record, press 7." Press 3 to delete your own recorded announcement.

Ans. system Directory Cal log l SELECT Del al old l Record memo Ans sys setup SELECT Answer ON/OFF Announcement Cal screening l SELECT Announcement 2-Play 3-Delete 7-Record When your announcement is deleted, calls are answered with the preset announcement. 38 Answering system settings Number of rings When the answering system is turned on, it answers all incoming home calls after the number of rings set. You can choose from two, four, or six rings; or toll saver. With toll saver selected, the answering system answers after two rings when you have new messages, and after four rings when you have no new messages.

This enables you to check for new messages and avoid paying unnecessary long distance charges if you are calling from out of your local area. To change the setting: using the telephone base: 1. Press the MeNu softkey when the telephone base is not in use. 2. Press /VoL+ or VoL- / to highlight Ans.

system, then press the SeLeCT softkey. 3. Press /VoL+ or VoL- / to highlight Ans sys setup, then press the SeLeCT softkey. 4. Press /VoL+ or VoL- / to highlight # of rings, then press the SeLeCT softkey. 5. Press /VoL+ or VoL- / to choose from 2, 4, 6 or Toll saver, then press the SeT softkey to confirm your setting. Ans. system Directory Cal log l SELECT Del al old l Record memo Ans sys setup SELECT Announcement Cal screening l # of rings SELECT # OF RINGS 2 4 SET using the handset: 1. Press the MeNu softkey when the handset is not in use.

2. Press /VoL+ / or CID/VoL- / to highlight ANS. SySTeM, then press the SeLeCT softkey. 3. Press /VoL+ / or CID/VoL- / to highlight Ans sys setup, then press the SeLeCT softkey. 4. Press /VoL+ / or CID/VoL- / to highlight # of rings, then press the SeLeCT softkey. 5. Press /VoL+ / or CID/VoL- / to choose from 2, 4, 6 or Toll saver, then press the SeT softkey to confirm your setting; or press the BACK softkey to exit to the previous menu without making any changes. 39 Answering system settings Remote access code A two-digit security code is required to access the answering system remotely from any touch tone telephone.

The preset code is 19. You can change the code to any number from 10 to 99. To change the setting: using the telephone base: 1. Press the MeNu softkey when the telephone base is not in use. 2.

Press /VoL+ or VoL- / to highlight Ans. system, then press the SeLeCT softkey. 3. Press /VoL+ or VoL- / to highlight Ans sys setup, then press the SeLeCT softkey. 4.

Press /VoL+ or VoL- / to highlight Remote code, then press the SeLeCT softkey. 5. Use the dialing keys (0-9) to enter a two-digit number from 10-99, then press the SeT softkey to confirm your setting. Ans. system Directory Cal log l SELECT Del al old l Record memo Ans sys setup SELECT Cal screening l # of rings Remote code SELECT REMOTE CODE 19 using the handset: SET 1. Press the MeNu softkey when the handset is not in use. 2. Press /VoL+ / or CID/VoL- / to highlight ANS. SySTeM, then press the SeLeCT softkey. 3.

Press /VoL+ / or CID/VoL- / to highlight Ans sys setup, then press the SeLeCT softkey. 4. Press /VoL+ / or CID/VoL- / to highlight Remote code, then press the SeLeCT softkey. 5. Use the dialing keys (0-9) to enter a two-digit number from 10-99, then press the SeT softkey to confirm your setting; or press the BACK softkey to exit to the previous menu without making any changes. 40 Answering system settings Message alert tone When the answering system is turned on, the telephone beeps every 10 seconds to alert you of new messages. The tone stops when all new messages have been reviewed. To change the setting: using the telephone base: 1. Press the MeNu softkey when the telephone base is not in use. 2.

Press /VoL+ or VoL- / to highlight Ans. system, then press the SeLeCT softkey. 3. Press /VoL+ or VoL- / to highlight Ans sys setup, then press the SeLeCT softkey. 4.

Press /VoL+ or VoL- / to highlight Msg alert tone, then press the SeLeCT softkey. 5. Press /VoL+ or VoL- / to select on or off, then press the SeT softkey to confirm your setting. Ans. system Directory Cal log l SELECT Del al old l Record memo Ans sys setup SELECT # of rings Remote code Msg alert tone SELECT using the handset: On Off 1.

Press the MeNu softkey when the handset is not in use. SET 2. Press /VoL+ / or CID/VoL- / to highlight ANS. SySTeM, then press the SeLeCT softkey. 3. Press /VoL+ / or CID/VoL- / to highlight Ans sys setup, then press the SeLeCT softkey. 4. Press /VoL+ / or CID/VoL- / to highlight Msg alert tone, then press the SeLeCT softkey. 5. Press /VoL+ / or CID/VoL- / to select on or off, then press the SeT softkey to confirm your setting; or press the BACK softkey to exit to the previous menu without making any changes.

The answering system must be turned on for the message alert tone to function. MSg ALERT TONE 41 Telephone operation Make, answer or end a home call You can make home calls using a handset or the telephone base. using a handset: To make a home call: · Press /hoMe/FLASh or telephone number. , then enter the To predial a home call: · Enter the telephone number, then press or .



[You're reading an excerpt. Click here to read official VTECH LS6245 user guide](http://yourpdfguides.com/dref/2374639)

<http://yourpdfguides.com/dref/2374639>

To answer a home call: · Press /hoMe/FLASh or · /hoMe/FLASh · The screen shows the elapsed time as you talk (in hours, minutes and seconds). · When predialing (preview numbers before dialing), press oFF/CLeAR to backspace and delete; press the PAuSe softkey to insert a dialing pause (a p appears). To end a home call: · Press oFF/CLeAR or put the handset in the telephone base. using the telephone base: To make a home call: · Press /hoMe, then enter the telephone number. To predial a home call: · Enter the telephone number, then press To answer a home call: · Press /hoMe.

To end a home call: · Press /hoMe. /hoMe. 42 Telephone operation Make, answer or end a home call (continued) using a Bluetooth headset: You can use a Bluetooth headset on home calls. However, you will need to stay within 30 feet from the telephone base to maintain the Bluetooth signal. If you move too far from the telephone base and the signal is lost, the call will end.

To make a home call: 1. Press /hoMe on the telephone base, then enter Use headset the telephone number. Directory Cal log l 2. Press the call button on your headset. SELeCT -oR+ or VoL- / Press the oPTIoN softkey.

Press /VoL to highlight use headset, and then press the SeLeCT softkey. To predial a home call: 1. Enter the telephone number, then press /hoMe on the telephone base. 2. Press the call button on your headset. · -oR Press the oPTIoN softkey. Press /VoL+ or VoL- / to highlight use headset, and then press the SeLeCT softkey. To switch between the headset and base speakerphone while on a call: 1. Press the oPTIoN softkey. 2.

Press /VoL+ or VoL- / to highlight use speaker or use headset. 3. Press the SeLeCT softkey. To answer a home call: · Press the call button on your headset. To end a home call: · Press /hoMe or press the call button on your headset. Call waiting on the home line If you subscribe to call waiting service with your telephone service provider, you hear a beep if someone calls while you are already on a call. · Press /hoMe/FLASh on the handset or FLASh/X on the telephone base to put your current call on hold and take the new call. · Press /hoMe/FLASh on the handset or FLASh/X on the telephone base at any time to switch back and forth between calls. 43 Telephone operation Make, answer or end a cell call You can make cell calls using a handset or the telephone base. You can connect a maximum of two Bluetooth enabled cell phones to the telephone base, but only one cell phone can be used on a cell call at a time. If you only have one cell phone connected to the telephone base, it is automatically selected to make or answer cell calls. If you have two cell phones connected to the telephone base and on the active device list, the telephone base prompts you to select a cell phone before you make a cell call. using a handset: To make a cell call: 1. Press /CeLL, then enter the telephone number. 2.

Press the DIAL softkey. To predial a cell call: · Enter the telephone number, then press To answer a cell call: · Press /CeLL. If you do not want to answer the call, press the ReJeCT softkey. /CeLL. To end a cell call: · Press oFF/CLeAR or put the handset in the telephone base.

using the telephone base: To make a cell call: 1. Press /CeLL, then enter the telephone number. 2. Press the DIAL softkey. To predial a cell call: · Enter the telephone number, then press To answer a cell call: · Press /CeLL. If you do not want to answer the call, press the ReJeCT softkey. /CeLL. To end a cell call: · Press /CeLL. 44 Telephone operation Call waiting on the cell line If you subscribe to call waiting service with your cell phone service provider, you hear a beep if someone calls while you are already on a call. · Press the SWAP softkey on the handset or telephone base.

· Press the oPTIoN softkey and then the SWAP softkey to switch back and forth between calls. Answer a cell call while on a home call While you are on a home call and there is an incoming cell call, 1 or displays on the handset and telephone base and the telephone rings. To answer the incoming cell call: · Press /CeLL on the handset or telephone base. The home call is automatically placed on hold and home call on hold appears on the handset and telephone base. To end the cell call: · Press oFF/CLeAR on the handset or home line is still on hold. /CeLL on the telephone base. The 2 To resume the home call on hold: · Press /hoMe/FLASh on the handset or base. /hoMe on the telephone If you have voicemail service active on your cell phone, and you do not answer the incoming cell call, the call is answered by your cell phone's voicemail. Contact your cell phone service provider for more information about voicemail service. 45 Telephone operation Answer a home call while on a cell call While you are on a cell call and there is an incoming home call, the handset and telephone base and the telephone rings.

appears on To answer the incoming home call: · Press /hoMe/FLASh on the handset or /hoMe on the telephone base. The cell call is automatically placed on hold and Cell call on hold appears on the handset and telephone base. To end the home call: · Press oFF/CLeAR on the handset or The cell line is still on hold. /hoMe on the telephone base. To resume the cell call on hold: · Press /CeLL on the handset or telephone base.

If you have turned on your answering system and you do not answer the incoming home call, the call is answered by your answering system. Conference home and cell calls When you have calls established on the home and cell lines, you can create a 3-way conference using the handset or telephone base. To conference both home and cell calls: 1. Press the oPTIoN softkey on the handset or telephone base. 2.

Press /VoL+ or VoL- / to highlight Conf. with home/Conf. with cell. 3. Press the SeLeCT softkey. To select an option while on a conference call: 1. Press the oPTIoN softkey on the handset or telephone base. 2. Press /VoL+ or VoL- / to select one of the following options: · end home call · end cell call 3. Press the SeLeCT softkey.

To end a conference call: · Press oFF/CLeAR on the handset or put the handset back in the telephone base. · Press /hoMe or /CeLL on the telephone base. 46 Telephone operation handset speakerphone During a call, press to switch between speakerphone and normal handset use. When in speakerphone mode, if no keys are pressed within five seconds, the keypad is locked automatically. Press the uNLoCK softkey to use the keypad. Volume control During a call, you can adjust the listening volume on the handset or telephone base. If this is a cell call and the volume is too loud or quiet, try changing the volume on your cell phone. On some cell phones, changing the volume on the cell phone effects your cell call volume on the LS6245 handset. To adjust the listening volume of the handset: · Press /VoL+ / or CID/VoL- / on the handset while on a call.



[You're reading an excerpt. Click here to read official VTECH LS6245 user guide](http://yourpdfguides.com/dref/2374639)

<http://yourpdfguides.com/dref/2374639>