




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for VTECH MOUSEKADOER LAPTOP. You'll find the answers to all your questions on the VTECH MOUSEKADOER LAPTOP in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual VTECH MOUSEKADOER LAPTOP  
User guide VTECH MOUSEKADOER LAPTOP  
Operating instructions VTECH MOUSEKADOER LAPTOP  
Instructions for use VTECH MOUSEKADOER LAPTOP  
Instruction manual VTECH MOUSEKADOER LAPTOP

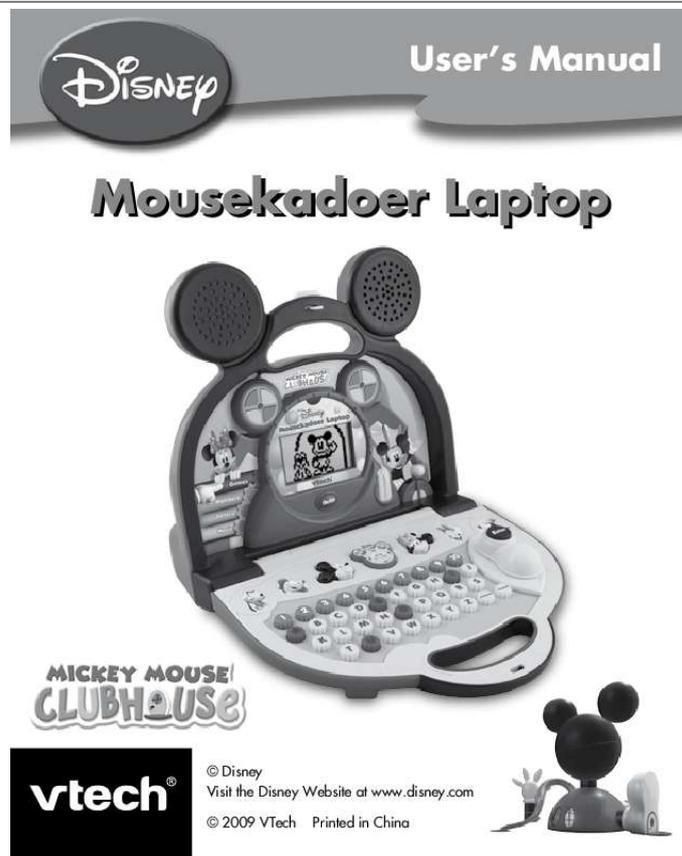

[You're reading an excerpt. Click here to read official VTECH MOUSEKADOER LAPTOP user guide](http://yourpdfguides.com/dref/2705230)  
<http://yourpdfguides.com/dref/2705230>

**Manual abstract:**

disney.com © 2009 VTech Printed in China To learn more about Preschool Learning™ and other VTech® toys, visit [www.vtechkids.com](http://www.vtechkids.com) INTRODUCTION Thank you for purchasing the VTech® Mousekadoer Laptop learning toy! The VTech® Mousekadoer Laptop introduces age-appropriate curriculum in a fun and engaging way. Featuring an alphabetical keyboard and twelve fun activities, your child will learn letters, numbers, logic, memory skills and much more as they play with Mickey Mouse and his friends. @@@@2. 3. 4. Make sure the unit is turned oFF. locate the battery cover on the bottom of the unit. open the battery cover. @@(The use of new alkaline batteries is recommended for maximum performance.) 5. replace the battery cover. Getting Started 3

BATTERY NOTICE · install batteries correctly observing the polarity (+, -) signs to avoid leakage.

· Do not mix old and new batteries. · Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium). · remove the batteries from the equipment when the unit will not be used for an extended period of time. · always remove exhausted batteries from the equipment. · Do not dispose of batteries in fire.

· Do not attempt to recharge ordinary batteries. · The supply terminals are not to be short-circuited. · only batteries of the same and equivalent type as recommended are to be used. WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES. PRODUCT FEATURES 1. ON/OFF BUTTON To turn the unit on, press the oN/oFF buTToN. 2. MODE SELECTOR slide the MoDe seleCTOR to choose one of the four modes of play; Games, Numbers, letters and Music. Product Features 4 3. VOLUME SWITCH slide the VoluMe sWiTCh to decrease or increase the volume.

4. EXIT BUTTON Press the exiT buTToN to exit an activity and go back to the activity selection menu in each mode. 5. MICKEY & MINNIE BUTTONS Press the MiCKey buTToN and MiNNie buTToN to see fun animations. 6. NUMBER BUTTONS Press the NuMber buTToNs to answer questions in related activities. Product Features 5 7. LETTER BUTTONS Press the leTter buTToNs to answer questions in related activities. 8. @@@@Press the eNter buTToN to select the answer.

The mouse can be moved in four directions. 11. @@@@To begin play, press the oN/oFF buTToN. 2. @@use the Cursor Mouse to scroll through the activities on the screen.

These will scroll automatically if there is no input. @@To change the mode, slide the MoDe seleCTOR. ACTIVITIES Games 1. @@@@Press the eNter buTToN to select the key. 2.

@@Watch carefully and find the door that Toodles is hiding behind. @@@@Counting Count the footprints shown on the screen. Press the NuMber buTToNs to answer. 2. @@Press the NuMber buTToNs to answer. 3. @@@@Floating Letters help find the floating letter shown on the screen. Press the leTter buTToNs to answer. 2. Letter Pairs help match the capital and small letters.

@@@@Find the missing letter among the letter options. @@Music Box help Donald collect the music notes as they fall down. @@Move the Cursor Mouse left and right to play. 2. Music Time enjoy cheerful melodies by pressing the NuMber buTToNs. you can also move the Cursor Mouse left or right, then press the eNter buTToN to choose a melody shown on the screen. 3. Mouskedance use the Cursor Mouse to follow the direction of the highlighted arrow on the left to direct Mickey's dance steps. Move the Cursor Mouse up, down, left and right to play. CARE & MAINTENANCE 1.

keep the unit clean by wiping it with a slightly damp cloth. 2. keep the unit out of direct sunlight and away from any direct heat source. 3. remove the batteries when the unit is not in use for an extended period of time.

4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water. Care & Maintenance 9 TROUBLESHOOTING if for some reason the program/activity stops working, please follow these steps: 1. Turn the unit oFF. 2.

interrupt the power supply by removing the batteries. 3. let the unit stand for a few minutes, then replace the batteries. 4. Turn the unit oN. The unit should now be ready to play again. 5. if the product still does not work, replace with an entire set of new batteries. For information on this product warranty, please call VTech® at 1-800521-2010 in the u.s.

or 1-877-352-8697 in Canada. IMPORTANT NOTE Creating and developing Preschool Learning™ products is accompanied by a responsibility that we at

VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. however, errors sometimes can occur. it is important for you to know that we stand behind our products and encourage you to call our Consumer services Department at 1-800-5212010 in the u.s., or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. @@@@however, there is no guarantee that interference will not occur in a particular installation. if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: · reorient or relocate the receiving antenna · increase the separation between the equipment and receiver · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected · Consult the dealer or an experienced radio/TV technician for help Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. 91-002370-002-000 Note 11 .



[You're reading an excerpt. Click here to read official VTECH  
MOUSEKADOER LAPTOP user guide  
http://yourpdfguides.com/dref/2705230](http://yourpdfguides.com/dref/2705230)