



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for VTECH RECORD AND LEARN PHOTO ALBUM. You'll find the answers to all your questions on the VTECH RECORD AND LEARN PHOTO ALBUM in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual VTECH RECORD AND LEARN PHOTO ALBUM**  
**User guide VTECH RECORD AND LEARN PHOTO ALBUM**  
**Operating instructions VTECH RECORD AND LEARN PHOTO ALBUM**  
**Instructions for use VTECH RECORD AND LEARN PHOTO ALBUM**  
**Instruction manual VTECH RECORD AND LEARN PHOTO ALBUM**

The Vtech logo, consisting of the word "vtech" in a white, lowercase, sans-serif font inside a dark grey oval.

User's Manual

**Record & Learn Photo Album™**



© 2010 VTech  
Printed in China  
91-002442-005-000



[You're reading an excerpt. Click here to read official VTECH RECORD AND LEARN PHOTO ALBUM user guide](http://yourpdfguides.com/dref/3398275)  
<http://yourpdfguides.com/dref/3398275>

**Manual abstract:**

To help fulfill them, VTech® created the Infant Learning® series of toys. These unique interactive learning toys directly respond to what children do naturally play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s Infant Learning® toys develop baby's mental and physical abilities by inspiring, engaging and teaching. @@@@We thank you for trusting VTech® with the important job of helping your child learn and grow! Sincerely, Your friends at VTech® To learn more about the Infant Learning® and other VTech® toys, visit [www.vtechkids.com](http://www.vtechkids.com)

INTRODUCTION Thank you for purchasing the VTech® Record & Learn Photo Album™. The VTech® Record & Learn Photo Album™ provides a unique combination of learning and family fun! @@The album also teaches colors while baby explores. Music mode features more than 20 melodies. @@@@2. Photos can contain harmful substances. Please do not remove plastic sleeve in case your child tries to touch or place the photo in his or her mouth. Demo strip removal: When the product is taken out of the packaging, please remove the demo strip from the unit to activate normal play mode. NOTE: Please keep user's manual as it contains important information. GETTING STARTED BATTERY INSTALLATION 1. Make sure the unit is turned OFF.

2. Locate the battery cover on the back of the unit. Use a coin to loosen the screw. 3. Install 2 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box.

4. @@@@ @@@@ · Do not mix old and new batteries. @@@@ · Batteries are to be inserted with the correct polarity. · Exhausted batteries are to be removed from the toy. · The supply terminals are not to be short-circuited. · The toy is not to be connected to more than the recommended number of power supplies. · Do not dispose of batteries in fire. PRODUCT FEATURES 1. MODE SELECTOR To turn the unit ON, slide the Mode Selector to the Message Mode [ ], Learning Mode [ ] or the Music Mode [ ] position. To turn the unit OFF, slide the Mode Selector to the OFF [ ] position.

Product Features 2. Pull the plastic sleeve out of the gap and place your image/images into the plastic sleeve, then seal with the supplied warning label (we recommend you don't remove the warning label). 3. Repeat step 1 and replace the sleeve with your photos in it. 4. To insert an image into the back page of the album, turn the unit over and push down the orange button on the back. This will release the plastic sleeve in the back of the frame, allowing you to place your photo into the sleeve of plastic. Once inserted, replace it into the back page. 2. VOLUME CONTROL SWITCH To adjust the volume, slide the VOLUME CONTROL SWITCH, on the back of the unit, to the LOW VOLUME [ ] or the HIGH VOLUME [ ] position.

3. @@@@ @@@@ @@@@ Slide the Mode Selector to one of the modes to turn the unit on. @@The lights will flash with the sound. Activities 6 3. @@@@ @@@@ 4. Music Mode Press the Arrow Buttons to hear 28 different melodies. Press the Sound Effects Button to hear sound effects over the music. 5. @@@@ 6. @@@@ @@@@ @@@@ @@@@ To record a message, turn to the page/photo for which you wish to record a message.

Press and hold the Sound Effects Button until you hear a beep (approximately 2 seconds). The Arrow Buttons will begin to blink. Release the Sound Effects Button, and press and hold the Arrow Button that corresponds to your photo. You will hear another beep that signals you to begin recording. Record your message while continuing to hold the Arrow Button. @@There are about seven seconds allowed for each message. @@@@ London Bridge 2. It's Raining, It's Pouring 3. Pop! Goes the Weasel 4. Shoo, Fly 5.

Polly Wolly Doodle 6. Bingo 7. Twinkle, Twinkle, Little Star 8. Oh, Susanna 9. Sailing, Sailing 10. My Bonnie Lies Over the Ocean 11. Row, Row, Row Your Boat 12. Water Music Suite 1 (Handel) 13. Frere Jacques 14. Water Music Suite 2, Allegro (Handel) 15. Hey, Diddle Diddle 16. Pease Porridge Hot 17. Au Claire de la Lune 18. Sleeping Beauty Waltz 19. Hickory Dickory Dock 20. Brahms Lullaby 21. Three Blind Mice 22. Ode to Joy 23. Sing a Song of Sixpence 24. Waltz of the Flowers (Tchaikovsky) 25. The Glow Worm 26. Air - Bach 27. Three Little Kittens 28. @@See those people who love you. @@Friendly faces, full of cheer. Look at all of the pictures here! Everyone wants to play. 1. Keep the unit clean by wiping it with a slightly damp cloth. 2. @@@3.

Remove the batteries when the unit is not in use for an extended period of time. 4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water. TROUBLESHOOTING If for some reason the program/activity stops working or malfunctions, please follow these steps: 1. Please turn the unit OFF. 2. Interrupt the power supply by removing the batteries. 3. Let the unit stand for a few minutes, then replace the batteries. 4. Turn the unit ON. The unit should now be ready to play again. 5. If the product still does not work, replace with a new set of batteries. Care & Maintenance CARE & MAINTENANCE If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you. For information on this product's warranty, please call VTech® at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE: Creating and developing Infant Learning products is accompanied by a responsibility that we at VTech® take very seriously. @@However, errors sometimes can occur. @@@@ @@@@ However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: · Reorient or relocate the receiving antenna · Increase the separation between the equipment and receiver · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected · Consult the dealer or an experienced radio/TV technician for help THIS DEVICE COMPLIES WITH PART 1 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION. THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-00. CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-00 DU CANADA. Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Other Info 11 .



[You're reading an excerpt. Click here to read official VTECH RECORD AND LEARN PHOTO ALBUM user guide](http://yourpdfguides.com/dref/3398275)  
<http://yourpdfguides.com/dref/3398275>