



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for VTECH SIT-TO-STAND ACTIVITY WALKER. You'll find the answers to all your questions on the VTECH SIT-TO-STAND ACTIVITY WALKER in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual VTECH SIT-TO-STAND ACTIVITY WALKER
User guide VTECH SIT-TO-STAND ACTIVITY WALKER
Operating instructions VTECH SIT-TO-STAND ACTIVITY WALKER
Instructions for use VTECH SIT-TO-STAND ACTIVITY WALKER
Instruction manual VTECH SIT-TO-STAND ACTIVITY WALKER

vtech[®] User's Manual

Sit-To-Stand[™] Activity Walker



© 2003 VTech
Printed in China
91-01590-005-000 (美)



[You're reading an excerpt. Click here to read official VTECH SIT-TO-STAND ACTIVITY WALKER user guide](http://yourpdfguides.com/dref/1305399)

<http://yourpdfguides.com/dref/1305399>

Manual abstract:

To help fulfill them, VTech® created the Smart Start® series of toys. These unique interactive learning toys directly respond to what children do naturally - play!

We thank you for trusting VTech® with the important job of helping your child learn and grow! Sincerely, Your Friends at VTech®
To learn more about Smart Start® and other VTech® toys, visit www.vtech.com

INTRODUCTION Thank you for purchasing the VTech® Sit-To-Stand™ Activity Walker learning toy! The VTech® Sit-To-Stand™ Activity Walker is uniquely designed for toddlers 9 months and up. It's filled with entertaining and learning features that "grow" along with baby, from one developmental stage to the next! When baby is still stationary, the unit can be used as a sitting activity station. As baby becomes steadier on her feet, the unit converts into a walker, encouraging first steps.

ON/OFF/VOLUME CONTROL SWITCH
PUPPY JOYSTICK STEERING WHEEL TURNING KEY SLIDE SWITCH LIGHT-UP PIANO KEYS ARROW BUTTONS WHEEL LOCK

Introduction 2
ROLLER BALL ADJUSTABLE MIRROR INCLUDED IN THIS PACKAGE - One VTech® Sit-To-Stand™ Activity Walker activity panel - One walker base - Two legs - One handle - One instruction manual

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

GETTING STARTED BATTERY INSTALLATION 1. Make sure the unit is turned OFF. 2. Locate the battery cover on the bottom of the panel. Use a coin or screwdriver to loosen the screw. 3. Install 3 new "AA" (UM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.

4. Replace the battery cover and tighten the screw to secure the battery cover. **BATTERY NOTICE** · · · · · Install batteries correctly observing the polarity (+, -) signs to avoid leakage. Do not mix old and new batteries. Instructions & Activities 3 · · · · · Do not use batteries of different types.

Remove exhausted or new batteries from the equipment when the unit will not be used for an extended period of time. Do not dispose of batteries in fire. Do not attempt to recharge ordinary batteries. The supply terminals are not to be short-circuited. Only batteries of the same and equivalent type as recommended are to be used. **WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.** With the VTech® Sit-To-Stand™ Activity Walker safety comes first: To ensure your child's safety, the assembly of this product is an adult activity, not a child's activity.

Put the blue base upright on the floor. 2. @@@@2.

Attach the activity panel facing you to activate the Sitting Mode. Turn the unit ON and select a mode. Choose from the following modes: Steering Wheel = Animals Puppy Joystick = Counting Turning Key = Colors Slide Switch = Music Press the light-up piano buttons, arrow buttons or roll the ball to hear a response related to the selected mode. The unit will automatically default to the Animal Mode when first turned on. 2.

Detach the activity panel from the legs to select the Carry-along Mode. All of the features function the same as in the Sitting Mode. 3. Attach the activity panel in the upright position to select the Walker Mode. All of the manipulative features will play fun driving phrases and sounds.

Push the walker forward and hear fun rewarding phrases. Instructions & Activities 8 Mirror = Sounds **MELODY LIST** 1. Old MacDonald Had a Farm 2. Row, Row, Row Your Boat 3. Sing a Song of Sixpence 4.

The Entertainer 5. Can Can 6. Eine Kleine Nachtmusik 7. Jack and Jill 8. Skip to My Lou 9.

The Farmer in the Dell 10. Pop! Goes the Weasel 11. London Bridge is Falling Down 12. Brahms' Lullaby 13. Mary Had a Little Lamb **CARE & MAINTENANCE** 1. Keep the unit clean by wiping it with a slightly damp cloth. 2. Keep the unit out of direct sunlight and away from any direct heat source. 3.

Remove the batteries when the unit is not in use for an extended period of time.

4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water. Care & Maintenance 9 **TROUBLESHOOTING** If for some reason the program/activity stops working, please follow these steps: 1. Please turn the unit OFF. 2. Interrupt the power supply by removing the batteries. 3. Let the unit stand for a few minutes, then replace the batteries. 4. Turn the unit ON.

The unit should now be ready to play again. If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada, and a service representative will be happy to help you. **IMPORTANT NOTE:** Creating and developing Smart Start® products is accompanied by a responsibility that we at VTech® take very seriously.

We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: · · · Increase the separation between the equipment and receiver Connect the equipment into an outlet on a circuit different from that to which the receiver is connected Consult the dealer or an experienced radio/TV technician for help 11 Other Info · Reorient or relocate the receiving antenna .



[You're reading an excerpt. Click here to read official VTECH SIT-TO-STAND ACTIVITY WALKER user guide](http://yourpdfguides.com/dref/1305399)
<http://yourpdfguides.com/dref/1305399>