



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for VTECH TALKING WHIZ KIDPOWER MOUSE DELUXE. You'll find the answers to all your questions on the VTECH TALKING WHIZ KIDPOWER MOUSE DELUXE in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual VTECH TALKING WHIZ KIDPOWER MOUSE DELUXE

User guide VTECH TALKING WHIZ KIDPOWER MOUSE DELUXE

Operating instructions VTECH TALKING WHIZ KIDPOWER MOUSE DELUXE

Instructions for use VTECH TALKING WHIZ KIDPOWER MOUSE DELUXE

Instruction manual VTECH TALKING WHIZ KIDPOWER MOUSE DELUXE



Talking Whiz Kid POWER MOUSE™ DELUXE USER'S MANUAL



© VTECH
Printed in China
91-01040-000



[You're reading an excerpt. Click here to read official VTECH TALKING WHIZ KIDPOWER MOUSE DELUXE user guide](http://yourpdfguides.com/dref/3226876)
<http://yourpdfguides.com/dref/3226876>

Manual abstract:

.....
.....
.....
.....

.....
.....
.....
.....

.....
2 HOW TO INSTALL BATTERIES

.....
.....

.....
.....
.....
.....

.... 2 BATTERY NOTICE

.....
.....
.....

.....
.....
.....
.....

.....
.....

2 AC ADAPTOR CONNECTION

.....
.....
.....
.....
.....

..... 3 CONNECTING YOUR MOUSE .

.....
.....
.....

.....
.....
.....

..... 3-4 ABOUT YOUR MOUSE ..

.....
.....
.....
.....

.....
.....
.....
.....

. 4 KEYBOARD DESCRIPTION & FUNCTIONS

.....
.....
.....

... 5-6 ON-SCREEN ICON DESCRIPTIONS

.....
.....
.....

.....
.....

7-8 CONTROL BUTTONS

.....
.....
.....
.....

.....
.....
.....

8 HOW TO BEGIN PLAY

.....
.....
.....
.....

.....
.....
.....

..... 9 DESCRIPTION OF ACTIVITIES

.....
.....
.....
.....

... 9-14 SCORING ..

.....
.....
.....
.....
.....

.....
.....
.....

..... 15-16 CARE & MAINTENANCE ..

.....
.....
.....
.....

.....
.....
.....

..... 16 MAINTAINING YOUR MOUSE ...

.....
.....
.....
.....
.....

.. @@@@Each activity reviews a specific skill geared towards your child's development. Talking Whiz Kid POWER MOUSE TM DELUXE features on screen selection just like a real computer. Children have an opportunity to develop their computer skills using the fully functioning mouse and computer like keyboard.

Talking Whiz Kid POWER MOUSE TM DELUXE is so fun and easy to use, your children won't even know their learning. 1 POWER SOURCE Talking Whiz Kid POWER MOUSE TM DELUXE operates on 4 "AA" batteries or a 9V 300mA AC center-positive adaptor. . HOW TO INSTALL BATTERIES To insert batteries remove the battery cover on the bottom of the unit. Place the batteries in the compartment and make certain to match the + and - markings correctly. After inserting the batteries, replace the battery cover. BATTERY NOTICE Install batteries correctly observing the polarity (+, -) signs to avoid leakage. Do not use rechargeable batteries. alkaline batteries is acceptable.) Do not mix old and new batteries.

Do not use batteries of different types. Remove batteries from equipment when it will not be in use for a long time period. Do not dispose of batteries in fire. Do not attempt to recharge ordinary batteries. Batteries should be installed by an adult or with adult supervision. The supply terminals are not to be short-circuited. (However the use of Rayovac Renewable NOTE: If the unit suddenly stops working, the sound becomes weak, or the LCD screen fades, turn the unit off for 15 seconds, then turn it back on. If the problem persists it may be caused by weak batteries. Please install a new set of batteries and try the unit again.

2 AC ADAPTOR CONNECTION Use a standard 9V 300mA AC center-positive adaptor.

. 1. Make sure the unit is off. 2. Locate the adaptor jack on the side of the unit.

3. Insert the adaptor plug into the unit's adaptor jack. 4. Plug the adaptor into a wall outlet. 5.

Turn the unit on. NOTE: If the unit suddenly stops working or the sound seems weak it may be the result of the adaptor connection. @@@@Please call our Consumer Services Dept. at 1-800-521-2010. In Canada, please call Consumer Services at 1-800-267-7377. @@@@101 E. @@@@Please follow these steps to install your mouse. STEP 1: Turn OFF your Talking Whiz Kid POWER MOUSE TM DELUXE unit. @@@@If you move the mouse sideways you will move the shadow across the top row of icons. At any time you can click on an icon where applicable.

If you move the mouse downwards you will see a cursor arrow () on the screen. ABOUT YOUR MOUSE Your mouse is very easy to use. Once the mouse is installed you may move the cursor around the screen freely. The mouse has a roller ball in it and therefore should be used on a flat surface. A mouse pad is ideal, but you may also try a piece of paper, notebook or magazine. A clean flat surface is important to be able to use your mouse effectively. See Descriptions of Activities for more specific use of your mouse within an activity. When in games with only one function, both buttons will serve as ENTER keys. When in games with dual functions, the left button will act as a SELECT button, the right button will be the confirm key. The 'ARROW' shows the unlocking direction. Lock by pushing to the opposite side of the 'ARROW' 4 KEYBOARD DESCRIPTION AND FUNCTIONS 1 Q + 2 W 3 E X 4 R ÷ 5 T . 6 Y = 7 U A C 8 I 9 O 0 P ICON ON OFF REPEAT A SO . S LA . D TI . F DO G RE H MI J FA K SO L LA PLAYER A Z TI X.

C. RE DO V. B PLAY N PAUSE M RESET MI ERASE PLAYER B ENTER ON OFF Press this key to turn the unit ON or OFF. 1 2 3 4 5 6 7 8 9 0 Use the number keys in math-related activities and in the calculator. Press this key to access the on-screen icons without the mouse.

After pressing this button, use the arrows to move the cursor right or left across the top of the screen. Press ENTER when you reach the desired icon. ICON Q + W E X R ÷ T . Y = U A C I O P A SO . S LA . D TI . F DO G RE H MI J FA K SO L LA Z TI X . DO C. RE V.

. B PLAY N PAUSE M RESET MI The keyboard is the same as a standard typewriter or computer. 5 Q + W E X R ÷ T . Y = U A C The 7 letter keys on the top row of the keyboard also serve as mathematics sign keys for calculator use. A SO . S LA . D TI . F DO G RE H MI J FA K SO L LA Z TI X. DO C. RE V.

B PLAY N PAUSE M RESET MI The letter keys on the bottom 2 rows also function as MUSIC KEYS, each representing a tone from 'SO' to 'MI' spanning more than 1 octave. @@@@Press ENTER to access the level screen. @@ 7 HELP - The HELP icon gives hints for each question. CLEAR - CLEAR allows you to immediately erase everything you've typed in. ANSWER - This icon allows you to view the correct answer to a question.

NON-ACCESSIBLE ICONS: CHANCES - This icon indicates the number of chances you have left to answer a question. @@@@Check to make sure the batteries are properly inserted. 2. If you are using an adaptor, check both connections. 3.

@@@@The letter will be entered as the next letter in the word. Press ENTER when the word is complete. SYNONYMS A word will e on-screen `button for final confirmation. @@@@The selected block will be lifted up. Then move the selected block horizontally or vertically step by step. @@@@The selected block will be unloaded again. @@@@white for the user, black for the computer). Then a group of covered cards will be displayed. Take turns uncovering the cards. Try to defeat the opposing team by moving your higher ranked cards on top of their lower ranked cards.

Also, you can defeat cards with the same rank. For example a II card can defeat a II card if the card is placed on top of it. The highest ranked card has 3 bars and the lowest card has 1 bar (). The first player to completely defeat the other team and end up with the last card is the winner. If both sides have two cards left the higher ranked card automatically becomes the winner. If there are two cards left and they both have the same rank the game is a tie. Also, if more than 30 moves are made without uncovering or defeating, in any one game, then it will automatically be a tie game. Throughout the game, you can use the mouse, or the cursor keys, to operate the on-screen `arrow'.



[You're reading an excerpt. Click here to read official VTECH TALKING WHIZ KIDPOWER MOUSE DELUXE user guide](http://yourpdfguides.com/dref/3226876)
<http://yourpdfguides.com/dref/3226876>

When you want to uncover a card, simply move the 'arrow' to point at the card, then press the ENTER, or click the mouse button. The card will be selected, and will appear to be lifted up, after you've selected an uncovered card.

@@Then start another move. @@Then the picture will reappear with 4 pieces missing. @@The arrows are used to scroll the picture pieces for viewing.

@@This can also be done by simply pressing ENTER on the keyboard. The piece will be automatically inserted into that position.

If you think that you inserted the piece in the wrong position, press the ERASE key and the selected piece will return to the selection panel. You may then select another piece. **MUSIC COMPOSER** Use this activity to create your own tunes using the music note keys. Press the PAUSE key to insert a musical rest, and press the PLAY key to hear the songs you have created. You can also create a song by moving the cursor on screen by using the mouse.

When you have reached a desired note, click the mouse and the note will play. **MUSIC LIBRARY** In the music library activity, you can listen to the following built-in songs by pressing the correct numbers: 0. Brahms's Lullaby 1. Camptown Races 2. Fiddle-De-Dee 3. Frog Went A-Courtin' 4. I'd Like To Teach The World To Sing 5. The Ants Came Marching 6. Oh Where Has My Little Dog Gone 7. Polly Wolly Doodle 8.

Alouettproblems or suggestions that you might have, or 1-800-267-7377 in Canada. A service representative will be happy to help you. Note: This equipment generates and uses radio frequency energy and, if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, it may cause interference with radio and television reception. It has been type tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Subpart J of Part 15 FCC, which are designed to provide reasonable protection from against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: · reorient the receiving antenna · relocate this product with respect to the receiver · move this product away from the receiver 17.



[You're reading an excerpt. Click here to read official VTECH TALKING WHIZ KIDPOWER MOUSE DELUXE user guide](http://yourpdfguides.com/dref/3226876)
<http://yourpdfguides.com/dref/3226876>