




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for VTECH TEXT AND CHAT WALKIE-TALKIES. You'll find the answers to all your questions on the VTECH TEXT AND CHAT WALKIE-TALKIES in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual VTECH TEXT AND CHAT WALKIE-TALKIES
User guide VTECH TEXT AND CHAT WALKIE-TALKIES
Operating instructions VTECH TEXT AND CHAT WALKIE-TALKIES
Instructions for use VTECH TEXT AND CHAT WALKIE-TALKIES
Instruction manual VTECH TEXT AND CHAT WALKIE-TALKIES

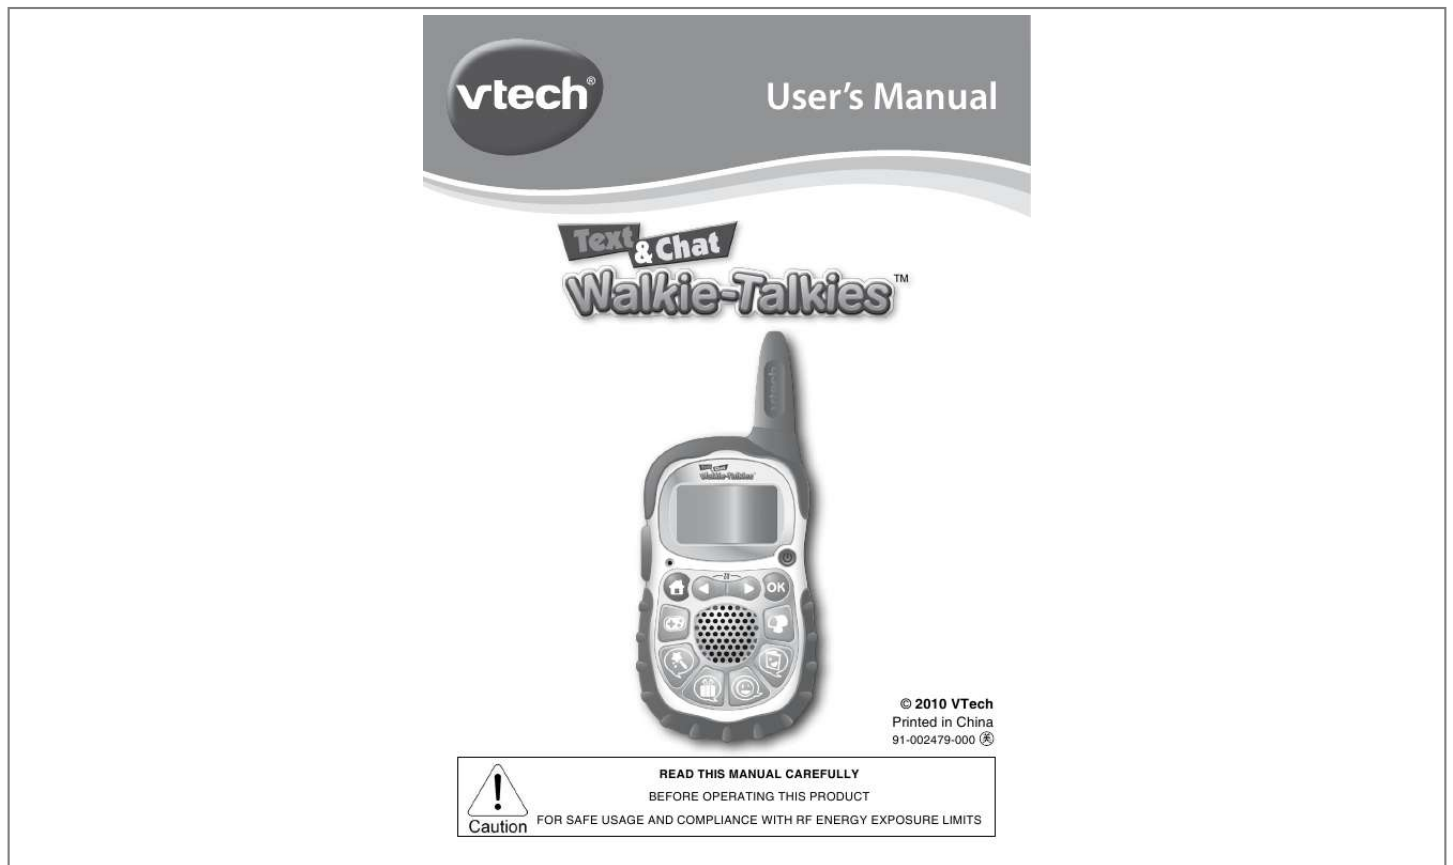

[You're reading an excerpt. Click here to read official VTECH TEXT AND CHAT WALKIE-TALKIES user guide](http://yourpdfguides.com/dref/3398279)
<http://yourpdfguides.com/dref/3398279>

Manual abstract:

vtechuk.com Thank you for purchasing the VTech® Text & Chat Walkie-Talkies™! VTech® Text & Chat Walkie-Talkies™ are a pair of two-way radios loaded with lots of cool features! Customize your personal profile by choosing a cartoon face as your avatar. The walkie-talkies come equipped with text messaging, animated picture messaging, and card messaging with more than 70 preset messages. Enjoy funny lip-sync animations while chatting. Three built-in games help build concentration, observation and eye-hand coordination skills. INTRODUCTION RF EXPOSURE CONTROL GUIDELINES Your VTech® Text & Chat Walkie-Talkies™ contain a receiver and a low power transmitter. When the Talk Button is pressed, it sends out radio frequency (RF) signals. @@ · Release the Talk Button when you are not speaking. · Transmit (talk) no more than 50% of the time. @@@@WARNING: · Never use the Text & Chat Walkie-Talkies™ while driving or during any sporting activities as it may lead to accidents causing injuries.

@@@@@@@@ · Never use the Text & Chat Walkie-Talkies™ in front of a vehicle's airbag. If the air-bag deploys, it could propel the walkie-talkie and cause injuries. Introduction/Safety Information 3 SAFETY INFORMATION Product Features · Never use the Text & Chat Walkie-Talkies™ or change the batteries in potentially explosive atmospheres as sparks in such areas could result in an explosion. · Never use the Text & Chat Walkie-Talkies™ in or near a mining facility which uses remotely triggered explosives or in areas labeled "Blasting Area." Premature or accidental detonation may result.

· Never attempt to modify or in any way increase the output power of the Text & Chat Walkie-Talkies™ as it may cause a violation of the technical regulations of Part 15 of FCC Rules. · Avoid exposing the Text & Chat Walkie-Talkies™ to water or extreme temperatures. · Text & Chat Walkie-Talkies™ comply with FCC regulations for use in the United States and Canada. Use in other countries may be prohibited or restricted by local regulation. @@Press these buttons to make selections.

Press both buttons together to enter the set-up menu. Press this button to confirm a choice or action. Press this button to read the messages in your mailbox. @@@@Press this button to enter the Wish Message menu. Press this button to go to the Games menu. Press this button to enter walkie-talkie mode. Press and hold this button when speaking. @@ · 4 chatting groups allow an unlimited number of members. @@ · 4 incoming message notification tones. @@@@The following conditions tend to reduce the range.

· One or both walkie-talkies are being used indoors. · There are large obstructions such as buildings, trees, vehicles, hills, etc. between radios. · The batteries are running low. GETTING STARTED BATTERY INSTALLATION Getting Started 6 · Make sure the unit is turned OFF. · Locate the battery cover on the back of the unit. · Remove the battery cover and install 3 "AA" size batteries as illustrated. · Replace the battery cover. BATTERY NOTICE · The use of new alkaline batteries is recommended for maximum performance. · Non-rechargeable batteries are not to be recharged.

· Rechargeable batteries are to be removed from the toy before being charged (if removable). · Rechargeable batteries are only to be charged under adult supervision (if removable). · Do not mix old and new batteries. · Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium). · Only batteries of the same or equivalent type as recommended are to be used.

· Batteries are to be inserted with the correct polarity. · Exhausted batteries are to be removed from the toy. · The supply terminals are not to be short-circuited. · The toy is not to be connected to more than the recommended number of power supplies. · Do not dispose of batteries in fire.

Please Note: All messages in the mailbox will be deleted when the batteries are removed from the unit. To avoid damage to any system data, please do not remove the batteries while the unit is switched on. TO BEGIN USING THE TEXT & CHAT WALKIE-TALKIESTM INITIAL SET-UP Press and hold the On/Off Button for 2 seconds to turn the unit on. @@Use the Left/Right Buttons to make your selections. Press the OK Button to confirm your selections. @@@@Press and hold the On/Off Button again to turn the unit off. @@@@Press the Left/Right Buttons to make your selection. @@@@Press the OK Button to confirm. @@There are 4 available groups. The default setting is Group 1.

Use the Left/Right Buttons to change the group setting. @@Press the OK Button to confirm. @@Press the OK Button to confirm. Volume Setting Press the Left/Right Buttons to adjust the volume. @@@@Make sure you and all your friends are registered in the same group. @@Avoid using the walkie-talkies closer than 6 feet apart. If they are used too closely they may produce echo or feedback noise. Press the Home Button to enter walkie-talkie mode. To begin speaking, first listen to hear if the channel is in use. If it is in use, wait until the conversation is finished.

@@@@@Speak in a normal tone, do not whisper or yell into the microphone. Only one person can speak at a time. @@Release the Talk Button when you've finished talking. @@When there is no one speaking, your avatar will appear on the screen. @@@@Remember to tell your friends when you change groups.

If you are not in the same group, you will not be able to communicate with one another. @@@@@When you receive a wish message, blow into the microphone or press the OK Button when prompted to see a fun animation. Gift Messages : Choose a gift to send to a friend. Emotion Messages : Choose an emotion to show your friends how you are feeling. Card Messages : Choose an animated card to send to your friends.

Sending Messages Press one of the message buttons to select the type of message you want to send. Press the Left/Right Buttons to choose a message. Press the OK Button to preview your message. After you've previewed the message, use the Left/Right Buttons to select the "". Press the OK Button to send your message. The message may take up to 30 seconds to send. Please note, when your unit is sending a message, you cannot receive messages at the same time.

Receiving Messages When you receive a message, you will hear your mail alert sound and see a mail animation. You will be prompted to read your message, use the Left/Right Buttons to select the "". @@You will find your received messages with the avatar of the sender.

Use the Left/Right Buttons to choose a message to read. Press the OK Button to read your message. @@A support representative will be happy to assist you. @@ · The specific problem you are experiencing. · The actions you took right before the problem occurred.



[You're reading an excerpt. Click here to read official VTECH TEXT AND CHAT WALKIE-TALKIES user guide](http://yourpdfguides.com/dref/3398279)
<http://yourpdfguides.com/dref/3398279>

Internet: www.vtechkids.com in the U.S., or www.vtechcanada.com in Canada Phone: 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada. 14 TECHNICAL SPECIFICATIONS operating frequency 462.5875MHz (group 1) 462.6375MHz (group 2) 462.6875MHz (group 3) 467.5625MHz (group 4) 4 channels CTCSS (squelch tone) Group 1: #34, 218.1Hz Group 2: #35, 225.7Hz Group 3: #32, 203.5Hz Group 4: #33, 210.7Hz Transmitting output < 0.5W ERP operating Temperature 0°C - 50°C or 32°F -122°F Power supply 4.5V (3 x 1.5V AA Battery) VTech® Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss resulting from the use of this handbook. VTech® Electronics North America, L.

L.C. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this software. VTech® Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of important data on other media to protect against data loss. Company: VTech® Electronics North America, L.L.C. Address: 1155 West Dundee Road, Suite 130, Arlington Heights, IL, 60004 USA Phone: 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada. **DISCLAIMER AND LIMITATION OF LIABILITY** Technical Specifications 15 **IMPoRTANT NoTE**: Cre.



[You're reading an excerpt. Click here to read official VTECH TEXT AND CHAT WALKIE-TALKIES user guide](http://yourpdfguides.com/dref/3398279)
<http://yourpdfguides.com/dref/3398279>