




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for VTECH V.READER. You'll find the answers to all your questions on the VTECH V.READER in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual VTECH V.READER
User guide VTECH V.READER
Operating instructions VTECH V.READER
Instructions for use VTECH V.READER
Instruction manual VTECH V.READER

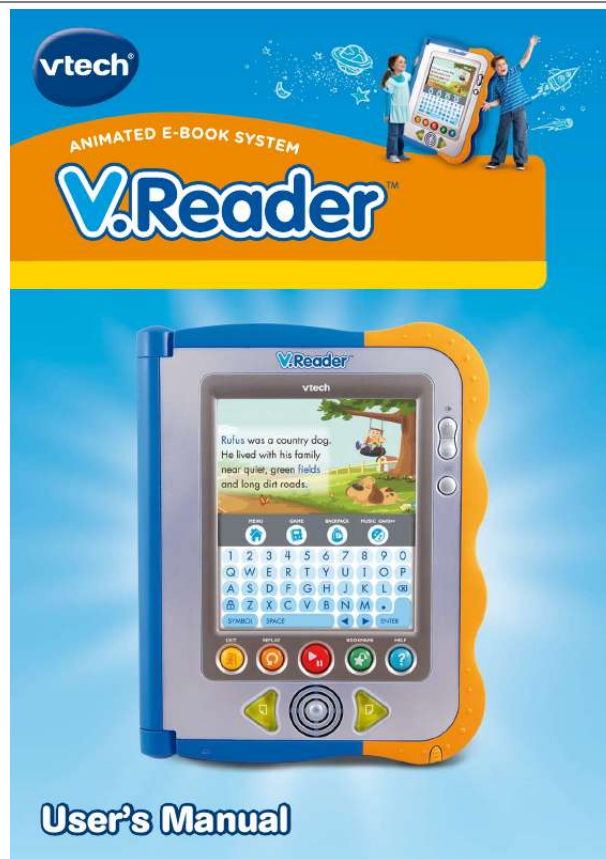

[You're reading an excerpt. Click here to read official VTECH V.READER user guide](http://yourpdfguides.com/dref/3226878)
<http://yourpdfguides.com/dref/3226878>

Manual abstract:

We want to introduce children to reading in a dynamic, engaging way that will make them readers for life. That's why we created V.Reader™, where reading comes alive with animated storytelling! In these animated books, stories come to life through colorful scenes, voices, sounds and music. V.Reader™ creates a magical world that keeps children interested in the story while they learn letters, words, comprehension, and more! Watching their favorite characters in fun-loving stories engages children in play, as they gain the tools to grow from a pre-reader into a fluent and confident reader. As their reading skills grow, their self-esteem grows, and their appetite for reading will, too! With a USB connection to a computer, you can even track your child's reading progress, and download and print awards for each completed story. At VTech®, we are dedicated to helping kids discover the magic of reading. We thank you for trusting VTech® with the job of helping your child learn and grow! @@@@AC Adaptor ...

.....
.....

.....
.....
.....

.....
.....
.....

... Standard Guidelines for Adaptor Toys.....

.....
.....
.....

. How to Play

.....
.....
.....

.....
.....
.....

.....
.....

. STEP 1: Insert the Storybook Cartridge

.....
.....
.....

.... STEP 2: Turn the V.readertM On

.....
.....
.....

..... STEP 3: Personalize Your V.
readertM

.....
.....

.....
.....

.. STEP 4: System Menu ...

.....
.....
.....
.....

.....
.....
.. · *Watch the Story* ...
.....

.....
.....
.....
.....

.....
.....
.....
..... · *Reading Games* ...

.....
.....
.....
.....

.....
.....
.....
.....

..... *actIVities*

.....
.....
.....

.....
.....
.....
.....

.....
.....
.....

. 7 8 9 · *Story Dictionary*

.....
.....
.....
.....

.....
.....
.....
.....

. 10 *Using the V.readerTM Touch Screen*

.....
.....
.....

..... *Cleaning the V.
reader Touch Screen*

.....
.....

.. *tM 11 11 11 12 Inserting an SD Card* ...

.....
.....
.....
.....

.....
.....
.....

.....
... *Connecting to a Computer* ..

.....
.....

.....
.....
.....
.....

..... *Computer Requirements*

.....
.....
.....

.....
.....
.....
.....

.. *13 care & Maintenance*

.....
.....
.....

.....
.....
.....

... *14 troubleshooting*

.....
.....
.....
.....

.....
.....

.... *14 technical support* .

.....
.....
.....
.....
.....

.....

.. *15 Copyright Notices* ...

.....
.....

.....
.....
.....
.....

.....
.....

... *16 Disclaimer and Limitation of Liability* ..

.....

.....
.....
.....

..... 16 INTRODUCTION Thank you for purchasing the VTech® V.reader animated e-Book system! V.reader is an animated storyteller that brings books to life in a kid-tough, touch screen reading system for 3 - 7 year olds. With V.reader your child will discover the joy of reading while watching well-loved characters and stories in vivid animations.

tM tM tM User's Manual V.reader tM (including V.reader tM Pen) Storybook Cartridge V.reader tM Soft Cloth USB Cable User's Manual Included in This Package One VTech® V.reader animated e-Book system (including V.Reader Pen) One V.reader Storybook Cartridge (What's That Noise?) One Soft Cloth One USB Cable One User's Manual tM tM tM WARNING: All packing materials such as tape, plastic sheets, wire ties and tags are not part of this toy and should be discarded for your child's safety. Note: Please keep the user's manual as it contains important information. PRODUCT FEATURES ON / Off Button USB Port Volume Button Brightness Button Touch Screen See-through Cover Headphone Jack DC Power Jack V.Reader TM Pen Holder Pen & Features ON / Off Button USB Port actIon Press and hold this button to turn the unit on or off.

Always do this before removing a cartridge. Plug the included USB cable into this USB port to connect to your computer. Please see pages 12 & 13 for more information. Press "+" or "-" to adjust the sound volume. You can set the volume to the lowest setting to mute the sound entirely. Press this button to adjust the screen brightness. Touch the screen with your finger or with the V.reader pen to play. Always replace the V.reader holder after use.

tM tM Volume Button Brightness Button Touch Screen Pen & Pen Holder Headphone Jack DC Power Jack See-through Cover pen into the pen Use this to connect headphones. Use this to connect an adaptor. Use this to protect V.reader . tM Button Menu Game Backpack Music ON/Off Exit Replay FunctIon Exit out to the unit's main menu. Play the built-in game. Go directly to the Backpack. Turn the background music on/off. Exit to the previous menu. Repeat the story narration of the current page in Watch the story, or repeat the question in reading Games.

Play or pause the story narration in Watch the story. Save a bookmark for the current page in Watch the story. Replay instructions, or ask for a hint in reading Games. Turn to the previous page. Turn to the next page. Play/Pause Bookmark Help Previous Page Arrow Next Page Arrow QWERTY KEYPAD Press the keys to type in your user name, write a welcome message, or enter answers for some reading game questions. 2010 © VTech Printed in China 91-002452-007-000 Storybook Cartridge Slot SD Card Slot Battery Compartment Battery Cover Features FunctIon tM Storybook Cartridge Slot Insert the V.reader to read and play. SD Card Slot Battery Compartment storybook cartridge into the slot Insert an SD card (not included). Please see pages 11 & 12 for more information.

Insert 4 "AA" batteries. for battery installation instructions, please see the next section. GETTING STARTED Battery Installation · Make sure the unit is turned off. · Locate the battery cover on the back of the unit and remove it as shown in image 1. · Insert 4 "AA" batteries as shown in image 2. · Make sure to replace the battery cover. 1 Battery Notice 2 · The use of new alkaline batteries is recommended for maximum performance. · Non-rechargeable batteries are not to be recharged. · Rechargeable batteries are to be removed from the toy before being charged (if removable). · Rechargeable batteries are only to be charged under adult supervision (if removable). · Do not mix old and new batteries. · Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (Ni-MH). · Only batteries of the same or equivalent type as recommended are to be used. · Batteries are to be inserted with the correct polarity. · Exhausted batteries are to be removed from the toy. · The supply terminals are not to be short-circuited. · The toy is not to be connected to more than the recommended number of power supplies. · Do not dispose of batteries in fire. NOTE: When the V.reader is running on batteries, you may see this icon appear on the screen .

This indicates that battery power is low, and you should replace the batteries soon. Battery time remaining once the icon first appears is approximately 10-30 minutes, depending on the type of batteries in use. After that, the V.reader will show the screen for 5 seconds, and then will turn off automatically. To preserve battery life, the V.reader will automatically turn off after several minutes without input. The V.reader can be turned on again by pressing the on/oFF button.

tM tM tM tM AC Adaptor 300mA · Use a standard 9V use of a VTech® 9V AC/DC adaptor. · Make sure the unit is turned off. AC/DC adaptor. @@ · Plug the AC adaptor into a wall socket. NOTE: The use of an adaptor will override the batteries. @@ Only use the recommended adaptor with the toy. The transformer is not a toy. Never clean a plugged-in toy with liquid.



[You're reading an excerpt. Click here to read official VTECH V.READER user guide](http://yourpdfguides.com/dref/3226878)
<http://yourpdfguides.com/dref/3226878>

Never use more than one adaptor. The stored items will be listed on the screen. Touch the moles to fill in the missing letters in the word. My name: Input your name.

My avatar: Choose an avatar. Touch an icon to choose. Reading Games: Play 8 story-related reading games. To pause the story narration, press . To continue the story narration, press again. If you don't touch the screen for a while, the story narration will continue on the USB port cover of your V.reader . Please refer to images 6 and 7. After connecting to your computer with the USB cable, your V.reader screen will show a pop-up window (image 8).

Touch (image 9). Touch to connect to the computer to close the window and continue to play and read. 8 9 note : Do not disconnect V.reader or the computer while files are downloading. After you have finished, turn off the unit to save power. When not connected to a computer, please close the USB port cover on the V.reader , for safety. Computer Requirements Pc Hardware requirements: CPU: Pentium® 4, 1 GHz or above Memory: 256MB Video Adaptor: Graphic card with 1024 x 768 at 16 or 32 bit color Monitor Resolution: 1024 x 768 USB 1.1 or higher 100MB hard disk space Windows® compatible sound card and speakers Pc software requirements: Microsoft® Windows® XP, Windows Vista® or Windows® 7 Operating System Internet Explorer® version 6 or above Adobe® flash® Player 10 (to get the latest version of flash player, please visit www.adobe.

com) Macintosh Hardware requirements: Macintosh Computer with an Intel or PowerPC G4 (1GHz or faster) processor 256 MB RAM (512 MB recommended) 100 MB hard disk space USB port required Macintosh software requirements: Mac OS X version 10.5 or 10.6 Safari Internet Browser version 3.0 or later Adobe ® flash ® Player 10 (to get the latest version of flash player, please visit www.adobe.

com) *Internet connection required for Internet enabled functions on both PC and Macintosh computers. Microsoft® and Windows® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Adobe®, the Adobe logo, flash® are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries. Intel®, Pentium® are trademarks of Intel Corporation in the United States and other countries. Mac, Mac OS, Safari are trademarks of Apple Inc.

, registered in the United States and other countries. All other trademarks are the property of their respective owners. THIS PRODUCT IS NOT ENDORSED OR SPONSORED BY ADOBE SYSTEMS INCORPORATED, PUBLISHER Of FLASH. CARE & MAINTENANCE 1. Keep your V.reader clean by wiping it with a slightly damp cloth. Never use solvents or abrasives. 2. Keep it out of direct sunlight and away from direct sources of heat. 3.

Remove the batteries when not using it for an extended period of time. 4. Avoid dropping it. NEVER try to dismantle it. 5. Always keep your V.reader away from water. 6. Please examine the toy transformer periodically for conditions that may result in the risk of fire, electric shock, or injury to persons (such as damage to the output cord, blades, housing, or other parts) and that, in an event of such conditions, the transformer should not be used until properly repaired. tM tM WARNING A very small percentage of the public, due to an existing condition, may experience epileptic seizures or momentary loss of consciousness when viewing certain types of flashing colors or patterns, especially on television.

While the V.readertM animated e-Book system does not contribute to any additional risks, we do recommend that parents supervise their children while they play video games. If your child experiences dizziness, altered vision, disorientation, or convulsions, discontinue use immediately and consult your physician. Please note that focusing on an LCD screen at close range for a prolonged period of time may cause fatigue or discomfort. We recommend that children take a 15-minute break for every hour of play.

TROUBLESHOOTING Problem Possible Reason Screen displays with Volume is turned no sound down Headphones are connected Screen turns on, then Battery power low immediately off No picture (or Program needs to incorrect picture) on be reset screen, and pressing the ON/Off button has no effect. Solution Adjust the volume control. Unplug headphones from the headphone jack. Replace the battery. Disconnect all power supplies (batteries and adaptor), then reconnect all power supplies.

Press the ON/Off button. Remove the storybook cartridge, clean it if necessary, then re-insert it into the V.reader . tM No screen display after pressing ON/Off button Battery power low Incomplete battery installation No AC adaptor power Replace the battery. Make sure batteries are installed in both battery compartments. tM "Please insert a cartridge" icon displays USB connection Poor USB cable window does not pop up after connecting Connection is to computer running through USB hub tM Securely connect the AC adaptor or car adaptor to both the V.reader and the power source. Poor storybook Remove the storybook cartridge, clean it if cartridge connection necessary, then re-insert it into the V.reader . tM Securely connect the USB cable to the V.

reader and the computer. Connect the V.reader directly to the computer, without using a hub. tM tM If your V.reader does not respond to an inserted storybook cartridge, please carefully try the following: · Remove all batteries and unplug all wiring. · Use a cotton swab dipped in rubbing alcohol or an alcohol-based window cleaner to gently clean the contact area of the cartridge slot. · If necessary, dry all the clean contact areas with a soft, lint-free cloth. · Please make sure that all parts are completely dry before restoring electricity. TECHNICAL SUPPORT · If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you.

Before requesting support, please be ready to provide or include the information below: · The name of your product or model number (the model number is typically located on the back or bottom of your product). · The actual problem you are experiencing. · The actions you took right before the problem occurred. Internet : www.vtechkids.

com Phone : 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada Copyright Notices Copyright 2010 VTech Electronics North America, L.L.C. All Rights Reserved. VTech and the VTech® logo are registered trademarks of VTech®. V.reader is a trademark of VTech® Electronics North America, L.L.C. All other trademarks are property of their respective owners. tM IMPortant note: Creating and developing the V.



[You're reading an excerpt. Click here to read official VTECH](#)

[V.READER user guide](#)

<http://yourpdfguides.com/dref/3226878>

reader Animated E-Book System is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information that forms the value of our products.

However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you. *tM Disclaimer and Limitation of Liability* Vtech® Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss resulting from the use of this handbook. Vtech® Electronics North America, L.

L.C. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this software. Vtech® Electronics North America, L.L.

C. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of important data on other media to protect against data loss. Company: Vtech® Electronics North America, L.L.

C. Address: 1155 West Dundee Rd., Suite 130, Arlington Heights, IL 60004 USA Phone : 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada Notice: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. @@@@ @@@@ · Increase the separation between the equipment and receiver. · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. · Consult the dealer or an experienced radio/TV technician for help. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ices-003. Cet appareil numérique de la classe b est conforme à la norme nmb-003 du Canada. Caution : Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. .



[You're reading an excerpt. Click here to read official VTECH](#)

[V.READER user guide](#)

<http://yourpdfguides.com/dref/3226878>