




# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for VTECH V.SMILE PC PAL. You'll find the answers to all your questions on the VTECH V.SMILE PC PAL in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

## User manual VTECH V.SMILE PC PAL User guide VTECH V.SMILE PC PAL Operating instructions VTECH V.SMILE PC PAL Instructions for use VTECH V.SMILE PC PAL Instruction manual VTECH V.SMILE PC PAL

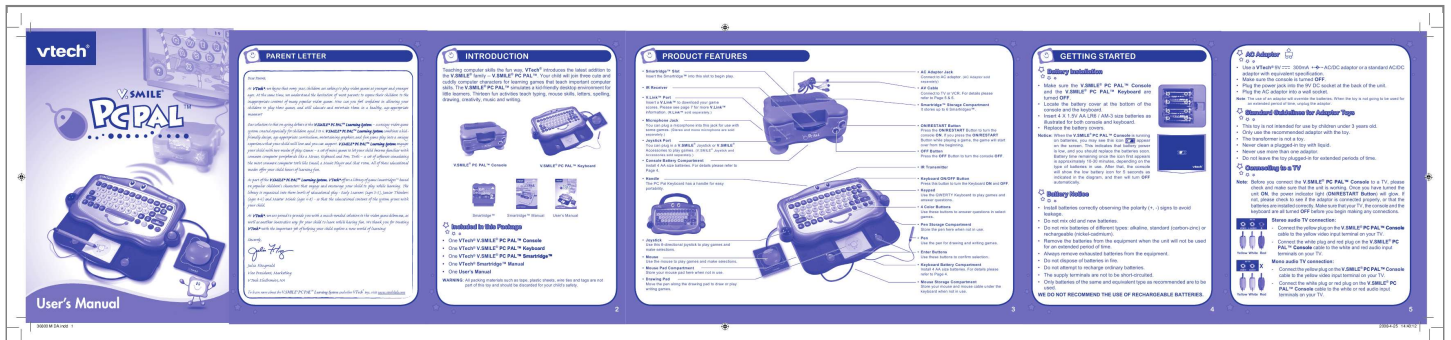

You're reading an excerpt. Click here to read official VTECH V.SMILE PC PAL user guide  
<http://yourpdfguides.com/dref/1305537>

**Manual abstract:**

At the same time, we understand the hesitation of most parents to expose their children to the inappropriate content of many popular video games. How can you feel confident in allowing your children to play these games, and still educate and entertain them in a healthy, age-appropriate manner? Our solution to this on-going debate is the V.SMILE® PC PALTM Learning System a unique video game system created especially for children aged 3 to 6. V.SMILE® PC PALTM Learning System combines a kidfriendly design, age-appropriate curriculum, entertaining graphics, and fun game play into a unique experience that your child will love and you can support. V.SMILE® PC PALTM Learning System engages your child with two modes of play: Games a set of mini games to let your child become familiar with common computer peripherals like a Mouse, Keyboard and Pen; Tools a set of software simulating the most common computer tools like Email, a Music Player and Chat room. All of these educational modes offer your child hours of learning fun. As part of the V.SMILE® PC PALTM Learning System, VTech® offers a library of game Smartridges™ based on popular children's characters that engage and encourage your child to play while learning.

The library is organized into three levels of educational play - Early Learners (ages 3-5), Junior Thinkers (ages 4-6) and Master Minds (ages 6-8) - so that the educational content of the system grows with your child. At VTech®, we are proud to provide you with a much-needed solution to the video game dilemma, as well as another innovative way for your child to learn while having fun. @@@@Thirteen fun activities teach typing, mouse skills, letters, spelling, drawing, creativity, music and writing. Product Features · SeTM S Insert the Smartridge™ into this slot to begin play. · IR Receive · V. LkTM P Insert a V.LkTM to download your game scores. Please see page 7 for more V.LkTM information. (V.

LkTM sold separately.) · Mchpe Jck You can plug a microphone into this jack for use with some games. (Stereo and mono microphone are sold separately.) GettInG Started · AC Ap Jck Connect to AC adaptor. (AC Adaptor sold separately) ac adaptor 300mA · Use a VTech® 9V AC/DC adaptor or a standard AC/DC adaptor with equivalent specification. · Make sure the console is turned OFF. · Plug the power jack into the 9V DC socket at the back of the unit. · Plug the AC adaptor into a wall socket. Ne: The use of an adaptor will override the batteries. When the toy is not going to be used for an extended period of time, unplug the adaptor.

Battery Installation · Make sure the V.SMILE® PC PALTM Ce and the V.SMILE® PC PALTM e are turned OFF. · Locate the battery cover at the bottom of the console and the keyboard. · Insert 4 X 1.5V AA LR6 / AM-3 size batteries as illustrated for both console and keyboard. · Replace the battery covers. Nce: When the V.SMILE PC PALTM Ce is running on batteries, you may see this icon appear on the screen. This indicates that battery power is low, and you should replace the batteries soon.

Battery time remaining once the icon first appears is approximately 10-30 minutes, depending on the type of batteries in use. After that, the console will show the low battery icon for 5 seconds as indicated in the diagram, and then will turn OFF automatically. ® · AV Ce Connect to TV or VCR. For details please refer to Page 5 & 6. @Only use the recommended adaptor with the toy.

The transformer is not a toy. Never clean a plugged-in toy with liquid. Never use more than one adaptor. @@@@ OFF Bu Press the OFF Button to turn the console OFF. @@@@For details please refer to Page 4.

@@@@ Do not mix old and new batteries. @@@@ Always remove exhausted batteries from the equipment. · Do not dispose of batteries in fire. · Do not attempt to recharge ordinary batteries. · The supply terminals are not to be short-circuited. @@@@ Mue Use the mouse to play games and make selections. · Mue P Cpe Store your mouse pad here when not in use. @@ · Ee Bu Use these buttons to confirm selection. · e Be Cpe Install 4 AA size batteries. For details please refer to Page 4.

@@@@Keep your V.SMILE® PC PALTM clean by wiping it with a slightly damp cloth. Never use solvents or abrasives. 2. Keep it out of direct sunlight and away from direct sources of heat. 3. Remove the batteries when not using it for an extended period of time. 4. Avoid dropping it. Never try to dismantle it. 5. Always keep the V.SMILE® PC PALTM away from water. 6. Please examine the AC adaptor periodically for conditions that may result in the risk of fire, electric shock, or injury to persons (such as damage to the output cord, blades, housing, or other parts) and that, in an event of such conditions, the AC Adaptor should not be used until properly repaired.

trouBleSHootInG otHer InForMatIon disclaimer and limitation of liability VTech® Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss resulting from the use of this handbook. VTech® Electronics North America, L.

L.C. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this software. VTech® Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of important data on other media to protect against data loss. Company: VTech® Electronics North America, L.L.

C. Address: 1155 West Dundee Rd., Suite 130, Arlington Heights, IL 60004 USA Phone: 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada Notice: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: · Reorient or relocate the receiving antenna. · Increase the separation between the equipment and receiver.

@@@@The Smartridge™ should lock into place. Please use care when removing the Smartridge™ from the slot. · Turn on the TV. @@In many cases this will involve setting the TV to a "video" mode; however, since all TVs vary, refer to your TV or VCR manual for further details.



[You're reading an excerpt. Click here to read official VTECH V.SMILE PC PAL user guide](http://yourpdfguides.com/dref/1305537)  
<http://yourpdfguides.com/dref/1305537>

· Turn the V.

*SMILE® PC PALTM Ce on by pressing the ON/ RESTART Button, the power ON indicator will glow. Then, turn the V.SMILE® PC PALTM e ON and connect it with V.SMILE® PC PALTM Ce. Ne: For the best result, align the center of IR transmitter on the keyboard with the center of IR receiver on the console in order to get the maximum signal.*

*Yellow White red Connect the yellow plug on the V.SMILE® PC PALTM Ce cable to the yellow video input terminal on your VCR. Connect the white and red plugs on the V.SMILE® PC PALTM Ce cable to the white and red audio input terminals on your VCR. troubleSHootInG A very small percentage of the public, due to an existing condition, may experience epileptic seizures or momentary loss of consciousness when viewing certain types of flashing colors or patterns, especially on television. While the V.SMILE® PC PALTM does not contr.*



[You're reading an excerpt. Click here to read official VTECH](#)

[V.SMILE PC PAL user guide](#)

<http://yourpdfguides.com/dref/1305537>