




Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for VTECH WHIZ KID PC LEARNING SYSTEM. You'll find the answers to all your questions on the VTECH WHIZ KID PC LEARNING SYSTEM in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual VTECH WHIZ KID PC LEARNING SYSTEM
User guide VTECH WHIZ KID PC LEARNING SYSTEM
Operating instructions VTECH WHIZ KID PC LEARNING SYSTEM
Instructions for use VTECH WHIZ KID PC LEARNING SYSTEM
Instruction manual VTECH WHIZ KID PC LEARNING SYSTEM

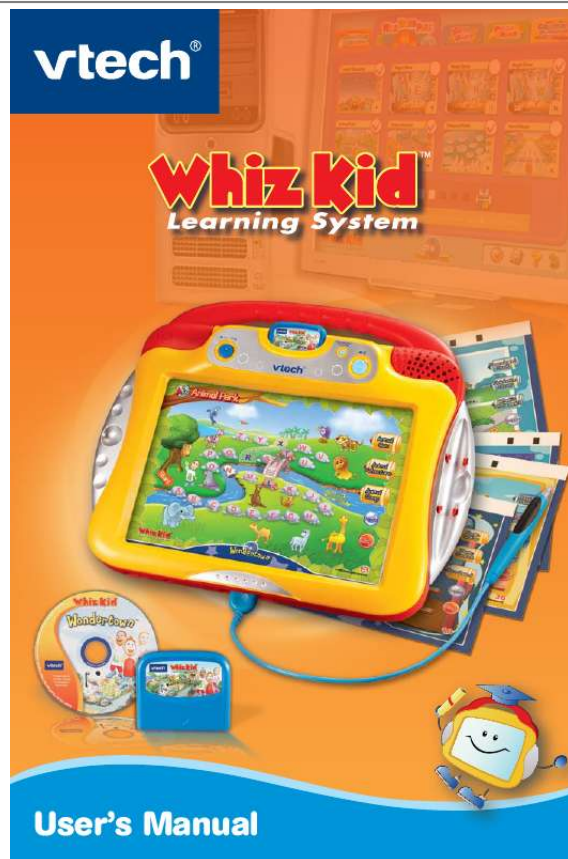

[You're reading an excerpt. Click here to read official VTECH WHIZ KID PC LEARNING SYSTEM user guide](http://yourpdfguides.com/dref/1305700)
<http://yourpdfguides.com/dref/1305700>

Manual abstract:

With the VTech® Whiz Kid™ Learning System, children can take off on wonderful journeys that teach and entertain. With the VTech® Whiz Kid™ Learning System, children absorb learning concepts through creative gaming and adventure play. Each game universe features child-directed play and various learning skills, so that the adventure is never the same twice! USB Slot (PC) Reset ON/OFF Slot Button Cartridge Slot Downloaded Games Button Pen Storage Drawer Accessory Slot Earphone Slot Pen Connection Slot Wondertown™ CD-ROM PC Connection Cable Wondertown™ Game Cartridge INSTRUCTIONS Volume Button INCLUDED IN THIS PACKAGE Whiz Kid™ Learning System main unit Connectable pen PC connection cable Two user manuals 0 double-sided activity pages (40 pages in total) Storage folder for pages Game cartridge --- Whiz Kid™ Wondertown™ CD-ROM --- Whiz Kid™ Wondertown™ WARNING: All packing materials such as tape, plastic sheets, wire ties and tags are not part of this toy and should be discarded for your child's safety. GETTING STARTED GETTING STARTED BATTERY INSTALLATION Make sure the unit is turned OFF. Locate the battery cover on the bottom of the main unit. Remove the battery cover. Insert 4 "AA" size batteries as illustrated. Replace the battery cover. BATTERY NOTICE

. Install batteries correctly observing the polarity (+, -) signs to avoid leakage. Do not mix old and new batteries. Do not use rechargeable batteries. Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd or Ni-MH). Remove the batteries from the equipment when the unit will not be used for an extended period of time. Always remove exhausted batteries from the equipment. Do not dispose of batteries in fire.

Do not attempt to recharge ordinary batteries. The supply terminals are not to be short-circuited. Use only batteries of the same and equivalent type as recommended. Product Features ON/OFF Button Press this button to turn the unit ON. Press this button again to turn the unit OFF.

Always do this before inserting or removing a game cartridge. Automatic Shutoff If there is no input to the Whiz Kid™ Learning System for several minutes, the unit will switch off to save power. @@@@ During play, you can interact with an activity page by pressing down on the page with the pen. When the pen touches the page, you will see a red light flashing on the pen tip. NOTE: To unplug the connectable pen from the main unit, grasp and press the buttons on either side of the pen connector. Downloaded Games Button Press this button to hear the names of the activity pages that have been downloaded onto the unit from the Whiz Kid™ website. NOTE: If you want to play the downloaded games, you must remove the game cartridge. Downloaded games can be played either on the go or when connected to a PC. GETTING STARTED TO BEGIN PLAY PLAY ON THE GO You can play your Whiz Kid™ wherever you go! . Make sure the unit is turned OFF.

. Insert a Whiz Kid™ game cartridge into the cartridge slot on the top edge of the main unit. The game cartridge should lock into place. Please use care when removing the game cartridge from the slot. . Insert the pen into the jack on the bottom edge of the main unit. TO BEGIN PLAY & CONNECTING TO A PC 4 4. Turn on the Whiz Kid™ by pressing the ON/OFF button. 5. Open the frame cover.

6. Place an activity page onto the board. 7. Close the frame cover. Note: You can print out activity pages on your own printer, in case you lose any of the included pages.

For details, please refer to the CD-ROM user's manual. If you have printed the activity page on your own printer, place the page on the board, and use the pen to click the red dots in the upper right-hand and lower left-hand corners of the page. It is important that the red dots are touched; otherwise, the page will not be recognized. After using a home-printed game page, please turn the Whiz Kid™ board unit off and turn it back on before playing with one of the included, laminated game pages. 8.

Follow the voice instructions to begin play. CONNECTING TO A PC You can play your VTech® Whiz Kid™ by connecting to a computer through the included USB cable. . Install the VTech® Whiz Kid™ CD-ROM in your computer. . Start Windows® 98 SE/ME/000/XP. . Insert any Whiz Kid™ game disc into the CD-ROM drive of your computer. . If AutoPlay is enabled on your computer, installation program will be executed automatically and please follow the on-screen prompts to complete your installation. . If AutoPlay is not enabled, select Run from the Start menu and type D:\install.exe if your CD drive is D; if not, type the correct letter. @@.

@@. Connect the included PC cable to a USB port on your PC. NOTE: Please always use the USB port on your PC. USB hub connection is not supported. 4. @@6. @@@@7. @@@@ Before printing, make sure your computer is connected to a printer. . @@@@ Keep your Whiz Kid™ clean by wiping it with a slightly damp cloth.

Never use solvents or abrasives. . Keep it out of direct sunlight and away from direct sources of heat. . @@4. Avoid dropping it. NeVeR try to dismantle it. 5. @@@@ Incorrect or missing power connection. Solution .

@@. @@ Press the ON/OFF button. . Program needs to be reset. . If the problem persists, remove the game cartridge. Inspect the inside of the game cartridge by pushing up the protective sleeve on the bottom of the cartridge. Clean the inside piece with a dry, soft cloth. Then, re-insert the cartridge and press the ON/OFF button. .

4 If the problem persists, use a pen to press the Reset Slot to reset the unit. 6 The unit is ON, but no sound can be heard. . Main Unit/ PC volume setting. . Increase the volume of the unit and make sure it is not set to "Mute." . Increase the volume of the main unit or PC, and make sure it is not set to "Mute" in the PC play mode. . Make sure the USB cable is properly connected between the main unit and the PC.

. @@. Make sure that the pen is firmly connected to the pen jack, or re-insert the pen. . Make sure the activity page matches the game cartridge. . Make sure the activity page is placed properly and correctly onto the board. . Make sure the frame cover is closed before play. The unit is ON and connected to the PC, but nothing happens on the PC screen.

The pen does not work. . Cable connection problem. . PC program installation problem. . Improper pen connection. . Incorrect activity page. .

The page is incorrectly placed. . The frame cover is open. The unit is ON and an activity page has been placed on the board, but the user can't play the game. 4. Program needs to be reset. 4. Disconnect all power supplies (batteries and USB connection), then reconnect all power supplies.



[You're reading an excerpt. Click here to read official VTECH WHIZ KID PC LEARNING SYSTEM user guide](http://yourpdfguides.com/dref/1305700)
<http://yourpdfguides.com/dref/1305700>

4. Press the ON/OFF button.

4. If the problem persists, remove the game cartridge. Inspect the inside of the game cartridge by pushing up the protective sleeve on the bottom of the game cartridge. @@Press the ON/OFF button. @@PC program installation problem.

@@@. Restart your computer. . Disconnect all power supplies (batteries and USB connection) of the unit, then reconnect all power supplies. .

Press the ON/OFF button. .4 If the problem persists, remove the game cartridge. Inspect the inside of the game cartridge by pushing up the protective sleeve on the bottom of the game cartridge. Clean the inside piece with a dry, soft cloth. and re-insert the cartridge. Press the ON/OFF button. .5 If the problem persists, use a pen to press the Reset Slot to reset the unit. .

Program needs to be reset. TECHNICAL SUPPORT The unit is on with a game cartridge inserted and connected to the PC, but the user can't play games. . The matching CD-ROM program hasn't been installed. . Downloaded games have been corrupted. . Make sure the matching Whiz Kid™ CD-ROM has been installed. The downloaded games are lost, and a beep sound is heard. .

Reconnect the unit to the PC to recover the data. . If the problem persists, please contact our Consumer Services Department. TECHNICAL SUPPORT If you have a problem that cannot be solved by using this manual, we encourage you to visit us.



[You're reading an excerpt. Click here to read official VTECH WHIZ KID PC LEARNING SYSTEM user guide](http://yourpdfguides.com/dref/1305700)
<http://yourpdfguides.com/dref/1305700>