



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL ADG 6330/3 IX. You'll find the answers to all your questions on the WHIRLPOOL ADG 6330/3 IX in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL ADG 6330/3 IX
User guide WHIRLPOOL ADG 6330/3 IX
Operating instructions WHIRLPOOL ADG 6330/3 IX
Instructions for use WHIRLPOOL ADG 6330/3 IX
Instruction manual WHIRLPOOL ADG 6330/3 IX

INSTRUCTIONS FOR USE

BEFORE USING THE DISHWASHER/CONNECTIONS
ELECTRICAL CONNECTION
PRECAUTIONS AND GENERAL
RECOMMENDATIONS
HOW TO FILL THE SALT CONTAINER
HOW TO FILL THE RINSE AID DISPENSER
HOW TO FILL THE DETERGENT DISPENSER
CARE AND MAINTENANCE

11



[You're reading an excerpt. Click here to read official WHIRLPOOL ADG 6330/3 IX user guide](http://yourpdfguides.com/dref/4841725)
<http://yourpdfguides.com/dref/4841725>

Manual abstract:

Removing the packaging and controls: After unpacking, make sure that the dishwasher is undamaged and that the door closes correctly. If in doubt, contact a qualified technician or your local retailer. • Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous. • This dishwasher has been factory tested to ensure it functions correctly. Such testing may leave slight water marks that will disappear with the first wash. 2. Water and electrical connections: All water and electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions (refer to the enclosed installation booklet) and current local safety regulations. • Do not use the dishwasher if it has been damaged in transit. Consult your local retailer or our After-Sales Service.

(Refer to the separate installation instructions booklet) 3. • Water supply pressure: 0,03 - 1,0 MPa. • If the hose length is not sufficient, please contact your local dealer or our After-Sales Service. • All other models: maximum temperature 60°C. • When installing the appliance, make sure the drain water discharges correctly (if necessary, remove the wire gauze from the sink siphon).

• Fix the drain hose to the spigot with a clamp to prevent it from coming off during operation. For appliances with water-stop system only: If the water connections are made correctly, the waterstop system safeguards your home against damage caused by flooding. 4. Electrical connection: • Closely adhere to local Electricity Board regulations. • Voltage information is shown on the rating plate mounted inside the door on the right hand side.

• The appliance must be earthed as prescribed by law. • Do not use extension leads or multiple adapters. • Before carrying out maintenance, disconnect the mains plug. • If necessary, the power cable may be replaced with one the same obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician. Warning for models provided with LCD display: The mains plug must be positioned in an easily accessible place.

• approved fuse to BS 1362 type and proceed as follows: 1. Remove the fuse cover (A) and fuse (B). 2. Fit replacement 13A fuse into fuse cover.

3. Refit both into plug. • Please do not attempt to change plug yourself. 2. Energy and water saving tips: • Do not rinse crockery under running water. • Always fully load the dishwasher before switching on or set the wash programme to half load/ Multizone (if available) if one rack only is loaded. • If ecological energy sources are available such as solar panel heating, heat pumps or centralised heating systems, the appliance may be connected to the hot water mains up to a maximum temperature of 60°C. Make sure the water inlet hose is of the correct type. Refer to the "Connections" chapter in these user instructions. 3.

Disposal: The appliance is built from reusable materials. If you decide to scrap the dishwasher, it must be disposed of in compliance with local waste disposal laws. Before scrapping, cut off the power cable so that the appliance cannot be connected to the mains. • To prevent situations of potential danger to children (e.g.

danger of suffocation), break the lock of the door so that it can no longer be closed. 4. Child safety: • Children must not be allowed to play with the dishwasher. 5. • Do not use solvents inside the dishwasher: risk of explosion! • The water in the dishwasher is not potable.

• Do not store inflammable liquids near the dishwasher. • Do not operate the appliance in the open air. • Attention: Danger when door is opened. 6. • Do not therefore cut the hose or immerse the plastic casing in water. If the hose is damaged switch off the appliance immediately. 8. • For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. HOW TO FILL THE SALT CONTAINER From a water hardness category of 1-2 (medium), before using the dishwasher, fill the salt container with regeneration salt (to find out the hardness level of water in your area, contact your local Water Board or check the last bill you received).

If the water hardness level does not correspond to position 3 (factory setting) or if the water hardness level changes: Set the water hardness level (for dishwashers without water hardness sensor only): Setting must be carried out according to the following table. • Switch on the appliance (consult the quick reference guide). • Select programme 2 (consult the programme chart in the quick reference guide). • Press the Start button for at least 5 seconds until the Start indicator lamp blinks. • Switch off the appliance (consult the quick reference guide). 1. Remove the lower rack. 2. Unscrew the cap by turning it counter-clockwise. 3.

4. 1.5 kg and max. 2 kg) and stir with a spoon handle. 5.

Screw the cap back on by turning it clockwise. 6. Fit the lower rack. 7. If regeneration salt is to be added, immediately start a wash programme (rinsing alone is not sufficient) in order to eliminate any residual saline solution straight away and avoid corrosion.

Salt level indicator The dishwasher is equipped with an electric or visual salt level indicator (depending on the model installed). Electric indicator The salt level indicator lamp on the control panel lights up when the salt container is empty. Visual indicator The float is clearly visible in the cap window when the salt container is full. The float lowers and is no longer visible when the salt container is empty. 15 HOW TO FILL THE RINSE AID DISPENSER (Not necessary when using a combined action detergent) The rinse aid facilitates drying and prevents the formation of unsightly spots and streaks on crockery. Before using the dishwasher for the first time, fill the rinse aid dispenser. Only use rinse aids recommended for use in domestic dishwashers. 1. Press button A to open the cover (see drawing). 2.

Fill the dispenser with rinse aid up to the dotted line (about 100 ml maximum). Immediately wipe away any rinse aid spilt accidentally! 3. Close the cover. 1. Press button A to open the cover (see drawing). 2. Rotate the microfilter counter-clockwise (in the direction of the arrow "0") and extract it (E). 2. Remove the wide-mesh filter (F). 3.

Remove the fine-mesh filter (G). 4. Clean all filters under running water, paying attention not to bend the fine-mesh filter. Check that no impurities are left inside the dishwasher! 5. To reassemble: insert the wide-mesh filter into the microfilter so it clicks into place.

Insert the fine-mesh filter. The filter must be fitted under both tabs (H). Insert the wide-mesh filter / microfilter unit and turn clockwise (in the direction of the arrow "1"), until the dashed lines on the microfilter and fine-mesh filter are aligned.



[You're reading an excerpt. Click here to read official WHIRLPOOL
ADG 6330/3 IX user guide
http://yourpdfguides.com/dref/4841725](http://yourpdfguides.com/dref/4841725)