



# Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL ADG 7556/1 M. You'll find the answers to all your questions on the WHIRLPOOL ADG 7556/1 M in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual WHIRLPOOL ADG 7556/1 M**  
**User guide WHIRLPOOL ADG 7556/1 M**  
**Operating instructions WHIRLPOOL ADG 7556/1 M**  
**Instructions for use WHIRLPOOL ADG 7556/1 M**  
**Instruction manual WHIRLPOOL ADG 7556/1 M**



## **INSTRUCTIONS FOR USE**

**BEFORE USING THE DISHWASHER/ CONNECTIONS**  
**ELECTRICAL CONNECTION**  
**PRECAUTIONS AND GENERAL RECOMMENDATIONS**  
**HOW TO FILL THE SALT CONTAINER**  
**HOW TO FILL THE RINSE AID DISPENSER**  
**HOW TO FILL THE DETERGENT DISPENSER**  
**CARE AND MAINTENANCE**

10



[You're reading an excerpt. Click here to read official WHIRLPOOL ADG 7556/1 M user guide](http://yourpdfguides.com/dref/4914078)  
<http://yourpdfguides.com/dref/4914078>

### Manual abstract:

Removing the packaging and controls: After unpacking, make sure that the dishwasher is undamaged and that the door closes correctly. If in doubt, contact a qualified technician or your local retailer. • Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous. 2. Water and electrical connections: All water and electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions (refer to the enclosed installation booklet) and current local safety regulations. The appliance must only be used in the household for the prescribed uses. Do not use the dishwasher if it has been damaged in transit. Consult your local retailer or our After-Sales Service. (Refer to the separate installation instructions booklet) 3.

Water inlet and drain: • Observe any special regulations issued by your local Water Board. Water supply pressure: 0.3 - 10 bar. • Make sure the inlet and drain hoses are kink-free and are not crushed. • If the hose length is not sufficient, please contact your local dealer or our After-Sales Service. • The inlet hose must be securely clamped to the water tap to prevent leaks. • The inlet water temperature varies according to the model installed. • All other models: maximum temperature 60° C. • Electrical connection: • Closely adhere to local Electricity Board regulations. • Voltage information is shown on the rating plate mounted inside the door on the right hand side. • The appliance must be earthed as prescribed by law. • Do not use extension leads or multiple adapters. • Before carrying out maintenance, disconnect the mains plug. • The power cable must only be replaced by authorized personnel. Warning for models provided with LCD display: The mains plug must be positioned in an easily accessible place. • For Austria: if the apparatus is series connected to a fault current switch, this must be sensitive to the pulsating current. 11 ELECTRICAL CONNECTION 1) For Great Britain only Warning - this appliance must be earthed Fuse replacement If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.

A. approved fuse to BS 1362 type and proceed as follows: 1. Remove the fuse cover (A) and fuse (B). 2. Fit replacement 13A fuse into fuse cover. 3. Refit both into plug. Important: The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted. Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug. Replacement fuse covers are available from your local electrical store.

2) For the Republic of Ireland only The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type. 3) Socket outlet / plug (valid for both countries) If the fitted plug is not suitable for your socket outlet, please contact Whirlpool Service for further instruction. Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified Whirlpool technician in compliance with the manufacturer's instructions and current standard safety regulations. 12 PRECAUTIONS AND GENERAL RECOMMENDATIONS 1.

Packing: The packing box may be fully recycled as confirmed by the recycling symbol. 2. Energy and water saving tips: • Do not rinse crockery under running water. • Always fully load the dishwasher before switching on or set the wash programme to Half load/ Multizone (if available) if one rack only is loaded. • If ecological energy sources are available such as solar panel heating, heat pumps or centralised heating systems, the appliance may be connected to the hot water mains up to a maximum temperature of 60° C.

Make sure the water inlet hose is of the correct type. Refer to the "Connections" chapter in these user instructions. 3. Disposal: The appliance is built from reusable materials. If you decide to scrap the dishwasher, it must be disposed of in compliance with local waste disposal laws. Before scrapping, cut off the power cable so that the appliance cannot be connected to the mains. 4. Child safety: • Children must not be allowed to play with the dishwasher. • Do not use solvents inside the dishwasher: risk of explosion! • The power cable must only be replaced by a qualified technician.

• Do not therefore cut the hose or immerse the plastic casing in water. If the hose is damaged switch off the appliance immediately. • Do not fill the salt container with unsuitable substances, such as. 1. Remove the lower rack. 2. Unscrew the cap by turning it counter-clockwise. 3.

4. Add 1.5 kg and max. 2 kg) and stir with a spoon handle. 5. Screw the cap back on by turning it clockwise.

6. Fit the lower rack. 7. Before using the dishwasher for the first time, fill the rinse aid dispenser. Only use rinse aids recommended for use in domestic dishwashers.

1. Press button A to open the cover (see drawing). 2. Fill the dispenser with rinse aid up to the dashed line (about 100 ml maximum). Immediately wipe away any rinse aid spilt accidentally! This prevents the formation of excess suds which may spoil washing results. 3. Close the cover. Thereafter, regularly check the rinse aid level. A How to adjust the rinse aid dosage regulator: Factory setting: position 4. If you are not satisfied with washing or drying results, change the rinse aid dosage setting.

1. Press button A to open the cover (see drawing). 2. If crockery is prone to whitish streaks: reduce the dosage by turning the dial to a lower setting (1-3) using a coin or the like. If crockery is not perfectly dry: increase the dosage by turning the dial to a higher setting (5-6). 3. Close the cover. Rinse aid level indicator: Visual indicator: add rinse aid light sufficient rinse aid. dark Do not add any! Electric indicator (if provided): The indicator lamp on the control panel lights up when more rinse aid needs to be added. 15 HOW TO FILL THE DETERGENT DISPENSER A small compartment and a large compartment are provided for the detergent.

The use of detergent in excess of the recommended dosage may cause pollution. The recommended dosage varies for different brands. If you use detergents in pellet form, follow the manufacturer's directions for use. "New generation" detergents contain enzymes that give better washing results when Bio programmes are used. However, these programmes are also suitable for all other dishwasher detergents.

How to fill the detergent dispenser: Only use regeneration salts for use in domestic dishwashers. Only fill the detergent dispenser prior to starting a wash programme. 1. Press button C to open the cover. 2.

3. Pour the remaining third in the small compartment (B). 3. Close the cover. C A B 16 CARE AND MAINTENANCE Before cleaning or carrying out maintenance, switch off the appliance, disconnect the mains plug and turn off the water tap.



[You're reading an excerpt. Click here to read official WHIRLPOOL ADG 7556/1 M user guide](http://yourpdfguides.com/dref/4914078)  
<http://yourpdfguides.com/dref/4914078>

*Cleaning the outside of the appliance: To clean the outside of the appliance, use a neutral detergent and a damp cloth. Clean the control panel with a damp cloth only. Do not use abrasive detergents. Cleaning the inside of the dishwasher: Regularly wipe the door seal and inside of the door with a damp cloth to remove any food residue. Upper spray arm: 1. Slacken the fixing nut (A) (by turning it counter-clockwise) and detach the spray arm (B) by pulling it down).*

*2. Rinse the nozzles. 3. To remount the spray arm, align it and then tighten the fixing nut (by turning it clockwise), paying attention not to bend it. The fixing nut must be tightened until it clicks! Make sure the spray arm rotates freely. A B Lower spray arm: 1. Slacken the fixing nut (C) (by turning it counter-clockwise).*



[You're reading an excerpt. Click here to read official WHIRLPOOL](#)

[ADG 7556/1 M user guide](#)

<http://yourpdfguides.com/dref/4914078>