



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL ADG 931/2 NB. You'll find the answers to all your questions on the WHIRLPOOL ADG 931/2 NB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL ADG 931/2 NB

User guide WHIRLPOOL ADG 931/2 NB

Operating instructions WHIRLPOOL ADG 931/2 NB

Instructions for use WHIRLPOOL ADG 931/2 NB

Instruction manual WHIRLPOOL ADG 931/2 NB

| | | |
|-----------|------------------------------------------------|----------------|
| GB | SUMMARY | |
| | BEFORE USING THE DISHWASHER | PAGE 11 |
| | PROTECTING THE ENVIRONMENT | PAGE 11 |
| | PRECAUTIONS AND GENERAL RECOMMENDATIONS | PAGE 11 |
| | ENERGY AND WATER SAVING TIPS | PAGE 11 |
| | HOW TO FILL THE SALT CONTAINER | PAGE 12 |
| | HOW TO FILL THE RINSE AID DISPENSER | PAGE 13 |
| | HOW TO FILL THE DETERGENT DISPENSER | PAGE 13 |
| | CONNECTIONS | PAGE 14 |
| | MAINTENANCE AND CLEANING | PAGE 16 |
| | TROUBLESHOOTING GUIDE | PAGE 17 |
| | AFTER-SALES SERVICE | PAGE 17 |

For maximum satisfaction from your dishwasher, carefully read these user instructions and consult the wash programme chart.

10



[You're reading an excerpt. Click here to read official WHIRLPOOL ADG 931/2 NB user guide](http://yourpdfguides.com/dref/4858097)

<http://yourpdfguides.com/dref/4858097>

Manual abstract:

10 BEFORE USING THE DISHWASHER • After unpacking, make sure the appliance is undamaged and that the door closes correctly. Do not use the appliance if it is damaged. If in doubt, consult your local retailer. Keep potentially hazardous packaging (plastic bags etc.) out of the reach of children. • This appliance is designed for use in the home in compliance with its intended purpose. All water and electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions (refer to the enclosed installation booklet) and current local safety regulations. • •

PROTECTING THE ENVIRONMENT 1. Packing The packing box may be fully recycled as confirmed by the recycling symbol. • •

Appliance The appliance is built from reusable materials. If you decide to scrap the dishwasher, it must be disposed of in compliance with local waste disposal laws. Before scrapping, cut off the power cable so that the appliance cannot be connected to the mains. **PRECAUTIONS AND GENERAL RECOMMENDATIONS** **Child safety** Do not allow children to play with the dishwasher. • Store the detergent, rinse aid and salt in a dry place out of the reach of children.

General recommendations • Only use detergents, rinse aids and regeneration salts specially recommended for use in domestic dishwashers. • On completion of the wash programme switch off the dishwasher and turn off the water tap. @@@@• • If necessary, the power cable may be replaced with one the same obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician. For appliances with water-stop system: The water inlet hose and plastic casing contain electrical components.

Do not therefore cut the hose or immerse the plastic casing in water. If the hose is damaged switch off the appliance immediately. Do not use solvents inside the dishwasher: risk of explosion! Load capacity: 9 place settings. • • • **EC Declaration of Conformity** This appliance has been designed, constructed and distributed in compliance with the safety requirements of EC Directives: • 73/23/EC • 89/336/EC • 93/68/EC **ENERGY AND WATER SAVING TIPS** • • Do not rinse crockery under running water. If ecological energy sources are available such as solar panel heating, heat pumps or centralised heating systems, the appliance may be connected to the hot water mains up to a maximum temperature of 60°C. Make sure the water inlet hose is of the correct type. Refer to the "Connections" chapter in these user instructions. **11 HOW TO FILL THE SALT CONTAINER** Check the water hardness level in your area. • Consult your local Water Board, check your last water bill for the correct adjustment. Set the water hardness by turning the selector (if fitted and according to the model).

Use the tables below to set the dial to the required setting: • with 5 settings (see drawing): Water hardness 1 soft * 1 - 2 medium 2 medium 3 medium-hard 4 hard 4 very hard French German degrees °fH degrees °dH 0 - 15 16 - 25 26 - 38 39 - 60 61 - 80 81 - 92 0-9 10 - 15 16 - 22 23 - 35 36 - 46 47 - 54 5 Settings: (Factory setting 2). Selector setting 1 1 2 3 4 5 * If the water hardness level falls within category (soft), no salt is required. • with 3 settings (see drawing): Water hardness Minimum adjustment Medium adjustment Maximum adjustment French German degrees °fH degrees °dH 0 - 15 16 - 40 40 - 92 0-9 10 - 23 24 - 54 3 Settings: (Factory setting Max.). • • • If the water hardness level exceeds category 1-2 (medium), before using the dishwasher for the first time, fill the salt container and run a wash cycle so that any excess saline solution discharged is immediately removed by the water to prevent corrosion. The pre-rinse cycle is not sufficient for this purpose. Check the salt level regularly. Important: Only use regeneration salts recommended for use in domestic dishwashers.

Do not fill the salt container with detergent as this will cause irreparable damage to the water softener system. To fill the salt container: 1.

Remove the lower rack. 2. Unscrew the cap by turning it counterclockwise. 3. If the dishwasher is new, fill the salt container with water (about 1 liter).

4. Fill the container by using the provided funnel to the rim with salt (about 1.2 kg) and stir. 5. Screw the cap back on by turning it clockwise.

Salt level indicator The dishwasher is equipped with an electric salt level indicator (depending on the model). Electric indicator: The salt level indicator lamp on the control panel illuminates when the salt container is empty. **12 HOW TO FILL THE RINSE AID DISPENSER** The rinse aid facilitates drying and prevents the formation of unsightly spots, streaks and carbonate deposits on crockery. @@ Thereafter, regularly check the rinse aid level. Only use rinse aids recommended for use in domestic dishwashers. 1. Unscrew the cap. @@2. @@3. Close the cap or lid.

@@ Factory setting: 3. @@@@• • Always use the recommended dosage stated on the detergent pack. @@ The recommended dosage varies between different brands. Only fill the detergent dispenser prior to start a wash programme. @@@@• • Voltage information is shown on the rating plate mounted inside the door on the right hand side. • The appliance must be earthed as prescribed by law. • Do not use extension leads or multiple adapters etc. • Before carrying out maintenance, disconnect the mains plug. • Do not use the dishwasher if it has been damaged in transit. Consult your local retailer or our After-Sales Service.

• The power cable must only be replaced by a qualified technician. **14 CONNECTIONS 1) ELECTRICAL CONNECTIONS** "Warning - this appliance must be earthed" This appliance is normally supplied with a mains lead having a plug fitted in the factory which has been checked for correct earth continuity. If the fitted plug is not suitable for your socket outlet, or if the machine's mains lead is not fitted with a plug, you should fit a suitable new, good quality plug by following the instructions in (2) below. Any unsuitable plug should be cut off and disposed of in order to avoid a possible shock hazard should it be inserted into a socket. 2.

2 Non-polarized plugs (e.g. 2 pin with side earth contact) The wire which is coloured GREEN AND YELLOW must be connected to the earth contact. The other two wires should be connected to the two pins, irrespective of colour. 3) **FUSE REPLACEMENT** If the mains lead of this appliance is fitted with a BS 1363A 13 amp fused plug, replace the fuse only with an A.

S.T.A. approved type conforming to BS 1362 and proceed as follows: 2) **CONNECTION TO A REWIRABLE PLUG** - to be carried out only by a qualified electrician The wires in the mains lead are coloured in accordance with the following code: BLUE - "NEUTRAL" ("N") BROWN - "LIVE" ("L") GREEN AND YELLOW - "EARTH" ("E") To fit a new plug, proceed as follows: 2.



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/4858097)

[ADG 931/2 NB user guide](http://yourpdfguides.com/dref/4858097)

<http://yourpdfguides.com/dref/4858097>

1 Polarized Plugs (e.g. 3 pin, 13 amp plug conforming to BS 1363A) a. The GREEN AND YELLOW wire must be connected to the terminal in the plug which is marked with the letter E or by the Earth symbol or coloured yellow or green and yellow. b. The BLUE wire must be connected to the terminal which is marked with the letter N or coloured black.

c. The BROWN wire must be connected to the terminal which is marked with the letter L or coloured red. 1. Remove the fuse cover (A) and the fuse (B). 2. Fit the replacement 13 A fuse into the fuse cover. 3. Refit both into the plug. For all other types of plug, the supply socket should be protected by a 16 A fuse or circuit breaker at the distribution board. 15 MAINTENANCE AND CLEANING Before cleaning or carrying out maintenance, press the ON/OFF push button and close the water tap.

1. Clean the appliance exterior with a neutral detergent. Do not use abrasive detergents. 2. Regularly wipe the door seal and inside of the door with a damp cloth to remove any food residues.

@@ • Rinse the nozzles under running water. @@ Make sure the spray arm rotates freely. Lower spray arm: • Pull the spray arm up (see drawing). • Rinse the nozzles under running water. @@ • Remount the spray arm and pull it down.

Make sure the spray arm rotates freely. Cleaning the filters: 1. @@ 2. Pull out the cylindrical filter L and extract it from the microfilter M separate the plastic filters by gently pushing on both pieces and pull (see drawing). 3. Having removed the central filter you have also the possibility to take out the G filter (it is sufficient to lift it out). 4. Clean all the components. While reassembling please note that the filters must be correctly assembled to ensure good washing results. 1 2 3 16 TROUBLESHOOTING GUIDE If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem.

Restart the wash programme to see if the fault repeats. If the malfunction persists, switch off the appliance and turn off the water tap. Call our After-Sales Service. The appliance will not switch on: • Power plug properly inserted in the mains socket? • Power failure? • Have you swi.



[You're reading an excerpt. Click here to read official WHIRLPOOL](http://yourpdfguides.com/dref/4858097)

[ADG 931/2 NB user guide](http://yourpdfguides.com/dref/4858097)

<http://yourpdfguides.com/dref/4858097>