



Your PDF Guides


You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL ADG 993/3 IX. You'll find the answers to all your questions on the WHIRLPOOL ADG 993/3 IX in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL ADG 993/3 IX
User guide WHIRLPOOL ADG 993/3 IX
Operating instructions WHIRLPOOL ADG 993/3 IX
Instructions for use WHIRLPOOL ADG 993/3 IX
Instruction manual WHIRLPOOL ADG 993/3 IX

ETIV 5760


PRODUCT DESCRIPTION SHEET

CH

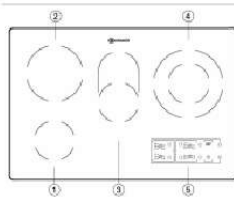

1. Radiant cooking zone,
Ø 145, 1200 W
 2. Radiant cooking zone,
Ø 180, 1800 W
 3. Radiant oval dual cooking zone,
Ø 145 x 250, 1800 W
(inner 1000 W outer 800 W)
 4. Radiant dual cooking zone
Ø 210 x 120, 2100 W
(inner 700 W outer 1400 W)
 5. Display
- Important:**
To avoid permanently damaging the glass-ceramic top, do not use:
- Pots with bottoms that are not perfectly flat.
 - Metal pots with enamelled bottom.

HOB MOUNTING DIMENSIONS (mm)

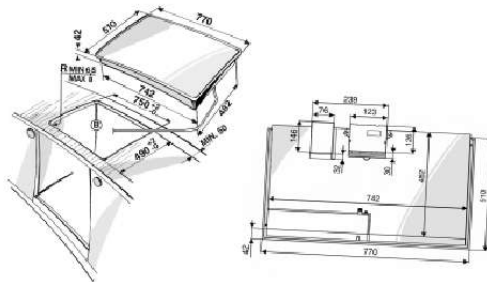

5019 419 61721/A



[You're reading an excerpt. Click here to read official WHIRLPOOL ADG 993/3 IX user guide](http://yourpdfguides.com/dref/4988635)
<http://yourpdfguides.com/dref/4988635>

Manual abstract:

HOB MOUNTING DIMENSIONS (mm) 5019 419 61721/A USING THE HOB A B C D The button must be pressed for about 2 sec. to switch the hob on. The indication □0□ appears in area A on the 4 displays. if within about 25 sec. @@Choose the button for the desired cooking area and press it. The display of the chosen cooking area becomes brighter. Press the +/- buttons in area B within 5 sec. to adjust the required cooking setting. The first two cooking steps correspond to the Gentle heat function and the Keep hot functions (if provided). The other selectable cooking settings go from 1 - 10. The highest selectable cooking setting equates to the TURBO setting (if provided). The special functions GENTLE HEAT, KEEP HOT and TURBO HEAT are indicated in the display by a red arrow. All selections are stopped and cancelled by simultaneously pressing the + and - buttons. @@@@The following special functions are available (if provided): DUAL ZONE FUNCTION Enables the external heating ring of the cooking zone to be switched on. FAST BOILING FUNCTION With this function the cooking zone is heated to the hottest setting for a specified time for bringing to the boil. @@@@The function is switched on by pressing the clock symbol button. The control LED starts to flash. This means that the cooking time can be set within 20 sec. By means of the +/- buttons (1-99 min. @@@@If the time switch function has been allocated to the cooking area, this will be switched off and the control LED extinguished. Only one cooking zone at a time can be operated with the time switch function. @@@@This function remains on even after the hob has been switched off and on again and can be cancelled by pressing the button again for 2 seconds. RESIDUAL HEAT INDICATOR The residual heat indicator □H□ goes on or flashes alternating with □0□ with the switched off cooking zone while the temperature is still above the safety limit. @@Suitable, in the proper containers, for: leaving dough to rise, butter to soften, keeping baby bottles or baby food warm, making yoghurt, melting chocolate etc. Switches a low power setting on to keep meals warm after cooking. @@.



[You're reading an excerpt. Click here to read official WHIRLPOOL ADG 993/3 IX user guide](http://yourpdfguides.com/dref/4988635)
<http://yourpdfguides.com/dref/4988635>