



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL ADP 4410 WH. You'll find the answers to all your questions on the WHIRLPOOL ADP 4410 WH in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL ADP 4410 WH
User guide WHIRLPOOL ADP 4410 WH
Operating instructions WHIRLPOOL ADP 4410 WH
Instructions for use WHIRLPOOL ADP 4410 WH
Instruction manual WHIRLPOOL ADP 4410 WH

INSTRUCTIONS FOR USE

BEFORE USING THE DISHWASHER/
CONNECTIONS

ELECTRICAL CONNECTION

PRECAUTIONS AND GENERAL
RECOMMENDATIONS

HOW TO FILL THE SALT CONTAINER

HOW TO FILL THE RINSE AID DISPENSER

HOW TO FILL THE DETERGENT DISPENSER

CARE AND MAINTENANCE

11



[You're reading an excerpt. Click here to read official WHIRLPOOL ADP 4410 WH user guide](http://yourpdfguides.com/dref/4850873)
<http://yourpdfguides.com/dref/4850873>

Manual abstract:

Removing the packaging and controls: After unpacking, make sure that the dishwasher is undamaged and that the door closes correctly. If in doubt, contact a qualified technician or your local retailer. • Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous. • This dishwasher has been factory tested to ensure it functions correctly. Such testing may leave slight water marks that will disappear with the first wash. 2. Water and electrical connections: All water and electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions (refer to the enclosed installation booklet) and current local safety regulations. @@ Do not use the dishwasher if it has been damaged in transit. Consult your local retailer or our After-Sales Service.

(Refer to the separate installation instructions booklet) 3. @@ Water supply pressure: 0.3 - 10 bar. @@ • If the hose length is not sufficient, please contact your local dealer or our After-Sales Service. @@@@ All other models: maximum temperature 60°C.

• When installing the appliance, make sure the drain water discharges correctly (if necessary, remove the wire gauze from the sink siphon). • Fix the drain hose to the spigot with a clamp to prevent it from coming off during operation. For appliances with water-stop system only: If the water connections are made correctly, the waterstop system safeguards your home against damage caused by flooding. 12 4. Electrical connection: • Closely adhere to local Electricity Board regulations.

• Voltage information is shown on the rating plate mounted inside the door on the right hand side. • The appliance must be earthed as prescribed by law. • Do not use extension leads or multiple adapters. • Before carrying out maintenance, disconnect the mains plug. • If necessary, the power cable may be replaced with one the same obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician. @@@ approved fuse to BS 1362 type and proceed as follows: 1. Remove the fuse cover (A) and fuse (B). 2. Fit replacement 13A fuse into fuse cover.

3. Refit both into plug. @@@@ Please do not attempt to change plug yourself. @@@ 2. Energy and water saving tips: • Do not rinse crockery under running water. • Always fully load the dishwasher before switching on or set the wash programme to half load/ Multizone (if available) if one rack only is loaded. • If ecological energy sources are available such as solar panel heating, heat pumps or centralised heating systems, the appliance may be connected to the hot water mains up to a maximum temperature of 60°C. Make sure the water inlet hose is of the correct type. Refer to the "Connections" chapter in these user instructions. 3.

Disposal: The appliance is built from reusable materials. If you decide to scrap the dishwasher, it must be disposed of in compliance with local waste disposal laws. Before scrapping, cut off the power cable so that the appliance cannot be connected to the mains. • To prevent situations of potential danger to children (e.g.

danger of suffocation), break the lock of the door so that it can no longer be closed. 4. Child safety: • Children must not be allowed to play with the dishwasher. @ 5. @@@@ • Do not use solvents inside the dishwasher: risk of explosion! @@@@ • The water in the dishwasher is not potable.

• Do not store inflammable liquids near the dishwasher. • Do not operate the appliance in the open air. 6. @@@ 7. @@ Do not therefore cut the hose or immerse the plastic casing in water. If the hose is damaged switch off the appliance immediately. 8. @@@@ • Select program 2. @@ • The Start indicator lamp flashes in relation to the water hardness set (table, flashing frequency). • With each successive touch of the Start button the setting increases and when it reaches 7 it returns to 1 again.

• Switch off the appliance (consult the quick reference guide). The selected setting is now memorized. Hardness level German degrees °dH 0-5 6 - 10 11 - 15 16 - 21 22 - 28 29 - 35 36 - 60 French degrees °fH 0-9 10 - 18 19 - 27 28 - 37 38 - 50 51 - 63 64 - 107 mmol/l Clarke scale or English degrees °eH 0 - 6.3 7 - 12.6 13.3 - 18.9 19.6 - 25.9 26.6 - 35 35.

7 - 44.1 44.8 - 74.9 Setting Flashing frequency (1x-7x) 1x 2x 3x 4x 5x 6x 7x 1 soft 1 - 2 medium 2 average 3 medium-hard 4 hard 4 very hard 4 extremely hard 0 - 0.9 1.

0 - 1.8 1.9 - 2.7 2.8 - 3.

7 3.8 - 5.0 5.1 - 6.3 6.4 - 10.7 If the water hardness level falls within category 1 (soft), no salt is required. How to fill the salt container Warning: Only use regeneration salts for use in domestic dishwashers! Do not fill the salt container with unsuitable substances, such as detergent, as this will cause irreparable damage to the water softener system. 1. Remove the lower rack.

2. Unscrew the cap by turning it counter-clockwise. 3. @ 4. @ 1.5 kg and max. 2 kg) and stir with a spoon handle. 5. Screw the cap back on by turning it clockwise. 6.

Fit the lower rack. 7. @@@@ 15 HOW TO FILL THE RINSE AID DISPENSER The rinse aid facilitates drying and prevents the formation of unsightly spots and streaks on crockery. Before using the dishwasher for the first time, fill the rinse aid dispenser. Only use rinse aids recommended for use in domestic dishwashers.

1. Press button A to open the cover (see drawing). 2. Fill the dispenser with rinse aid up to the dotted line (about 100 ml maximum). Immediately wipe away any rinse aid spilt accidentally! This prevents the formation of excess suds which may spoil washing results.

3. Close the cover. Thereafter, regularly check the rinse aid level. A How to adjust the rinse aid dosage regulator Factory setting: Position 4. @@ 1. Press button A to open the cover (see drawing). 2. @@@ 3. Close the cover. @@@@ 1.

Press button C to open the cover. 2. How to fill the detergent dispenser. • Programmes with pre-rinse: Powder and/or liquid detergent: pour two thirds of the recommended dosage into the compartment (A); pour one third into the compartment (B). Tablets: place a tablet in the compartment (A) and/or follow the directions on the detergent pack. Powder and/or liquid detergent, tablets: pour the entire recommended dosage into the compartment (A). C A B - •

Programmes without pre-rinse: - • For programmes with additional "Half load/Multizone" function selected (if provided): When using powder or liquid detergent the dosage can be reduced by 1/3. 3. Close the cover. Detergent Use good quality liquid or powder dishwasher detergents and/or tablets (do not use hand dishwashing detergents).

In order to safeguard the environment, follow the manufacturer's directions for use. Do not use more than the amount of detergent.



[You're reading an excerpt. Click here to read official WHIRLPOOL](#)

[ADP 4410 WH user guide](#)

<http://yourpdfguides.com/dref/4850873>