



Your PDF Guides

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL ADP 5550/1 WH. You'll find the answers to all your questions on the WHIRLPOOL ADP 5550/1 WH in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


User manual WHIRLPOOL ADP 5550/1 WH
User guide WHIRLPOOL ADP 5550/1 WH
Operating instructions WHIRLPOOL ADP 5550/1 WH
Instructions for use WHIRLPOOL ADP 5550/1 WH
Instruction manual WHIRLPOOL ADP 5550/1 WH

Before using the dishwasher, read the user instructions!

ADP 5550

Quick Reference Guide

GB

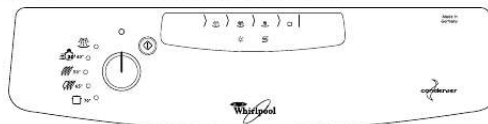


Program selector knob
Main On / Off



Start button
Switches "on" when the dishwasher is operating. Flashes when a fault occurs. Switches off at the end of the programme.

 Wash cycle

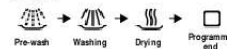

Indicators



Add rinse aid



Add regeneration salt
Only add regeneration salt immediately before starting a wash programme.

Programme chart

Programmes	Loading instructions	Detergent ¹⁾		Consumption ²⁾		
		A	B	Litres	kWh	Minutes
Pre-Rinse	crockery to be washed later	-	-	5.0	0.02	10
Quick wash	lightly soiled crockery with no dried-on food	X	-	13.0	0.70	30
Normal ¹⁾	Normally soiled crockery	X	X	16.0	1.24	133
Normal	Normally or heavily soiled crockery	X	X	16.0	1.65	90
Intensive	Recommended programme for heavily soiled crockery, especially suitable for pans and saucepans	X	X	17.0	1.90	125

1) Reference programme for energy label in compliance with EN 50242 regulations;
2) Refer to "User instructions";
3) Programme data obtained in conformity with European standard EN 50242. Values may vary in relation to usage, e.g. different loads, water temperatures - above or below 15°C - as well as water hardness and power supply voltage, etc.

Important information for Test Laboratories:
For detailed information on the EN comparison test and other tests, contact the following address:
"uk_customers@esmail.whirlpool.com"

Whirlpool is a registered trademark of Whirlpool USA

5019 396 91266

(We reserve the right to make technical modifications)

WH11KGB



[You're reading an excerpt. Click here to read official WHIRLPOOL ADP 5550/1 WH user guide](http://yourpdfguides.com/dref/4923201)
<http://yourpdfguides.com/dref/4923201>

Manual abstract:

@@Lightly soiled crockery with no dried-on food. Normally soiled crockery. Normally or heavily soiled crockery. @@Values may vary in relation to usage, e.g.: different loads, water temperatures - above or below 15°C as well as water hardness and power supply voltage, etc. Important information for Test Laboratories: For detailed information on the EN comparison test and other tests, contact the following address: "nk_customer@email.whirlpool.com". Whirlpool is a registered trademark of Whirlpool USA 5019 396 91266 (We reserve the right to make technical modifications) WH/I/K/GB How to use the appliance Further indications are given in the single chapters and in the user instructions.

Automatic start by turning the programme selector knob (in case of retractable knob, first press the knob to access it). Large compartment A: Switch on the appliance How to fill the detergent With each wash cycle. Small compartment B: For programmes with pre-wash only. A B C Check the rinse aid level Mechanical indicator C. Electric indicator on control panel (if provided).

Check the regeneration salt level On models with water softener system only. Mechanical indicator D. Electric indicator on control panel (if provided). Load the racks Close the dishwasher door, turn on the water tap Select a programme Refer to the dishwasher loading instructions. Select the desired programme. The corresponding indicator lamp comes on. Select options If necessary (and if provided) the corresponding indicator lamp lights up. Press the Start button The selected programme is then memorised (even in the event of power failure). "Change programme" Press the START button for 2 sec. until the Start indicator lamp switches off; Select another programme and press the START button again. - Only open the dishwasher if necessary (Warning: beware of hot steam). @@Warning: when the door is opened steam comes out! @@May be used in three different positions. @@@depending on the model Half Load: Load the upper rack only. @@@@Cutlery basket (D) for appliances with half load only. @@@@AMH 369 series.

2) Revolving glass support (C) - N. @@•The appliance does not load sufficient water. •There is a power failure. •Open the tap. @@Ensure there are no kinks in the water hose. Insert the plug into the mains socket. Press the Start button. Close the door. Check the domestic circuit fuse. @@•Residual water in cavities.

•The water jet does not reach the crockery. •Insufficient detergent. •Unsuitable programme. •Spray arms blocked. •Increase dosage *. •Load crockery at an angle. •Arrange crockery so that items do not touch each other. Load crockery upside down. •Follow recommended detergent dosage. •Select a more intense wash cycle.

@@•Remove any impurities obstructing the water flow *. •Incorrect detergent/detergent too old. @@•Insert the filter correctly *. •Depending on the material, if necessary use a detergent with a greater whitening power. Colour of plastic parts faded Deposits on crockery •removable •Tomato/carrot juice,... •not removable ••••Streaks on the crockery/glasses. Streaks on glasses. Layer of salt on crockery/glasses.

Insufficient water softening, calcium deposits. ••••Increase the rinse aid dosage *. Reduce the rinse aid dosage *. Close the salt container lid properly *.

Change water hardness setting, if necessary add salt *. Opaque glasses/ glasses • Cannot be washed in the dishwasher. not sparkling Rust on cutlery

Identifying appliance faults •Not made of stainless steel. •The START indicator lamp flashes. •Use suitable glasses. •Use suitable cutlery.

•Ensure that the filter assembly is not clogged and if necessary clean it *. Start the programme again. Press the Start button for 2 seconds, until the Start indicator lamp switches off. Select a new programme and press the Start button again. •Call the After-Sales Service.

•Indicator F... @@@@•The appliance type and model. .



[You're reading an excerpt. Click here to read official WHIRLPOOL
ADP 5550/1 WH user guide
http://yourpdfguides.com/dref/4923201](http://yourpdfguides.com/dref/4923201)